




**External Radio Frequency
Power Amplifier ACOM 2100**

ACOM 2100 SIMPLIFIED DIAGRAM

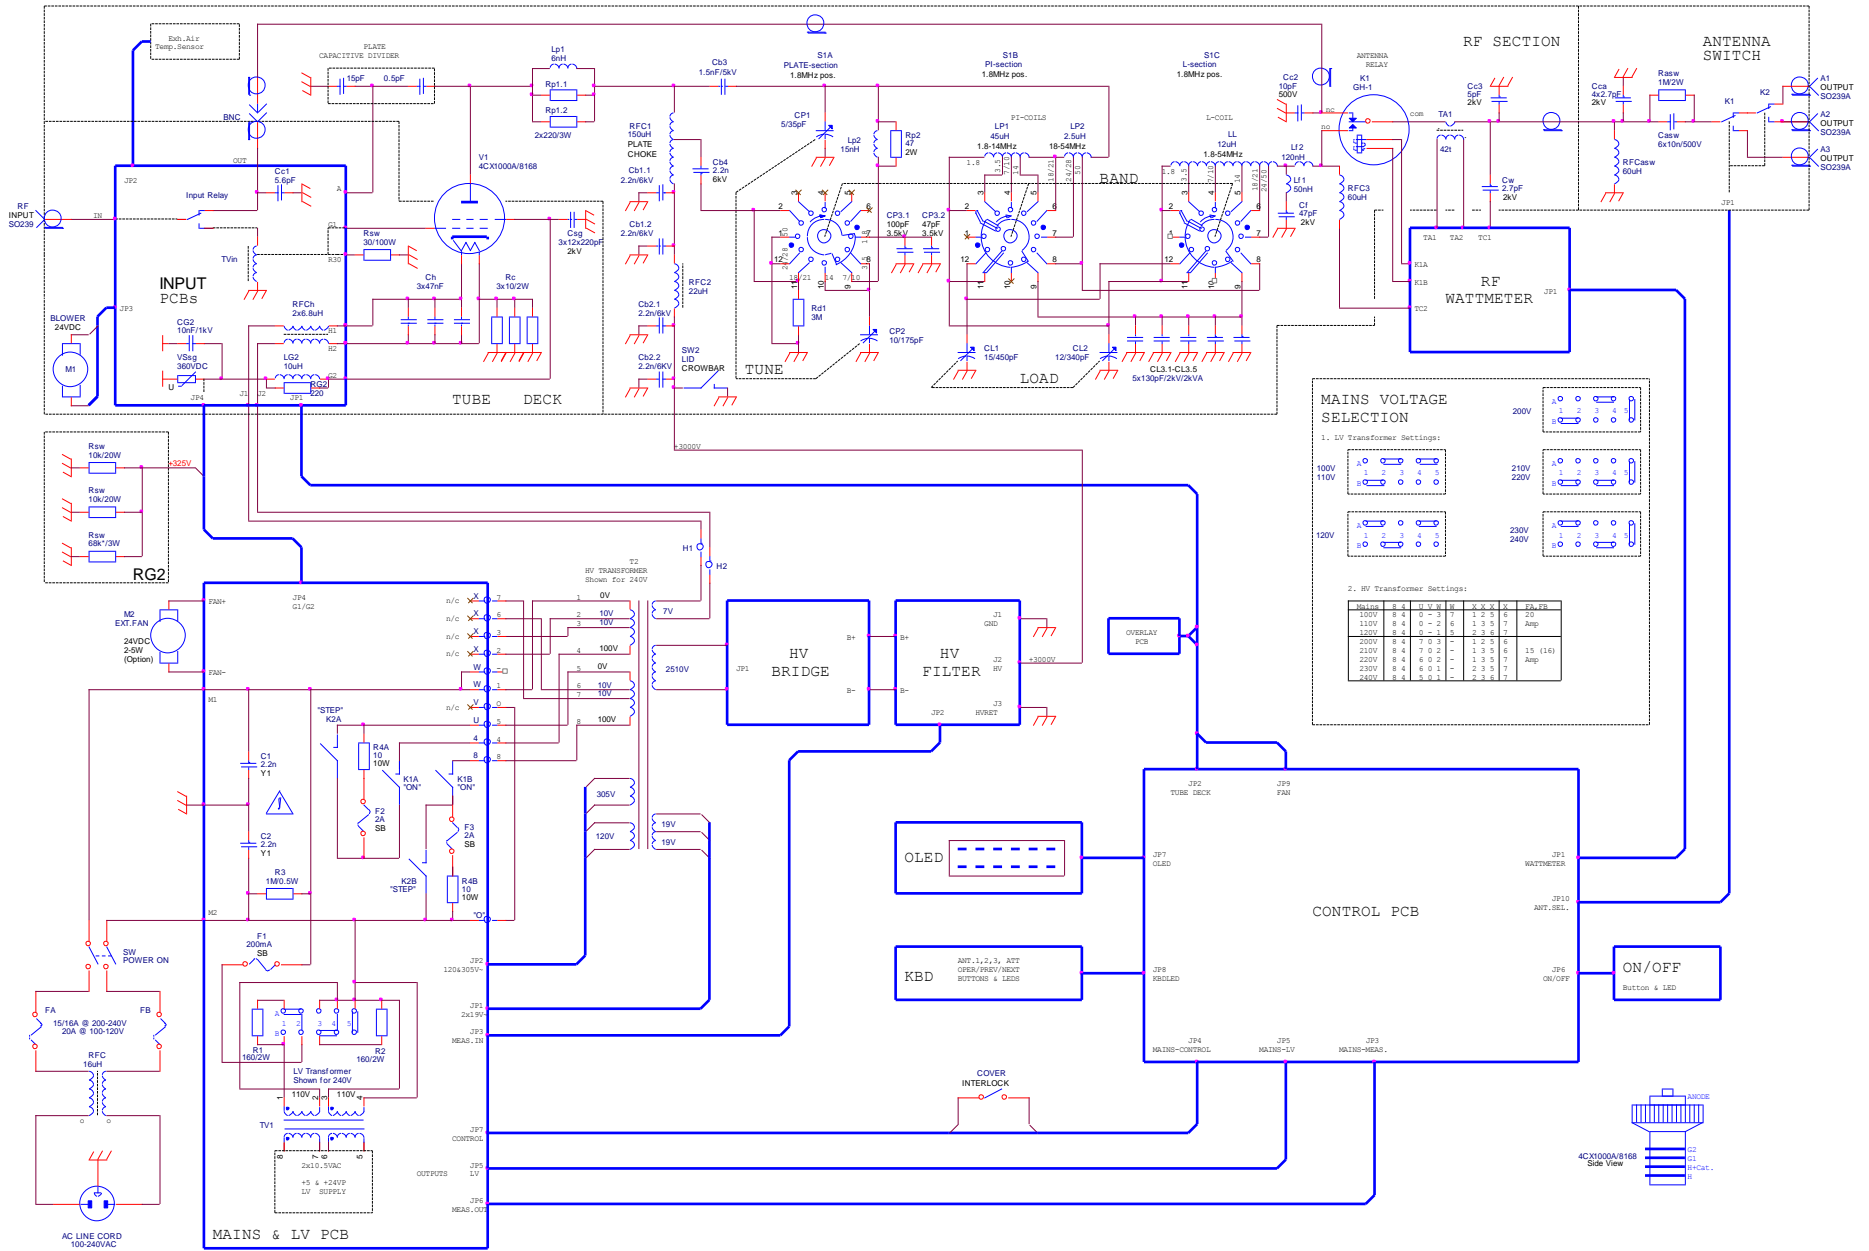


MAINS VOLTAGE SELECTION



1. LV Transformer Settings:

200V	A	1	2	3	4	5	6	7	8
100V	A	1	2	3	4	5	6	7	8
110V	B	1	2	3	4	5	6	7	8
120V	B	1	2	3	4	5	6	7	8
200V	A	1	2	3	4	5	6	7	8
210V	A	1	2	3	4	5	6	7	8
220V	B	1	2	3	4	5	6	7	8
230V	B	1	2	3	4	5	6	7	8
240V	B	1	2	3	4	5	6	7	8


2. HV Transformer Settings:

Mains	8	4	0	1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20	21	22	23	24	25	26	27	28	29	30	31	32	33	34	35	36	37	38	39	40	41	42	43	44	45	46	47	48	49	50	51	52	53	54	55	56	57	58	59	60	61	62	63	64	65	66	67	68	69	70	71	72	73	74	75	76	77	78	79	80	81	82	83	84	85	86	87	88	89	90	91	92	93	94	95	96	97	98	99	100
100V	8	4	0	1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20	21	22	23	24	25	26	27	28	29	30	31	32	33	34	35	36	37	38	39	40	41	42	43	44	45	46	47	48	49	50	51	52	53	54	55	56	57	58	59	60	61	62	63	64	65	66	67	68	69	70	71	72	73	74	75	76	77	78	79	80	81	82	83	84	85	86	87	88	89	90	91	92	93	94	95	96	97	98	99	100
110V	8	4	0	1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20	21	22	23	24	25	26	27	28	29	30	31	32	33	34	35	36	37	38	39	40	41	42	43	44	45	46	47	48	49	50	51	52	53	54	55	56	57	58	59	60	61	62	63	64	65	66	67	68	69	70	71	72	73	74	75	76	77	78	79	80	81	82	83	84	85	86	87	88	89	90	91	92	93	94	95	96	97	98	99	100
120V	8	4	0	1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20	21	22	23	24	25	26	27	28	29	30	31	32	33	34	35	36	37	38	39	40	41	42	43	44	45	46	47	48	49	50	51	52	53	54	55	56	57	58	59	60	61	62	63	64	65	66	67	68	69	70	71	72	73	74	75	76	77	78	79	80	81	82	83	84	85	86	87	88	89	90	91	92	93	94	95	96	97	98	99	100
200V	8	4	0	1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20	21	22	23	24	25	26	27	28	29	30	31	32	33	34	35	36	37	38	39	40	41	42	43	44	45	46	47	48	49	50	51	52	53	54	55	56	57	58	59	60	61	62	63	64	65	66	67	68	69	70	71	72	73	74	75	76	77	78	79	80	81	82	83	84	85	86	87	88	89	90	91	92	93	94	95	96	97	98	99	100
210V	8	4	0	1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20	21	22	23	24	25	26	27	28	29	30	31	32	33	34	35	36	37	38	39	40	41	42	43	44	45	46	47	48	49	50	51	52	53	54	55	56	57	58	59	60	61	62	63	64	65	66	67	68	69	70	71	72	73	74	75	76	77	78	79	80	81	82	83	84	85	86	87	88	89	90	91	92	93	94	95	96	97	98	99	100
220V	8	4	0	1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20	21	22	23	24	25	26	27	28	29	30	31	32	33	34	35	36	37	38	39	40	41	42	43	44	45	46	47	48	49	50	51	52	53	54	55	56	57	58	59	60	61	62	63	64	65	66	67	68	69	70	71	72	73	74	75	76	77	78	79	80	81	82	83	84	85	86	87	88	89	90	91	92	93	94	95	96	97	98	99	100
230V	8	4	0	1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20	21	22	23	24	25	26	27	28	29	30	31	32	33	34	35	36	37	38	39	40	41	42	43	44	45	46	47	48	49	50	51	52	53	54	55	56	57	58	59	60	61	62	63	64	65	66	67	68	69	70	71	72	73	74	75	76	77	78	79	80	81	82	83	84	85	86	87	88	89	90	91	92	93	94	95	96	97	98	99	100
240V	8	4	0	1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20	21	22	23	24	25	26	27	28	29	30	31	32	33	34	35	36	37	38	39	40	41	42	43	44	45	46	47	48	49	50	51	52	53	54	55	56	57	58	59	60	61	62	63	64	65	66	67	68	69	70	71	72	73	74	75	76	77	78	79	80	81	82	83	84	85	86	87	88	89	90	91	92	93	94	95	96	97	98	99	100


 


 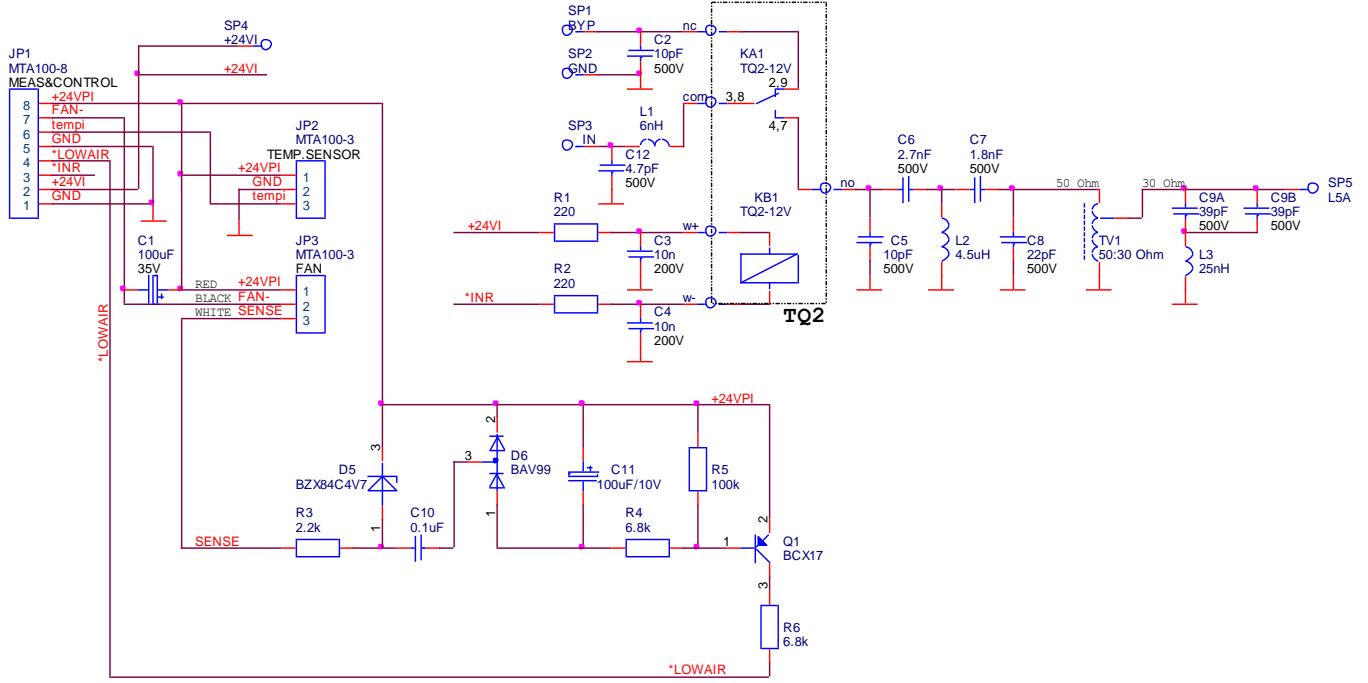


INPUT1

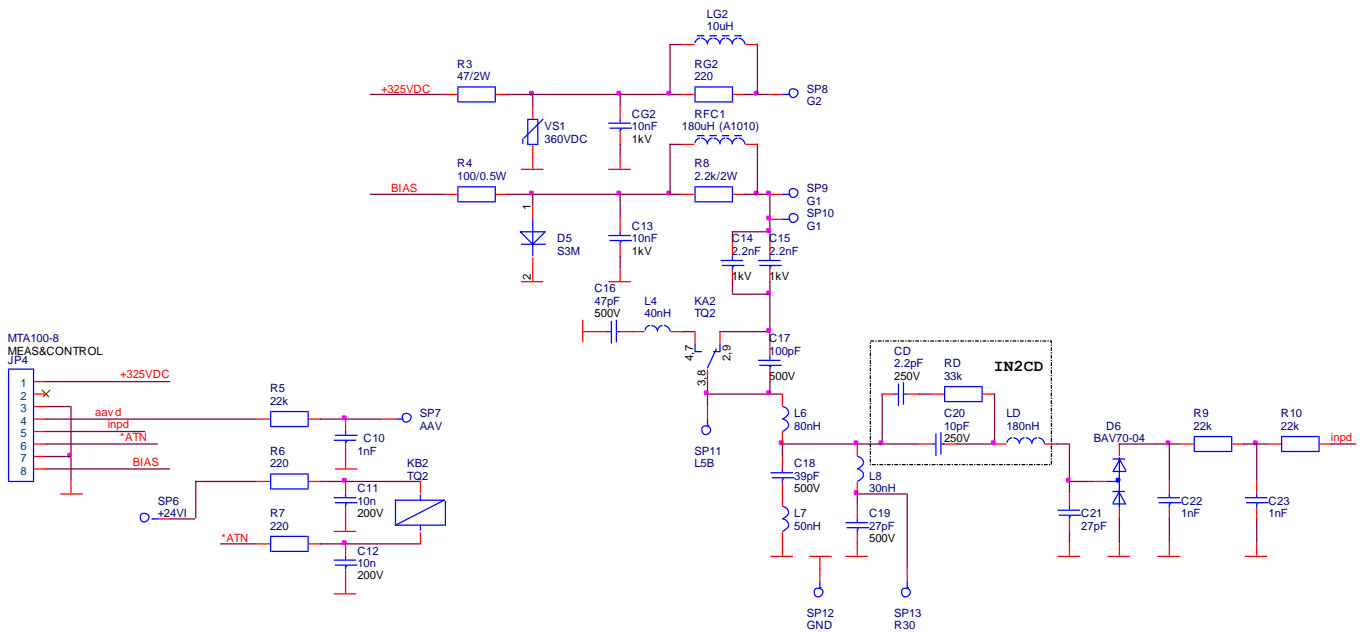



INPUT2

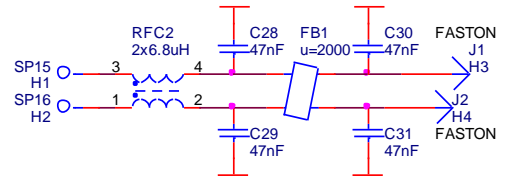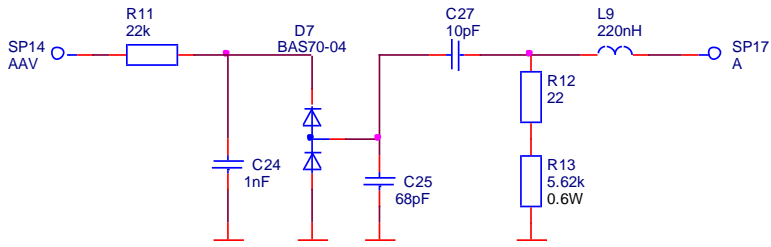

INPUT3

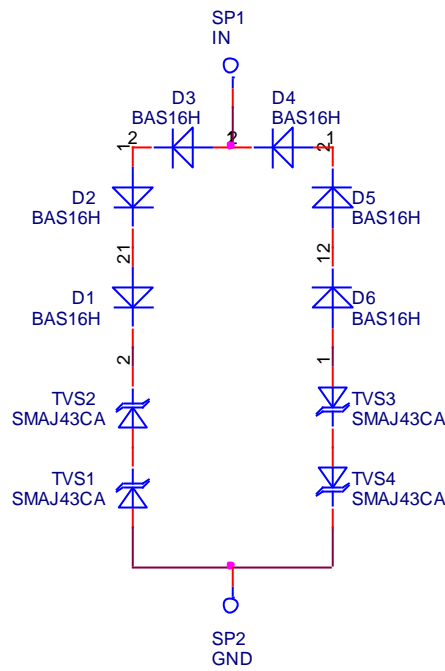


INPUT PROTECTION

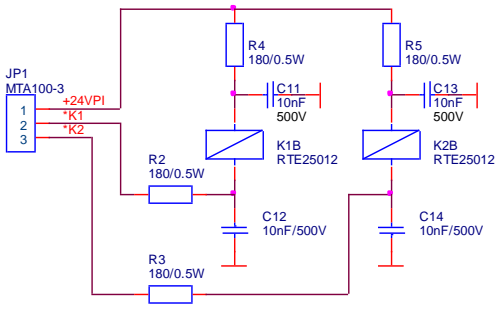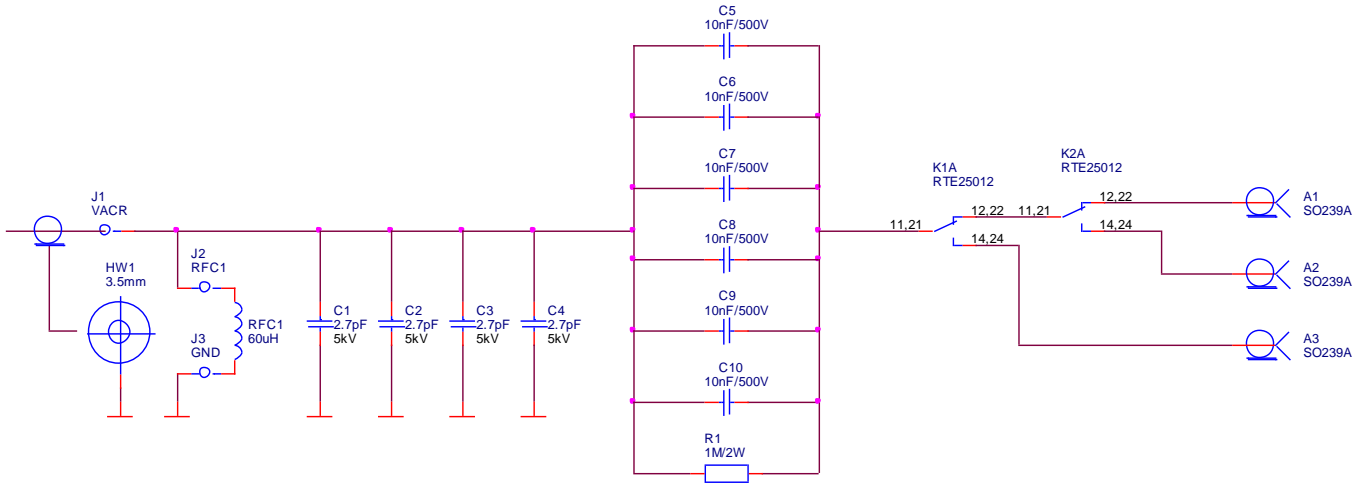


1	12	11	14
2	nc	com	no
3	22	21	24

RTE25012
BOTTOM VIEW


ANTENNA SWITCH

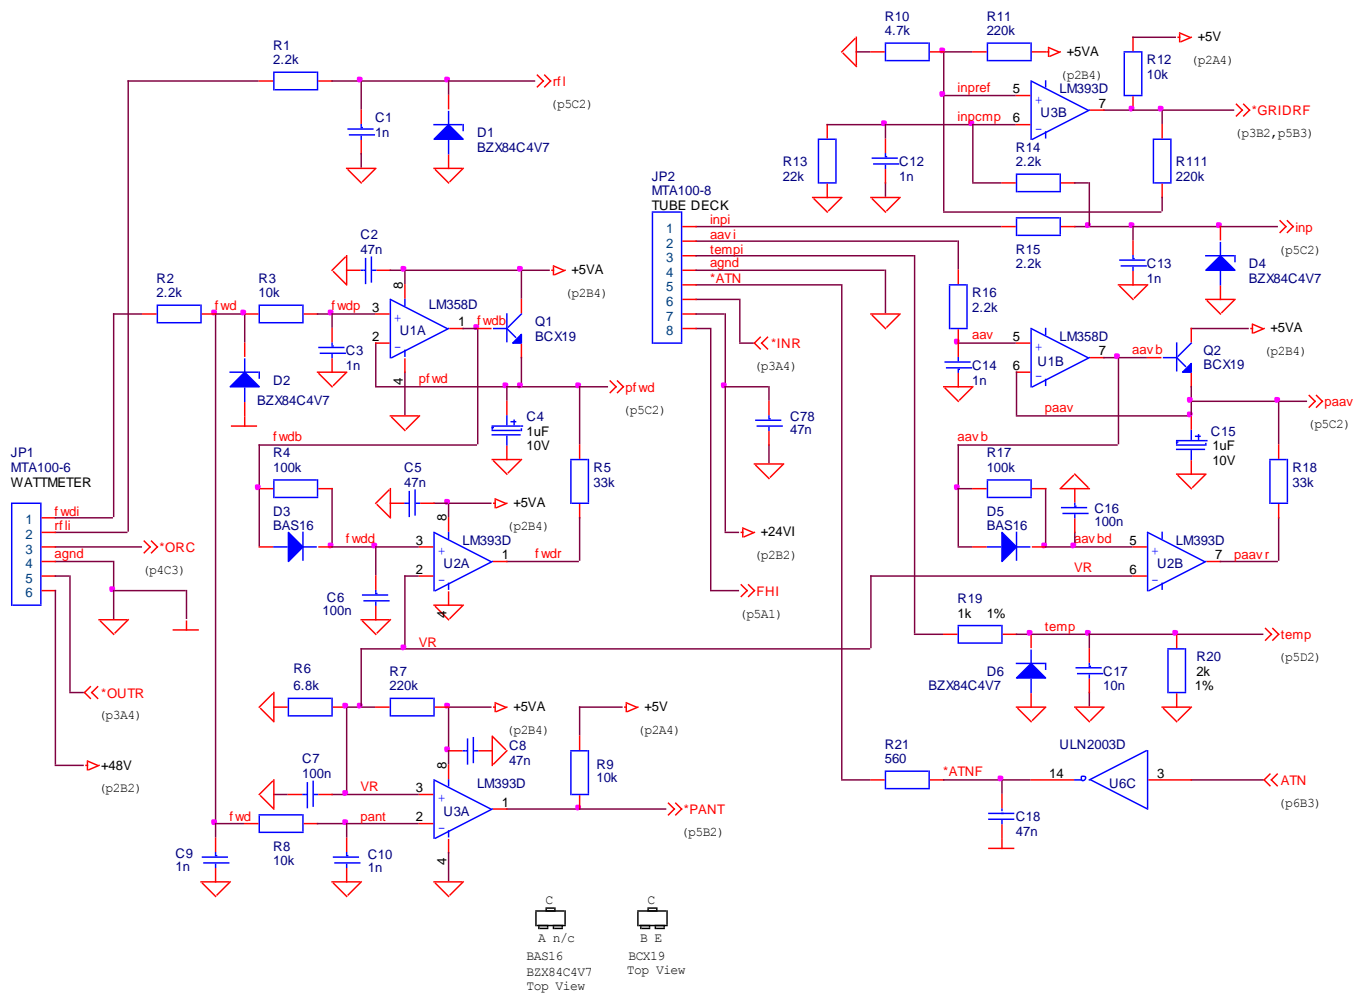

CONTROL 1/9

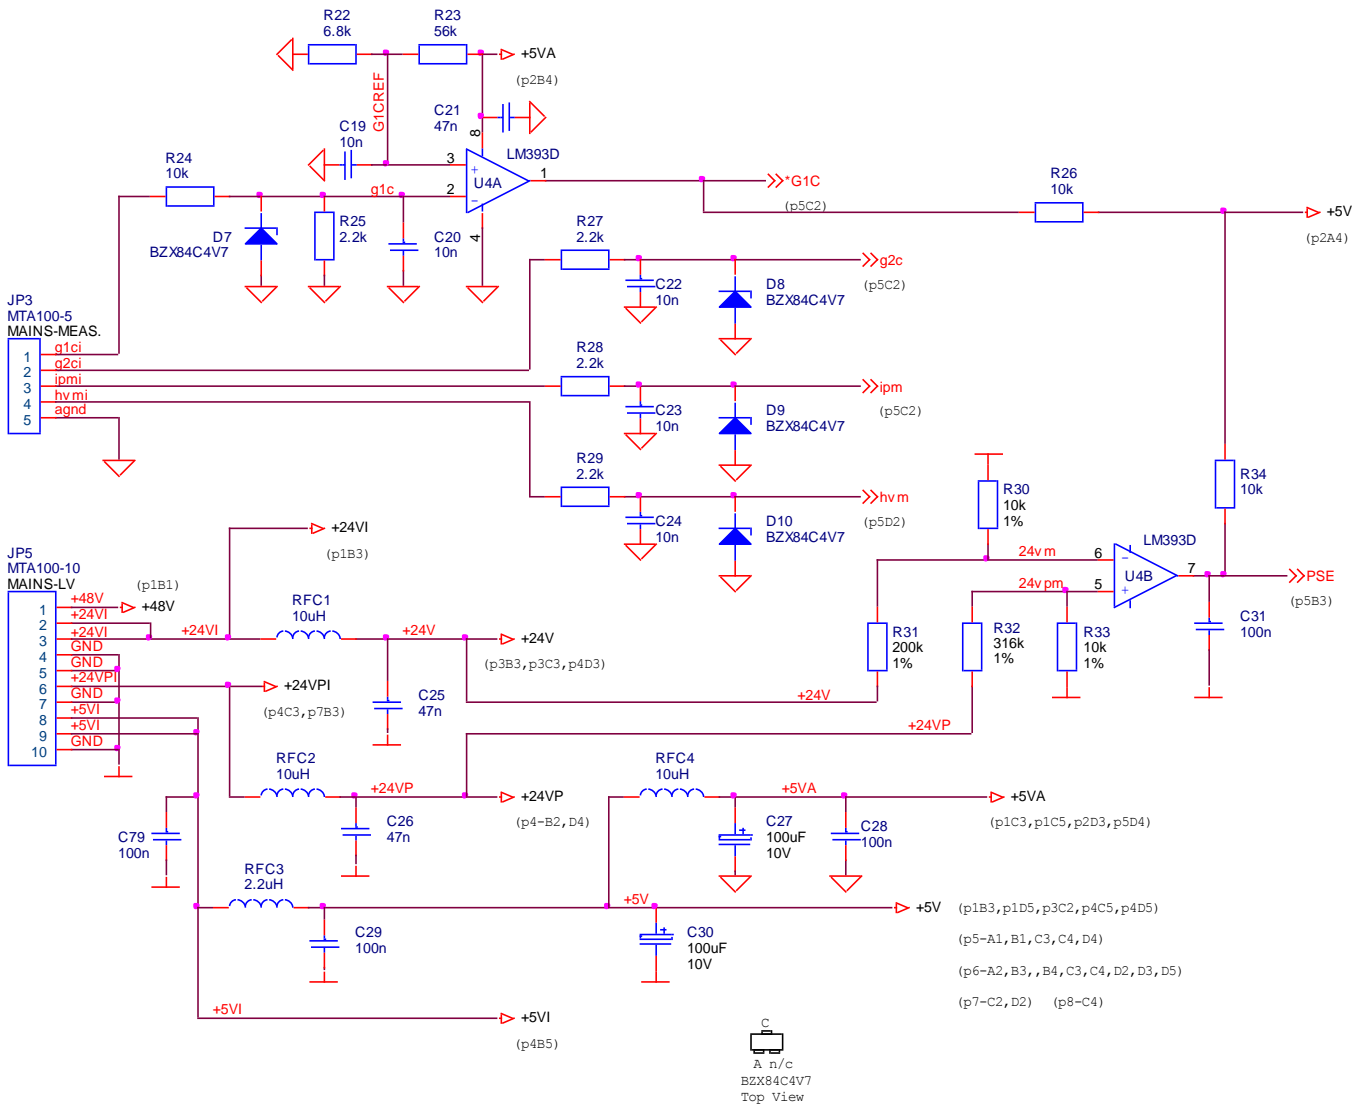


CONTROL 2/9

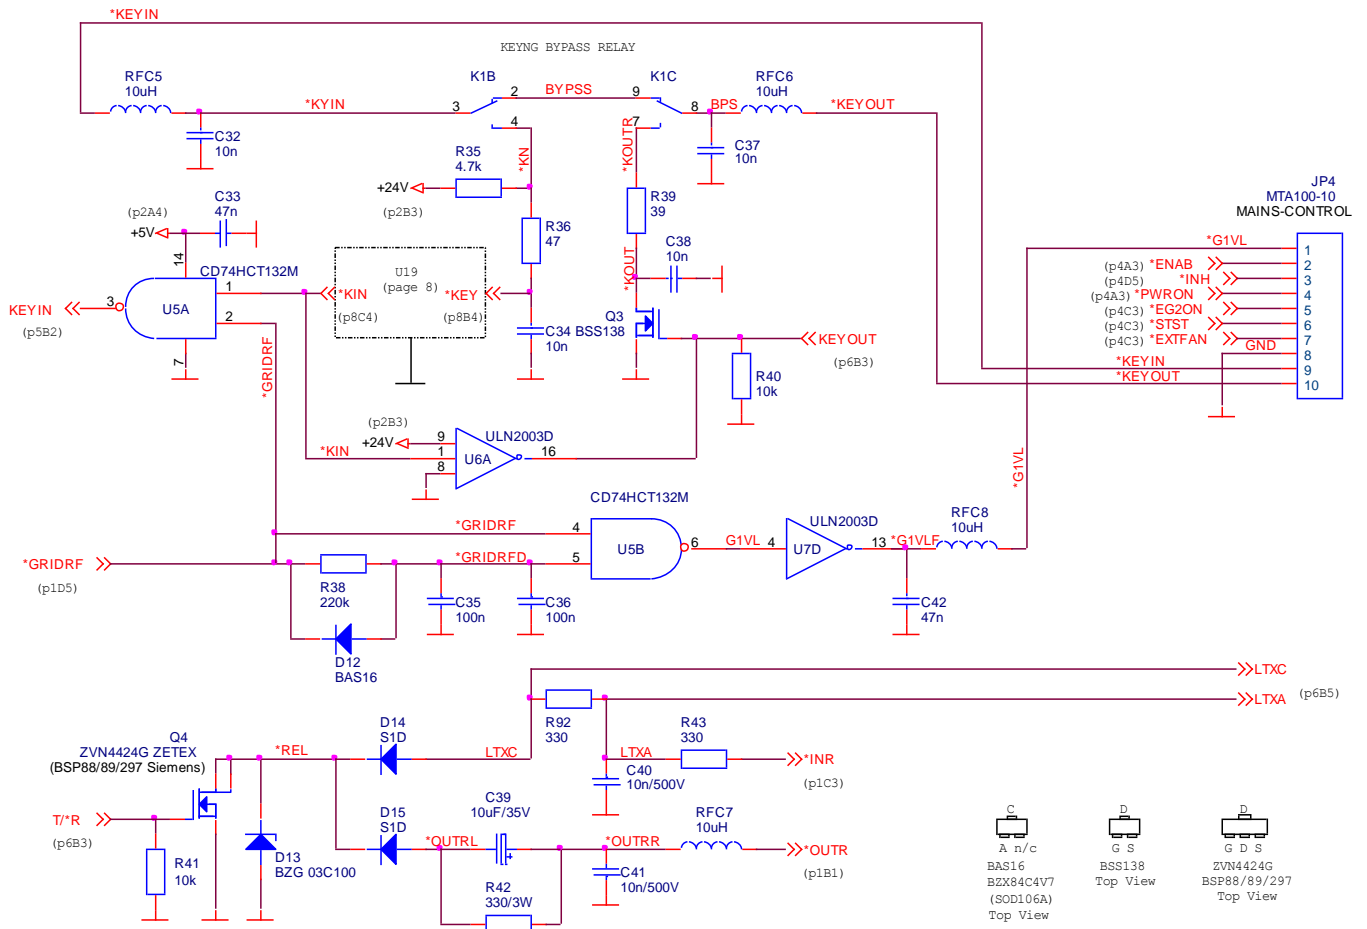


Deleted: D11, R37


CONTROL 3/9

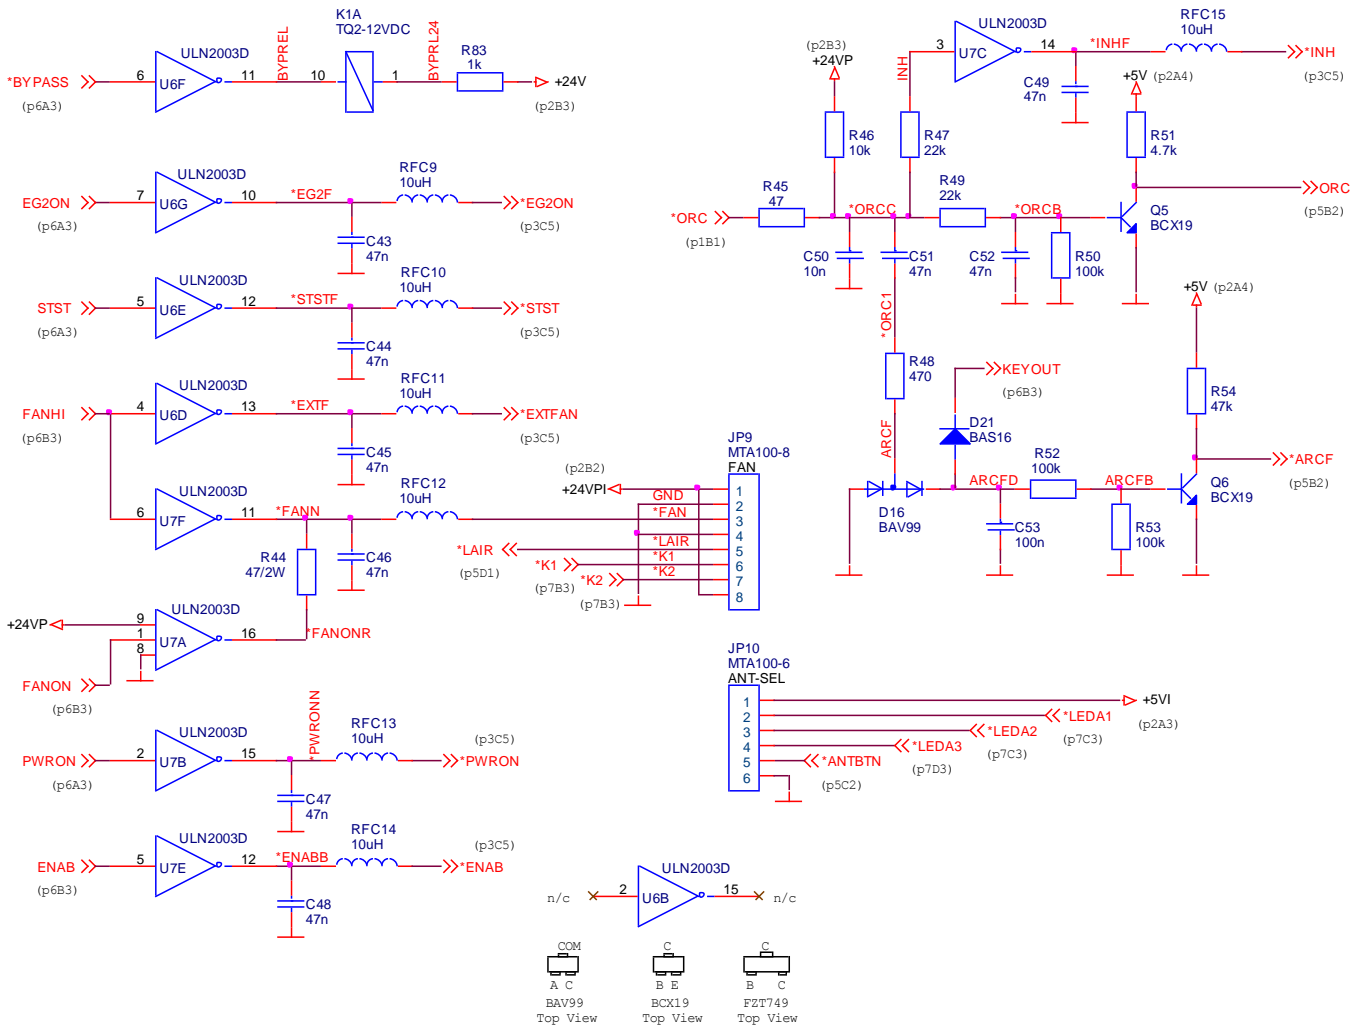



CONTROL 4/9

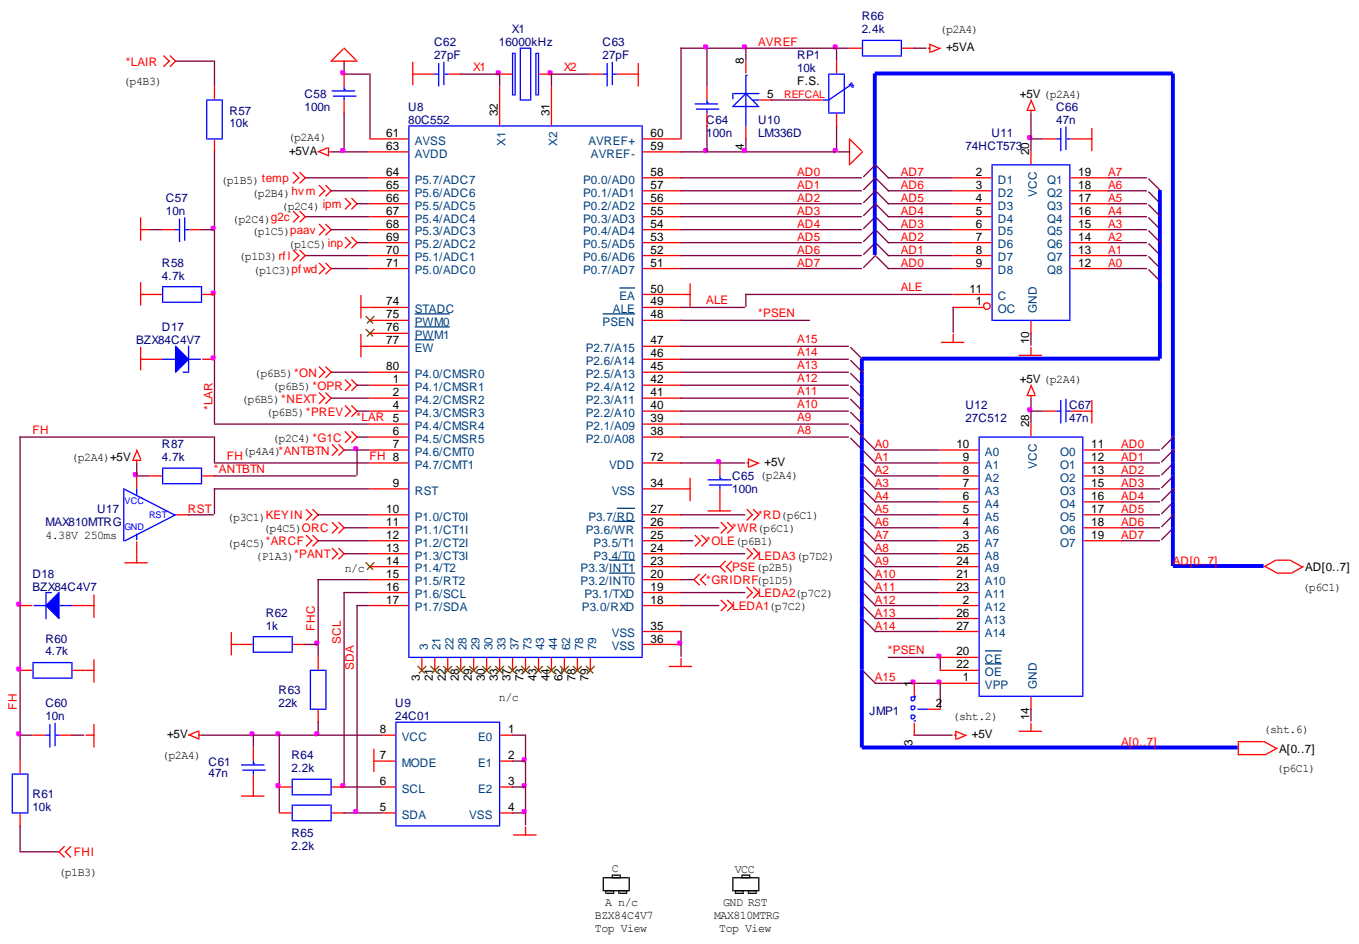



CONTROL 5/9

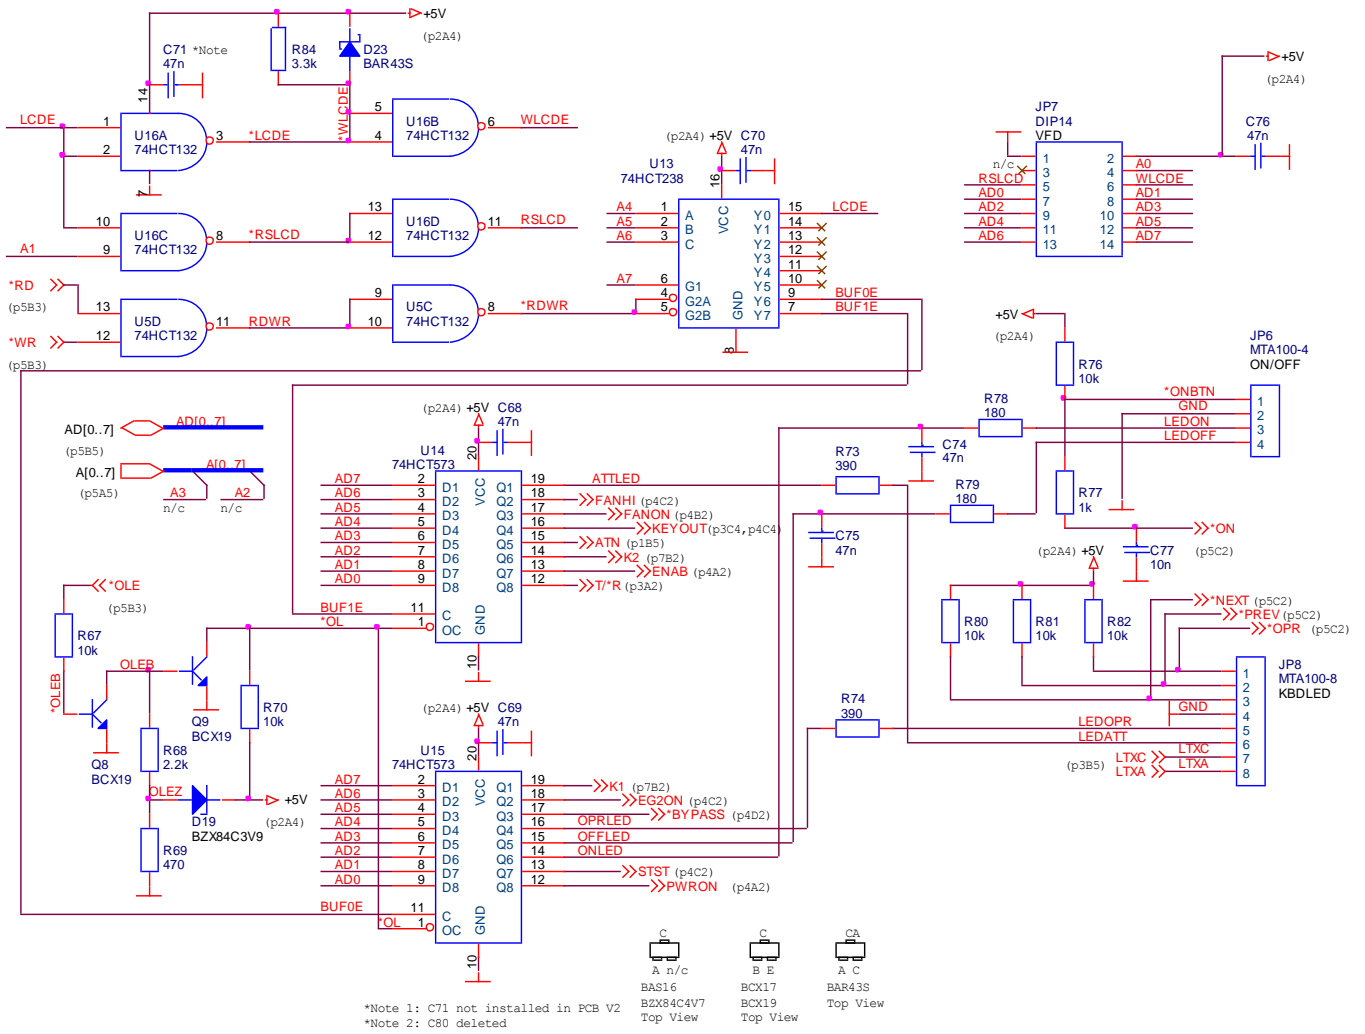











CONTROL 6/9

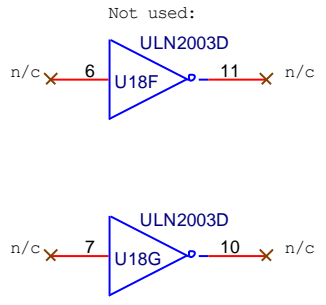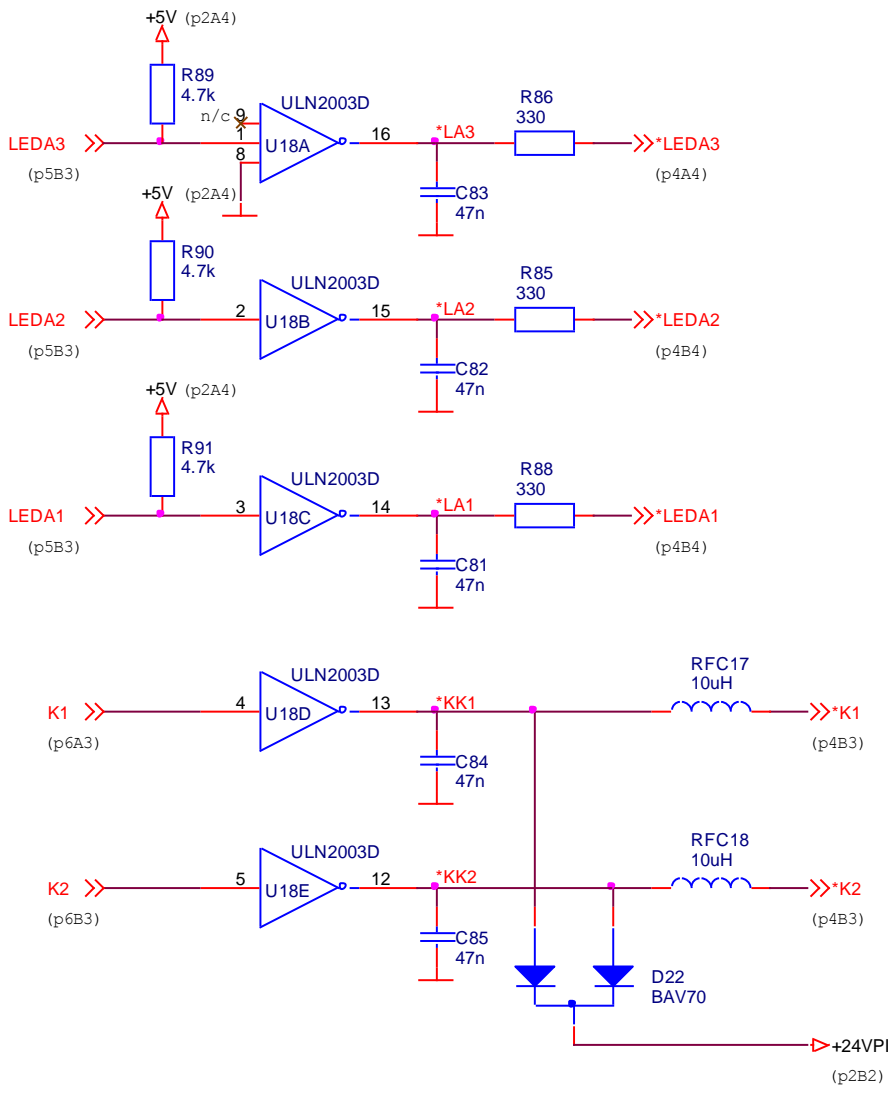


CONTROL 7/9

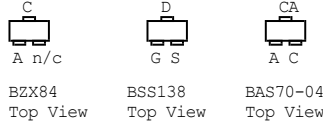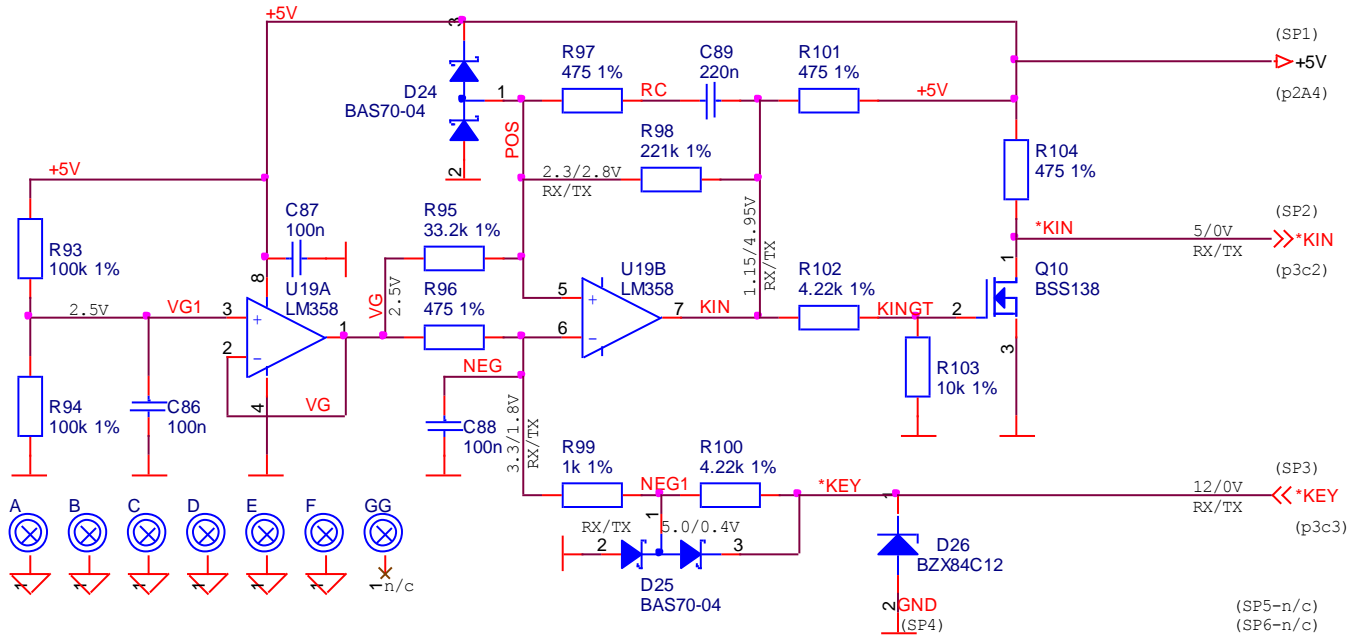



CONTROL 8/9

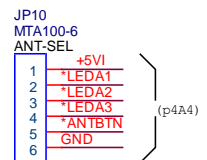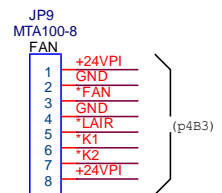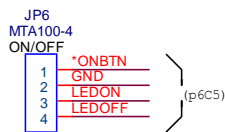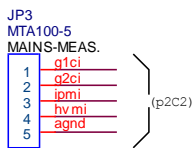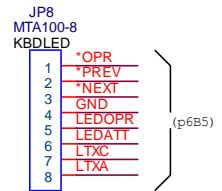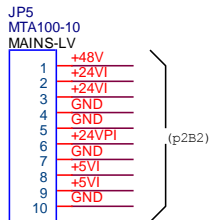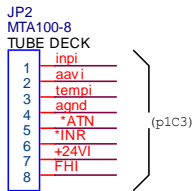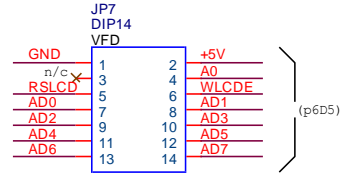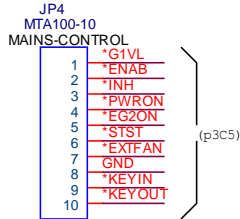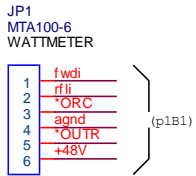


CONTROL 9/9

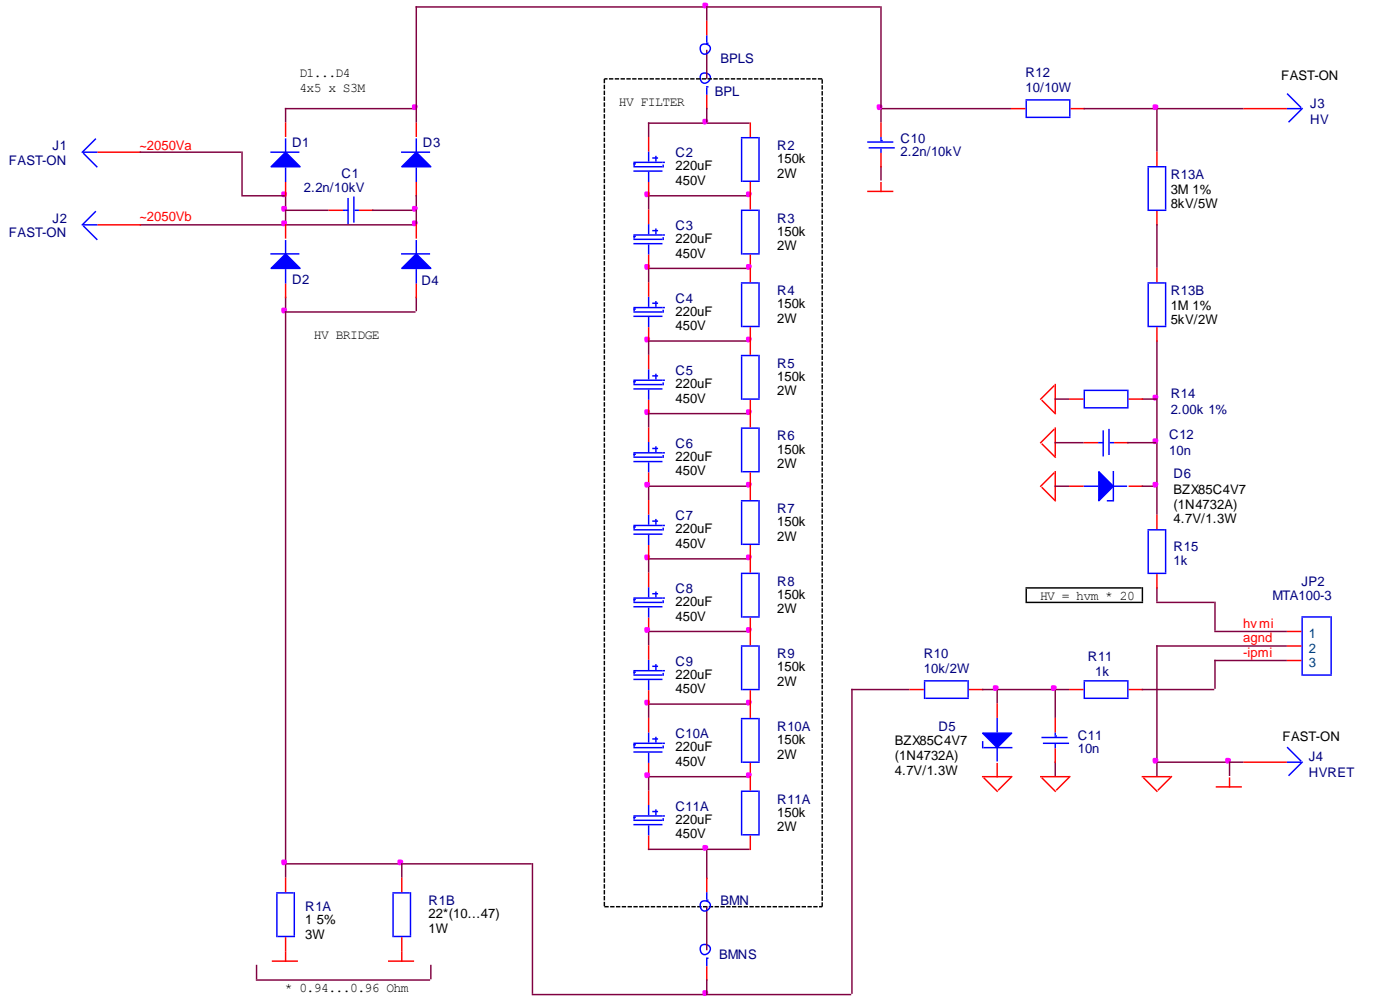

HV RECTIFIER & FILTER

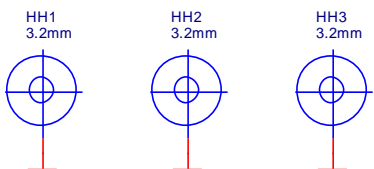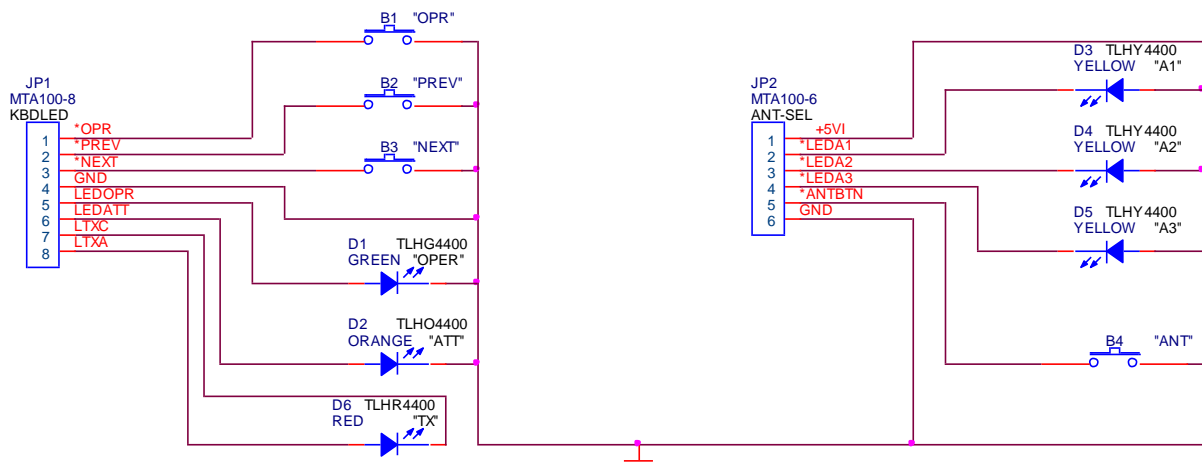


KEYBOARD

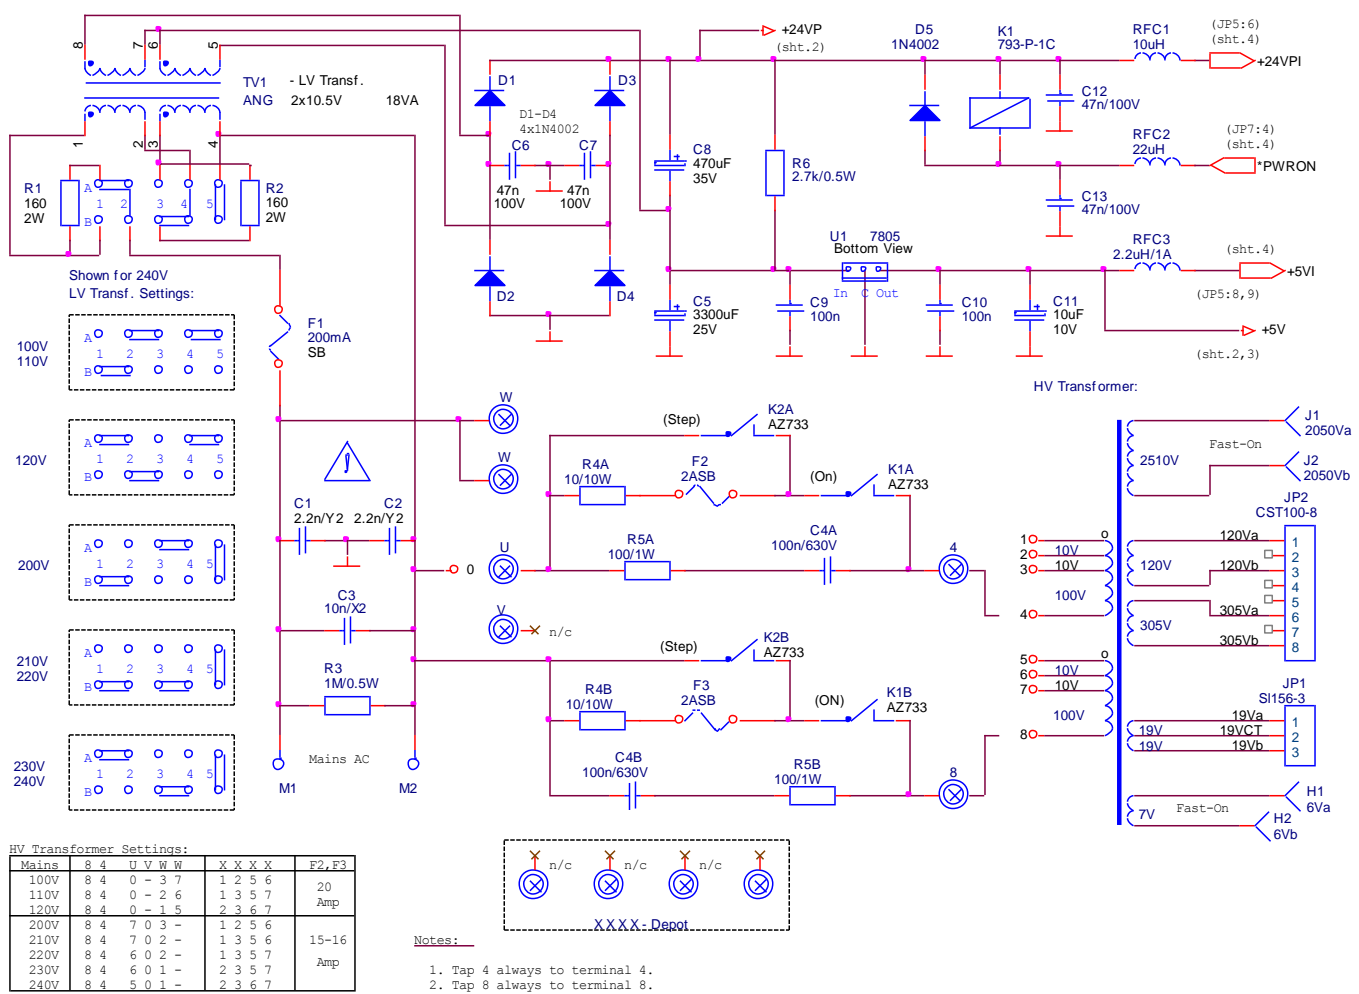


HV Transformer Settings:

Mains	8	4	U	V	W	W	X	X	X	X	F2, F3
100V	8	4	0	-	3	7	1	2	5	6	20
110V	8	4	0	-	2	6	1	3	5	7	Amp
120V	8	4	0	-	1	5	2	3	6	7	
200V	8	4	7	0	3	-	1	2	5	6	
210V	8	4	7	0	2	-	1	3	5	6	15-16
220V	8	4	6	0	2	-	1	3	5	7	
230V	8	4	6	0	1	-	2	3	5	7	
240V	8	4	5	0	1	-	2	3	6	7	Amp


MAINS 1/5

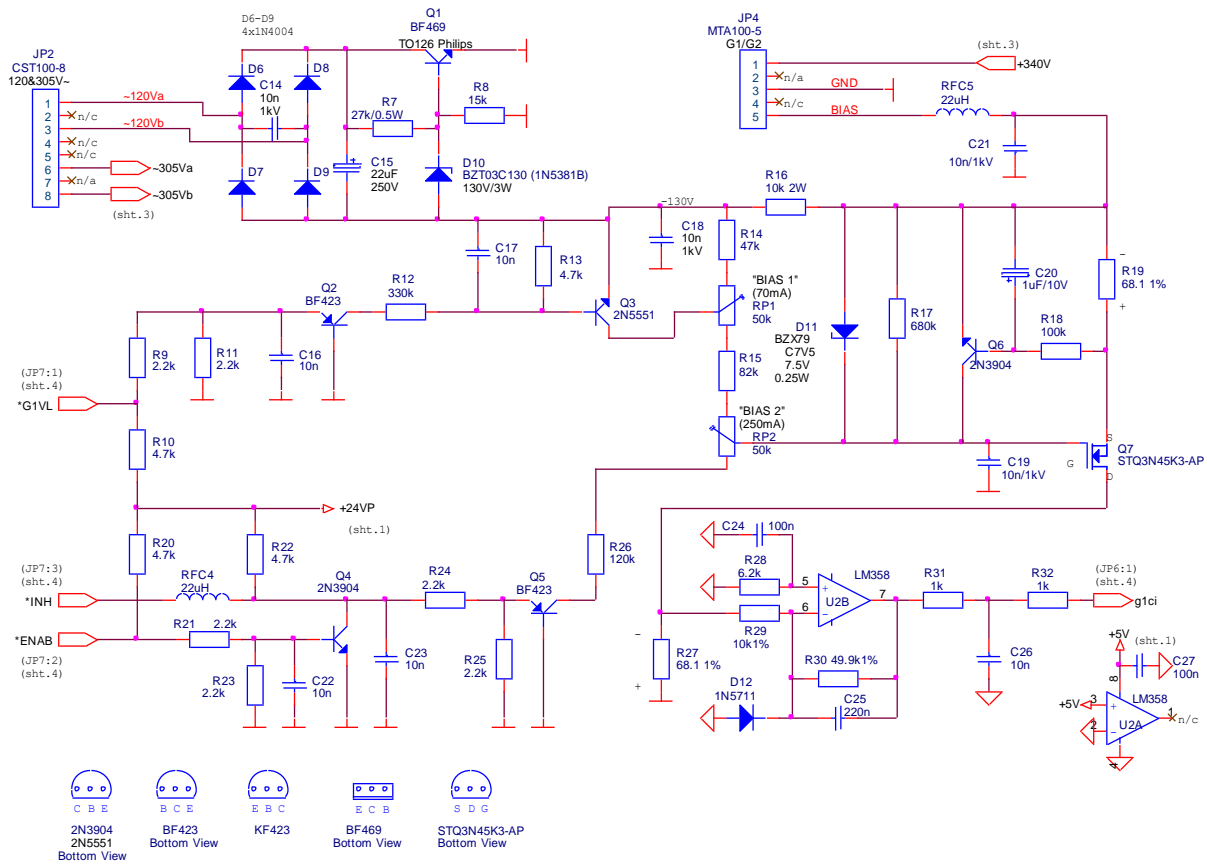









MAINS 2/5

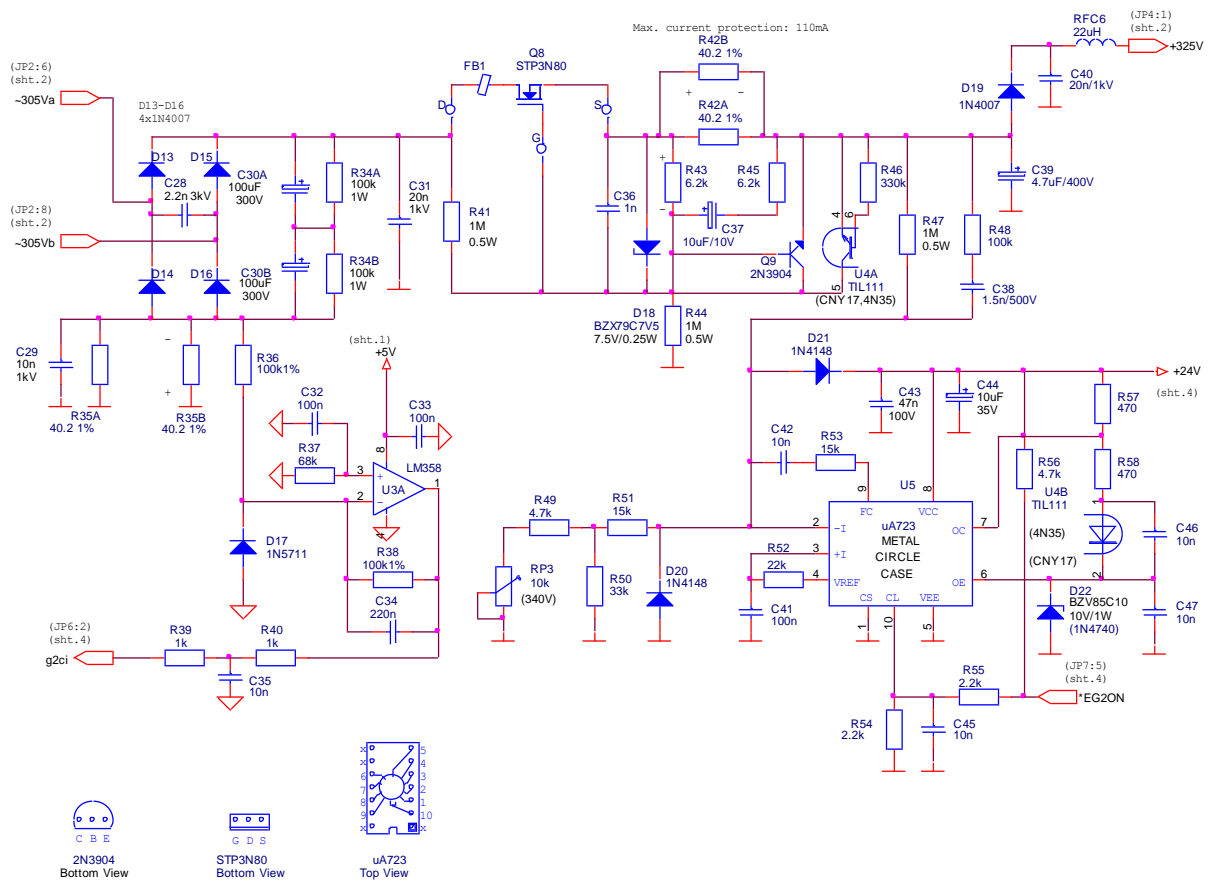



MAINS 3/5

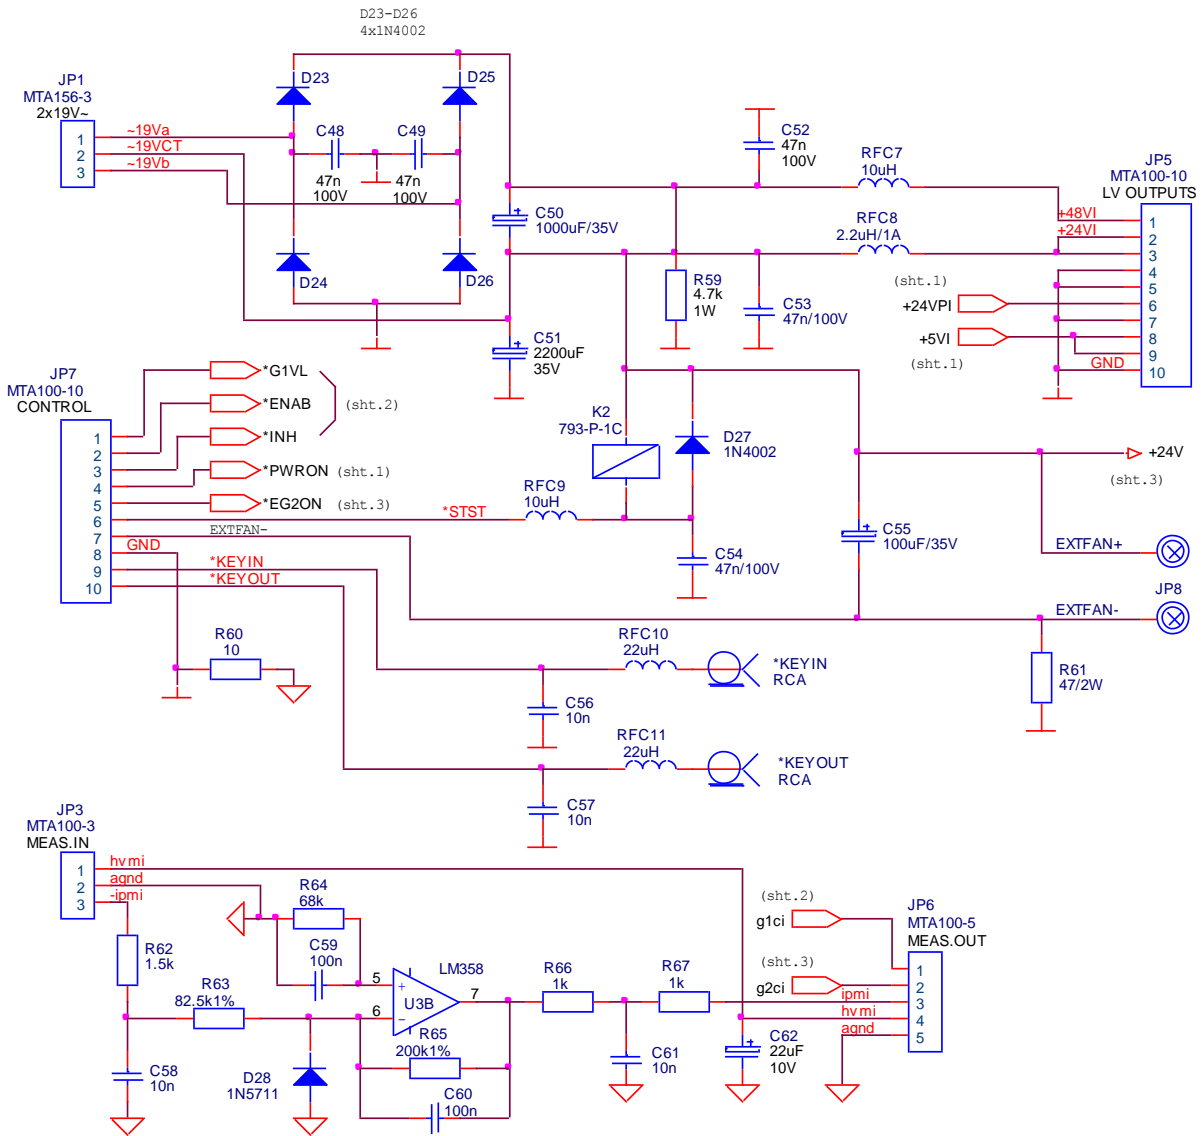


MAINS 4/5

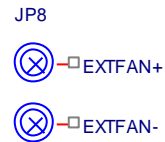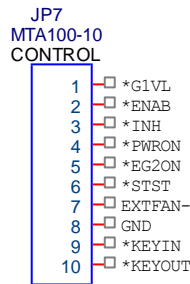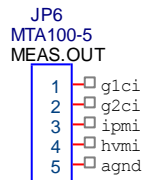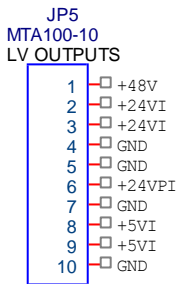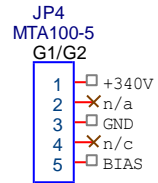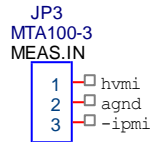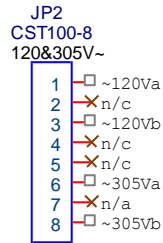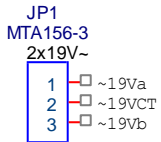

MAINS 5/5

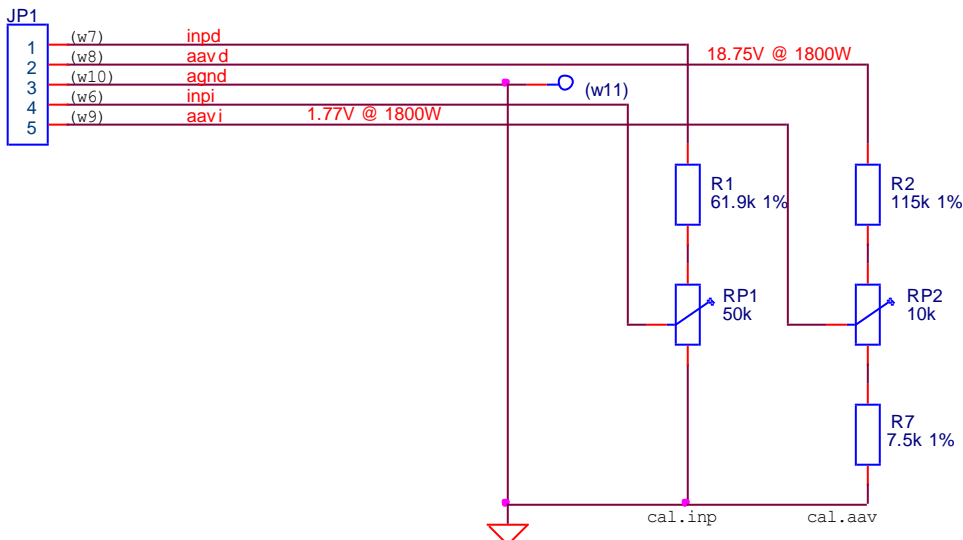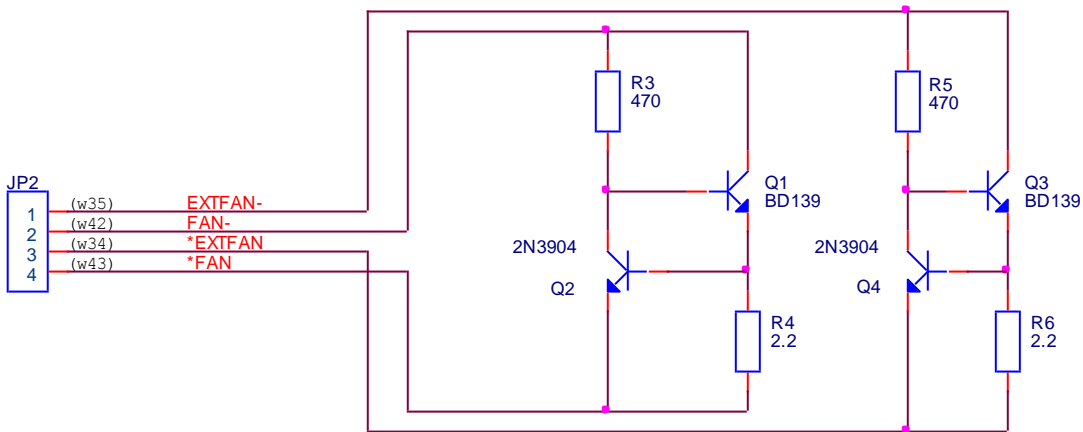

OVERLAY

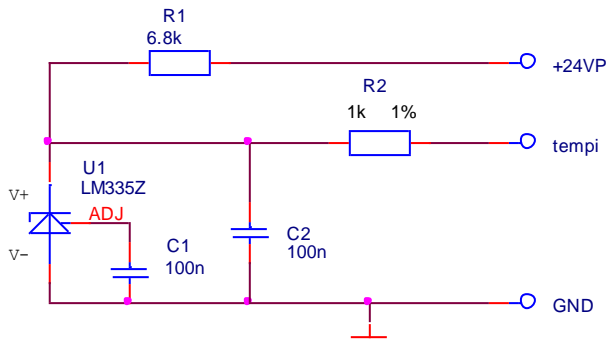


LM335Z



V- V+ ADJ

Bottom View

TEMPERATURE SENSOR

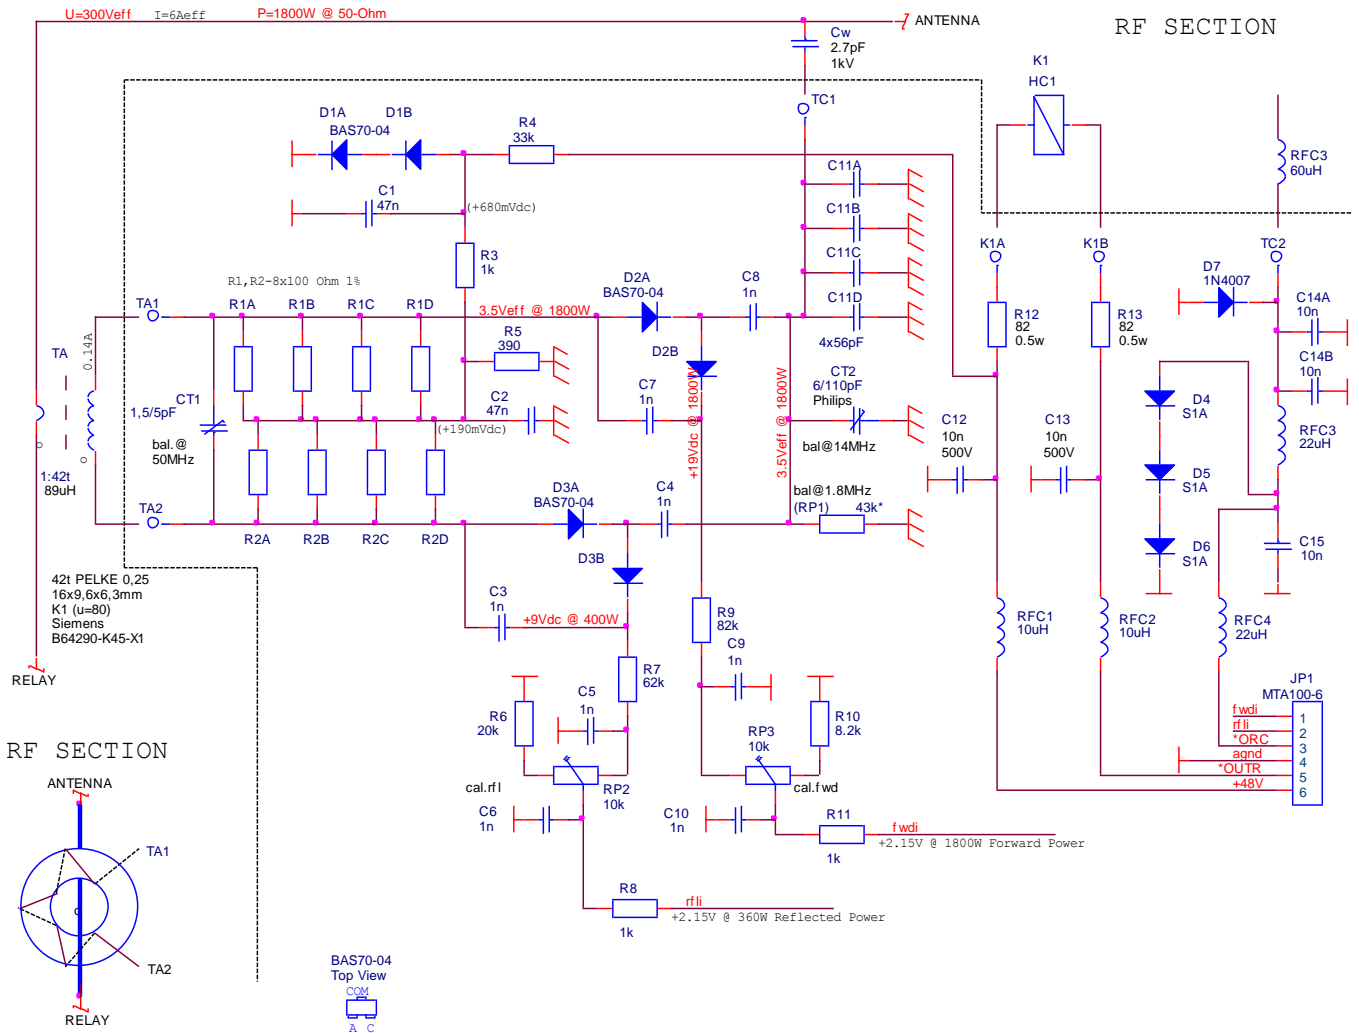

WATTMETER