

BUTTONS	COMMANDS		ACTION	
	●●○○ Function	○○●● Inquiry		
			K6XX	
		/B	–	Short Break (Pause to resume)
	–	–	C	Check Memory Left
○●●○	D	/D	–	Decrement S/N
	Fnn	–	F	Set Function Speed nn WPM
	–	/Gn	–	Programmed Gap (0 = letter; 4 = word)
●○○○	H	–	–	Hand key mode
	Knn	–	K	Keying compensation (nn ms)
	M	–	M	Toggle Mute; review Mute status
	Nnnnn	/N	N	Set S/N; send S/N; review S/N
	–	/Pnn	–	Pause n.n seconds
	–	/R	–	Long break (button to Resume)
	Snn	/Snn	S	Set Speed nn WPM; review Speed
	SDn	/SDn	–	Speed Down n WPM
	SUn	/SUn	–	Speed Up n WPM
	Tnn	–	T	SideTone (500-990 Hz; Hz/10)
○●○○●	X	–	–	Tune (key down)
	Zn	–	Z	Set Zero/Nine mode for S/N
●○○○	1	/1	1	Send msg1; GOSUB1; review msg1
○●○○	2	/2	2	Send msg2; GOSUB2; review msg2
○○●○	3	/3	3	Send msg3; GOSUB3; review msg3
○○○●	4	/4	4	Send msg4; GOSUB4; review msg4
●●●●				Reset