


MAJOR PARTS LIST:

- | | | | |
|--------|-------------------------------|-----------|------------------------------|
| 1.2. | Rotor housing. | 32. | "C" ring. |
| 3. | Gear mount plate. | 33,34. | Ball bearing holder. |
| 4. | Gear mount supportor. | 35. | Rubber terminal sheet. |
| 5. | Gear stud sleeve. | 36. | Terminal. |
| 6. | Stud support sleeve. | 37. | Terminal cover. |
| 7,8. | Gear shaft. | 38. | Rubber grommet. |
| 9. | Assmb gear. | 39. | Cable holder. |
| 10,11. | Internal gear. | 40. | Name plate. |
| 12. | Plastic motor gear. | 41,42. | Gear mount screws. |
| 14. | Gear pot shaft. | 43,44. | Motor mount screws. |
| 15. | Plastic pot gear. | 45,46,47. | Motor holder screws. |
| 17. | Potentiometer. | 48,49. | Housing mount screws. |
| 18. | Insulator sheet. | 50,51. | Housing screws. |
| 22. | Pot divider gear. | 52. | Terminal/cable holder scres. |
| 23. | Gear stopper screw. | 55,54. | Terminal cover screws. |
| 24. | Gear/motor mount plate. | 56. | "U" bolts. |
| 25. | AC 24 volt motor. | 57. | Clamps. |
| 26. | Motor mount plate. | 61. | Mast clamp stud bolts. |
| 27. | Disc brake/pinion motor gear. | | |
| 28. | Disc pad. | | |
| 29. | Boom shaft tube. | | |
| 30. | Stopper stud pin. | | |
| 31. | Assmb tube gear. | | |

MODEL KR-500 ELEVATION ROTOR

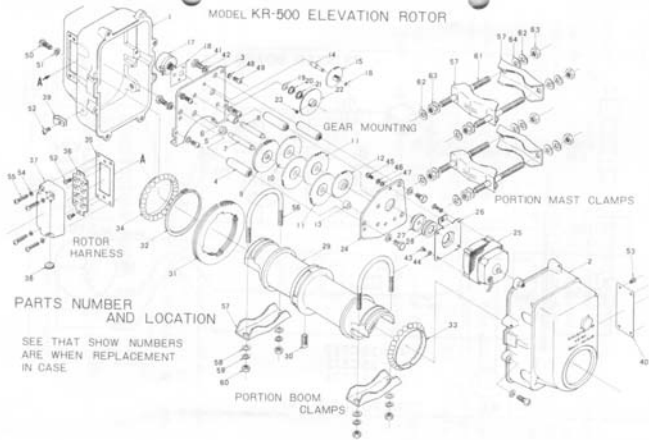

PARTS NUMBER AND LOCATION

SEE THAT SHOW NUMBERS ARE WHEN REPLACEMENT IN CASE

