

ICOM IC77 HF TRANSCEIVER - PROGRAMMING CHANNELS AND FREQUENCIES

Start with your radio switched off.

- 1.) Remove the rectangular rubber cap on the front panel. While pushing the programming switch in, turn the power on (OFF or previous frequency appears)

Programming from PC:

The programming switch is in the first hole from the top. Use a blunt rod like a plastic knitting needle, clean twig or similar - don't break a match in the hole.

Follow instructions on the PC programme

Programming from the front:

NB The programming switch is in the second hole from the top. Use a blunt rod like a plastic knitting needle, clean twig or similar - don't break a match in the hole.

- 2) Rotate the channel selector (large dial knob) to select a channel to be programmed.
- 3) Push the [FC] switch to programme the channel. ("Fr" appears at bottom right of screen)
- 4) If "OFF" appears, push the [NB] switch (a frequency appears and the first digit blinks).
- 5) Rotate the channel selector to select a digit ("LOCK" blinks at bottom left of screen).
- 6) Push the [SCAN] switch to move to the next digit.
- 7) Repeat steps 5) and 6) until frequency is set up correctly i.e. rotate dial knob - [SCAN]; rotate dial knob - [SCAN] ... etc.
- 8) Push the [MODE] switch to select USB or LSB (see centre top of your screen). Disregard CW, CW narrow and AM - unless you are setting up a commercial radio station like BBC, in which case you would select AM.9) Push the [LOCK] switch ("LOCK" disappears from the bottom left of your screen).
- 10) Push the [FC] switch ("Co" appears at bottom right of your screen).
- 11) If "OFF" appears, push [NB] switch.
- 12) Rotate the channel selector to select a character. "LOCK" blinks at bottom left of screen.

Note: " _ " means a space.

- 13) Push the [SCAN] switch to move to the next character.

14) Repeat steps 12) and 13) until all the characters are selected to form a name or frequency number. (Up to a 6-letter comment can be programmed).

15) Push the [LOCK] switch ("LOCK" disappears from the screen).

NOTE: To cancel the comment, push the [RIT] switch instead of the [LOCK] switch. (the previous comment appears).

16) To program another channel, push the [FC] switch, and then repeat steps 2) to 15).

17) Turn the power OFF to save the settings. If you only set up one channel, turn power OFF after step 15).