

## ■ Memory mode/VFO mode

The transceiver has 2 operating modes: memory mode and VFO mode. Memory mode is used to select pre-programmed marine channels in one of the 3 channel groups; VFO mode is used to select frequencies around preprogrammed channels.

Push [CH/FREQ] to toggle between memory and VFO modes.

- "FREQ" appears when in VFO mode.
- In VFO mode only simplex operation is possible.

