



# GM338 User Guide

The Versatile Radio



6804112J06-C

GM338 Professional Mobile Radio for Conventional System



## COPYRIGHT INFORMATION

The Motorola products described in this manual may include copyrighted Motorola computer programs stored in semiconductor memories or other media. Laws in the United States and other countries preserve for Motorola certain exclusive rights for copyrighted computer programs, including, but not limited to, the exclusive right to copy or reproduce in any form the copyrighted computer program. Accordingly, any copyrighted Motorola computer programs contained in the Motorola products described in this manual may not be copied, reproduced, modified, reverse-engineered, or distributed in any manner without the express written permission of Motorola. Furthermore, the purchase of Motorola products shall not be deemed to grant either directly or by implication, estoppel, or otherwise, any license under the copyrights, patents, or patent applications of Motorola, except for the normal non-exclusive license to use that arises by operation of law in the sale of a product.

© 2000, 2001, 2010 by Motorola, Inc.

All Rights Reserved.

Motorola Technology Sdn. Bhd. (Co. No. 455657-H)

Plot 2 Bayan Lepas Technoplex Industrial Park

Mukim 12 S.W.D.

11900 Penang, Malaysia.

Printed in Malaysia.

## Sending a Call

1. Turn radio on and select appropriate zone and channel.
2. Press **PTT**, hold the microphone 1 to 2 inches (2.5 to 5 cm) from your mouth, and speak clearly into it.
3. Release **PTT** to listen.

## Receiving a Call

1. Turn radio on and adjust volume to the desired level.
2. Select desired channel.
3. To respond to an incoming call, press **PTT**, hold the microphone 1 to 2 inches (2.5 to 5 cm) from your mouth, and speak clearly into it.


## Deleting a Nuisance Channel During Scanning

1. While radio is on a nuisance channel, hold down preprogrammed **Scan** button until you hear a tone.
2. Release **Scan** button.

## Making a Phone Call

1. Press **Phone** button, or select **Phone** from the menu.
2. Send access code if required.
3. Send phone number in one of the following ways:
  - Press and release **PTT** to send last dialed number.  
—or—
  - when using an enhanced keypad microphone only, press preprogrammed **Speed Dial** button, followed by a keypad key (1–9), to access first nine numbers in your phone list. (Press **PTT** if buffered dial.)  
—or—
  - when using an enhanced keypad microphone only, enter phone number using the keypad. (Press **PTT** if buffered dial.)
4. Press **PTT**, hold the microphone 1 to 2 inches (2.5 to 5 cm) from your mouth, and speak clearly into it.

## Ending a Phone Call

1. Send deaccess code if required.
2. Press preprogrammed **Phone** button, or press .

## Sending and Cancelling an Emergency Alert

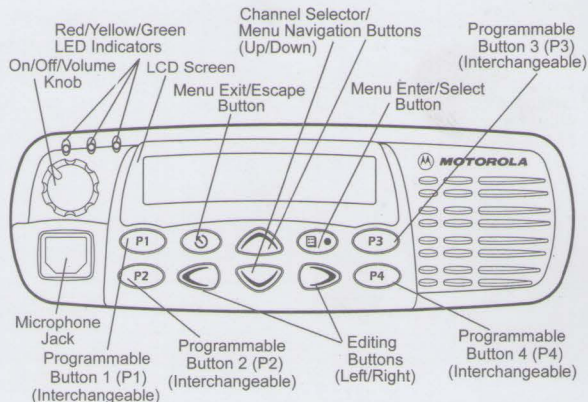 
- To activate **Emergency Alert**, press preprogrammed **Emergency** button.
- To cancel, press and hold down **Emergency** button.



**MOTOROLA**

## GM338™ Quick Reference Card

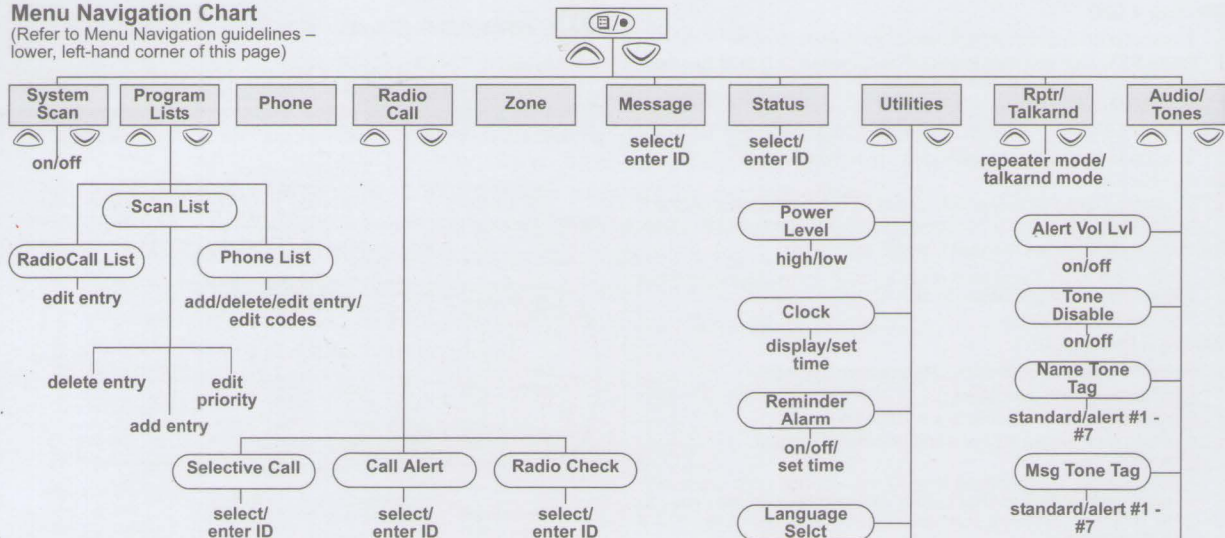 
Record the functions for your radio's programmable buttons in the table provided below. For further information, see page 9 of this User Guide.



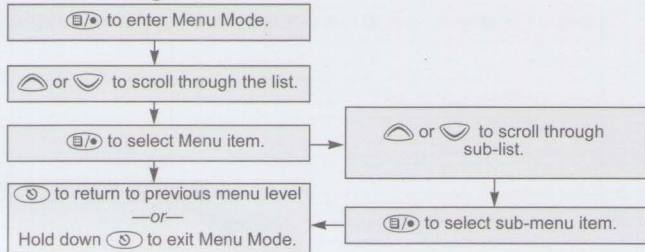 
Button	Function	Short Press	Long Press	Hold Down	Page

## Menu Navigation Chart

(Refer to Menu Navigation guidelines – lower, left-hand corner of this page)



### Menu Navigation



# CONTENTS

<b>Important Safety Information</b> .....	<b>3</b>
<b>Radio Overview</b> .....	<b>5</b>
Parts of the Radio .....	5
Optional Enhanced Keypad Microphone (RMN4026) .....	6
On/Off/Volume Knob .....	7
Channel Selector/Menu Navigation Buttons .....	7
LED Indicators .....	7
Programmable Buttons .....	7
Push-to-Talk (PTT) Button .....	10
Microphone .....	10
Menu Keys .....	10
Use with Enhanced Keypad Microphone (RMN4026) .....	11
LCD Screen .....	13
Audio Indicators for Programmable Buttons .....	14
<b>Getting Started</b> .....	<b>15</b>
Turning the Radio On or Off .....	15
Adjusting the Volume .....	15
Selecting a Zone .....	15
Selecting a Radio Channel .....	16
Sending a Call .....	17
Receiving a Call .....	17

<b>Radio Calls</b> .....	<b>18</b>
Making a Selective Call .....	18
Receiving a Selective Call .....	18
Sending a Call Alert™ Page .....	19
Receiving a Call Alert™ Page .....	19
Radio Check .....	20
Sending a Status .....	20
Sending a Message .....	21
Receiving a Message .....	22
Sending an Emergency Alert .....	22
Selective Radio Inhibit .....	23
Editing a Radio Call List .....	23
Repeater or Talkaround Mode .....	24
Setting the Power Level .....	24
Name and Call/Message Tone Tagging .....	25
<b>Scan</b> .....	<b>27</b>
Starting or Stopping Scan .....	27
Talkback .....	27
Deleting a Nuisance Channel .....	28
Restoring a Channel to the Scan List .....	28
Editing a Scan List .....	28
Adding or Deleting Channels in a Scan List .....	29
Prioritizing a Channel in a Scan List .....	29
Setting Priority Channels .....	30

**Phone** ..... **31**

Making a Phone Call ..... 31

Modifying the Phone List ..... 32

    Adding an Entry (when using the enhanced keypad microphone only) ..... 32

    Deleting an Entry ..... 33

    Editing an Entry (when using the enhanced keypad microphone only) ..... 34

    Editing an Access/Deaccess Code (when using

the enhanced keypad microphone only) . . . 35

**Audio/Tone Settings** ..... **36**

**Utilities** ..... **38**

Setting the Time ..... 40

Displaying the Time ..... 41

Selecting the Display Language ..... 41

# IMPORTANT SAFETY INFORMATION

## Product Safety and RF Exposure Compliance



**Caution**

Before using this product, read the operating instructions for safe usage contained in the Product Safety and RF Exposure booklet enclosed with your radio.

### ATTENTION!

This radio is restricted to occupational use only to satisfy FCC RF energy exposure requirements. Before using this product, read the RF energy awareness information and operating instructions in the Product Safety and RF Exposure booklet enclosed with your radio (Motorola Publication part number 6804112J96) to ensure compliance with RF energy exposure limits.

For a list of Motorola-approved antennas, batteries, and other accessories, visit the following website:

<http://www.motorola.com/governmentandenterprise>

**NOTES**

Making a Phone Call . . . . . 31

Modifying the Phone Call . . . . . 32

Adding an Entry Using the Keypad (Microphone Only) . . . . . 33


Deleting an Entry . . . . . 33

Editing an Entry (When Using the Enhanced Keypad) (Microphone Only) . . . . . 34

Editing an Entry Using a Connected Device . . . . . 35

**Product Safety and RF Exposure Compliance**

Before operating this device, read the operating instructions for safe usage contained in the Product Safety and RF Exposure booklet enclosed with your radio.



**Caution**

**ATTENTION**

This radio is restricted to occupational use only for FCC RF energy exposure requirements. Before using this product, read the RF energy awareness information and operating instructions in the Product Safety and RF Exposure booklet enclosed with your radio (Motorola Publication part number 680412198) to ensure compliance with RF energy exposure limits.

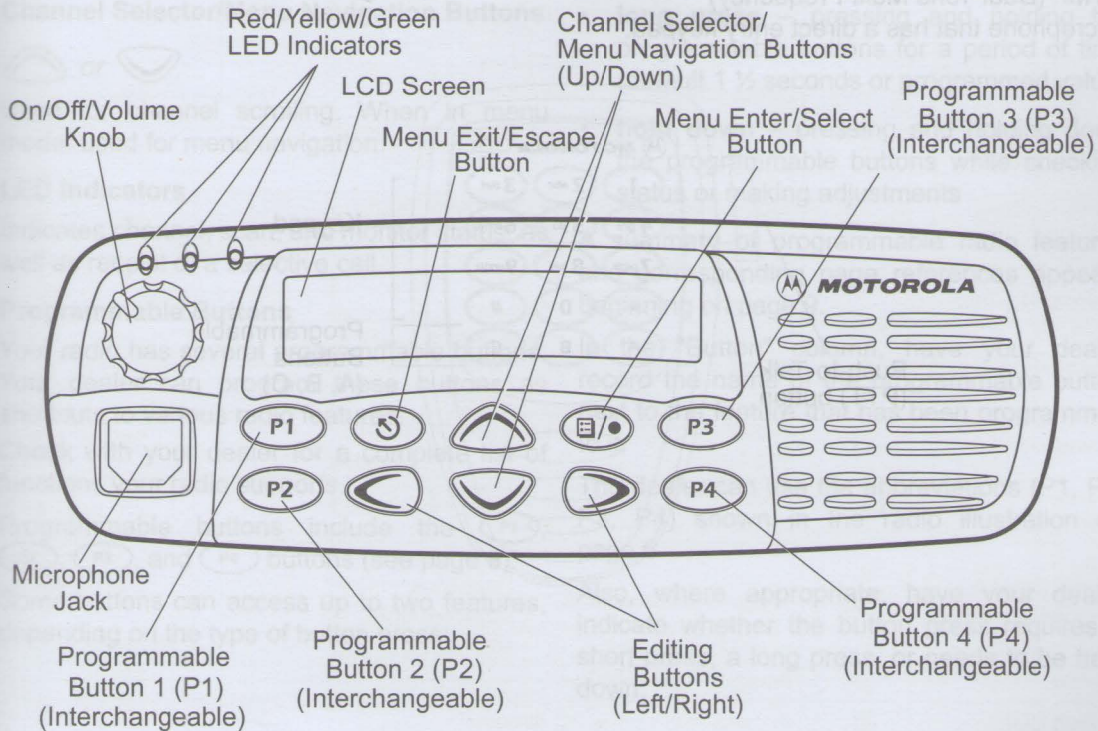 
For a list of Motorola-approved antennas, batteries, and other accessories, visit the following website:

<http://www.motorola.com/government/batteries>



# RADIO OVERVIEW

## PARTS OF THE RADIO

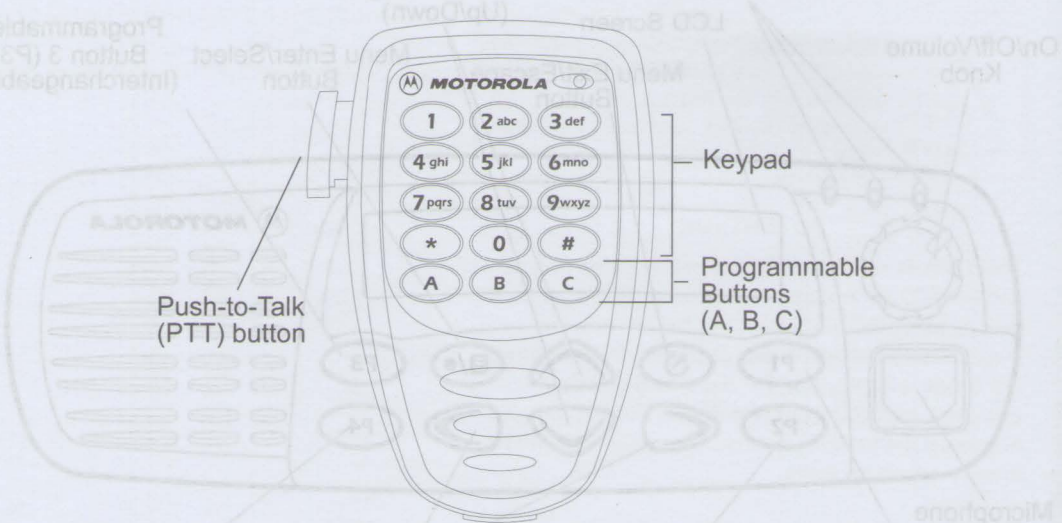 


RADIO OVERVIEW

### Optional Enhanced Keypad Microphone (RMN4026)

Your radio may be ordered with an optional DTMF (Dual-Tone Multi-Frequency) microphone that has a direct entry keypad.

 
This enhanced keypad microphone has three buttons (A, B, C) below the keypad that can be programmed to conveniently activate select radio features.



## On/Off/Volume Knob

Turns the radio on or off, and adjusts the radio's volume.

## Channel Selector/Menu Navigation Buttons



Used for channel scrolling. When in menu mode, used for menu navigation.

## LED Indicators

Indicates channel, scan, and monitor status, as well as receipt of a selective call.

## Programmable Buttons

Your radio has several programmable buttons. Your dealer can program these buttons as shortcuts to various radio features.

Check with your dealer for a complete list of functions your radio supports.

Programmable buttons include the **P1**, **P2**, **P3**, and **P4** buttons (see page 6).

Some buttons can access up to two features, depending on the type of button press:

- **short press** – quickly pressing and releasing the programmable buttons
- **long press** – pressing and holding the programmable buttons for a period of time (default 1 ½ seconds or programmed value)
- **hold down** – pressing and holding down the programmable buttons while checking status or making adjustments



A summary of programmable radio features and corresponding page references appears beginning on page 9.

In the “Button” column, have your dealer record the name of the programmable button next to the feature that has been programmed to it.

The dealer can use the abbreviations (P1, P2, P3, P4) shown in the radio illustration on page 6.

Also, where appropriate, have your dealer indicate whether the button press requires a short press, a long press, or needs to be held down.

Function	Indicator	Short Press	Long Press	Hold Down	Page	Button
Volume Set	—	—	—	Sound a tone for adjusting your radio's volume level.	15	
Direct Zone Access	—	Direct entry to zone selection menu.†		—	16	
Home Revert	—	Takes you directly to a pre-programmed zone/channel combination.†		—	16	
Direct Channel Access	—	Toggle the direct access channel feature.† (Enhanced keypad microphone required.)		—	16	
PRTT (Priority Request-to-Talk)	—	Sends a priority access request to the dispatcher.		—	17	
Emergency	⚠	Initiate Emergency Alert.	Cancel Emergency status.	—	22	
Power Level	LH	Toggle transmit power level between High and Low.†		—	24	
Repeater/Talkaround	↔	Toggle between using a repeater or transmitting directly to another radio.†		—	24	
Scan/Nuisance Channel Delete	↔	Toggle scan on and off.	Delete a nuisance channel while scanning.	—	27	
Phone	📞	Access Phone Mode.†		—	29	
Speed Dial	📞	Access your phone list directly.†		—	29	

Function	Indicator	Short Press	Long Press	Hold Down	Page	Button
Monitor		Toggle silent monitor operation (also turn off open squelch monitor when it has been activated).	Turn on open squelch monitor.	—	—	
Option Board (if one is installed)		Toggle between activating and deactivating the option board.†		—	—	
Radio Call	—	Access the radio call menu.†		—	—	
Backlight Control	—	Adjust brightness level (off/low/med/high).†		—	—	
Auxiliary Control (1/2)	—	Activates or deactivates a pin on the accessory connector.† (See your dealer.)		—	—	
Status	—	Direct entry to the status menu.†		—	—	
One-Touch Status	—	Immediately sends a preprogrammed status.†		—	—	
Message	—	Direct entry to the message menu.†		—	—	
One-Touch Message	—	Immediately sends a preprogrammed message.†		—	—	
Horn and Lights	—	Toggles external alarm feature or cancels a triggered alarm.†		—	—	

† This function is activated by **EITHER** a short **OR** a long press, but not both.

## Push-to-Talk (PTT) Button

Press and hold down this button to talk; release it to listen.

## Microphone

Hold the microphone 1 to 2 inches (2.5 to 5 cm) from your mouth, and speak clearly into it.

## Menu Keys

Exit



Up



Menu/  
Select



Left



Down



Right

### Menu/Select Key

Used to enter Menu Mode. When in Menu Mode, this key is also used to make menu selections.

### Exit Key

Used to move to the previous Menu level (short press) or to exit Menu Mode (long press).

### Up Key and Down Key

Used for channel scrolling. When in Menu Mode, used for menu navigation.

### Right Key

Moves the cursor right or inserts a space when editing or Zone scrolling.

### Left Key

Moves the cursor left or used as a backspace key when editing or Zone scrolling.

## Use with Enhanced Keypad Microphone (RMN4026)



- Dial a phone number
- Make a radio call
- Enter information when programming radio lists
- Directly access preprogrammed features

When editing each key can generate several different characters. For example, to enter the character "C," press the **2 abc** key three times. (Refer to the following table.)

These keys are used to:

### Entering Characters Using the Keypad

Key	Number of Times Key is Pressed																
	1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17
<b>0</b>	0	(	)	<	>												
<b>1</b>	1	&	%	#	*												
<b>2 abc</b>	A	B	C	2	a	b	c	2	À	Á	Â	Ç	à	á	â	ç	
<b>3 def</b>	D	E	F	3	d	e	f	3	È	É	Ê	è	é	ê	ë		
<b>4 ghi</b>	G	H	I	4	g	h	i	4	Ì	Í	Î	ì	í	î	ï		

## Entering Characters Using the Keypad


 

	Number of Times Key is Pressed																
5 jkl	J	K	L	5	j	k	l	5									
6 mno	M	N	O	6	m	n	o	6	Ñ	Ò	Ó	Ô	ñ	ò	ó	ô	ö
7 pqrs	P	Q	R	S	7	p	q	r	s	7							
8 tuv	T	U	V	8	t	u	v	8	Û	Ü	Û	ü	ú				
9 wxyz	W	X	Y	Z	9	w	x	y	z	9	Ý	ý					
*	*	/	+	-	=												
#	#	Blank Space	-	.	!	?	'	"	,	;	:						















## LCD Screen



 
The top screen row displays radio status information:

Symbol	Indication
 <b>Companding</b>	The Companding feature is activated. When in narrow band, this feature improves audio quality.
 <b>Power Level</b>	Low Power "L" or High Power "H" is activated.
 <b>Carrier Squelch (CSQ)</b>	The radio is on a CSQ channel, monitor is active, or the microphone is off-hook.

 
Symbol	Indication
 <b>Phone</b>	Phone Mode is selected.
 <b>Emergency</b>	An Emergency Alert is being sent.
 <b>Call Received</b>	A Selective Call or Call Alert has been received.
 <b>Scan</b>	The Scan feature is active. Flashes when Scan is suspended.
 <b>Priority 1 Scan</b> ( ● flashing)	During Scan, indicates that the scan has locked on to a priority 1 channel.
 <b>Priority 2 Scan</b> ( ● steady)	During Scan, indicates that the scan has locked on to a priority 2 channel.

Symbol	Indication
 Talkaround	The radio is not transmitting through a repeater.
 Programming Mode	The radio is in Program List editing mode.
 Signal Strength	Indicates signal strength. The more bars, the stronger the signal.
 Option Board	Option board is enabled.
	Not currently assigned.
	Not currently assigned.

## AUDIO INDICATORS FOR PROGRAMMABLE BUTTONS



Low-High Tone



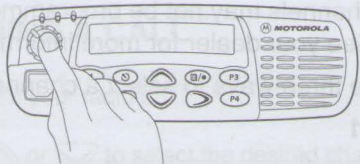 
High-Low Tone


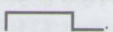
In addition to having associated visual indicators, some programmable buttons use tones to indicate one of two modes:

Button	Low-High Tone	High-Low Tone
Scan	<b>Start</b> scan	<b>Stop</b> scan
Power Level	<b>High</b> power selected	<b>Low</b> power selected
Option Board	Enabled	Disabled
Repeater/Talkaround	Does not use repeater	Uses repeater

## GETTING STARTED

### TURNING THE RADIO ON OR OFF



ON	OFF
<p>Push the <b>On/Off/Volume Control</b> knob until you hear a click.</p> <p>If power-up is successful, you will hear the Self-Test Pass Tone. </p> <p>If the radio fails to power up, you will hear the Self-Test Fail Tone .</p>	<p>Push the <b>On/Off/Volume Control</b> knob until you hear a click and the display clears.</p>

### ADJUSTING THE VOLUME

Turn the **On/Off/Volume Control** knob clockwise to increase the volume, or counterclockwise to decrease the volume.

 
—or—



- 1 Hold down the **Volume Set** button (see page 9). You will hear a continuous tone.
- 2 Turn the **On/Off/Volume Control** knob to the desired volume level.
- 3 Release the **Volume Set** button.

### SELECTING A ZONE


A zone is a group of up to 16 channels. Before you can access a channel in a zone, you must select the zone in one of three ways:

#### Method 1



1  to enter Menu Mode.


2  or  until

Zone

3  to select



Zone

4  or  until you see the desired zone name.

5  to select the zone.


**Method 2** (if programmed by your dealer [see pages 8-12]).

1 Press the **Direct Zone Access** button.


2  or  until you reach the desired zone.

3  to select the zone.

### Method 3

Press  to select the previous zone. If pressed while the first zone is selected, the radio will wrap around to the last zone.

-or-

Press  to select the next zone. If pressed while the last zone is selected, the radio will wrap around to the first zone.

## SELECTING A RADIO CHANNEL



Your radio offers 128 channels (8 zones of 16 channels each).

**Note:** Due to government regulations, some channels may not be programmed. See your dealer for more information.

There are three ways to select a channel:

### Method 1

1 Select the appropriate Zone, if required.

2  or  until you reach the desired channel, shown on the screen.


**Method 2** (if programmed by your dealer [see pages 6 -7]).

1 Press the **Home Revert** button.

**Method 3** (if programmed by your dealer [see pages 6 -7]).

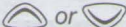
1 Press the **Direct Channel Access** button.

2 Enter the desired channel using the enhanced keypad microphone.

3  to confirm your selection.

## SENDING A CALL

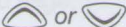
1 Turn your radio on.

2  to select the desired channel.

3 Hold the microphone vertically 1 to 2 inches (2.5 to 5 cm) from your mouth. Press the **PTT** to talk; release it to listen.

If your system uses the request-to-talk feature, use the following method to send a call:

1 Turn your radio on.

2  to select the desired channel.

3 Press the **PTT** (for priority requests to talk, the **PRTT** button) and wait for the talk permit tone.

4 Hold the microphone vertically 1 to 2 inches (2.5 to 5 cm) from your mouth. Press the **PTT** to talk; release it to listen.

5 Release the **PTT** to listen.

## RECEIVING A CALL

1 Turn your radio on.

2 Adjust the radio's volume if necessary (see page 16).

3 Select the desired channel.










4 To respond, hold the microphone vertically 1 to 2 inches (2.5 to 5 cm) from your mouth. Press the **PTT** to talk; release it to listen.

## RADIO CALLS


 
### MAKING A SELECTIVE CALL

You can make a selective call to a particular radio or group of radios, provided the signaling protocol supports it.

To make a Selective Call:


- 1  to enter Menu Mode.
- 2  or  until Radio Call
- 3  to select Radio Call
- 4  or  until Selective Call
- 5  to select Selective Call
- 6  or  to locate the desired ID in the Radio Call List.  
—or—

when using the enhanced keypad microphone only, enter the ID number of the radio you want to call.

- 7 Press the **PTT** to send the call. The radio sounds a continuous tone.
- 8 Press the **PTT** to talk; release it to listen.
- 9 When finished with the call,  to return to Selective Call  
—or—  
Hold down  to exit Menu Mode.

### RECEIVING A SELECTIVE CALL










When you receive a selective call:

 
 
- You will hear two alert tones.
- The LED Indicator flashes yellow.
- The LCD screen displays  and the preprogrammed name or ID of the calling radio, if available.

## SENDING A CALL ALERT™ PAGE


You can alert another person by sending a Call Alert page.

To send a Call Alert page:

- 1  to enter Menu Mode.
- 2  or  until Radio Call
- 3  to select Radio Call
- 4  or  until Call Alert
- 5  to select Call Alert
- 6  or  to locate the desired ID in the Radio Call List;  
—or—  
when using the enhanced keypad microphone only, enter the ID number of the radio you want to page.
- 7 Press the **PTT** to send the page.  
You will see Call In Prog

- 8 If the Call Alert page is received,  
you will see Acknowledge  
If not,  
you will see No Acknowledge
- 9  to return to Call Alert  
—or—  
Hold down  to exit Menu Mode.

## RECEIVING A CALL ALERT™ PAGE

When your radio receives a Call Alert page, it sounds four alert tones continuously and the following are displayed until you respond: the  symbol, and the ID of the calling radio alternating with *Call Received*.










Press the **PTT** to answer the page, or press any other key to clear it.

**Note:** Your radio will display only the last Call Alert page received. Also, your radio will not receive any Selective Calls until you clear the page.

## RADIO CHECK

This feature allows you to determine if a radio is in range without disturbing the user of the radio. Radio Check can also be used when attempts with Selective Call and Call Alert fail. (This feature is available only if your signaling protocol supports it.)

To perform a Radio Check:

- 1  to enter Menu Mode.
- 2  or  until Radio Call
- 3  to select Radio Call
- 4  or  until Radio Check
- 5  to select Radio Check
- 6  or  to locate the desired ID in the Radio Call List;  
 –or–  
 when using the enhanced keypad microphone only, enter the ID number of the radio you are checking.

- 7 Press the **PTT**.

You will see

Call In Prog


- 8 If the Radio Check is received,

you will see

 
Acknowledge

If not, you will see

No Acknowledge

- 9  to return to  
 –or–


Radio Check



Hold down  to exit Menu Mode.

## SENDING A STATUS

This feature gives you the ability to send a status update to the base. The status feature makes more efficient use of the channel compared to voice transmissions. Status updates of up to 14 characters may be programmed by your dealer.

To send a Status:



- 1  to enter Menu Mode.

- 2  or  until

Status



3  to select Status

4  or  to locate the desired status in the preprogrammed list.

—or— when using the enhanced keypad microphone only,

enter the number of the status you wish to send.

—or— if programmed by your dealer (see pages 8-10),

press the button that has been preprogrammed for a specific status.


**Note:** You cannot retransmit the current status update.

---

## SENDING A MESSAGE



This feature gives you the ability to send and receive preprogrammed messages. Data messages make more efficient use of channels compared to voice transmissions. Messages of up to 14 characters may be programmed by your dealer.

To send an electronic (data) message:

1  to enter Menu Mode.

2  or  until Message

3  to select Message

4  or  to locate the desired message in the preprogrammed list.

—or— when using the enhanced keypad microphone only,

enter the number of the message you wish to send.


—or— if programmed by your dealer (see pages 8-10),

press the button that has been preprogrammed for a specific message.

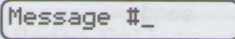
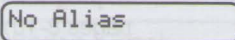
---

## RECEIVING A MESSAGE

When your radio receives a message:

- You will hear two alert tones.
- The yellow LED indicator flashes.
- The LCD screen displays  alternating with the preprogrammed alias.

**Note:** If you receive a message that is programmed into your radio, the display will alternate with the following:


 and 

## SENDING AN EMERGENCY ALERT



A priority Emergency Alert can be sent to a specific radio or dispatch center by pressing:

- A button preprogrammed by your dealer (see pages 8-10).
- The footswitch
- A pushbutton accessory

Emergency Alerts have priority over all other calls.

The  symbol will appear on the display when your radio is in the Emergency Alert state.

An Emergency Alert can be programmed to:

- Show  and sound a tone  
-or-
- Show  (Silent Emergency)  
-or-
- Activate the microphone so that all activity can be transmitted (for a predetermined amount of time). See your dealer for more information.

To cancel the Emergency Alert, press and hold down the **Emergency** button.

## SELECTIVE RADIO INHIBIT

Your radio is equipped with a security feature that can temporarily render the unit inoperative when an inhibit signal is sent from the base station.


This feature is commonly used to disable radios:

- In case of theft
- When your vehicle is being serviced
- For system control reasons

**Note:** When your radio has been disabled by the base station, all controls will be inoperative except for the On/Off button. When the radio is powered up, the display will show:






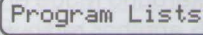


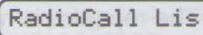

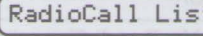


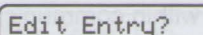

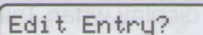




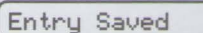
Radio Disabled

## EDITING A RADIO CALL LIST

The ID numbers in your Radio Call List are preprogrammed by your dealer. However, you can edit the names associated with these IDs using the enhanced keypad microphone. The  symbol will appear on the display when you are editing.

**Note:** Your radio cannot receive any calls while you are editing.


To edit a Call List entry:

- 1  to enter Menu Mode.
- 2  or  until 
- 3  to select 
- 4  or  until 
- 5  to select 
- 6  or  until 
- 7  to select 
- 8  or  until you locate the desired entry.
- 9  to select the entry.
- 10 Use your keypad to edit the entry (see page 11).
- 11  to save your changes.  
You will see 

12  to return to

**Edit Entry?**

—or—



Hold down  to exit Menu Mode.

## REPEATER OR TALKAROUND MODE

Talkaround Mode enables you to communicate with another radio when either:

- The repeater is not operating.


—or—



- Your radio is out of the repeater's range but within communicating distance of another radio. The   symbol appears on the display when Talkaround Mode is selected.

To select either Repeater Mode or Talkaround Mode:


Press the preprogrammed **Repeater/Talkaround** button (see page 8) to toggle between Repeater Mode and Talkaround Mode.

—or—

1  to enter Menu Mode.



2  or  until

**Rptr/Talkarnd**

3  to select

**Rptr/Talkarnd**

 
The display shows the current mode.

4  or  until

**Repeater Mode**

or until

**Talkarnd Mode**

5  to confirm your selection.

## SETTING THE POWER LEVEL

Each channel in your radio has a predefined transmit power level that can be changed.

- High power (**H**)
- Low power (**L**)











You can set the power level in two ways:

### Method 1

Press the preprogrammed **Power Level** button (see page 8) to toggle between *low* and *high*.

—or—

## Method 2

- 1  to enter Menu Mode.
- 2  or  until Utilities
- 3  to select Utilities
- 4  or  until Power Level
- 5  to select Power Level  
The display shows the current power level.
- 6  or  until Power High?  
or until Power Low?
- 7  to confirm the selection.

## NAME AND CALL/MESSAGE TONE TAGGING











You can program your radio to sound a particular alert tone when:



- a specific user is calling – **name tone tagging**, or


- a message is being sent to your radio, or
- your radio is receiving a type of radio call – **call tone tagging**.

There are eight alert tones to select from.

To tag a specific user's name or message:

- 1  to enter Menu Mode.
- 2  or  until Audio/Tones
- 3  to select Audio/Tones
- 4  or  until Name Tone Tag  
or Msg Tone Tag
- 5  to select Name Tone Tag  
or Msg Tone Tag
- 6  or  until you see the name or message you want to tag.
- 7  to confirm the selection.

8  or  until you hear one of the eight tones you want to use for this name or message.


9  to confirm the selection.

You will see

Name Tag Set

or

Msg Tag Set

 
10  to return to

Name Tone Tag


or



Msg Tone Tag

-or-


Hold down  to exit Menu Mode.

To tag a type of radio call:



1  to enter Menu Mode.

2  or  until


Audio/Tones

3  to select



Audio/Tones


4  or  until



Call Tone Tag

5  to select

Call Tone Tag

6  or  until you see the call type you want to tag.

7  to confirm the selection.

8  or  until you hear the tone you want to use for this type of call.

9  to confirm the selection.


You will see

Call Tone Set

10  to return to

Call Tone Set

-or-


Hold down  to exit Menu Mode.

## SCAN

Your radio can monitor multiple channels in a scan list. Your dealer can program up to 16 different channels into each scan list. When your radio detects activity on a scan list channel, it will automatically switch to that channel.

**Note:** The same channels can be assigned to different scan lists.

### STARTING OR STOPPING SCAN

The  symbol, and the number of the channel you are transmitting on, will appear on the display when you start a scan operation.

 
The green LED indicator blinks during a scan operation and stops blinking when the radio switches to a channel.



**Note:** If you enter Menu Mode while the radio is scanning, scanning will stop. It will resume when you exit Menu Mode.

You can start or stop a scan operation either by:


pressing the preprogrammed **Scan** button (see page 8) to start or stop scanning;

—or—

1  to enter Menu Mode.



2  or  until

System Scan

3  to select

System Scan


The display shows the current scan status.

4  or  until

Sys Scan On?

—or—

Sys Scan Off?

5  to confirm your selection.

### TALKBACK

The Talkback feature allows you to respond to a transmission while scanning. If a transmission on a channel is detected while scanning, the radio will stop on that channel for a preprogrammed

period of time. During this “hangtime” you may respond by pressing the **PTT**.

**Note:** If transmission stops/ceases or if the **PTT** is not pressed for a preprogrammed duration, the radio will continue scanning. Also, the LED scan indicator stops blinking while the radio is in hangtime.

## DELETING A NUISANCE CHANNEL

If a channel continually generates unwanted calls or noise (a “nuisance” channel), use the **Scan** button to temporarily delete the channel from the scan list.

**Note:** You cannot delete a priority channel (see page 30) or the last remaining channel in a scan list.

- 1 While the radio is on the nuisance channel, hold down the **Scan** button until you hear a tone.
- 2 Release the **Scan** button. The nuisance channel is deleted.

## Restoring a Channel to the Scan List

To restore a previously deleted channel to the scan list, restart the scan operation or turn your radio off and on again.

## EDITING A SCAN LIST

A scan list is a group of up to 16 channels. Each channel can have a scan list assigned to it. The same channel can be included in several scan lists, and the same scan list can be assigned to several Channel Selector positions. For example:

	Position 2	Position 14
C	1	1
h	3	2
a	5	3
n	6	11
n		
e		
l		
s		

When you edit a scan list, you can either add, delete, or prioritize channels. The  symbol will appear on the display while you are in edit mode.

**Note:** Your radio cannot receive any calls while you are editing a scan list.



## Adding or Deleting Channels in a Scan List

To add or delete channels in a scan list:

- 1 to enter Menu Mode.
- 2 or until
- 3 to select
- 4 or until
- 5 to select
- 6 or until   
or until
- 7 to confirm your selection.
- 8 or until you see the channel you want to add or delete.  
**Note:** You cannot delete the last remaining channel in a scan list.
- 9 to confirm your selection.

- 10 If you added a channel,  
you will see   
-or-  
If you deleted a channel,  
you will see   
 to confirm the deletion.  
You will see
- 11 to return to   
or to return to   
-or-  
Hold down to exit Menu Mode.

## Prioritizing a Channel in a Scan List


You may want to check the activity on one or two channels more frequently than others. You can do this by assigning them priority:



**Note:** Even if there may be activity on a non-priority channel, your radio will automatically switch to an active priority channel and indicate the activity with a short tone.

Priority Channel	Scanning Sequence
None specified	Ch1⇒Ch2⇒Ch3⇒Ch4⇒Ch1
Channel 2 (Priority 1)	Ch2⇒Ch1⇒Ch2⇒Ch3⇒Ch2⇒Ch4⇒Ch2⇒...Ch1
Channel 2 (Priority 1) Channel 8 (Priority 2)	Ch2⇒Ch1⇒Ch8⇒Ch3⇒Ch2⇒Ch4⇒Ch8⇒...Ch1

### Setting Priority Channels

**Note:** You cannot reprioritize a *Priority 1* channel to *Priority 2*.



1  to enter Menu Mode.

2  or  until


Program Lists

3  to select



Program Lists

4  or  until


Scan List

5  to select



Scan List

6  or  until

Edit Priority?

7  to select

 
Edit Priority?



8  or  until


Priority #1?

 
or until

Priority #2?

9  to select the desired priority level.

 
10  or  until you see the channel you want to prioritize.

11  to prioritize that channel.

12  to return to

Edit Priority?

-or-


Hold down  to exit Menu Mode.

**Note:** If you want to reprioritize all channels, you must first delete each priority channel from the scan list, and then add it back.

## PHONE

If your radio has access to a telephone system, you can make a phone call. To do this, your radio must send an access code to a station that connects it to a phone line. (Ask your dealer for more details.) After completing a call, your radio must send a deaccess code to hang up.

### MAKING A PHONE CALL

You can make a phone call using the preprogrammed **Phone** button (see page 6) or the radio menu. The  symbol appears on the display when you are in Phone Mode.


To initiate a phone call:



Press the **Phone** button.

—or—

Do the following:

1 Switch to the desired channel.

2  to enter Menu Mode.

3  or  until

**Phone**

4  to select

**Phone**

5 You will hear a series of tones indicating that an access code is being sent automatically.



—or—

when using the keypad microphone only, enter your access code using the keypad.

6 When you hear a dial tone, enter or select a phone number:

when using the keypad microphone only, enter the phone number using the keypad.

—or—

 or  to select a number from the phone list.

—or—

when using the keypad microphone only,


a Press and release the preprogrammed **Speed Dial** button (see page 6) to use the Speed Dial feature.

b Press the key (1 to 9) corresponding to the number you want to call,

—or—

press “0” if you want to call the last number dialed.

**Note:** To redial the last number dialed (if not using Speed Dial), do not choose a number. Proceed to step 7.

Alternatively, if you entered your access code using the keypad, press  once to access the last number dialed; then press and release the

 
**PTT.**

**7** To end a phone call, do one of the following:

If your radio has the deaccess code preprogrammed, proceed to step 8.

—or—

Enter the deaccess code using the keypad.

**8** Hold down  to exit Menu Mode.

## MODIFYING THE PHONE LIST

You can modify a phone list in one of the following ways:


- Add an entry
- Delete an entry
- Edit an existing entry
- Edit an Access/Deaccess code



When you are modifying the phone list, the  symbol will appear on the display.

**Note:** Your radio cannot receive any calls while you are modifying the phone list.


### Adding an Entry (when using the enhanced keypad microphone only)

To add an entry:



**1**  to enter Menu Mode.

**2**  or  until


**Program Lists**

**3**  to select

**Program Lists**

**4**  or  until

**Phone List**

**5**  to select


**Phone List**



6  or  until Add Entry?

 
7  to select Add Entry?



You will see Enter Name


8 Use the keypad to enter the name (see page 9).


9  to store the name.  
You will see Enter Phone #

10 Use the keypad to enter the phone number. You can also add a dash (press ) and a Pause Indicator (hold down  until the # character on the display changes to a "P").

 
11  to select the phone number.

12  or  until you see the location in the list where you want to store the phone number.

13  to store the phone number.  
You will see Entry Saved


14  to return to Add Entry?

—or—

Hold down  to exit Menu Mode.

## Deleting an Entry

To delete an entry:

1  to enter Menu Mode.


2  or  until Program Lists



3  to select Program Lists

4  or  until Phone List

5  to select Phone List

6  or  until Delete Entry?

7  to select Delete Entry?

8  or  until you see the entry you want to delete.

9 to select the entry.

You will see

Delete?

again to confirm the deletion.

You will see

Entry Deleted

10 to return to

-or-

Hold down to exit Menu Mode.

Delete Entry?

### Editing an Entry (when using the enhanced keypad microphone only)

To edit an entry:

1 to enter Menu Mode.

2 or until

Program Lists

3 to select

Program Lists

4 or until

Phone List

5 to select

Phone List

6 or until

Edit Entry?

7 to select

Edit Entry?

8 or until you see the entry you want to edit.

9 to select the entry.

10 or until to edit the name,

Edit Name?

-or- until

Edit Number?

to edit the phone number,

-or- until

Edit Location?

to edit the location in the phone list.

11 to confirm your selection.

12 Use the keypad to edit the entry (see page 9).  
-or-

or until you see the location where you want to store the phone number.

13 to store the information.

14 to return to

Edit Entry?

-or-

Hold down to exit Menu Mode.

## Editing an Access/Deaccess Code (when using the enhanced keypad microphone only)

To edit an access/deaccess code:

1 to enter Menu Mode.

2 or until

Program Lists

3 to select

Program Lists

4 or until

Edit Codes?

5 to select

Edit Codes?

6 or until

Access Code?

-or- until

Deaccess Code?

7 to select

Access Code?

-or-

Deaccess Code?

8 Enter the number using the enhanced keypad microphone.

9 to select the entry.




 


10 or to edit another code.





-or-

Hold down to exit Menu Mode.

## AUDIO/TONE SETTINGS

You can customize the audio and tone feature settings on your radio.

- 1  to enter Menu Mode.
- 2  or  until **Audio/Tones**
- 3  to select **Audio/Tones**
- 4  or  until you see the feature you want to change. (Refer to the table below.)

- 5  to select the feature. You will see the feature's current setting.
- 6  or  for available settings. (Refer to the table below.)
- 7  to select the desired setting.

Audio/Tone Settings

Feature	What it Does	Settings
Alert Vol Lvl	Allows the volume level of the audio and the volume level of the alert tones to be set independently.	Ind Alert Off Ind Alert On
Tone Disable	Turns all tones on or off.	Tones On Tones Off






## Audio/Tone Settings

Feature	What it Does	Settings
Name Tone Tag	Assigns a specific tone to all calls from a specific user (see page 25 for details).	Standard Alert #1 - #7
Call Tone Tag	Assigns a specific tone when receiving a specific type of radio call (see page 26 for details).	Standard Alert #1 - #7
Msg Tone Tag	Assigns a specific tone when receiving a specific message (see page 25 for details).	Standard Alert #1 - #7
Escalert	Gradually increases the volume of the alarm tones when a call is not answered.	Escalert On Escalert Off
Companding (XPand™)	Approximates the same audio quality for 12.5kHz channels to that of 25kHz channels.	Compand On Compand Off
Keypad Tones	Turns keypad tones on or off.	Tones On Tones Off


## UTILITIES

You can customize some of your radio's features by:



1  to enter Menu Mode.


2  or  until



Utilities


3  to select

Utilities

4  or  until you see the feature you want to change (see table below).

5  to select the feature. You will see the feature's current setting.

6  or  for available settings.

7  to select the desired setting.

### Utilities Features

 





Feature	What it Does	Settings
Power Level	Changes the power level of the radio to high or low (see page 24).	Power High Power Low
Clock	Sets the time (see page 40).	Set Time Display Clock
Reminder Alarm	Sets the alarm and turns it on or off (see page 40).	Alarm On Alarm Off Set Time

## Utilities Features




 
Feature	What it Does	Settings
Language Select	Allows you to select the language displayed on the display.	English Spanish Portuguese French
Option Board	Activates/deactivates the option board installed in your radio.	Opt Board On Opt Board Off
Software Ver #	Displays the radio's software version number.	_____



## SETTING THE TIME

To set the time:



 

- 1  to enter Menu Mode.
- 2  or  until Utilities
- 3  to select Utilities
- 4  or  until Clock
- or– until Reminder Alarm

**Note:** You must access the clock menu to select AM/PM or “24 hr”. This selection cannot be made from Reminder Alarm menu.

- 5  to confirm your selection.
- 6  or  until Set Time?
- 7  to select Set Time?


- 8 When a setting (e.g., “hour”) is blinking, you can change it with  or .



Hour (AM or PM) → 3:05 PM  
 Minutes ↗ (AM/PM or 24 hr)

- 9  to proceed to the next setting (e.g., from hour to minutes).
- 10  to save your changes.
- 11  to return to Clock  
 or to return to Reminder Alarm  
 –or–  
 Hold down  to exit Menu Mode.


## DISPLAYING THE TIME

To display the time:



1  to enter Menu Mode.

2  or  until


Utilities



3  to select

Utilities


4  or  until

Clock

5  to confirm your selection.


6  or  until

Display Clock?

7  to select

 
Display Clock?



The radio will display the time for a preprogrammed duration.

8  to exit the menu.

 
## SELECTING THE DISPLAY LANGUAGE

To select the display language:



1  to enter Menu Mode.

2  or  until


Utilities



3  to select

 
Utilities

 
4  or  until

Language Select

5  to confirm your selection.

6  or  until desired language is displayed.

7  to select desired language.

8  to exit the menu.