

Elecraft KH1 Cheat Sheet

KNOBS

Left knob –

AF Volume control - 00-30 (increments of 1)

Tap – A knob – Monitor volume 00-30 (increments of 1)

V knob – Pitch tone 500-800 (increments of 10)

Hold – Spot

Right knob -

VFO Frequency tuning

Tap – Selects 10 or 100 Hz tuning rate

Hold – Select 1 kHz tuning rate

SWITCHES 1-4

Tap 1 – Reduces keyer speed by 2 wpm

Tap 2 – Increases keyer speed by 2 wpm

Tap 3 – Antenna tuner looks for best match

Tap 4 – Starts message operations

Tap 1, 2 or 3 – Play msg once

Hold 1, 2 or 3 – Repeat msg as set up in menu

Hold 4 – Brings up Record function

Tap 1, 2, or 3 – Record msg (tap any switch to end)

Hold 4 – Alternates between msg groups

Hold 1 – Goes into receiver controls

Tap 1-3 – Selects filter bandwidth (0.3 kHz, 0.5, 2.0)

Tap 4 – To exit

Hold 1-3 – Selects attenuation level (0dB, -10, -30)

Hold 4 – Turns on/off RIT offset

Hold 2 – Goes into programmable function and transmitter controls

Tap 1-3 – Executes programmable function

Tap 4 – To exit

Hold 1 – Puts transmitter into TUNE mode

Hold 2 – To select LO (2W) or HI (5W) power

Hold 3 – To put transmitter into TX TEST mode, for CW practice

Hold 4 – Turns on/off XIT offset

Hold 3 – Enters BAND/MODE

Tap 1 – Go to next lower band

Tap 2 – Go to next higher band

SWL band above 15M (6.7-22.0 MHz)

Tap 3 – Exchanges VFO frequency with Scratchpad Memory

Tap 4 – To exit

Hold 4 – Locks (unlocks) VFO

Hold 4 - Enters MENU

MENU

***ADJ AGC V** To set the AGC voltage

***ADJ BFO** To optimize BFO frequencies

***ADJ BIAS** To set PA bias current

***ADJ BPF** Tunes the receive band-pass filter

***ADJ DATE** To set the date

Tap 1 – Exit, Tap 2 – Set month, Tap 3 – Set day, Tap 4 – Set year

***ADJ OSCID** To select MCU I/O address for local oscillator IC

***ADJ PWR** To adjust power output

***ADJ REF** Calibrates the synthesizer reference frequency

***ADJ RTC** To improve built-in real-time clock accuracy

***ADJ SMTR** To set S-meter's S9 level

***ADJ SWR** To null the SWR bridge

***ADJ TIME** To set the time

Tap 1 – Exit, Tap 2 – Set hours, Tap 3 – Set minutes, Tap 4 – Set seconds

***ADJ WMTR** To calibrate the watt meter

ATU MODE Not Inst, Bypass, **Auto**, K1-8 Test, GP0-7 Test, COM Test

***ATU PARAM** To view and change ATU L, C, and Z

Tap 1 – Exit, Tap 2 – view/set L, Tap 3 – view/set C, Tap 4 – view/set Z

DISP MODE V/I/Temp, **Operate**

***EE INT** Reinitialize all stored parameters or just operational parameters

FIRMWARE x.xx

***KEY IAMB** Select Iambic keying mode A or B

KEY JACK **PdI Norm**, PdI Rev, Hand Key, RS232

KEY WGHT 1.00-**1.25** (increments of 5)

***LOGGING** To configure and use CW text logging

MSG RPT 001-250 sec (**006**)

PAN MODE Off

PAN SPAN 10-60 kHz (increments of 10)

PAN THR -06+**00**+06 **AFCMP=0**-1

PFn FUNC (n=1-3) **Unset** (menu functions)

RIT CLEAR **Use with PFn**

SERIAL NR **00149**

***SW TONES** Emit switch-event acknowledgement tones

TEXT DEC **OFF**, TX ONLY, TX & RX,

VBAT **A-hr:TBD**

VFO FAST **100**-500 Hz (increments of 100)

* Menu entries locked (hold switch 4 to unlock)

(Prepared by K6GPB)