

***YAESU***  
*The radio*

**FTDX5000 SERIES**  
**CAT OPERATION**  
**REFERENCE BOOK**

**YAESU MUSEN CO., LTD.**

# CAT (COMPUTER AIDED TRANSCEIVER) OPERATION


## OVERVIEW

The CAT (Computer Aided Transceiver) System in the **FTDx5000** series provides control of frequency, VFO, memory, and other settings such as dual-channel memories and diversity reception using an external personal computer. This allows multiple control operations to be fully automated as single mouse clicks or keystroke operations on the computer keyboard.


The **FTDx5000** series has a built-in level converter, allowing direct connection from the rear-panel **CAT** jack to the serial port of your computer without the need of any external boxes. You will need a serial cable for connection to the RS-232C (serial or COM port) connector on your computer. Purchase a standard serial cable (not the so-called "null modem" type), ensuring it has the correct gender and number of pins (some serial COM port connectors use a 9-pin rather than 25-pin configuration). If your computer uses a custom connector, you may have to construct the cable. In this case, refer to the technical documentation supplied with your computer for correct data connection.

Vertex Standard does not produce CAT System operating software due to the wide variety of personal computers and operating systems in use today. However, the information provided in this chapter explains the serial data structure and opcodes used by the CAT system. This information, along with the short programming examples, is intended to help you start writing programs on your own. As you become more familiar with CAT operation, you can customize programs later on for your operating needs and discover the true operating potential of this system.

## CAT JACK

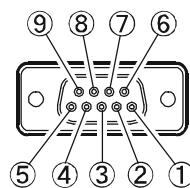

PIN No.	PIN NAME	I/O	FUNCTION
①	N/A	—	—
②	SERIAL OUT	Output	Outputs the Serial Data from the transceiver to the computer.
③	SERIAL IN	Input	Inputs the Serial Data from the computer to the transceiver.
④	N/A	—	—
⑤	GND	—	Signal Ground
⑥	N/A	—	—
⑦	RTS	Input	When the computer is not ready to receive data, this port goes to "L" for inhibit the transmit data from the transceiver.
⑧	CTS	Output	When the transceiver is not ready to receive data, this port goes to "L" for inhibit the transmit data from the computer.
⑨	N/A	—	—

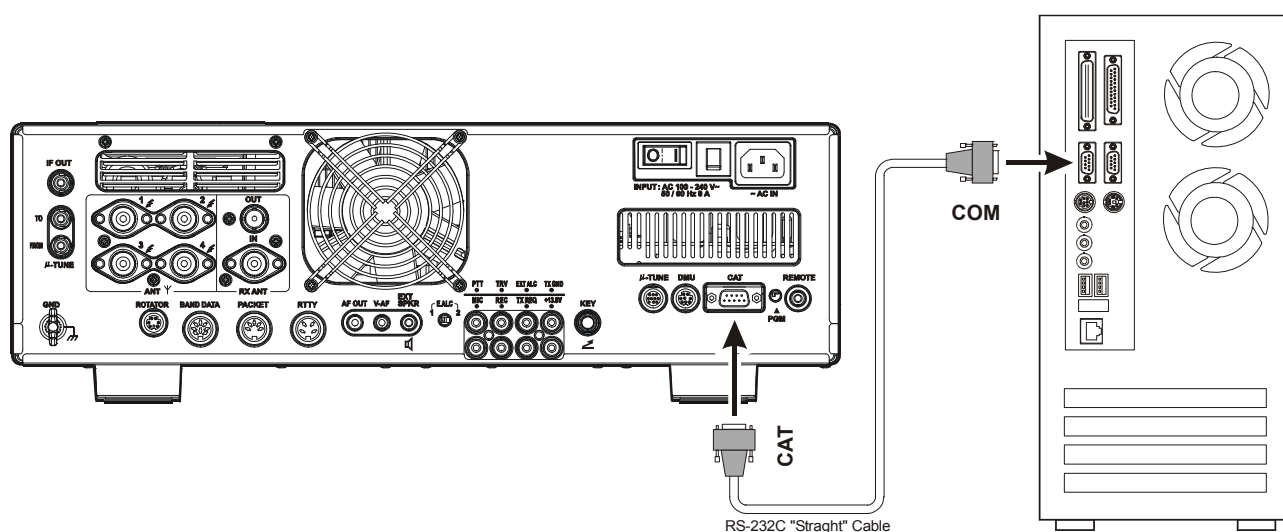

# CAT (COMPUTER AIDED TRANSCEIVER) OPERATION

## CONTROL COMMAND

A computer control command is composed of an alphabetical command, various parameters, and the terminator that signals the end of the control command.

**Example:** Set the main band (VFO-A) frequency to 14.250000 MHz.

<b>FA</b>	<b>14250000</b>	<b>;</b>
↑	↑	↑
Command	Parameter	Terminator

There is three for the **FTDX5000** Command as shown below:

**Set** command: Set a particular condition  
(to the **FTDX5000**)

**Read** command: Reads an answer  
(from the **FTDX5000**)

**Answer** command: Transmits a condition  
(from the **FTDX5000**)

For example, note the following in the case of the FA command (Set the main band (VFO-A) frequency):

- To set the main band (VFO-A) frequency to 14.250000 MHz, the following command is sent from the computer to the transceiver:  
“**FA14250000;**” (Set command)
- To read the main band (VFO-A) frequency, the following command is sent from the computer to the transceiver:  
“**FA;**” (Read command)
- When the Read command above has been sent, the following command is returned to the computer:  
“**FA14250000;**” (Answer command)

### Alphabetical Commands

A command consists of 2 alphabetical characters.

You may use either lower or upper case characters. The commands available for this transceiver are listed in the “PC Control Command Tables” on the following pages.

### Parameters

Parameters are used to specify information necessary to implement the desired command.

The parameters to be used for each command are predetermined. The number of digits assigned to each parameter is also predetermined. Refer to the “Control Command List” and the “Control Command Tables” to configure the appropriate parameters.

When configuring parameters, be careful not to make the following mistakes.

**For example**, when correct parameter is “**IS0+1000**” (IF SHIFT):

**IS01000;**

Not enough parameters specified (No direction (+) given for the IF shift)

**IS0+100;**

Not enough digits (Only three frequency digits given)

**IS0+\_1000;**

Unnecessary characters between parameters

**IS0+10000;**

Too many digits (Five frequency digits given)

**Note:** If a particular parameter is not applicable to the **FTDX5000**, the parameter digits should be filled using any character except the ASCII control codes (00 to 1Fh) and the terminator (;).

### Terminator

To signal the end of a command, it is necessary to use a semicolon (;). The digit where this special character must appear differs depending on the command used.

# CAT (COMPUTER AIDED TRANSCEIVER) OPERATION

## CONTROL COMMAND LIST

COMMAND	FUNCTION	SET	READ	ANS.	AI	COMMAND	FUNCTION	SET	READ	ANS.	AI
AB	VFO-A TO VFO-B	0	X	X	X	MR	MEMORY READ	X	0	0	X
AC	ANTENNA TUNER CONTROL	0	0	0	0	MS	METER SW	0	0	0	0
AG	AF GAIN	0	0	0	0	MW	MEMORY WRITE	0	X	X	X
AI	AUTO INFORMATION	0	0	0	X	MX	MOX SET	0	0	0	0
AM	VFO-A TO MEMORY CHANNEL	0	X	X	X	NA	NARROW	0	0	0	0
AN	ANTENNA NUMBER	0	0	0	0	NB	NOISE BLANKER	0	0	0	0
BA	VFO-B TO VFO-A	0	X	X	X	NL	NOISE BLANKER LEVEL	0	0	0	0
BC	AUTO NOTCH	0	0	0	0	NR	NOISE REDUCTION	0	0	0	0
BD	BAND DOWN	0	X	X	X	OI	OPPOSITE BAND INFORMATION	X	0	0	X
BI	BREAK-IN	0	0	0	0	OS	OFFSET (REPEATER SHIFT)	0	0	0	0
BP	MANUAL NOTCH	0	0	0	0	PA	PRE-AMP (IPO)	0	0	0	0
BS	BAND SELECT	0	X	X	X	PB	PLAY BACK	0	0	0	X
BU	BAND UP	0	X	X	X	PC	POWER CONTROL	0	0	0	0
BY	BUSY	X	0	0	0	PL	SPEECH PROCESSOR LEVEL	0	0	0	0
CA	CLASS-A	0	0	0	0	PR	SPEECH PROCESSOR	0	0	0	0
CH	CHANNEL UP/DOWN	0	X	X	X	PS	POWER SWITCH	0	0	0	X
CN	CTCSS NUMBER	0	0	0	0	QI	QMB STORE	0	X	X	X
CO	CONTOUR	0	0	0	0	QR	QMB RECALL	0	X	X	X
CS	CW SPOT	0	0	0	0	QS	QUICK SPLIT	0	X	X	X
CT	CTCSS	0	0	0	0	RA	RF ATTENUATOR	0	0	0	0
DA	DIMMER	0	0	0	X	RC	CLAR CLEAR	0	X	X	X
DN	DOWN	0	X	X	X	RD	CLAR DOWN	0	X	X	X
DP	DISPLAY	0	0	0	0	RF	ROOFING FILTER	0	0	0	0
DS	DIMMER SWITCH	0	0	0	0	RG	RF GAIN	0	0	0	0
ED	ENCORDER DOWN	0	X	X	X	RI	RADIO INFORMATION	X	0	0	0
EU	ENCORDER UP	0	X	X	X	RL	NOISE REDUCTION LEVEL	0	0	0	0
EX	MENU	0	0	0	0	RM	READ METER	X	0	0	0
FA	FREQUENCY VFO-A	0	0	0	0	RO	ROTATOR	0	0	0	X
FB	FREQUENCY VFO-B	0	0	0	0	RS	RADIO STATUS	X	0	0	0
FR	FUNCTION RX	0	0	0	0	RT	CLAR	0	0	0	0
FS	FAST STEP	0	0	0	0	RU	CLAR UP	0	X	X	X
FT	FUNCTION TX	0	0	0	0	SC	SCAN	0	0	0	0
GT	AGC FUNCTION	0	0	0	0	SD	SEMI BREAK-IN DELAY TIME	0	0	0	0
ID	IDENTIFICATION	X	0	0	X	SF	SUB-DIAL FUNCTION	0	0	0	0
IF	INFORMATION	X	0	0	0	SH	WIDTH	0	0	0	0
IS	IF-SHIFT	0	0	0	0	SM	S METER	X	0	0	0
KM	KEYER MEMORY	0	0	0	X	SQ	SQUELCH LEVEL	0	0	0	0
KP	KEY PITCH	0	0	0	0	SV	SWAP VFO	0	X	X	X
KR	KEYER	0	0	0	0	TS	TXW	0	0	0	0
KS	KEY SPEED	0	0	0	0	TX	TX SET	0	0	0	0
KY	CW KEYING	0	X	X	X	UL	UNLOCK	X	0	0	0
LK	LOCK	0	0	0	0	UP	UP	0	X	X	X
LM	LOAD MESSAGE	0	0	0	X	VD	VOX DELAY TIME	0	0	0	0
MA	MEMORY CHANNEL TO VFO-A	0	X	X	X	VF	VRF FILTER	0	0	0	0
MC	MEMORY CHANNEL	0	0	0	X	VG	VOX GAIN	0	0	0	0
MD	MODE	0	0	0	0	VM	[V/M] KEY FUNCTION	0	X	X	X
MG	MIC GAIN	0	0	0	0	VS	VFO SELECT	0	0	0	0
MK	MODE KEY	0	X	X	X	VX	VOX	0	0	0	0
ML	MONITOR LEVEL	0	0	0	0	XT	TX CLAR	0	0	0	0

# CAT (COMPUTER AIDED TRANSCEIVER) OPERATION

## CONTROL COMMAND TABLES

<b>AB</b>	<b>VFO-A TO VFO-B</b>										
Set	1	2	3	4	5	6	7	8	9	10	
	<b>A</b>	<b>B</b>	;								
Read	1	2	3	4	5	6	7	8	9	10	
Answer	1	2	3	4	5	6	7	8	9	10	

<b>AC</b>	<b>ANTENNA TUNER CONTROL</b>										
Set	1	2	3	4	5	6	7	8	9	10	P1 0: Fixed      P3 0: Tuner "OFF" P2 0: Fixed      1: Tuner "ON" 2: Tuning Start
	<b>A</b>	<b>C</b>	P1	P2	P3	;					
Read	1	2	3	4	5	6	7	8	9	10	
	<b>A</b>	<b>C</b>	;								
Answer	1	2	3	4	5	6	7	8	9	10	
	<b>A</b>	<b>C</b>	P1	P2	P3	;					

<b>AG</b>	<b>AF GAIN</b>										
Set	1	2	3	4	5	6	7	8	9	10	P1 0: Main (VFO-A) Band Receiver 1: Sub (VFO-B) Band Receiver P2 000 - 255
	<b>A</b>	<b>G</b>	P1	P2	P2	P2	;				
Read	1	2	3	4	5	6	7	8	9	10	
	<b>A</b>	<b>G</b>	P1	;							
Answer	1	2	3	4	5	6	7	8	9	10	
	<b>A</b>	<b>G</b>	P1	P2	P2	P2	;				

<b>AI</b>	<b>AUTO INFORMATION</b>										
Set	1	2	3	4	5	6	7	8	9	10	P1 0: Auto Information "OFF" 1: Auto Information "ON" This parameter is set to "0" (OFF) automatically when the transceiver is turned "OFF."
	<b>A</b>	<b>I</b>	P1	;							
Read	1	2	3	4	5	6	7	8	9	10	
	<b>A</b>	<b>I</b>	;								
Answer	1	2	3	4	5	6	7	8	9	10	
	<b>A</b>	<b>I</b>	P1	;							

<b>AM</b>	<b>VFO-A TO MEMORY CHANNEL</b>										
Set	1	2	3	4	5	6	7	8	9	10	
	<b>A</b>	<b>M</b>	;								
Read	1	2	3	4	5	6	7	8	9	10	
Answer	1	2	3	4	5	6	7	8	9	10	

<b>AN</b>	<b>ANTENNA NUMBER</b>										
Set	1	2	3	4	5	6	7	8	9	10	P1 0: Main (VFO-A) Band      P2 1: ANT "1"      P3 1: ANT "1" 1: Sub (VFO-B) Band      2: ANT "2"      2: ANT "2" 3: ANT "3"      3: ANT "3" 4: ANT "4"      4: ANT "4" 5: ANT "RX"      P4 0: ANT "RX" "OFF" 1: ANT "RX" "ON"
	<b>A</b>	<b>N</b>	P1	P2	;						
Read	1	2	3	4	5	6	7	8	9	10	
	<b>A</b>	<b>N</b>	P1	;							
Answer	1	2	3	4	5	6	7	8	9	10	
	<b>A</b>	<b>N</b>	P1	P3	P4	;					

<b>BA</b>	<b>VFO-B TO VFO-A</b>										
Set	1	2	3	4	5	6	7	8	9	10	
	<b>B</b>	<b>A</b>	;								
Read	1	2	3	4	5	6	7	8	9	10	
Answer	1	2	3	4	5	6	7	8	9	10	

<b>BC</b>	<b>AUTO NOTCH</b>										
Set	1	2	3	4	5	6	7	8	9	10	P1 0: Main (VFO-A) Band Receiver 1: Sub (VFO-B) Band Receiver P2 0: Auto Notch "OFF" 1: Auto Notch "ON"
	<b>B</b>	<b>C</b>	P1	P2	;						
Read	1	2	3	4	5	6	7	8	9	10	
	<b>B</b>	<b>C</b>	P1	;							
Answer	1	2	3	4	5	6	7	8	9	10	
	<b>B</b>	<b>C</b>	P1	P2	;						

<b>BD</b>	<b>BAND DOWN</b>										
Set	1	2	3	4	5	6	7	8	9	10	P1 0: Main (VFO-A) Band 1: Sub (VFO-B) Band
	<b>B</b>	<b>D</b>	P1	;							
Read	1	2	3	4	5	6	7	8	9	10	
Answer	1	2	3	4	5	6	7	8	9	10	

# CAT (COMPUTER AIDED TRANSCEIVER) OPERATION

## CONTROL COMMAND TABLES

<b>BI</b>	<b>BREAK-IN</b>										
Set	1	2	3	4	5	6	7	8	9	10	P1 0: Break-in "OFF" 1: Break-in "ON"
	<b>B</b>	<b>I</b>	<b>P1</b>	;							
Read	1	2	3	4	5	6	7	8	9	10	
	<b>B</b>	<b>I</b>	;								
Answer	1	2	3	4	5	6	7	8	9	10	
	<b>B</b>	<b>I</b>	<b>P1</b>	;							

<b>BP</b>	<b>MANUAL NOTCH</b>										
Set	1	2	3	4	5	6	7	8	9	10	P1 0: Main (VFO-A) Band Receiver 1: Sub (VFO-B) Band Receiver P2 0: Manual NOTCH "ON/OFF" 1: Manual NOTCH LEVEL P3 When P2=0 000: OFF 001: ON When P2=1 001 - 400 (NOTCH Frequency : x 10 Hz )
	<b>B</b>	<b>P</b>	<b>P1</b>	<b>P2</b>	<b>P3</b>	<b>P3</b>	;				
Read	1	2	3	4	5	6	7	8	9	10	
	<b>B</b>	<b>P</b>	<b>P1</b>	<b>P2</b>	;						
Answer	1	2	3	4	5	6	7	8	9	10	
	<b>B</b>	<b>P</b>	<b>P1</b>	<b>P2</b>	<b>P3</b>	<b>P3</b>	;				

<b>BS</b>	<b>BAND SELECT</b>										
Set	1	2	3	4	5	6	7	8	9	10	P1 00: 1.8 MHz 06: 18 MHz 01: 3.5 MHz 07: 21 MHz 02: 5 MHz 08: 24.5 MHz 03: 7 MHz 09: 28 MHz 04: 10 MHz 10: 50 MHz 05: 14 MHz 11: GEN
	<b>B</b>	<b>S</b>	<b>P1</b>	<b>P1</b>	;						
Read	1	2	3	4	5	6	7	8	9	10	
Answer	1	2	3	4	5	6	7	8	9	10	

<b>BU</b>	<b>BAND UP</b>										
Set	1	2	3	4	5	6	7	8	9	10	P1 0: Main (VFO-A) Band 1: Sub (VFO-B) Band
	<b>B</b>	<b>U</b>	<b>P1</b>	;							
Read	1	2	3	4	5	6	7	8	9	10	
Answer	1	2	3	4	5	6	7	8	9	10	

<b>BY</b>	<b>BUSY</b>										
Set	1	2	3	4	5	6	7	8	9	10	P1 0: Main (VFO-A) Band BUSY "OFF" 1: Main (VFO-A) Band BUSY "ON" P2 0: Sub (VFO-B) Band BUSY "OFF" 1: Sub (VFO-B) Band BUSY "ON"
Read	1	2	3	4	5	6	7	8	9	10	
	<b>B</b>	<b>Y</b>	;								
Answer	1	2	3	4	5	6	7	8	9	10	
	<b>B</b>	<b>Y</b>	<b>P1</b>	<b>P2</b>	;						

<b>CA</b>	<b>CLASS-A</b>										
Set	1	2	3	4	5	6	7	8	9	10	P1 0: CLASS-A ON/OFF 1: BIAS LEVEL P2 When P1=0 000: OFF 001: ON When P1=1 001 - 100
	<b>C</b>	<b>A</b>	<b>P1</b>	<b>P2</b>	<b>P2</b>	<b>P2</b>	;				
Read	1	2	3	4	5	6	7	8	9	10	
	<b>C</b>	<b>A</b>	<b>P1</b>	;							
Answer	1	2	3	4	5	6	7	8	9	10	
	<b>C</b>	<b>A</b>	<b>P1</b>	<b>P2</b>	<b>P2</b>	<b>P2</b>	;				

<b>CH</b>	<b>CHANNEL UP/DOWN</b>										
Set	1	2	3	4	5	6	7	8	9	10	P1 0: Memory Channel "UP" 1: Memory Channel "DOWN"
	<b>C</b>	<b>H</b>	<b>P1</b>	;							
Read	1	2	3	4	5	6	7	8	9	10	
Answer	1	2	3	4	5	6	7	8	9	10	

<b>CN</b>	<b>CTCSS TONE FREQUENCY</b>										
Set	1	2	3	4	5	6	7	8	9	10	P1 0: Main (VFO-A) Band Receiver 1: Sub (VFO-B) Band Receiver P2 0 - 49: Tone Frequency Number
	<b>C</b>	<b>N</b>	<b>P1</b>	<b>P2</b>	<b>P2</b>	;					
Read	1	2	3	4	5	6	7	8	9	10	
	<b>C</b>	<b>N</b>	<b>P1</b>	;							
Answer	1	2	3	4	5	6	7	8	9	10	
	<b>C</b>	<b>N</b>	<b>P1</b>	<b>P2</b>	<b>P2</b>	;					

<b>CTCSS TONE CHART</b>											
00	67.0 Hz	09	91.5 Hz	18	123.0 Hz	27	162.2 Hz	36	189.9 Hz	45	229.1 Hz
01	69.3 Hz	10	94.8 Hz	19	127.3 Hz	28	165.5 Hz	37	192.8 Hz	46	233.6 Hz
02	71.9 Hz	11	97.4 Hz	20	131.8 Hz	29	167.9 Hz	38	196.6 Hz	47	241.8 Hz
03	74.4 Hz	12	100.0 Hz	21	136.5 Hz	30	171.3 Hz	39	199.5 Hz	48	250.3 Hz
04	77.0 Hz	13	103.5 Hz	22	141.3 Hz	31	173.8 Hz	40	203.5 Hz	49	254.1 Hz
05	79.7 Hz	14	107.2 Hz	23	146.2 Hz	32	177.3 Hz	41	206.5 Hz	—	—
06	82.5 Hz	15	110.9 Hz	24	151.4 Hz	33	179.9 Hz	42	210.7 Hz	—	—
07	85.4 Hz	16	114.8 Hz	25	156.7 Hz	34	183.5 Hz	43	218.1 Hz	—	—
08	88.5 Hz	17	118.8 Hz	26	159.8 Hz	35	186.2 Hz	44	225.7 Hz	—	—

# CAT (COMPUTER AIDED TRANSCEIVER) OPERATION

## CONTROL COMMAND TABLES

<b>CO</b>	<b>CONTOUR</b>										
Set	1	2	3	4	5	6	7	8	9	10	P1 0: Main (VFO-A) Band Receiver P3 When P2=0, 1: Sub (VFO-B) Band Receiver 000: CONTOUR/APF "OFF" P2 0: CONTOUR/APF "ON/OFF" 001: CONTOUR "ON" 1: CONTOUR FREQUENCY 002: APF "ON" When P2=1, 01 - 40 (CONTOUR FREQUENCY) 100 ~ 4000 Hz
	<b>C</b>	<b>O</b>	P1	P2	P3	P3	;				
Read	1	2	3	4	5	6	7	8	9	10	
	<b>C</b>	<b>O</b>	P1	P2	;						
Answer	1	2	3	4	5	6	7	8	9	10	
	<b>C</b>	<b>O</b>	P1	P2	P3	P3	;				

<b>CS</b>	<b>CW SPOT</b>										
Set	1	2	3	4	5	6	7	8	9	10	P1 0: OFF 1: ON
	<b>C</b>	<b>S</b>	P1	;							
Read	1	2	3	4	5	6	7	8	9	10	
	<b>C</b>	<b>S</b>	;								
Answer	1	2	3	4	5	6	7	8	9	10	
	<b>C</b>	<b>S</b>	P1	;							

<b>CT</b>	<b>CTCSS</b>										
Set	1	2	3	4	5	6	7	8	9	10	P1 0: Main (VFO-A) Band Receiver 1: Sub (VFO-B) Band Receiver P2 0: CTCSS "OFF" 1: CTCSS ENC/DEC "ON" 2: CTCSS ENC "ON"
	<b>C</b>	<b>T</b>	P1	P2	;						
Read	1	2	3	4	5	6	7	8	9	10	
	<b>C</b>	<b>T</b>	P1	;							
Answer	1	2	3	4	5	6	7	8	9	10	
	<b>C</b>	<b>T</b>	P1	P2	;						

<b>DA</b>	<b>DIMMER</b>										
Set	1	2	3	4	5	6	7	8	9	10	P1 00 - 15: VFD Backlight Brightness Level P2 00 - 15: Meter Brightness Level P3 00 - 15: OLE Brightness Level P4 00 - 15: ELCD (SM-5000) Brightness Level
	<b>D</b>	<b>A</b>	P1	P1	P2	P2	P3	P3	P4	P4	
Read	1	2	3	4	5	6	7	8	9	10	
	<b>D</b>	<b>A</b>	;								
Answer	1	2	3	4	5	6	7	8	9	10	
	<b>D</b>	<b>A</b>	P1	P1	P2	P2	P3	P3	P4	P4	
Set	11	12	13	14	15	16	17	18	19	20	
	;										
Read	11	12	13	14	15	16	17	18	19	20	
	;										
Answer	11	12	13	14	15	16	17	18	19	20	
	;										

<b>DN</b>	<b>MIC DWN</b>										
Set	1	2	3	4	5	6	7	8	9	10	
	<b>D</b>	<b>N</b>	;								
Read	1	2	3	4	5	6	7	8	9	10	
	;										
Answer	1	2	3	4	5	6	7	8	9	10	
	;										

<b>DP</b>	<b>DISPLAY</b>										
Set	1	2	3	4	5	6	7	8	9	10	P1 0: World Clock Display 1: Band Scope Display 2: AF Oscilloscope/Spectrum Analyzer Display 3: Log Book Display 4: Temperature/SWR Display 5: Rotator Display 6: Memory Channel List Display
	<b>D</b>	<b>P</b>	P1	;							
Read	1	2	3	4	5	6	7	8	9	10	
	<b>D</b>	<b>P</b>	;								
Answer	1	2	3	4	5	6	7	8	9	10	
	<b>D</b>	<b>P</b>	P1	;							

※: This command does not activates when the optional Data Managemnt Unit is not attached.

<b>DS</b>	<b>DIMMER SWITCH</b>										
Set	1	2	3	4	5	6	7	8	9	10	P1 0: DIMMER "OFF" 1: DIMMER "ON"
	<b>D</b>	<b>S</b>	P1	;							
Read	1	2	3	4	5	6	7	8	9	10	
	<b>D</b>	<b>S</b>	;								
Answer	1	2	3	4	5	6	7	8	9	10	
	<b>D</b>	<b>S</b>	P1	;							

<b>ED</b>	<b>ENCORDER DOWN</b>										
Set	1	2	3	4	5	6	7	8	9	10	P1 0: MAIN ENCORDER 1: SUB ENCORDER 2: MAIN Select 3: SUB Select P2 01-99: Steps
	<b>E</b>	<b>D</b>	P1	P2	P2	;					
Read	1	2	3	4	5	6	7	8	9	10	
	;										
Answer	1	2	3	4	5	6	7	8	9	10	
	;										

# CAT (COMPUTER AIDED TRANSCEIVER) OPERATION

## CONTROL COMMAND TABLES

EU	ENCORDER UP										
Set	1	2	3	4	5	6	7	8	9	10	P1 0: MAIN ENCORDER 1: SUB ENCORDER 2: MAIN Select 3: SUB Select P2 01-99: Steps
	E	U	P1	P2	P2	;					
Read	1	2	3	4	5	6	7	8	9	10	
Answer	1	2	3	4	5	6	7	8	9	10	

EX	MENU										
Set	1	2	3	4	5	6	7	8	nn	**	P1 : 001-176 (MENU Number) P2 : Parameter See Table 1 - Table 3
	E	X	P1	P1	P1	P2	P2	~	P2	;	
Read	1	2	3	4	5	6	7	8	9	10	
Answer	1	2	3	4	5	6	7	8	nn	**	
	E	X	P1	P1	P1	P2	P2	~	P2	;	

TABLE 1

P1	FUNCTION	P2	BYTE
001	MAIN-FAST-DELAY	0020~4000 (20msec/step)	4
002	MAIN-FAST-HOLD	0000~2000 (20msec/step)	4
003	MAIN-MID-DELAY	0020~4000 (20msec/step)	4
004	MAIN-MID-HOLD	0000~2000 (20msec/step)	4
005	MAIN-SLOW-DELAY	0020~4000 (20msec/step)	4
006	MAIN-SLOW-HOLD	0000~2000 (20msec/step)	4
007	TFT COLOR	0: COOL BLUE, 1: CONTRAST BLUE, 2: FLASH WHITE, 3: CONTRAST UMBER, 4: UMBER	1
008	DIMMER-METER	00~15	2
009	DIMMER-VFD	00~15	2
010	DIMMER-OLE	00~15	2
011	DIMMER-E.LCD	00~15	2
012	BAR DISPLAY SELECT	0: CLAR, 1: CW TUNE	1
013	SUB MTR PEAK HOLD	0: OFF, 1: 0.5, 2: 1.0, 3: 2.0 (sec)	1
014	ROTATOR START UP	0: 0°, 1: 90°, 2: 180°, 3: 270°	1
015	ROTATOR OFFSET ADJ	-30~0 (P2 = 30~00) (2°step)	2
016	QMB MARKER	0: DISABLE, 1: ENABLE	1
017	LEVEL INDICATOR	00000000000000 ~ 11111111111111 (see Page 9)	13
018	INDICATOR	0: VFD, 1: OEL	1
019	SELECT	0: PTN1, 1: PTN2	1
020	RX OUT LEVEL	000~100	3
021	TX OUT LEVEL	000~100	3
022	BEACON TIME	OFF/001~255sec (0: OFF)	3
023	NUMBER STYLE	0: 1290, 1: AUNO, 2: AUNT, 3: A2NO, 4: A2NT, 5: 12NO, 6: 12NT	1
024	CONTEST NUMBER	0000~9999	4
025	CW MEMORY 1	0: TEXT, 1: MESSAGE	1
026	CW MEMORY 2	0: TEXT, 1: MESSAGE	1
027	CW MEMORY 3	0: TEXT, 1: MESSAGE	1
028	CW MEMORY 4	0: TEXT, 1: MESSAGE	1
029	CW MEMORY 5	0: TEXT, 1: MESSAGE	1
030	ANT SELECT	0: BAND, 1: STACK	1
031	BEEP LEVEL	000~100	3
032	CAT RATE	0: 4800, 1: 9600, 2: 19200, 3: 38400 (bps)	1
033	CAT TIME OUT TIMER	0: 10, 1: 100, 2: 1000, 3: 3000 (msec)	1
034	CAT RTS	0: DISABLE, 1: ENABLE	1
035	CAT DATA INDICATOR	0: DISABLE, 1: ENABLE	1
036	MEM GROUP	0: DISABLE, 1: ENABLE	1
037	QUICK SPLIT FREQ	-20 ~ +20 kHz (P2 = -20 ~ +00 ~ +20)	3
038	TRACKING	0: OFF, 1: BAND, 2: FREQ	1
039	TIME OUT TIMER	OFF/01~30min	2
040	TRV OFFSET (14MHz)	30: 30, 31: 31, 32: 32 ~ 44: 44, 45: 45, 46: 46 (MHz)	2
041	TRV OFFSET (28MHz)	30: 30, 31: 31, 32: 32 ~ 44: 44, 45: 45, 46: 46 (MHz)	2
042	TRV OFFSET (50MHz)	30: 30, 31: 31, 32: 32 ~ 44: 44, 45: 45, 46: 46 (MHz)	2
043	uTUNE DIAL STEP	0: DIAL STEP-2, 1: DIAL STEP-1, 2: OFF	1
044	MIC SCAN	0: DISABLE, 1: ENABLE	1
045	MIC SCAN RESUME	0: PAUSE, 1: TIME	1
046	FREQ ADJ	-25~0~+25 (P2 = -25 ~ +00 ~ +25)	3
047	AM LCUT FREQ	00: OFF, 01: 100Hz, ~, 19: 1000Hz (50Hz/step)	2
048	AM LCUT SLOPE	0: 6dB/oct, 1: 18dB/oct	1
049	AM HCUT FREQ	00: OFF, 01: 700Hz, ~, 67: 4000Hz (50Hz/step)	2
050	AM HCUT SLOPE	0: 6dB/oct, 1: 18dB/oct	1
051	AM MIC GAIN	MCVR/FIX(0~100) (P2 = 1000: MCVR, 0000~0100: FIX(0~100))	4
052	AM MIC SEL	0: FRONT, 1: DATA, 2: PC	1
053	CW LCUT FREQ	00: OFF, 01: 100Hz, ~, 19: 1000Hz (50Hz/step)	2
054	CW LCUT SLOPE	0: 6dB/oct, 1: 18dB/oct	1
055	CW HCUT FREQ	00: OFF, 01: 700Hz, ~, 67: 4000Hz (50Hz/step)	2
056	CW HCUT SLOPE	0: 6dB/oct, 1: 18dB/oct	1
057	F-KEYER TYPE	0: OFF, 1: BUG, 2: ELEKEY, 3: ACS	1
058	F-CW KEYER	0: NOR, 1: REV	1
059	R-KEYER TYPE	0: OFF, 1: BUG, 2: ELEKEY, 3: ACS	1
060	R-CW KEYER	0: NOR, 1: REV	1
061	CW AUTO MODE	0: OFF, 1: 50M, 2: ON	1
062	CW BFO	0: USB, 1: LSB, 2: AUTO	1
063	CW BK-IN	0: SEMI, 1: FULL	1
064	CW WAVE SHAPE	0: 1, 1: 2, 2: 4, 3: 6 (msec)	1
065	CW WEIGHT	2.5~3.0~4.5 (P2 = 25~45)	2
066	CW FREQ DISPLAY	0: DIRECT FREQ, 1: PITCH OFFSET	1
067	PC KEYING	0: DISABLE, 1: ENABLE	1



# CAT (COMPUTER AIDED TRANSCEIVER) OPERATION

## CONTROL COMMAND TABLES

TABLE 2



P1	FUNCTION	P2	BYTE
068	QSK	0: 15, 1: 20, 2: 25, 3: 30 (msec)	1
069	DATA IN SELECT	0: DATA, 1: PC	1
070	DATA TX GAIN	000~100	3
071	DATA OUT	0: VFO-A, 1: VFO-B	1
072	DATA OUT LEVEL	000~100	3
073	DATA VOX DELAY	0030-0300~3000msec (10msec/step)	4
074	DATA VOX GAIN	000~100	3
075	FM LCUT FREQ	00: OFF, 01: 100Hz, ~, 19: 1000 Hz (50Hz/step)	2
076	FM LCUT SLOPE	0: 6, 1: 18 (dB/oct)	1
077	FM HCUT FREQ	00: OFF, 01: 700, ~, 67: 4000 Hz (50Hz/step)	2
078	FM HCUT SLOPE	0: 6, 1: 18 (dB/oct)	1
079	FM MIC GAIN	MCVR/FIX(0~100) (P2 = 1000: MCVR, 0000~0100: FIX(0~100))	4
080	FM MIC SEL	0: FRONT, 1: DATA, 2: PC	1
081	RPT SHIFT(28MHz)	0000 ~0100 ~ 1000 kHz (10Hz/step)	4
082	RPT SHIFT(50MHz)	0000 ~0100 ~ 1000 ~ 4000 kHz (10Hz/step)	4
083	PKT LCUT FREQ	00: OFF, 01: 100Hz, ~, 19: 1000 Hz (50Hz/step)	2
084	PKT LCUT SLOPE	0: 6, 1: 18 (dB/oct)	1
085	PKT HCUT FREQ	00: OFF, 01: 700, ~, 67: 4000 Hz (50Hz/step)	2
086	PKT HCUT SLOPE	0: 6, 1: 18 (dB/oct)	1
087	PKT DISP (SSB)	-3000 ~ 0 ~ +3000 Hz (10Hz/step) (P2 = -3000 ~ +0000 ~ +3000)	5
088	PKT SHIFT (SSB)	-3000 ~ 0 ~ +3000 Hz (10Hz/step) (P2 = -3000 ~ +0000 ~ +3000)	5
089	RTTY LCUT FREQ	00: OFF, 01: 100, ~, 19: 1000 Hz (50Hz/step)	2
090	RTTY LCUT SLOPE	0: 6, 1: 18 (dB/oct)	1
091	RTTY HCUT FREQ	00: OFF, 01: 700, ~, 67: 4000 Hz (50Hz/step)	2
092	RTTY HCUT SLOPE	0: 6, 1: 18 (dB/oct)	1
093	POLARITY-R	0: NOR, 1: REV	1
094	POLARITY-T	0: NOR, 1: REV	1
095	RTTY OUT	0: VFO-A, 1: VFO-B	1
096	RTTY OUT LEVEL	000 ~100	3
097	RTTY SHIFT	0: 170, 1: 200, 2: 425, 3: 850 (Hz)	1
098	RTTY TONE	0: 1275, 1: 2125 (Hz)	1
099	SSB LCUT FREQ	00: OFF, 01: 100 ~ 19: 1000Hz (50Hz/step)	2
100	SSB LCUT SLOPE	0: 6, 1: 18 (dB/oct)	1
101	SSB HCUT FREQ	00: OFF, 01: 700 ~ 67: 4000 Hz (50Hz/step)	2
102	SSB HCUT SLOPE	0: 6 1: 18 (dB/oct)	1
103	SSB MIC SELECT	0: FRONT, 1: DATA, 2: PC	1
104	SSB-TX-BPF	0: 50-3000, 1: 100-2900, 2: 200-2800, 3: 300-2700, 4: 400-2600(Hz), 5: 3000WB	1
105	LSB RX-CARRIER	-200Hz~0~+200 Hz (10Hz/step) (P2 = -200 ~ +000 ~ +200)	4
106	USB RX-CARRIER	-200Hz~0~+200 Hz (10Hz/step) (P2 = -200 ~ +000 ~ +200)	4
107	AGC-SLOPE	0: NORMAL, 1: SLOPE	1
108	HEADPHONE MIX	0: SEPARATE, 1: COMBINE-1, 2: COMBINE-2	1
109	IF OUT	0: DISABLE, 1: ENABLE	1
110	MAIN NB LEVEL	000 ~100	3
111	MAIN NB WIDTH	000 ~100	3
112	APF WIDTH	0: S.NARROW, 1: NARROW, 2: MEDIUM, 3: WIDE	1
113	MAIN-CONTOUR-LEVEL	-40~0~20 (P2 = -40 ~ +00 ~ +20)	3
114	MAIN-CONTOUR-WIDTH	01 ~11	2
115	IF-NOTCH-WIDTH	0: NARROW, 1: WIDE	1
116	MAIN-CW SHAPE	0: SOFT, 1: SHARP	1
117	MAIN-CW SLOPE	0: STEEP, 1: MEDIUM, 2: GENTLE	1
118	MAIN-PSK SHAPE	0: SOFT, 1: SHARP	1
119	MAIN-PSK SLOPE	0: STEEP, 1: MEDIUM, 2: GENTLE	1
120	MAIN-RTY SHAPE	0: SOFT, 1: SHARP	1
121	MAIN-RTY SLOPE	0: STEEP, 1: MEDIUM, 2: GENTLE	1
122	MAIN-SSB SHAPE	0: SOFT, 1: SHARP	1
123	MAIN-SSB SLOPE	0: STEEP, 1: MEDIUM, 2: GENTLE	1
124	SUB-CW SHAPE	0: SOFT, 1: SHARP	1
125	SUB-CW SLOPE	0: STEEP, 1: MEDIUM, 2: GENTLE	1
126	SUB-PSK SHAPE	0: SOFT, 1: SHARP	1
127	SUB-PSK SLOPE	0: STEEP, 1: MEDIUM, 2: GENTLE	1
128	SUB-RTY SHAPE	0: SOFT, 1: SHARP	1
129	SUB-RTY SLOPE	0: STEEP, 1: MEDIUM, 2: GENTLE	1
130	SUB-SSB SHAPE	0: SOFT, 1: SHARP	1
131	SUB-SSB SLOPE	0: STEEP, 1: MEDIUM, 2: GENTLE	1
132	FIX 1.8MHz	1.800MHz ~ 1.999MHz 1kHz /step (P2 = 01800 ~ 01999)	5
133	FIX 3.5MHz	3.500MHz ~ 3.999MHz 1kHz /step (P2 = 03500 ~ 03999)	5
134	FIX 5.0MHz	5.250MHz ~ 5.499MHz 1kHz /step (P2 = 05250 ~ 05499)	5
135	FIX 7.0MHz	7.000MHz ~ 7.299MHz 1kHz /step (P2 = 07000 ~ 07299)	5
136	FIX 10MHz	10.100MHz ~ 10.149MHz 1kHz /step (P2 = 10100 ~ 10149)	5
137	FIX 14MHz	14.000MHz ~ 14.349MHz 1kHz /step (P2 = 14000 ~ 14349)	5
138	FIX 18MHz	18.000MHz ~ 18.199MHz 1kHz /step (P2 = 18000 ~ 18199)	5
139	FIX 21MHz	21.000MHz ~ 21.449MHz 1kHz /step (P2 = 21000 ~ 21449)	5
140	FIX 24MHz	24.800MHz ~ 24.989MHz 1kHz /step (P2 = 24800 ~ 24989)	5
141	FIX 28MHz	28.000MHz ~ 29.699MHz 1kHz /step (P2 = 28000 ~ 29699)	5
142	FIX 50MHz	50.000MHz ~ 53.999MHz 1kHz /step (P2 = 50000 ~ 53999)	5
143	DIAL STEP	0: 1, 1: 5Hz, 2: 10Hz	1
144	DIAL CW FINE	0: DISABLE, 1: ENABLE	1
145	UP/DOWN STEP	0: 1MHz, 1: 100kHz	1
146	AM CH STEP	0: 2.5, 1: 5, 2: 9, 3: 10, 4: 12.5kHz	1
147	FM CH STEP	0: 5, 1: 6.25, 2: 10, 3: 12.5, 4: 20kHz, 5: 25kHz	1
148	AM DIAL LOCK	0: DISABLE, 1: ENABLE	1
149	FM DIAL LOCK	0: DISABLE, 1: ENABLE	1
150	FM DIAL STEP	0: 10, 1: 100Hz	1
151	MY BAND	0000000000000000 ~ 1111111111111111 (see Page 9)	15
152	PRMTRC EQ1 FREQ	00: OFF, 01: 100, 02: 200, 03: 300, 04: 400, 05: 500, 06: 600, 07: 700 (Hz)	2
153	PRMTRC EQ1 LEVEL	-10~0~+10 (P2 = -10 ~ +00 ~ +10)	3
154	PRMTRC EQ1 BWTH	01~10	2
155	PRMTRC EQ2 FREQ	00: OFF, 01: 700, 02: 800, 03: 900, 04: 1000, 05: 1100, 06: 1200, 07: 1300, 08: 1400, 09: 1500 (Hz)	2
156	PRMTRC EQ2 LEVEL	-10~0~+10 (P2 = -10 ~ +00 ~ +10)	3
157	PRMTRC EQ2 BWTH	01~10	2

# CAT (COMPUTER AIDED TRANSCEIVER) OPERATION

## CONTROL COMMAND TABLES

TABLE 3

P1	FUNCTION	P2	BYTE
158	PRMTRC EQ3 FREQ	00: OFF,01: 1500, 02: 1600, 03: 1700,04: 1800, 05: 1900, 06: 2000, 07: 2100, 08: 2200, 09: 2300 10: 2400, 11: 2500, 12: 2600, 13: 2700, 14: 2800, 15: 2900, 16: 3000, 17: 3100, 18: 3200 (Hz)	2
159	PRMTRC EQ3 LEVEL	-10~0~+10 (P2 = -10 ~ +00 ~ +10)	3
160	PRMTRC EQ3 BWTH	01~10	2
161	P-PRMTRC EQ1-FREQ	00: OFF, 01: 100, 02: 200, 03: 300, 04: 400, 05: 500, 06: 600, 07: 700 (Hz)	2
162	P-PRMTRC EQ1-LEVEL	-10~0~+10 (P2 = -10 ~ +00 ~ +10)	3
163	P-PRMTRC EQ1-BWTH	01~10	2
164	P-PRMTRC EQ2-FREQ	00: OFF, 01: 700, 02: 800, 03: 900, 04: 1000, 05: 1100, 06: 1200, 07: 1300, 08: 1400, 09: 1500 (Hz)	2
165	P-PRMTRC EQ2-LEVEL	-10~0~+10 (P2 = -10 ~ +00 ~ +10)	3
166	P-PRMTRC EQ2-BWTH	01~10	2
167	P-PRMTRC EQ3-FREQ	00: OFF, 01: 1500, 02: 1600, 03: 1700,04: 1800, 05: 1900, 06: 2000, 07: 2100, 08: 2200, 09: 2300 10: 2400, 11: 2500, 12: 2600, 13: 2700, 14: 2800, 15: 2900, 16: 3000, 17: 3100, 18: 3200 (Hz)	2
168	P-PRMTRC EQ3-LEVEL	-10~0~+10 (P2 = -10 ~ +00 ~ +10)	3
169	P-PRMTRC EQ3-BWTH	01~10	2
170	FINAL BIAS	A(1~100%) (P2 = 0001~0100: A(1~100%))	4
171	TX MAX POWER	0: 10(20), 1: 20(50), 2: 50(100), 3: 100(200) (200W type)	1
172	TX PWR CONTROL	0: ALL MODE, 1: CARRIER	1
173	EXT AMP TX-GND	0: DISABLE, 1: ENABLE	1
174	EXT AMP TUNING PWR	0: 10(20), 1: 20(50), 2: 50(100), 3: 100(200) (200W type)	1
175	VOX SELECT	0: MIC, 1: DATA	1
176	ANTI VOX GAIN	000~100	3
177	EMERGENCY FREQ TX	0: DISABLE, 1: ENABLE	1

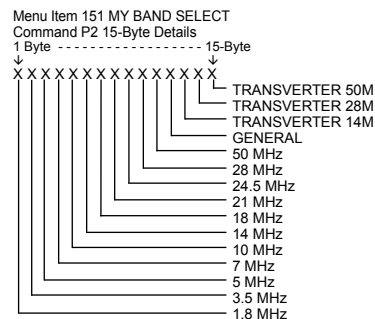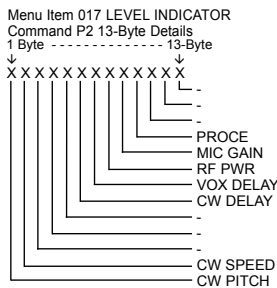

# CAT (COMPUTER AIDED TRANSCEIVER) OPERATION

## CONTROL COMMAND TABLES

<b>FA</b>	<b>FREQUENCY VFO-A</b>										
Set	1	2	3	4	5	6	7	8	9	10	P1 00030000 - 60000000 (Hz)
	<b>F</b>	<b>A</b>	P1	P1	P1	P1	P1	P1	P1	P1	
	11	12	13	14	15	16	17	18	19	20	
;											
Read	1	2	3	4	5	6	7	8	9	10	
	<b>F</b>	<b>A</b>	;								
	11	12	13	14	15	16	17	18	19	20	
Answer	1	2	3	4	5	6	7	8	9	10	
	<b>F</b>	<b>A</b>	P1	P1	P1	P1	P1	P1	P1	P1	
	11	12	13	14	15	16	17	18	19	20	
	;										

<b>FB</b>	<b>FREQUENCY VFO-B</b>										
Set	1	2	3	4	5	6	7	8	9	10	P1 00030000 - 60000000 (Hz)
	<b>F</b>	<b>B</b>	P1	P1	P1	P1	P1	P1	P1	P1	
	11	12	13	14	15	16	17	18	19	20	
;											
Read	1	2	3	4	5	6	7	8	9	10	
	<b>F</b>	<b>B</b>	;								
	11	12	13	14	15	16	17	18	19	20	
Answer	1	2	3	4	5	6	7	8	9	10	
	<b>F</b>	<b>B</b>	P1	P1	P1	P1	P1	P1	P1	P1	
	11	12	13	14	15	16	17	18	19	20	
	;										

<b>FR</b>	<b>FUNCTION RX</b>										
Set	1	2	3	4	5	6	7	8	9	10	P1 0: Main (VFO-A) Band Receiver: RX, Sub (VFO-B) Band Receiver: "OFF" 1: Main (VFO-A) Band Receiver: Mute, Sub (VFO-B) Band Receiver: "OFF" 2: Main (VFO-A) Band Receiver: RX, Sub (VFO-B) Band Receiver: RX 3: Main (VFO-A) Band Receiver: Mute, Sub (VFO-B) Band Receiver: RX
	<b>F</b>	<b>R</b>	P1	;							
Read	1	2	3	4	5	6	7	8	9	10	
	<b>F</b>	<b>R</b>	;								
Answer	1	2	3	4	5	6	7	8	9	10	
	<b>F</b>	<b>R</b>	P1	;							

<b>FS</b>	<b>FAST STEP</b>										
Set	1	2	3	4	5	6	7	8	9	10	P1 0: VFO A "OFF" (SET Only)      4: VFO A "OFF", VFO B "OFF" 1: VFO A "ON" (SET Only)      5: VFO A "ON", VFO B "OFF" 2: VFO B "OFF" (SET Only)      6: VFO A "OFF", VFO B "ON" 3: VFO B "ON" (SET Only)      7: VFO A "ON", VFO B "ON"
	<b>F</b>	<b>S</b>	P1	;							
Read	1	2	3	4	5	6	7	8	9	10	
	<b>F</b>	<b>S</b>	;								
Answer	1	2	3	4	5	6	7	8	9	10	
	<b>F</b>	<b>S</b>	P1	;							

<b>FT</b>	<b>FUNCTION TX</b>										
Set	1	2	3	4	5	6	7	8	9	10	P1 0: TX Band = Main (VFO-A) Band ↔ Sub (VFO-B) Band (Toggle) 1: TX Band = Sub (VFO-B) Band ↔ Main (VFO-A) Band (Toggle) 2: TX Band = Main (VFO-A) Band 3: TX Band = Sub (VFO-B) Band P2 0: TX Band = Main (VFO-A) Band 1: TX Band = Sub (VFO-B) Band
	<b>F</b>	<b>T</b>	P1	;							
Read	1	2	3	4	5	6	7	8	9	10	
	<b>F</b>	<b>T</b>	;								
Answer	1	2	3	4	5	6	7	8	9	10	
	<b>F</b>	<b>T</b>	P2	;							

<b>GT</b>	<b>AGC FUNCTION</b>										
Set	1	2	3	4	5	6	7	8	9	10	P1 0: Main (VFO-A) Band      P3 0: AGC "OFF" 1: Sub (VFO-B) Band      1: AGC "FAST" P2 0: AGC "OFF"      2: AGC "MID" 1: AGC "FAST"      3: AGC "SLOW" 2: AGC "MID"      4: AGC "AUTO-FAST" 3: AGC "SLOW"      5: AGC "AUTO-MID" 4: AGC "AUTO"      6: AGC "AUTO-SLOW"
	<b>G</b>	<b>T</b>	P1	P2	;						
Read	1	2	3	4	5	6	7	8	9	10	
	<b>G</b>	<b>T</b>	P1	;							
Answer	1	2	3	4	5	6	7	8	9	10	
	<b>G</b>	<b>T</b>	P1	P3	;						

<b>ID</b>	<b>IDENTIFICATION</b>										
Set	1	2	3	4	5	6	7	8	9	10	P1 0362: FTDX5000
Read	1	2	3	4	5	6	7	8	9	10	
	<b>I</b>	<b>D</b>	;								
Answer	1	2	3	4	5	6	7	8	9	10	
	<b>I</b>	<b>D</b>	P1	P1	P1	P1	;				

# CAT (COMPUTER AIDED TRANSCEIVER) OPERATION

## CONTROL COMMAND TABLES

IF	INFORMATION											
Set	1	2	3	4	5	6	7	8	9	10	P1 001-117 (Memory Channel) P2 VFO-A Frequency (Hz) P3 Clarifier Direction +: Plus Shift, -: Minus Shift Clarifier Offset: 0000 - 9999 (Hz) P4 0: RX CLAR "OFF" 1: RX CLAR "ON" P5 0: TX CLAR "OFF" 1: TX CLAR "ON" P6 MODE 1: LSB 2: USB 3: CW 4: FM 5: AM 6: FSK (RTTY-LSB) 7: CW-R 8: PKT-L 9: FSK-R (RTTY-USB) A: PKT-FM B: FM-N C: PKT-U P7 0: VFO 1: Memory 2: Memory Tune 3: Quick Memory Bank (QMB) 4: QMB-MT P8 0: CTCSS "OFF" 1: CTCSS ENC/DEC 2: CTCSS ENC P9: Tone Number (See Page 5: "CTCSS Tone Chart") 00 ~ 49 P10: Simplex 1: Plus Shift 2: Minus Shift	
Read	1	2	3	4	5	6	7	8	9	10		
Answer	I	F	;									
	1	2	3	4	5	6	7	8	9	10		
	I	F	P1	P1	P1	P2	P2	P2	P2	P2		
	11	12	13	14	15	16	17	18	19	20		
	P2	P2	P2	P3	P3	P3	P3	P4	P5			
	21	22	23	24	25	26	27	28	29	30		
	P6	P7	P8	P9	P10	;						

IS	IF-SHIFT										
Set	1	2	3	4	5	6	7	8	9	10	P1 0: Main (VFO-A) Band Receiver 1: Sub (VFO-B) Band Receiver P2 -1000 ~ +1000 Hz
Read	1	2	3	4	5	6	7	8	9	10	
Answer	I	S	P1	;/+	P2	P2	P2	P2	;		
	1	2	3	4	5	6	7	8	9	10	
	I	S	P1	;							
	1	2	3	4	5	6	7	8	9	10	
	I	S	P1	;/+	P2	P2	P2	P2	;		

KM	KEYER MEMORY										
Set	1	2	3	4	5	6	7	~	53	**	P1 1 - 5 : Keyer Memory Channel Number P2 Message Characters (up to 50 characters)  When the message is complete, add the "}" character at the end to signify the termination of the message. ex. KM CQ}__ ~ _ ; ( _ : space)
Read	1	2	3	4	5	6	7	8	9	10	
Answer	K	M	P1	P2	P2	P2	P2	~	P2	;	
	1	2	3	4	5	6	7	8	9	10	
	K	M	P1	;							
	1	2	3	4	5	6	7	~	53	**	
	K	M	P1	P2	P2	P2	P2	~	P2	;	

KP	KEY PITCH										
Set	1	2	3	4	5	6	7	8	9	10	P1 00 ~75: 300 Hz ~ 1050 Hz (10 Hz Step)
Read	1	2	3	4	5	6	7	8	9	10	
Answer	K	P	P1	P1	;						
	1	2	3	4	5	6	7	8	9	10	
	K	P	;								
	1	2	3	4	5	6	7	8	9	10	
	K	P	P1	P1	;						

KR	KEYER										
Set	1	2	3	4	5	6	7	8	9	10	P1 0: KEYER "OFF" 1: KEYER "ON"
Read	1	2	3	4	5	6	7	8	9	10	
Answer	K	R	P1	;							
	1	2	3	4	5	6	7	8	9	10	
	K	R	;								
	1	2	3	4	5	6	7	8	9	10	
	K	R	P1	;							

KS	KEY SPEED										
Set	1	2	3	4	5	6	7	8	9	10	P1 004 - 060 (WPM)
Read	1	2	3	4	5	6	7	8	9	10	
Answer	K	S	P1	P1	P1	;					
	1	2	3	4	5	6	7	8	9	10	
	K	S	;								
	1	2	3	4	5	6	7	8	9	10	
	K	S	P1	P1	P1	;					

KY	CW KEYING										
Set	1	2	3	4	5	6	7	8	9	10	P1 1: Keyer Memory "1" Playback 6: Message Keyer "1" Playback 2: Keyer Memory "2" Playback 7: Message Keyer "2" Playback 3: Keyer Memory "3" Playback 8: Message Keyer "3" Playback 4: Keyer Memory "4" Playback 9: Message Keyer "4" Playback 5: Keyer Memory "5" Playback A: Message Keyer "5" Playback
Read	1	2	3	4	5	6	7	8	9	10	
Answer	K	Y	P1	;							
	1	2	3	4	5	6	7	8	9	10	
	K	Y	;								
	1	2	3	4	5	6	7	8	9	10	
	K	Y	P1	;							

LK	LOCK										
Set	1	2	3	4	5	6	7	8	9	10	P1 0: VFO A "OFF" (SET Only) 4: VFO A "OFF", VFO B "OFF" 1: VFO A "ON" (SET Only) 5: VFO A "ON", VFO B "OFF" 2: VFO B "OFF" (SET Only) 6: VFO A "OFF", VFO B "ON" 3: VFO B "ON" (SET Only) 7: VFO A "ON", VFO B "ON"
Read	1	2	3	4	5	6	7	8	9	10	
Answer	L	K	P1	;							
	1	2	3	4	5	6	7	8	9	10	
	L	K	;								
	1	2	3	4	5	6	7	8	9	10	
	L	K	P1	;							

# CAT (COMPUTER AIDED TRANSCEIVER) OPERATION

## CONTROL COMMAND TABLES

<b>LM</b>	<b>LOAD MESSAGE</b>												
Set	1	2	3	4	5	6	7	8	9	10	P1 0: DVS 1: P. B	P2 When P1=0 0: DVS (Recording Stop) 1: DVS (CH "1" Recording Start/Stop) 2: DVS (CH "2" Recording Start/Stop) 3: DVS (CH "3" Recording Start/Stop) 4: DVS (CH "4" Recording Start/Stop) 5: DVS (CH "5" Recording Start/Stop)	When P1=1 0: P.B (Recording Stop) 1: P.B (Recording Start)
	<b>L</b>	<b>M</b>	<b>P1</b>	<b>P2</b>	;								
Read	1	2	3	4	5	6	7	8	9	10			
	<b>L</b>	<b>M</b>	<b>P1</b>	;									
Answer	1	2	3	4	5	6	7	8	9	10			
	<b>L</b>	<b>M</b>	<b>P1</b>	<b>P2</b>	;								

<b>MA</b>	<b>MEMORY CHANNEL TO VFO-A</b>										
Set	1	2	3	4	5	6	7	8	9	10	
	<b>M</b>	<b>A</b>	;								
Read	1	2	3	4	5	6	7	8	9	10	
Answer	1	2	3	4	5	6	7	8	9	10	

<b>MC</b>	<b>MEMORY CHANNEL</b>										
Set	1	2	3	4	5	6	7	8	9	10	P1 001 - 117: Memory Channel Number 001 - 099: Regular Memory Channel 100: P1L 101: P1U ? 116: P9L 117: P9U
	<b>M</b>	<b>C</b>	<b>P1</b>	<b>P1</b>	<b>P1</b>	;					
Read	1	2	3	4	5	6	7	8	9	10	
	<b>M</b>	<b>C</b>	;								
Answer	1	2	3	4	5	6	7	8	9	10	
	<b>M</b>	<b>C</b>	<b>P1</b>	<b>P1</b>	<b>P1</b>	;					

<b>MD</b>	<b>OPERATING MODE</b>										
Set	1	2	3	4	5	6	7	8	9	10	P1 0: Main (VFO-A) Band 1: Sub (VFO-B) Band P2 MODE 1: LSB 2: USB 3: CW 4: FM 5: AM 6: FSK (RTTY-LSB) 7: CW-R 8: PKT-L 9: FSK-R (RTTY-USB) A: PKT-FM B: FM-N C: PKT-U
	<b>M</b>	<b>D</b>	<b>P1</b>	<b>P2</b>	;						
Read	1	2	3	4	5	6	7	8	9	10	
	<b>M</b>	<b>D</b>	<b>P1</b>	;							
Answer	1	2	3	4	5	6	7	8	9	10	
	<b>M</b>	<b>D</b>	<b>P1</b>	<b>P2</b>	;						

<b>MG</b>	<b>MIC GAIN</b>										
Set	1	2	3	4	5	6	7	8	9	10	P1 000 - 255
	<b>M</b>	<b>G</b>	<b>P1</b>	<b>P1</b>	<b>P1</b>	;					
Read	1	2	3	4	5	6	7	8	9	10	
	<b>M</b>	<b>G</b>	;								
Answer	1	2	3	4	5	6	7	8	9	10	
	<b>M</b>	<b>G</b>	<b>P1</b>	<b>P1</b>	<b>P1</b>	;					

<b>MK</b>	<b>MODE KEY</b>										
Set	1	2	3	4	5	6	7	8	9	10	P1 KEY 0: LSB 1: USB 2: CW 3: AM / FM 4: FM / FM 5: RTTY 6: PKT
	<b>M</b>	<b>K</b>	<b>P1</b>	;							
Read	1	2	3	4	5	6	7	8	9	10	
Answer	1	2	3	4	5	6	7	8	9	10	

<b>ML</b>	<b>MONITOR LEVEL</b>										
Set	1	2	3	4	5	6	7	8	9	10	P1 0: MONI "ON/OFF" 1: MONI Level P2 When P1=0 000: MONI "OFF" 001: MONI "ON" When P1=1 001 - 255
	<b>M</b>	<b>L</b>	<b>P1</b>	<b>P2</b>	<b>P2</b>	<b>P2</b>	;				
Read	1	2	3	4	5	6	7	8	9	10	
	<b>M</b>	<b>L</b>	<b>P1</b>	;							
Answer	1	2	3	4	5	6	7	8	9	10	
	<b>M</b>	<b>L</b>	<b>P1</b>	<b>P2</b>	<b>P2</b>	<b>P2</b>	;				

<b>MR</b>	<b>MEMORY CHANNEL READ</b>										
Set	1	2	3	4	5	6	7	8	9	10	P1 Memory Channel Number P2 Memory Channel Frequency (Hz) P3 Clarifier Direction +: Plus Shift, -: Minus Shift Clarifier Offset: 0000 - 9999 (Hz) P4 0: RX CLAR "OFF" 1: RX CLAR "ON" P5 0: TX CLAR "OFF" 1: TX CLAR "ON" P6 MODE 1: LSB 2: USB 3: CW 4: FM 5: AM 6: FSK (RTTY-LSB) 7: CW-R 8: PKT-L 9: FSK-R (RTTY-USB) A: PKT-FM B: FM-N C: PKT-U P7 0: VFO 1: Memory P8 0: CTCSS "OFF" 1: CTCSS ENC/DEC 2: CTCSS ENC P9: Tone Number (See Page 5: "CTCSS Tone Chart") 00 ~ 49 P10 0: Simplex 1: Plus Shift 2: Minus Shift
	<b>M</b>	<b>R</b>	<b>P1</b>	<b>P1</b>	<b>P1</b>	;					
Read	1	2	3	4	5	6	7	8	9	10	
	<b>M</b>	<b>R</b>	<b>P1</b>	<b>P1</b>	<b>P2</b>	<b>P2</b>	<b>P2</b>	<b>P2</b>	<b>P2</b>	<b>P2</b>	
Answer	1	2	3	4	5	6	7	8	9	10	
	<b>M</b>	<b>R</b>	<b>P1</b>	<b>P1</b>	<b>P2</b>	<b>P2</b>	<b>P2</b>	<b>P2</b>	<b>P2</b>	<b>P2</b>	
	11	12	13	14	15	16	17	18	19	20	
	<b>P2</b>	<b>P2</b>	<b>P2</b>	<b>P3</b>	<b>P3</b>	<b>P3</b>	<b>P3</b>	<b>P3</b>	<b>P4</b>	<b>P5</b>	
	21	22	23	24	25	26	27	28	29	30	
	<b>P6</b>	<b>P7</b>	<b>P8</b>	<b>P9</b>	<b>P10</b>	;					

# CAT (COMPUTER AIDED TRANSCEIVER) OPERATION

## CONTROL COMMAND TABLES

<b>MS</b>	<b>METER SW</b>										
Set	1	2	3	4	5	6	7	8	9	10	P1 0: COMP 1: ALC 2: PO 3: SWR 4: ID 5: VDD
	<b>M</b>	<b>S</b>	P1	;							
Read	1	2	3	4	5	6	7	8	9	10	
	<b>M</b>	<b>S</b>	;								
Answer	1	2	3	4	5	6	7	8	9	10	
	<b>M</b>	<b>S</b>	P1	;							

<b>MW</b>	<b>MEMORY CHANNEL WRITE</b>										
Set	1	2	3	4	5	6	7	8	9	10	P1 Memory Channel Number P2 Memory Channel Frequency (Hz) P3 Clarifier Direction +: Plus Shift, -: Minus Shift Clarifier Offset: 0000 - 9999 (Hz) P4 0: RX CLAR "OFF" 1: RX CLAR "ON" P5 0: TX CLAR "OFF" 1: TX CLAR "ON" P6 MODE 1: LSB 2: USB 3: CW 4: FM 5: AM 6: FSK (RTTY-LSB) 7: CW-R 8: PKT-L 9: FSK-R (RTTY-USB) A: PKT-FM B: FM-N C: PKT-U P7 0: (Fixed) P8 0: CTCSS "OFF" 1: CTCSS ENC/DEC 2: CTCSS ENC P9: Tone Number (See Page 5: "CTCSS Tone Chart") 00 ~ 49 P10 0: Simplex 1: Plus Shift 2: Minus Shift
	<b>M</b>	<b>W</b>	P1	P1	P1	P2	P2	P2	P2	P2	
	11	12	13	14	15	16	17	18	19	20	
	P2	P2	P2	P3	P3	P3	P3	P4	P5		
	21	22	23	24	25	26	27	28	29	30	
	P6	P7	P8	P9	P10	;					
Read	1	2	3	4	5	6	7	8	9	10	
Answer	1	2	3	4	5	6	7	8	9	10	

<b>MX</b>	<b>MOX SET</b>										
Set	1	2	3	4	5	6	7	8	9	10	P1 0: MOX "OFF" 1: MOX "ON"
	<b>M</b>	<b>X</b>	P1	;							
Read	1	2	3	4	5	6	7	8	9	10	
	<b>N</b>	<b>X</b>	;								
Answer	1	2	3	4	5	6	7	8	9	10	
	<b>N</b>	<b>X</b>	P1	;							

<b>NA</b>	<b>NARROW</b>										
Set	1	2	3	4	5	6	7	8	9	10	P1 0: Main (VFO-A) Band Receiver 1: Sub (VFO-B) Band Receiver P2 0: OFF 1: ON
	<b>N</b>	<b>A</b>	P1	P2	;						
Read	1	2	3	4	5	6	7	8	9	10	
	<b>N</b>	<b>A</b>	P1	;							
Answer	1	2	3	4	5	6	7	8	9	10	
	<b>N</b>	<b>A</b>	P1	P2	;						

<b>NB</b>	<b>NOISE BLANKER STATUS</b>										
Set	1	2	3	4	5	6	7	8	9	10	P1 0: Main (VFO-A) Band Receiver 1: Sub (VFO-B) Band Receiver P2 0: Noise Blanker "OFF" 1: Noise Blanker "ON" 2: Noise Blanker (Wide) "ON"
	<b>N</b>	<b>B</b>	P1	P2	;						
Read	1	2	3	4	5	6	7	8	9	10	
	<b>N</b>	<b>B</b>	P1	;							
Answer	1	2	3	4	5	6	7	8	9	10	
	<b>N</b>	<b>B</b>	P1	P2	;						

<b>NL</b>	<b>NOISE BLANKER LEVEL</b>										
Set	1	2	3	4	5	6	7	8	9	10	P1 0: Main (VFO-A) Band Receiver 1: Sub (VFO-B) Band Receiver P2 000 - 255
	<b>N</b>	<b>L</b>	P1	P2	P2	;					
Read	1	2	3	4	5	6	7	8	9	10	
	<b>N</b>	<b>L</b>	P1	;							
Answer	1	2	3	4	5	6	7	8	9	10	
	<b>N</b>	<b>L</b>	P1	P2	P2	;					

<b>NR</b>	<b>NOISE REDUCTION</b>										
Set	1	2	3	4	5	6	7	8	9	10	P1 0: Main (VFO-A) Band Receiver 1: Sub (VFO-B) Band Receiver P2 0: Noise Reduction "OFF" 1: Noise Reduction "ON"
	<b>N</b>	<b>R</b>	P1	P2	;						
Read	1	2	3	4	5	6	7	8	9	10	
	<b>N</b>	<b>R</b>	P1	;							
Answer	1	2	3	4	5	6	7	8	9	10	
	<b>N</b>	<b>R</b>	P1	P2	;						

<b>OI</b>	<b>OPPOSITE BAND INFORMATION</b>										
Set	1	2	3	4	5	6	7	8	9	10	P1 Current Memory Channel P2 VFO-B Frequency (Hz) P3 Clarifier Direction +: Plus Shift, -: Minus Shift Clarifier Offset: 0000 - 9999 (Hz) P4 0: RX CLAR "OFF" 1: RX CLAR "ON" P5 0: TX CLAR "OFF" 1: TX CLAR "ON" P6 MODE 1: LSB 2: USB 3: CW 4: FM 5: AM 6: FSK (RTTY-LSB) 7: CW-R 8: PKT-L 9: FSK-R (RTTY-USB) A: PKT-FM B: FM-N C: PKT-U P7 0: VFO 1: Memory P8 0: CTCSS "OFF" 1: CTCSS ENC/DEC 2: CTCSS ENC P9: Tone Number (See Page 5: "CTCSS Tone Chart") 00 ~ 49 P10 0: Simplex 1: Plus Shift 2: Minus Shift
Read	1	2	3	4	5	6	7	8	9	10	
	<b>O</b>	<b>I</b>	;								
Answer	1	2	3	4	5	6	7	8	9	10	
	<b>O</b>	<b>I</b>	P1	P1	P1	P2	P2	P2	P2	P2	
	11	12	13	14	15	16	17	18	19	20	
	P2	P2	P2	P3	P3	P3	P3	P4	P5		
	21	22	23	24	25	26	27	28	29	30	
	P6	P7	P8	P9	P10	;					

# CAT (COMPUTER AIDED TRANSCEIVER) OPERATION

## CONTROL COMMAND TABLES

<b>OS</b>	<b>OFFSET (REPEATER SHIFT)</b>										
Set	1	2	3	4	5	6	7	8	9	10	P1 0: Main (VFO-A) Band 1: Sub (VFO-B) Band P2 0: Simplex 1: Plus Shift 2: Minus Shift ✳: FM mode only
	<b>O</b>	<b>S</b>	<b>P1</b>	<b>P2</b>	;						
Read	1	2	3	4	5	6	7	8	9	10	
	<b>O</b>	<b>S</b>	<b>P1</b>	;							
Answer	1	2	3	4	5	6	7	8	9	10	
	<b>O</b>	<b>S</b>	<b>P1</b>	<b>P2</b>	;						

<b>PA</b>	<b>PRE-AMP (IPO)</b>										
Set	1	2	3	4	5	6	7	8	9	10	P1 0: Main (VFO-A) Band Receiver 1: Sub (VFO-B) Band Receiver P2 0: IPO 1 1: AMP 1 2: AMP 2 3: IPO 2
	<b>P</b>	<b>A</b>	<b>P1</b>	<b>P2</b>	;						
Read	1	2	3	4	5	6	7	8	9	10	
	<b>P</b>	<b>A</b>	<b>P1</b>	;							
Answer	1	2	3	4	5	6	7	8	9	10	
	<b>P</b>	<b>A</b>	<b>P1</b>	<b>P2</b>	;						

<b>PB</b>	<b>PLAY BACK</b>										
Set	1	2	3	4	5	6	7	8	9	10	P1 0: DVS P2 When P1=0 1: P.B 0: DVS (Recording Stop) 1: DVS (CH "1" Playback Start) 2: DVS (CH "2" Playback Start) 3: DVS (CH "3" Playback Start) 4: DVS (CH "4" Playback Start) 5: DVS (CH "5" Playback Start) When P1=1 0: P.B (Playback Stop) 1: P.B (Playback Start)
	<b>P</b>	<b>B</b>	<b>P1</b>	<b>P2</b>	;						
Read	1	2	3	4	5	6	7	8	9	10	
	<b>P</b>	<b>B</b>	<b>P1</b>	;							
Answer	1	2	3	4	5	6	7	8	9	10	
	<b>P</b>	<b>B</b>	<b>P1</b>	<b>P2</b>	;						

<b>PC</b>	<b>POWER CONTROL</b>										
Set	1	2	3	4	5	6	7	8	9	10	P1 000 - 255
	<b>P</b>	<b>C</b>	<b>P1</b>	<b>P1</b>	<b>P1</b>	;					
Read	1	2	3	4	5	6	7	8	9	10	
	<b>P</b>	<b>C</b>	;								
Answer	1	2	3	4	5	6	7	8	9	10	
	<b>P</b>	<b>C</b>	<b>P1</b>	<b>P1</b>	<b>P1</b>	;					

<b>PL</b>	<b>SPEECH PROCESSOR LEVEL</b>										
Set	1	2	3	4	5	6	7	8	9	10	P1 000 - 255
	<b>P</b>	<b>L</b>	<b>P1</b>	<b>P1</b>	<b>P1</b>	;					
Read	1	2	3	4	5	6	7	8	9	10	
	<b>P</b>	<b>L</b>	;								
Answer	1	2	3	4	5	6	7	8	9	10	
	<b>P</b>	<b>L</b>	<b>P1</b>	<b>P1</b>	<b>P1</b>	;					

<b>PR</b>	<b>SPEECH PROCESSOR</b>										
Set	1	2	3	4	5	6	7	8	9	10	P1 0: Speech Processor "OFF" 1: Speech Processor "ON" 2: Microphone Equalizer "ON"
	<b>P</b>	<b>R</b>	<b>P1</b>	;							
Read	1	2	3	4	5	6	7	8	9	10	
	<b>P</b>	<b>R</b>	;								
Answer	1	2	3	4	5	6	7	8	9	10	
	<b>P</b>	<b>R</b>	<b>P1</b>	;							

<b>PS</b>	<b>POWER SWITCH</b>										
Set	1	2	3	4	5	6	7	8	9	10	P1 0: POWER "OFF" 1: POWER "ON" (Send the PS1; command twice every one second.)
	<b>P</b>	<b>S</b>	<b>P1</b>	;							
Read	1	2	3	4	5	6	7	8	9	10	
	<b>P</b>	<b>S</b>	;								
Answer	1	2	3	4	5	6	7	8	9	10	
	<b>P</b>	<b>S</b>	<b>P1</b>	;							

<b>QI</b>	<b>QMB STORE</b>										
Set	1	2	3	4	5	6	7	8	9	10	
	<b>Q</b>	<b>I</b>	;								
Read	1	2	3	4	5	6	7	8	9	10	
Answer	1	2	3	4	5	6	7	8	9	10	

<b>QR</b>	<b>QMB RECALL</b>										
Set	1	2	3	4	5	6	7	8	9	10	
	<b>Q</b>	<b>R</b>	;								
Read	1	2	3	4	5	6	7	8	9	10	
Answer	1	2	3	4	5	6	7	8	9	10	

# CAT (COMPUTER AIDED TRANSCEIVER) OPERATION

## CONTROL COMMAND TABLES

<b>QS</b>	<b>QUICK SPLIT</b>										
Set	1	2	3	4	5	6	7	8	9	10	
	<b>Q</b>	<b>S</b>	;								
Read	1	2	3	4	5	6	7	8	9	10	
Answer	1	2	3	4	5	6	7	8	9	10	

<b>RA</b>	<b>RF ATTENUATOR</b>										
Set	1	2	3	4	5	6	7	8	9	10	P1 0: Main (VFO-A) Band Receiver 1: Sub (VFO-B) Band Receiver P2 0: OFF 1: 6 dB 2: 12 dB 3: 18 dB
	<b>R</b>	<b>A</b>	P1	P2	;						
Read	1	2	3	4	5	6	7	8	9	10	
	<b>R</b>	<b>A</b>	P1	;							
Answer	1	2	3	4	5	6	7	8	9	10	
	<b>R</b>	<b>A</b>	P1	P2	;						

<b>RC</b>	<b>CLAR CLEAR</b>										
Set	1	2	3	4	5	6	7	8	9	10	
	<b>R</b>	<b>C</b>	;								
Read	1	2	3	4	5	6	7	8	9	10	
Answer	1	2	3	4	5	6	7	8	9	10	

<b>RD</b>	<b>CLAR MINUS OFFSET</b>										
Set	1	2	3	4	5	6	7	8	9	10	P1 0000 - 9999 (Hz)
	<b>R</b>	<b>D</b>	P1	P1	P1	P1	;				
Read	1	2	3	4	5	6	7	8	9	10	
Answer	1	2	3	4	5	6	7	8	9	10	

<b>RF</b>	<b>ROOFING FILTER</b>										
Set	1	2	3	4	5	6	7	8	9	10	P1 0: Main (VFO-A) Band Receiver 1: Sub (VFO-B) Band Receiver P2 0: AUTO 1: 15 kHz 2: 6 kHz 3: 3 kHz 4: 600 Hz (Main) 5: 300 Hz (Main) P3 1: 15 kHz 2: 6 kHz 3: 3 kHz 4: AUTO - 15 kHz 5: AUTO - 6kHz 6: AUTO - 3 kHz 7: 600 Hz (Main) 8: 300 Hz (Main) 9: AUTO - 600 Hz (Main) A: AUTO - 300 Hz (Main)
	<b>R</b>	<b>F</b>	P1	P2	;						
Read	1	2	3	4	5	6	7	8	9	10	
	<b>R</b>	<b>F</b>	P1	;							
Answer	1	2	3	4	5	6	7	8	9	10	
	<b>R</b>	<b>F</b>	P1	P3	;						

<b>RG</b>	<b>RF GAIN</b>										
Set	1	2	3	4	5	6	7	8	9	10	P1 0: Main (VFO-A) Band Receiver 1: Sub (VFO-B) Band Receiver P2 000 - 255
	<b>R</b>	<b>G</b>	P1	P2	P2	P2	;				
Read	1	2	3	4	5	6	7	8	9	10	
	<b>R</b>	<b>G</b>	P1	;							
Answer	1	2	3	4	5	6	7	8	9	10	
	<b>R</b>	<b>G</b>	P1	P2	P2	P2	;				

<b>RI</b>	<b>RADIO INFORMATION</b>										
Set	1	2	3	4	5	6	7	8	9	10	P1 0: HI-SWR 1: MIC-EQ 2: CLASS-A 3: REC 4: PLAY 5: MAIN TX 6: SUB TX 7: MAIN RX 8: SUB RX P2 0: OFF 1: ON
Read	1	2	3	4	5	6	7	8	9	10	
	<b>R</b>	<b>I</b>	P1	;							
Answer	1	2	3	4	5	6	7	8	9	10	
	<b>R</b>	<b>I</b>	P1	P2	;						

<b>RL</b>	<b>NOISE REDUCTION LEVEL</b>										
Set	1	2	3	4	5	6	7	8	9	10	P1 0: Main (VFO-A) Band Receiver 1: Sub (VFO-B) Band Receiver P2 01 - 15
	<b>R</b>	<b>L</b>	P1	P2	P2	;					
Read	1	2	3	4	5	6	7	8	9	10	
	<b>R</b>	<b>L</b>	P1	;							
Answer	1	2	3	4	5	6	7	8	9	10	
	<b>R</b>	<b>L</b>	P1	P2	P2	;					

<b>RM</b>	<b>READ METER</b>										
Set	1	2	3	4	5	6	7	8	9	10	P1 0: Depends of the front panel's METER knob 1: S Meter (Main) 2: S Meter (Sub) 3: COMP Meter 4: ALC Meter 5: PO Meter 6: SWR Meter 7: ID Meter 8: VDD Meter P2 0 - 255
Read	1	2	3	4	5	6	7	8	9	10	
	<b>R</b>	<b>M</b>	P1	;							
Answer	1	2	3	4	5	6	7	8	9	10	
	<b>R</b>	<b>M</b>	P1	P2	P2	P2	;				



# CAT (COMPUTER AIDED TRANSCEIVER) OPERATION

## CONTROL COMMAND TABLES

RO	ROTATOR										
Set	1	2	3	4	5	6	7	8	9	10	P1 0: OFF 1: Counter Clockwise 2: Clockwise 3: SPEED 1 % DOWN 4: SPEED 1 % UP P2 DIRECTION (0 - 450) P3 SPEED (0 - 100 %)
	R	O	P1	;							
Read	1	2	3	4	5	6	7	8	9	10	
	R	O	;								
Answer	1	2	3	4	5	6	7	8	9	10	
	R	O	P1	P2	P2	P2	P3	P3	P3	;	

RS	RADIO STATUS										
Set	1	2	3	4	5	6	7	8	9	10	P1 0: NORMAL MODE 1: MENU MODE
Read	1	2	3	4	5	6	7	8	9	10	
	R	S	;								
Answer	1	2	3	4	5	6	7	8	9	10	
	R	S	P1	;							

RT	CLAR										
Set	1	2	3	4	5	6	7	8	9	10	P1 0: RX Clarifier "OFF" 1: RX Clarifier "ON"
	R	T	P1	;							
Read	1	2	3	4	5	6	7	8	9	10	
	R	T	;								
Answer	1	2	3	4	5	6	7	8	9	10	
	R	T	P1	;							

RU	RX CLARIFIER PLUS OFFSET										
Set	1	2	3	4	5	6	7	8	9	10	P1 0000 - 9999 (Hz)
	R	U	P1	P1	P1	P1	;				
Read	1	2	3	4	5	6	7	8	9	10	
Answer	1	2	3	4	5	6	7	8	9	10	

SC	SCAN										
Set	1	2	3	4	5	6	7	8	9	10	P1 0: Scan "OFF" 1: Scan "ON" (Upward) 2: Scan "ON" (Downward)
	S	C	P1	;							
Read	1	2	3	4	5	6	7	8	9	10	
	S	C	;								
Answer	1	2	3	4	5	6	7	8	9	10	
	S	C	P1	;							

SD	CW BREAK-IN DELAY TIME										
Set	1	2	3	4	5	6	7	8	9	10	P1 0020 - 5000 (mS)
	S	D	P1	P1	P1	P1	;				
Read	1	2	3	4	5	6	7	8	9	10	
	S	D	;								
Answer	1	2	3	4	5	6	7	8	9	10	
	S	D	P1	P1	P1	P1	;				

SF	SUB VFO-B KNOB FUNCTION										
Set	1	2	3	4	5	6	7	8	9	10	P1 00: BAND      07: S-DIAL 01: -              08: CLAR 02: GRP 03: MCH 04: - 05: - 06: -
	S	F	P1	P1	;						
Read	1	2	3	4	5	6	7	8	9	10	
	S	F	;								
Answer	1	2	3	4	5	6	7	8	9	10	
	S	F	P1	P1	;						

SH	WIDTH										
Set	1	2	3	4	5	6	7	8	9	10	P1 0: Main (VFO-A) Band Receiver 1: Sub (VFO-B) Band Receiver P2 00 [Default] SSB NARROW    01: 200    02: 400    03: 600    04: 850    05: 1100 06: 1350    07: [1500] SSB WIDE        07: 1500    08: 1650    09: 1800    10: 1950    11: 2100 12: 2250    13: [2400]    14: - - - -    15: 2500    16: 2600 17: 2700    18: 2800    19: 2900    20: 3000    21: 3200 22: 3400    23: 3600    24: 3800    25: 4000 CW NARROW      01: 50        02: 100    03: 150    04: 200    05: 250 06: 300    07: 350    08: 400    09: 450    10: [500] CW WIDE         10: 500      11: 800    12: 1200    13: 1400    14: 1700 15: 2000    16: [2400] RTTY NARROW    01: 50        02: 100    03: 150    04: 200    05: 250 06: [300]    07: 350    08: 400    09: 450    10: 500 RTTY WIDE       10: [500]     11: 800    12: 1200    13: 1400    14: 1700 15: 2000    16: 2400 PSK NARROW     01: 50        02: 100    03: 150    04: 200    05: 250 06: [300]    07: 350    08: 400    09: 450    10: 500 PSK WIDE        10: [500]     11: 800    12: 1200    13: 1400    14: 1700 15: 2000    16: 2400
	S	H	P1	P2	P2	;					
Read	1	2	3	4	5	6	7	8	9	10	
	S	H	P1	;							
Answer	1	2	3	4	5	6	7	8	9	10	
	S	H	P1	P2	P2	;					

# CAT (COMPUTER AIDED TRANSCEIVER) OPERATION

## CONTROL COMMAND TABLES

<b>SM</b>	<b>S-METER READING</b>										
Set	1	2	3	4	5	6	7	8	9	10	P1 0: Main (VFO-A) Band S-meter 1: Sub (VFO-B) Band S-meter P2 000 - 255
Read	1	2	3	4	5	6	7	8	9	10	
	<b>S</b>	<b>M</b>	P1	;							
Answer	1	2	3	4	5	6	7	8	9	10	
	<b>S</b>	<b>M</b>	P1	P2	P2	P2	;				

<b>SQ</b>	<b>SQUELCH LEVEL</b>										
Set	1	2	3	4	5	6	7	8	9	10	P1 0: Main (VFO-A) Band Receiver 1: Sub (VFO-B) Band Receiver P2 000 - 255
	<b>S</b>	<b>Q</b>	P1	P2	P2	P2	;				
Read	1	2	3	4	5	6	7	8	9	10	
	<b>S</b>	<b>Q</b>	P1	;							
Answer	1	2	3	4	5	6	7	8	9	10	
	<b>S</b>	<b>Q</b>	P1	P2	P2	P2	;				

<b>SV</b>	<b>SWAP VFO</b>										
Set	1	2	3	4	5	6	7	8	9	10	
	<b>S</b>	<b>V</b>	;								
Read	1	2	3	4	5	6	7	8	9	10	
Answer	1	2	3	4	5	6	7	8	9	10	

<b>TS</b>	<b>TXW</b>										
Set	1	2	3	4	5	6	7	8	9	10	P1 0: TXW "OFF" 1: TXW "ON"
	<b>T</b>	<b>S</b>	P1	;							
Read	1	2	3	4	5	6	7	8	9	10	
	<b>T</b>	<b>S</b>	;								
Answer	1	2	3	4	5	6	7	8	9	10	
	<b>T</b>	<b>S</b>	P1	;							

<b>TX</b>	<b>TX SET</b>										
Set	1	2	3	4	5	6	7	8	9	10	P1 0: RADIO TX "OFF" CAT TX "OFF" 1: RADIO TX "OFF" CAT TX "ON" 2: RADIO TX "ON" CAT TX "OFF" (Answer)
	<b>T</b>	<b>X</b>	P1	;							
Read	1	2	3	4	5	6	7	8	9	10	
	<b>T</b>	<b>X</b>	;								
Answer	1	2	3	4	5	6	7	8	9	10	
	<b>T</b>	<b>X</b>	P1	;							

<b>UL</b>	<b>PLL UNLOCK STATUS</b>										
Set	1	2	3	4	5	6	7	8	9	10	P1 0: PLL "Lock" 1: PLL "Unlock"
Read	1	2	3	4	5	6	7	8	9	10	
	<b>U</b>	<b>L</b>	;								
Answer	1	2	3	4	5	6	7	8	9	10	
	<b>U</b>	<b>L</b>	P1	;							

<b>UP</b>	<b>MIC UP</b>										
Set	1	2	3	4	5	6	7	8	9	10	
	<b>U</b>	<b>P</b>	;								
Read	1	2	3	4	5	6	7	8	9	10	
Answer	1	2	3	4	5	6	7	8	9	10	

<b>VD</b>	<b>VOX DELAY TIME</b>										
Set	1	2	3	4	5	6	7	8	9	10	P1 0020 - 5000 mS (20 mS multiples)
	<b>V</b>	<b>D</b>	P1	P1	P1	P1	;				
Read	1	2	3	4	5	6	7	8	9	10	
	<b>V</b>	<b>D</b>	;								
Answer	1	2	3	4	5	6	7	8	9	10	
	<b>V</b>	<b>D</b>	P1	P1	P1	P1	;				

<b>VF</b>	<b>VRF FILTER</b>										
Set	1	2	3	4	5	6	7	8	9	10	P1 0: Main (VFO-A) Band Receiver P3 +: Plus Shift 1: Sub (VFO-B) Band Receiver -: Minus Shift P2 0: OFF P4 0 - 9 (Step) 1: ON P5 000 - 255 2: Default set P6 0: VRF 1: μTUNE
	<b>V</b>	<b>F</b>	P1	P2	P3	P4	;				
Read	1	2	3	4	5	6	7	8	9	10	
	<b>V</b>	<b>F</b>	P1;								
Answer	1	2	3	4	5	6	7	8	9	10	
	<b>V</b>	<b>F</b>	P1	P2	P5	P5	P5	P6	;		

# CAT (COMPUTER AIDED TRANSCEIVER) OPERATION

## CONTROL COMMAND TABLES

<b>VG</b>	<b>VOX GAIN</b>										
Set	1	2	3	4	5	6	7	8	9	10	P1 000 - 255
	<b>V</b>	<b>G</b>	P1	P1	P1	;					
Read	1	2	3	4	5	6	7	8	9	10	
	<b>V</b>	<b>G</b>	;								
Answer	1	2	3	4	5	6	7	8	9	10	
	<b>V</b>	<b>G</b>	P1	P1	P1	;					

<b>VM</b>	<b>VFO-A TO MEMORY CHANNEL</b>										
Set	1	2	3	4	5	6	7	8	9	10	
	<b>V</b>	<b>M</b>	;								
Read	1	2	3	4	5	6	7	8	9	10	
Answer	1	2	3	4	5	6	7	8	9	10	

<b>VS</b>	<b>VFO SELECT</b>										
Set	1	2	3	4	5	6	7	8	9	10	P1 0: VFO-A 1: VFO-B
	<b>V</b>	<b>S</b>	P1	;							
Read	1	2	3	4	5	6	7	8	9	10	
	<b>V</b>	<b>S</b>	;								
Answer	1	2	3	4	5	6	7	8	9	10	
	<b>V</b>	<b>S</b>	P1	;							

<b>VX</b>	<b>VOX STATUS</b>										
Set	1	2	3	4	5	6	7	8	9	10	P1 0: VOX "OFF" 1: VOX "ON"
	<b>V</b>	<b>X</b>	P1	;							
Read	1	2	3	4	5	6	7	8	9	10	
	<b>V</b>	<b>X</b>	;								
Answer	1	2	3	4	5	6	7	8	9	10	
	<b>V</b>	<b>X</b>	P1	;							

<b>XT</b>	<b>TX CLAR</b>										
Set	1	21	3	4	5	6	7	8	9	10	P1 0: TX CLAR "OFF" 1: TX CLAR "ON"
	<b>X</b>	<b>T</b>	P1	;							
Read	1	2	3	4	5	6	7	8	9	10	
	<b>X</b>	<b>T</b>	;								
Answer	1	2	3	4	5	6	7	8	9	10	
	<b>X</b>	<b>T</b>	P1	;							



Copyright 2019  
YAESU MUSEN CO., LTD.  
All rights reserved

No portion of this manual may be  
reproduced without the permission of  
YAESU MUSEN CO., LTD.

1907-D