



Frequency expansion DR-B185HT/HE

- Turn off the power. Remove the DC cable for your safety.
- Open the top cover. Locate a loop jumper wire in blue at a left corner close to the front panel.
- Cut it to remove and close the top cover.
- Turn on with CALL key and FUNC key pressed together to reset.
- The modified frequency range is TX/RX 136-174MHz.