

DEM Part Number 3456-144 _____
9 cm Transverter Serial Number _____

Specifications

Table with 2 columns: Specification Name and Value. Rows include Frequency, Noise Figure and Gain, Power Out, DC Power Requirement, IF Option, IF Drive Level Requirement Option, Keying Option, Aux. Connection Output Option, and TR Switching Option.


Operating Instructions:

This DEM 3456-144 transverter is a combination of circuit boards designed by Down East Microwave Inc. All circuitry operates from a internal 9 VDC Regulated supply which makes it an ideal portable rig or it can be easily implemented into an existing home station.

A block diagram is supplied to show the DC wiring of the transverter and the interfacing of the various circuit boards used in the transverter. This is provided for information and location of adjustment points to aid in your station integration.

Once all interfacing is complete, operation is simple. Please note frequency calibration listed on the top of this document. Remember the transverter should always be "hard-keyed". It is not RF sensed.


Output power levels, receive gain and frequency may be adjusted internally by removing the top four screws and opening the cover. Be careful because the local oscillator is attached to the top cover and is connected to the main transverter board by coax and DC power connection.

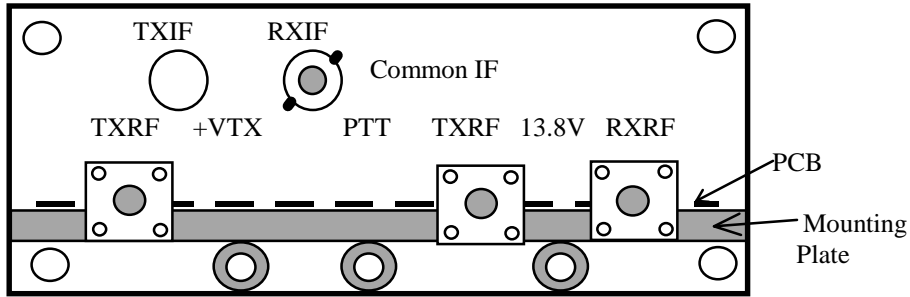


Rear Panel Diagram

The 1 watt output version will have a extra SMA connector installed. The TXRF connector will be mounted by the RXRF connector so that a common SMA type relay may be connected to perform the TR function. The connector in the old TXRF position will be a dummy connector and will not be connected to any circuitry.

Enclosure and PCB Mounting

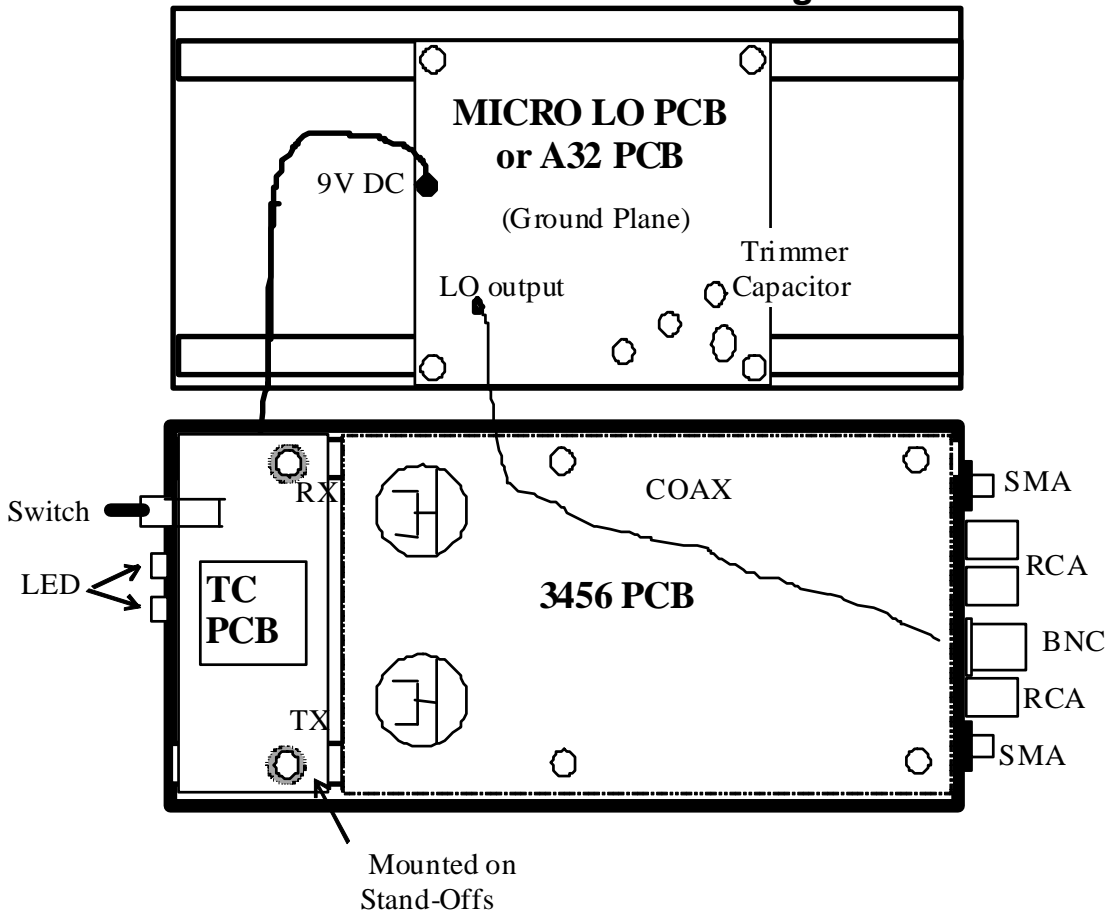

Enclosure and PCB Mounting

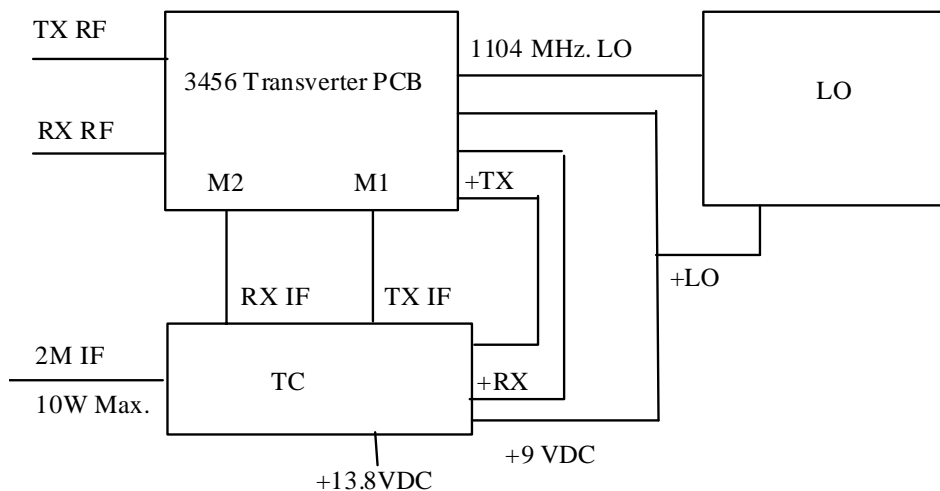

Wiring Block diagram



3456 Transverter Board Parts List

All components are Surface Mount components unless otherwise noted.

C1 8.2 pF ATC	C12 0.1 μF	C25 0.1 μF	R9 10 Ω	U6 ERA-1
C2 0.1 μF	C13 0.1 μF	C26 10 pF	R10 10 Ω	U7 ERA-1
C3 10 pF	C14 10 pF	C31A 10 pF	R11 130 Ω	U11 ERA-4
C4 0.1 μF	C15 0.1 μF	R1 10 Ω	R13 130 Ω	CR1 MA4E2054
C5 0.1 μF	C16 100 pF	R2 51 Ω	R18 130 Ω	CR2 MA4E2054
C6 100 pF	C17 0.1 μF	R3 150 Ω	R20 130 Ω	
C7 10 pF	C18 10 pF	R4 130 Ω	U1 MGA86576	
C8 0.1 μF	C19 0.1 μF	R5 51 Ω	U2 ERA-1	Optional ERA-1
C9 10 pF	C20 0.1 μF	R6 130 Ω	U3 ERA-1	" 200 Ω
C10 0.1 μF	C21 0.1 μF	R7 130 Ω	U4 ERA-1	" 130 Ω
C11 10 pF	C22 100 pF	R8 150 Ω	U5 ERA-2	


3456-144 PA SECTION

C27 0.1 μF	C32 10 pF	R19 10K pot	Q1 FLL 177
C28 10.0 μF	C33 10 pF	R21 51 Ω	2- sets of 2-56 screw & nut
C29 0.1 μF	C34 0.1 μF	R22 51 Ω	
C30 10 pF	C35 10.0 μF	R23 1Ω, 1Watt	
C31B 10 pF	C36 10.0 μF	IC1 7660	

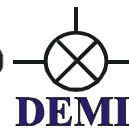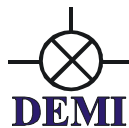

Operating and use tips:

1. You will need to hard-key this transverter. It is not RF senesced! If you wish to have your transceiver key the transverter, you will need to use the auxiliary contacts or a positive voltage on transmit generated by your IF transceiver.
2. The transverter will accept a maximum IF drive level of what is indicated on the front page. If the 10 watt IF drive version is ordered, a maximum of 25 watts may be applied momentarily without causing damage to the transverter. If you wish to use a transceiver with an output power greater than 10 watts, you will need to supply additional attenuation. A receive IF gain stage may be added to the TC board to compensate for the additional attenuation. See that enclosed document for details.
3. RX and TX levels may change slightly after adjustments when the enclosure is re-assembled.
4. Be sure to use high quality coax for all connections
5. This unit may be mast mounted but it is not weatherproof. Simple protection from the rain is all that is required.

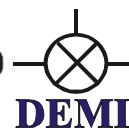

DEM TC DEM TRANSVERTER CONTROL

The DEM Transverter Control (DEM TC) is the circuit board that controls all transverter functions in the DEMI 2.3 GHz. -10 GHz. transverters. It was designed with many options and depending on the configuration you have ordered (see configuration page of main transverter document), the options may or may not be enabled in your transverter. This document will cover all of the features available for understanding and make it possible to change the configuration at any time to suit your requirements.



Circuit Description: (All functions mentioned may or may not be enabled in your transverter)

The DEM TC circuit board is mounted in the front of the transverter. It includes the DC power switch and both the "Power On" and the "Transmit On" LED's. The TC contains a 1.5 amp, 9 Volt regulator that supplies the transverter with all of the regulated DC voltage it requires and allows some head room for other external circuits. The TC controls all of the IF switching functions utilizing a high isolation RF relay that is rated through 1 GHz. It allows the use of any frequency of IF up to 1300 MHz. On transmit it will allow the use of up to a maximum of 10 watts of drive depending on configuration. The TC also incorporates adjustable attenuators for both transmit and receive and has a provision for adding additional receive IF gain. The TC allows either a PTT High or Low for keying the transmit and receive circuits. Another feature included on the TC circuit board is a 24 Volt relay driver designed to operate most SMA relays used for Transmit and Receive switching of the RF frequencies. This circuit may not work with certain types of relays but will operate with any SMA relay supplied by DEMI. Other options include different auxiliary DC switching schemes, keying the transverter through the IF coax, and supplying PTT keying signals to external equipment. Connection and use of each circuit is explained below. Refer to schematic and component list for all component designations.

RXIF Gain and Adjustment:

The installation of the receive IF gain stage is the most asked about device in the transverter. If the transverter is to be installed at the antenna with a long run of coax for the IF line, you may wish to install IC1. Understand that installing this gain stage will not improve the system noise figure and in most cases it will slightly degrade it. If you wish to improve the system noise figure, you should add a LNA at the RF frequency. Then depending on the gain of the additional RF LNA, you may not need the RXIF gain stage even if the transverter mast mounted. If you wish to install IC1, refer to the component placement to determine where it is installed along with its bias resistor R9. Any low frequency MMIC may be used but select it for the correct amount of gain required. Also consider the noise figure unless you have a RF LNA in the system. Select the value of R9 for the MMIC to be used for 13.8VDC operation. To bypass the gain stage, install a leaded 120pF capacitor in place of IC1. Keep the leads short.

The RXIF gain can be adjusted with R7. There should be approximately 20 dB of range. With your system completely connected, R7 may be adjusted to an acceptable level determined by your ear. For best results, keep the gain to a minimum. Only a slight noise increase should be noticed by cycling the power switch of the transverter. If your "S" meter of your IF radio is at half scale, you have lost half of the dynamic range of your system. For the same reasoning, adding the gain stage and then adjusting the RXIF to maximum will degrade the dynamic range further.

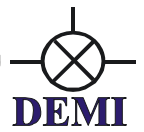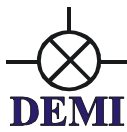

TXIF Drive Level and Adjustment.

The TXIF drive level adjustment (R2) has approximately 20 dB of range. Depending on the configuration ordered, this adjustment range may not be acceptable. If so the fixed attenuator may need to be installed, removed, or adjusted. If you wish to use less than 50 milliwatts of IF drive power, install a short jumper wire in the R4 position and remove the large 50 ohm termination that may be installed on the front panel. If you wish to use up to 2 watts, install R4 as shown with the large 50 ohm termination. If you plan to use 1 - 10 watts of IF drive, install a 1pF capacitor in the R4 position with the 50 ohm termination. If you need to experiment with other drive levels, any combination of variable capacitor or resistor may be used in the R4 position. You may also adjust the values of R1 and R3 as needed. Input power to the TXIF adjustment is dependent on the attenuation installed on the C3 side of the K1 relay. The 50 ohm load resistor is designed to handle 35 watts with proper heat sinking. When mounted to the front panel of the transverter, it will not tolerate more than 10-12 watts reliably for a long period of time. You may experiment with external heat sinking if you desire. External attenuation may also be used in the transceive path. Remember that the added attenuation is also on the receive signal but may be overcome by the additional gain of the RXIF gain stage. The level then may be adjusted with the RXIF adjustment.

Split Transmit and Receive or Common IF Configuration:

If you wish to use your transverter with separate TX and RX ports, first remove C3 and C5. Then attach coax from the IF connectors to the corresponding TXIF and RXIF connections at the C3 and C5 locations. If you are converting a split IF to a common IF, C3 and C5 may or may not be already installed. Select the coax you wish to keep as the common and connect it to the common input of K1.


PTT-H and PTT-L

The TC has the option of either using a PTT-H or PTT-L keying circuit. The PTT-H requires +1.5 to +18VDC to activate it and will sink up to 2 mA. If using this circuit, be certain that the sink current will not exceed your transceivers rating. The PTT-L circuit requires a connection to ground to be activated. It is connected to the K1 relay and will source up to 25 mA to ground when keyed. If this exceeds your transceivers rating you may modify the TC as shown in our design note DN0?? Found in our library on our web site or call for a copy.

PTT Keying Through the IF Coax:

Some transceivers such as certain models of the Yeasu FT290 supply a positive voltage on it's RF output connector during transmit or receive. This voltage may be used for keying the transverter. After verifying or modifying your transceiver for this function, the transverter may have the option installed. Select a choke of 1.0 μ h or larger and install it in the L1 position of the TC. Then connect a short wire jumper from the DC side of L1 to the PTT-H connection. When the transceiver is keyed, the voltage in the coax will key the PTT-H of the transverter. This is the most fool proof connection of the PTT line that can be made with any transceiver and is highly recommended by DEMI.

If the PTT-L connection is connected to the PTT connector, it will not affect the operation of the system. Just do not key both lines at the same time! If you will never use it, it may be disconnected and the external connector may be used for any other auxiliary connections.

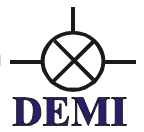

+DC Switching Functions:

Relay K2 controls all of the +DC switching functions in the transverter. One side of the relay switches the raw +DC supply voltage to the transverter and the other side switches the regulated +9 volts. There are extra connection holes on the PCB if you require any additional switched voltage. Be sure not to exceed the 1.5 amp limit on the 9 volt regulated supply. The transverter's current drain is listed on its configuration page and allow for some overhead when the oscillator is not warmed up.

The switched voltages may be used for external LNA's, switching circuits for power amplifiers or relays. You may need to add an extra hole for a connector if the AUX connector is used. Be sure to fuse any external connections. The relay's contacts (K2) are rated for 3 amps.

24 Volt Relay Driver:


The TC is designed with a 24 Volt relay driver. A brief explanation of the circuit is as follows. When the TC is in the receive mode, a 330 μ F capacitor is charged to the raw input voltage of the transverter (12-14 VDC). When the PTT circuit is activated, K3 switches this charged capacitor in series with the TXON voltage and outputs a brief spike of 24-28 VDC at the +R connection on the TC board. Depending on the current drain of the connected circuit (or relay), the charged capacitor bleeds off down to the raw input voltage of the transverter. The spike is enough to energize most SMA relays and the raw transverter voltage is enough to keep the relay energized. This circuit will not work with all relays but will operate with all relays supplied by DEMI in the optional WTR kit. If you wish to use a relay with a higher current drain, the 330 μ F capacitor may be increased. Just be sure that the relay being used will stay energized with +12 VDC. This circuit will not operate latching relays unless additional circuitry is installed.

PLEASE NOTE! Even though this connection will bleed down to the raw voltage of the transverter, the circuit should never be used on any electronic circuit that will not tolerate a **+28VDC input!** It will damage most +12VDC circuits. It will also not operate any circuit requiring voltage greater than the transverter's supply voltage other than a relay.

If a switched +VDC is required, move the wire from the +R connection (if installed) to either the +VTX, +RX, +9, +13RX, +13TX, or +13.8SW. Refer to the schematic for their functions.

RF Sensing Transverter Keying


The TC is not designed to be a RF sensed switch. It has 3 relays and it may be connected to external mechanical relays. If any RF sensing scheme is added to the circuit, it will cause excessive relay chatter that will not only wear out the relays prematurely, but could cause other failures to external preamplifiers and or power amplifiers if used in your system. RF sensing circuits are not recommended with any circuit that contain mechanical relays at RF frequencies!!

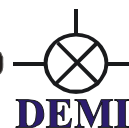

DEM TC Component List


C1 0.01 μ F	C10 2.2 μ F elect.	Q1 PN2222	R9 330 Ω
C2 0.01 μ F	C11 2.2 μ F elect.	R1 220 Ω	R10 5.1K Ω
C3 0.01 μ F	C13 330 μ F elect.	R2 1K pot	R11 5.1K Ω
C4 0.01 μ F	D1 -D6 1N4000	R3 220 Ω	R12 330 Ω
C5 0.01 μ F	IC 1 MAR6 ❶	R4 220 Ω ❸	2 - Red LED
C6 0.01 μ F	K1 G6Y relay	R5 1K Ω	VR1 78S09
C7 0.01 μ F	K2 G5V relay	R6 220 Ω	50 Ω load
C8 0.01 μ F	K3 G5V relay	R7 1K pot	1 pF ❸
C9 100 μ F elect.	L1 1.0 μ h ❷	R8 220 Ω	

- ❶ To by-pass IF gain stage, install 120pF in place of IC1.
- ❷ L1 is used with transceivers that have + DC voltage on RF line during transmit
- ❸ Depending on the drive level used, R4 may be replaced with a short, a 1pF capacitor, or a variable capacitor. See text for description.

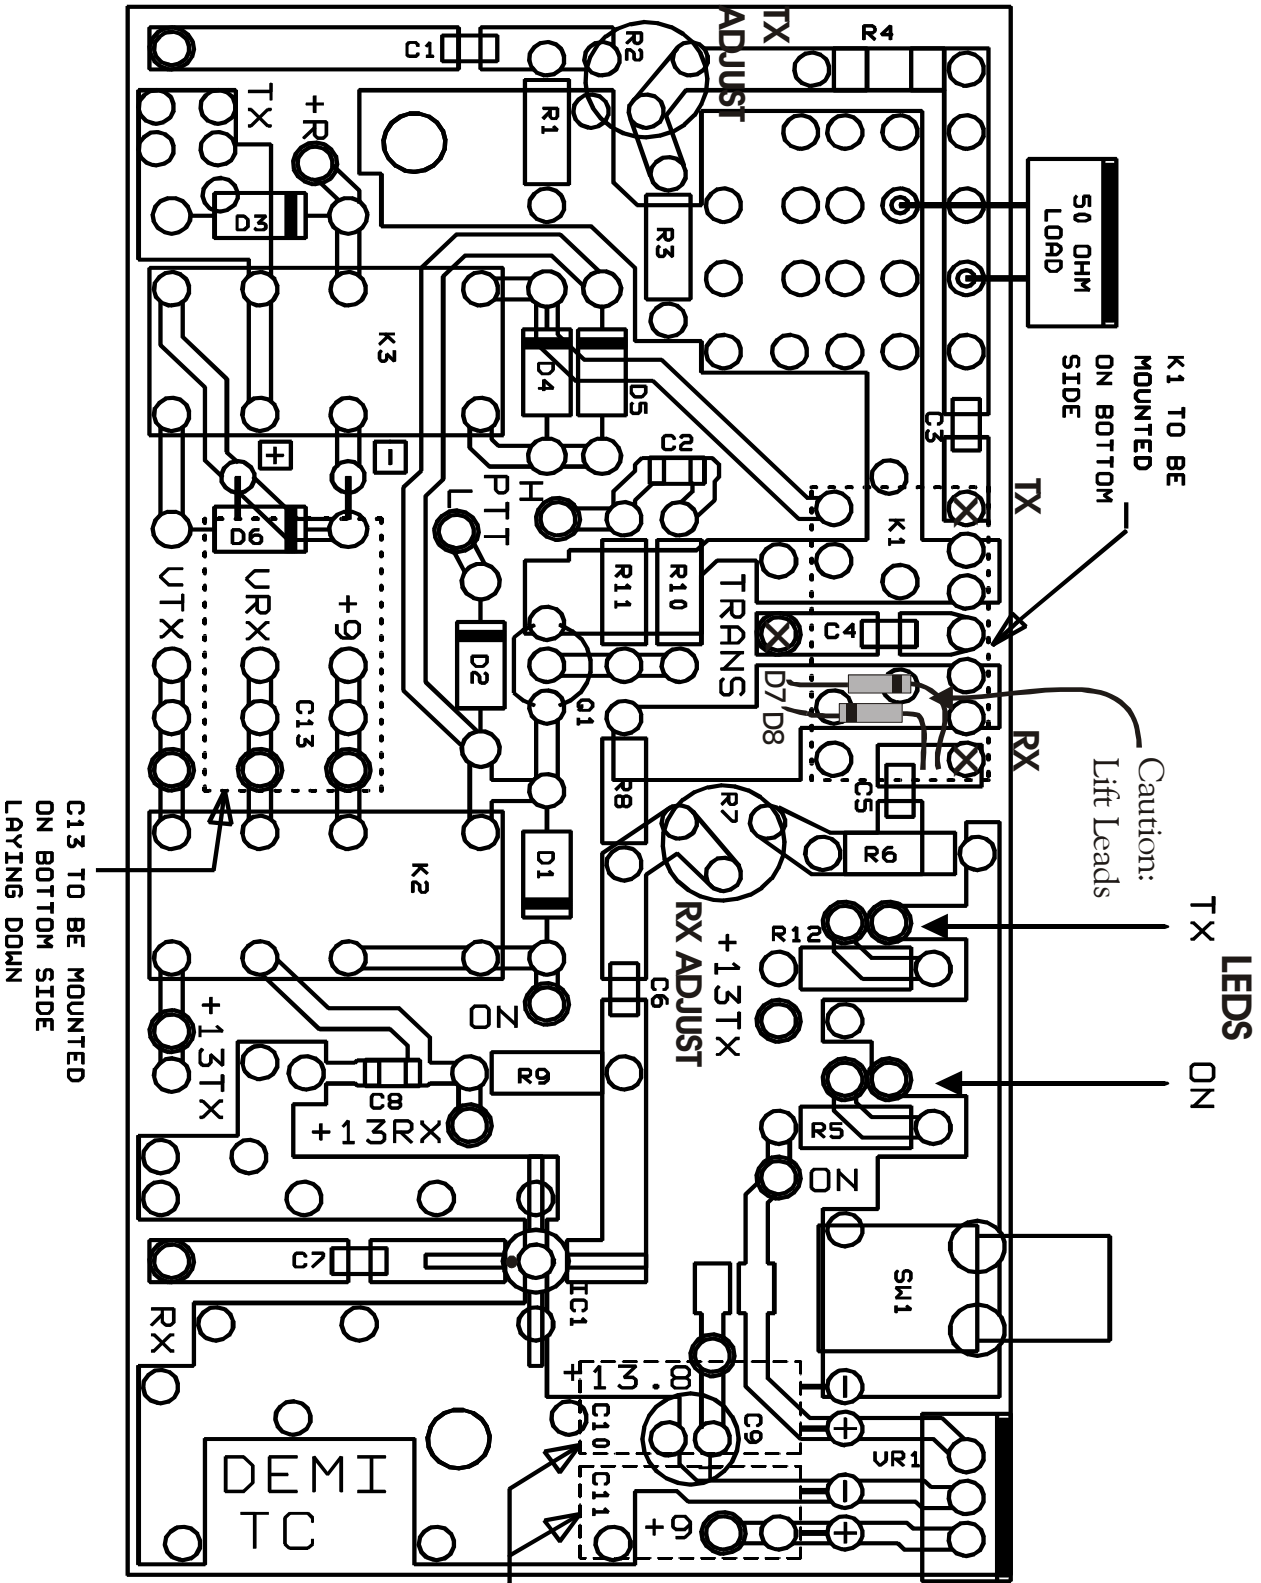


DEMI TC

C10 + C11 TO BE MOUNTED ON BOTTOM SIDE LAYING DOWN

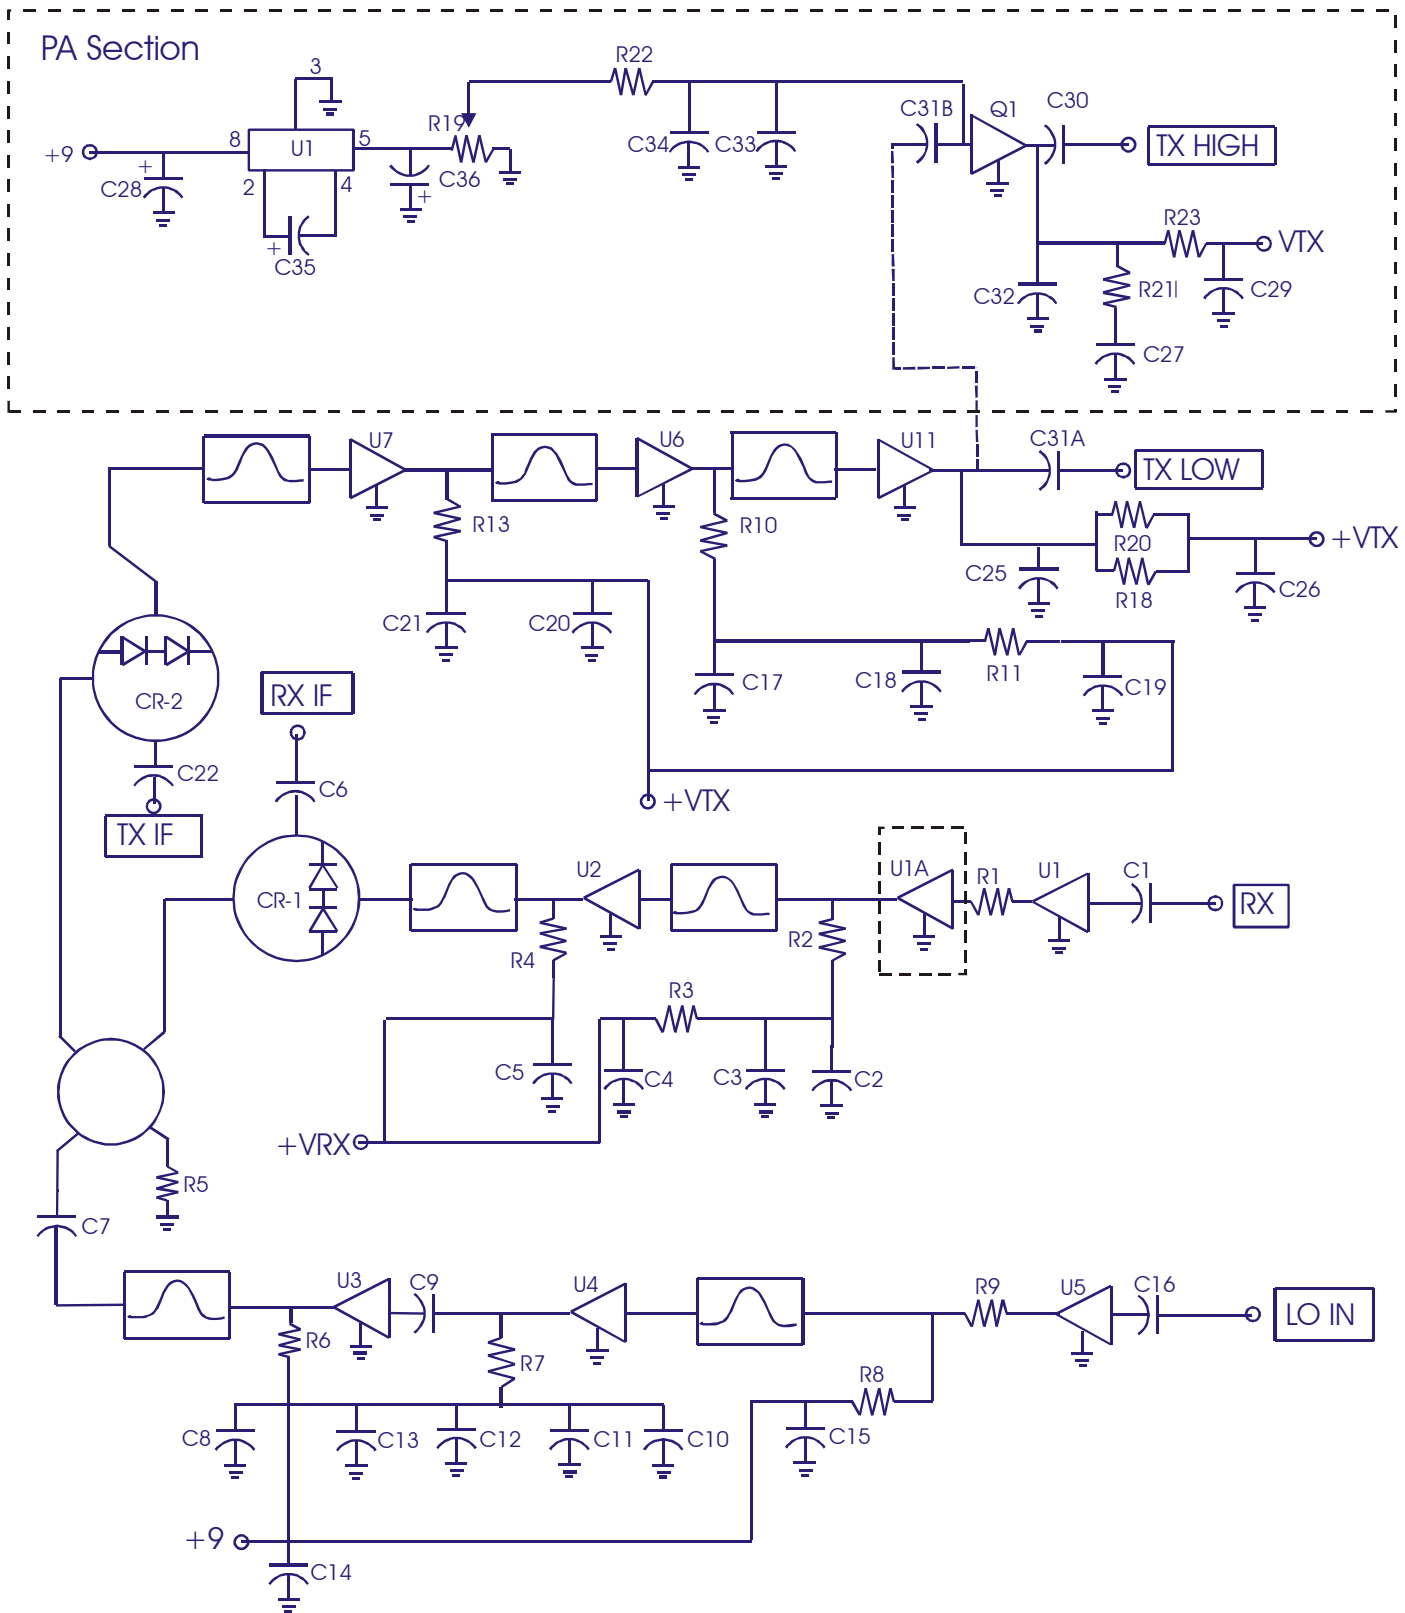

3456-1 44 TRANSVERTER SCHEMATIC

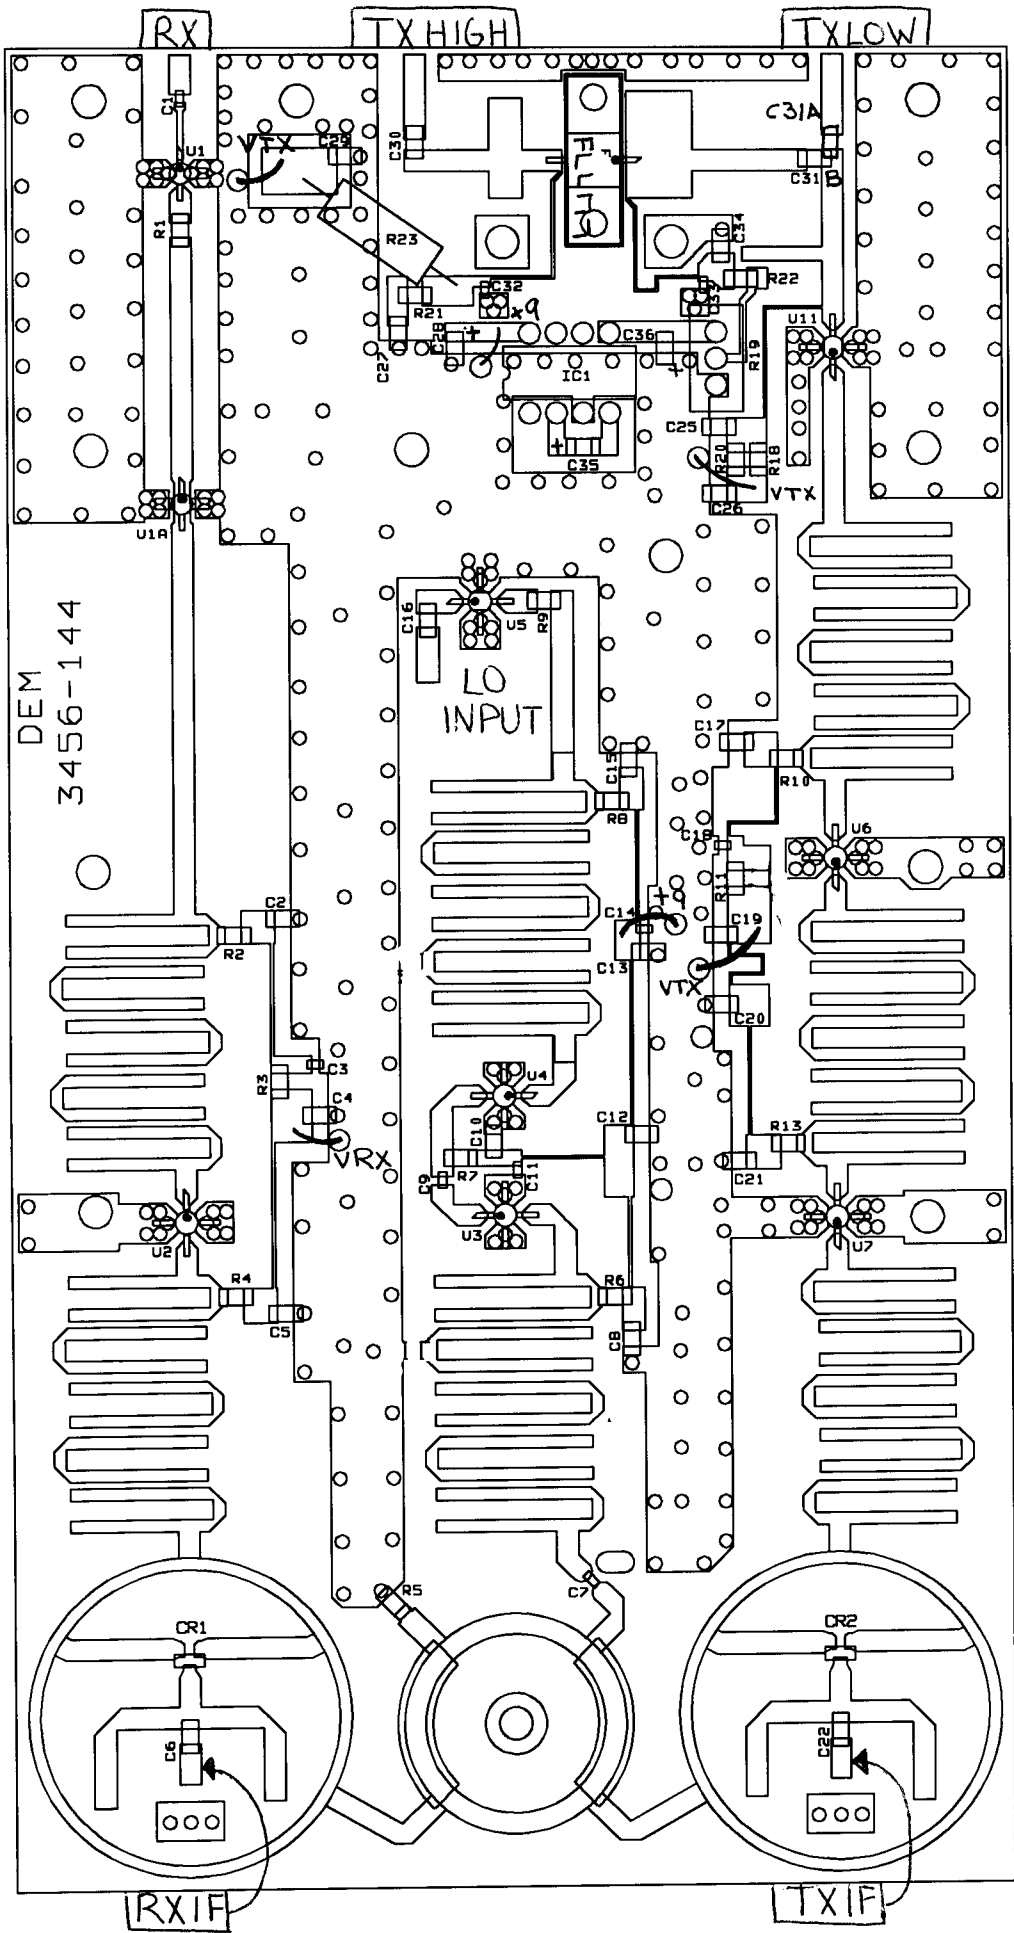

DEM
3456-144

RX

TX HIGH

TX LOW

LO
INPUT

RX IF

TX IF

U1

U1A

U2

U6

D2

D27

D3

D5

D6

D28

D29

D30

D31

D32

D33

D34

D35

D36

D37

D38

D39

D40

D41

D42

D43

D44

D45

D46

D47

D48

D49

D50

D51

D52

D53

D54

D55

D56

D57

D58

D59

D60

D61

D62

D63

D64

D65

D66

D67

D68

D69

D70

D71

D72

D73

D74

D75

D76

D77

D78

D79

D80

D81

D82

D83

D84

D85

D86

D87

D88

D89

D90

D91

D92

D93

D94

D95

D96

D97

D98

D99

D100

D101

D102

D103

D104

D105

D106

D107

D108

D109

D110

D111

D112

D113

D114

D115

D116

D117

D118

D119

D120

D121

D122

D123

D124

D125

D126

D127

D128

D129

D130

D131

D132

D133

D134

D135

D136

D137

D138

D139

D140

D141

D142

D143

D144

D145

D146

D147

D148

D149

D150

D151

D152

D153

D154

D155

D156

D157

D158

D159

D160

D161

D162

D163

D164

D165

D166

D167

D168

D169

D170

D171

D172

D173

D174

D175

D176

D177

D178

D179

D180

D181

D182

D183

D184

D185

D186

D187

D188

D189

D190

D191

D192

D193

D194

D195

D196

D197

D198

D199

D200

D201

D202

D203

D204

D205

D206

D207

D208

D209

D210

D211

D212

D213

D214

D215

D216

D217

D218

D219

D220

D221

D222

D223

D224

D225

D226

D227

D228

D229

D230

D231

D232

D233

D234

D235

D236

D237

D238

D239

D240

D241

D242

D243

D244

D245

D246

D247

D248

D249

D250

D251

D252

D253

D254

D255

D256

D257

D258

D259

D260

D261

D262

D263

D264

D265

D266

D267

D268

D269

D270

D271

D272

D273

D274

D275

D276

D277

D278

D279

D280

D281

D282

D283

D284

D285

D286

D287

D288

D289

D290

D291

D292

D293

D294

D295

D296

D297

D298

D299

D300

D301

D302

D303

D304

D305

D306

D307

D308

D309

D310

D311

D312

D313

D314

D315

D316

D317

D318

D319

D320

D321

D322

D323

D324

D325

D326

D327

D328

D329

D330

D331

D332

D333

D334

D335

D336

D337

D338

D339

D340

D341

D342

D343

D344