

FRB-5A Relay Unit

The **FRB-5A** Relay Unit allows interconnection and operation of the **FTV-1000** with the **FT-1000MP** (original version) or **MARK-V FT-1000MP Field** Transceivers. Besides this unit, you must also purchase the **FP-29** AC Power Supply, available from your Yaesu dealer.

Supplied Items

Connection Unit	1
Double-sided adhesive tape	1
Sponge Sheet	1
Tie Wrap	3
Connection cable A (length: 1 ft./30 cm)	1
Connection cable B (length: 4 ft./1.2 m)	1

Installation & Connections

- ❑ Referring to Figure 1 for the **FT-1000MP** (original version) or Figure 2 for the **MARK-V FT-1000MP Field**, remove the top cover from the transceiver.
- ❑ Referring to Figure 3 for the **FT-1000MP** (original version) or Figure 4 for the **MARK-V FT-1000MP Field**, disconnect the 6-pin connector from **J6808** on the ALC Unit, then connect this 6-pin connector to **J1001** on the Connection Unit.
- ❑ Connect the 6-pin connector from the Connection Unit to **J6808** on the ALC Unit.
- ❑ In the **FT-1000MP** (original version), route the supplied (short) Connection Cable A through the heatsink slit from the rear panel side, then connect it to **J1003** on the Connection Unit. Place this (short) connection cable onto the supplied sponge sheet, and then place this sponge sheet (w/Connection Cable A) into the slot of the heatsink to fix the cable in place (Figure 3).
- ❑ In the **MARK-V FT-1000MP Field**, remove the plastic plate from the rear panel, then insert the connector of the supplied (short) Connection Cable A, from the inside, into the exposed rear-panel cut-out. Connect the other end of Connection Cable A to **J1003** on the Connection Unit (Figure 4).
- ❑ Mount the Connection Unit onto the chassis, using the supplied double-sided adhesive tape, then bundle the cables using the supplied Cable Ties.
- ❑ Replace the top cover and its nine screws.
- ❑ Referring to Figure 5 for the **FT-1000MP** (original version) or Figure 6 for the **MARK-V FT-1000MP Field**, Connect the supplied (long) Connection Cable B between the 2-pin connector of the (short) connection cable A and the **DC POWER OUTPUT** Jack on the **FTV-1000**. Connect other connection cables according to the illustration.

Operation

Operation is basically the same as when the **FTV-1000** is operated with the **MARK-V FT-1000MP**. Please read the **FTV-1000** operating manual for details regarding operation.

! The **FP-29** AC power supply must be kept on while operating. When you turn the **FP-29** AC power supply off, the PA Unit of the transceiver will be disabled automatically.

Note: Some versions of the **FT-1000MP** (original version) have a **TRV** switch on the ALC Unit. Make sure that the **TRV** switch is set to the "NORM" position.

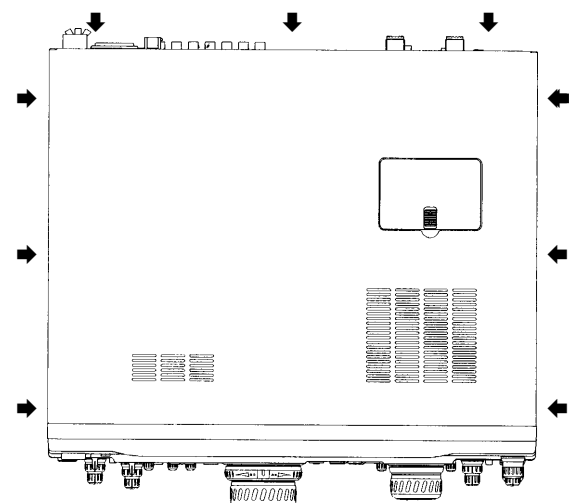


Figure 1 (FT-1000MP original version)

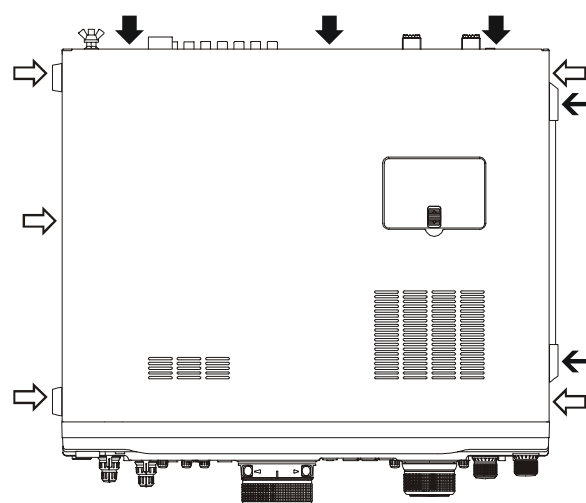


Figure 2 (MARK-V FT-1000MP Field)

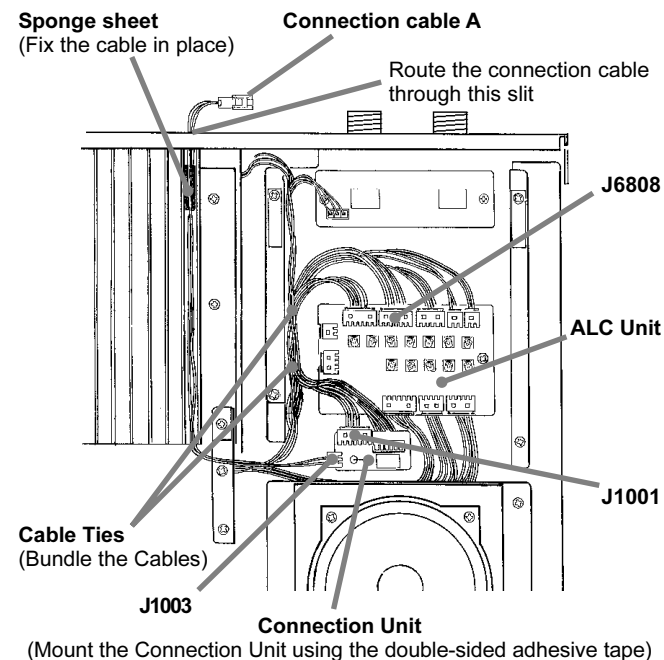


Figure 3 (FT-1000MP original version)

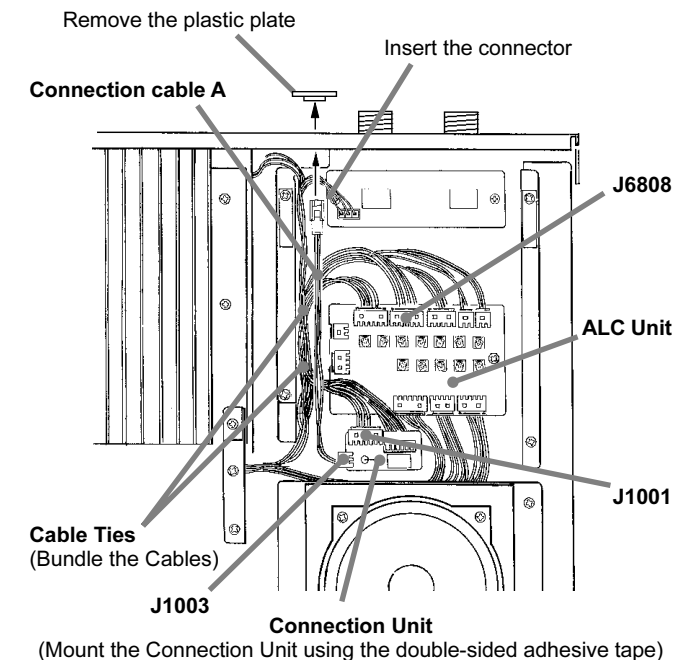


Figure 4 (MARK-V FT-1000MP Field)

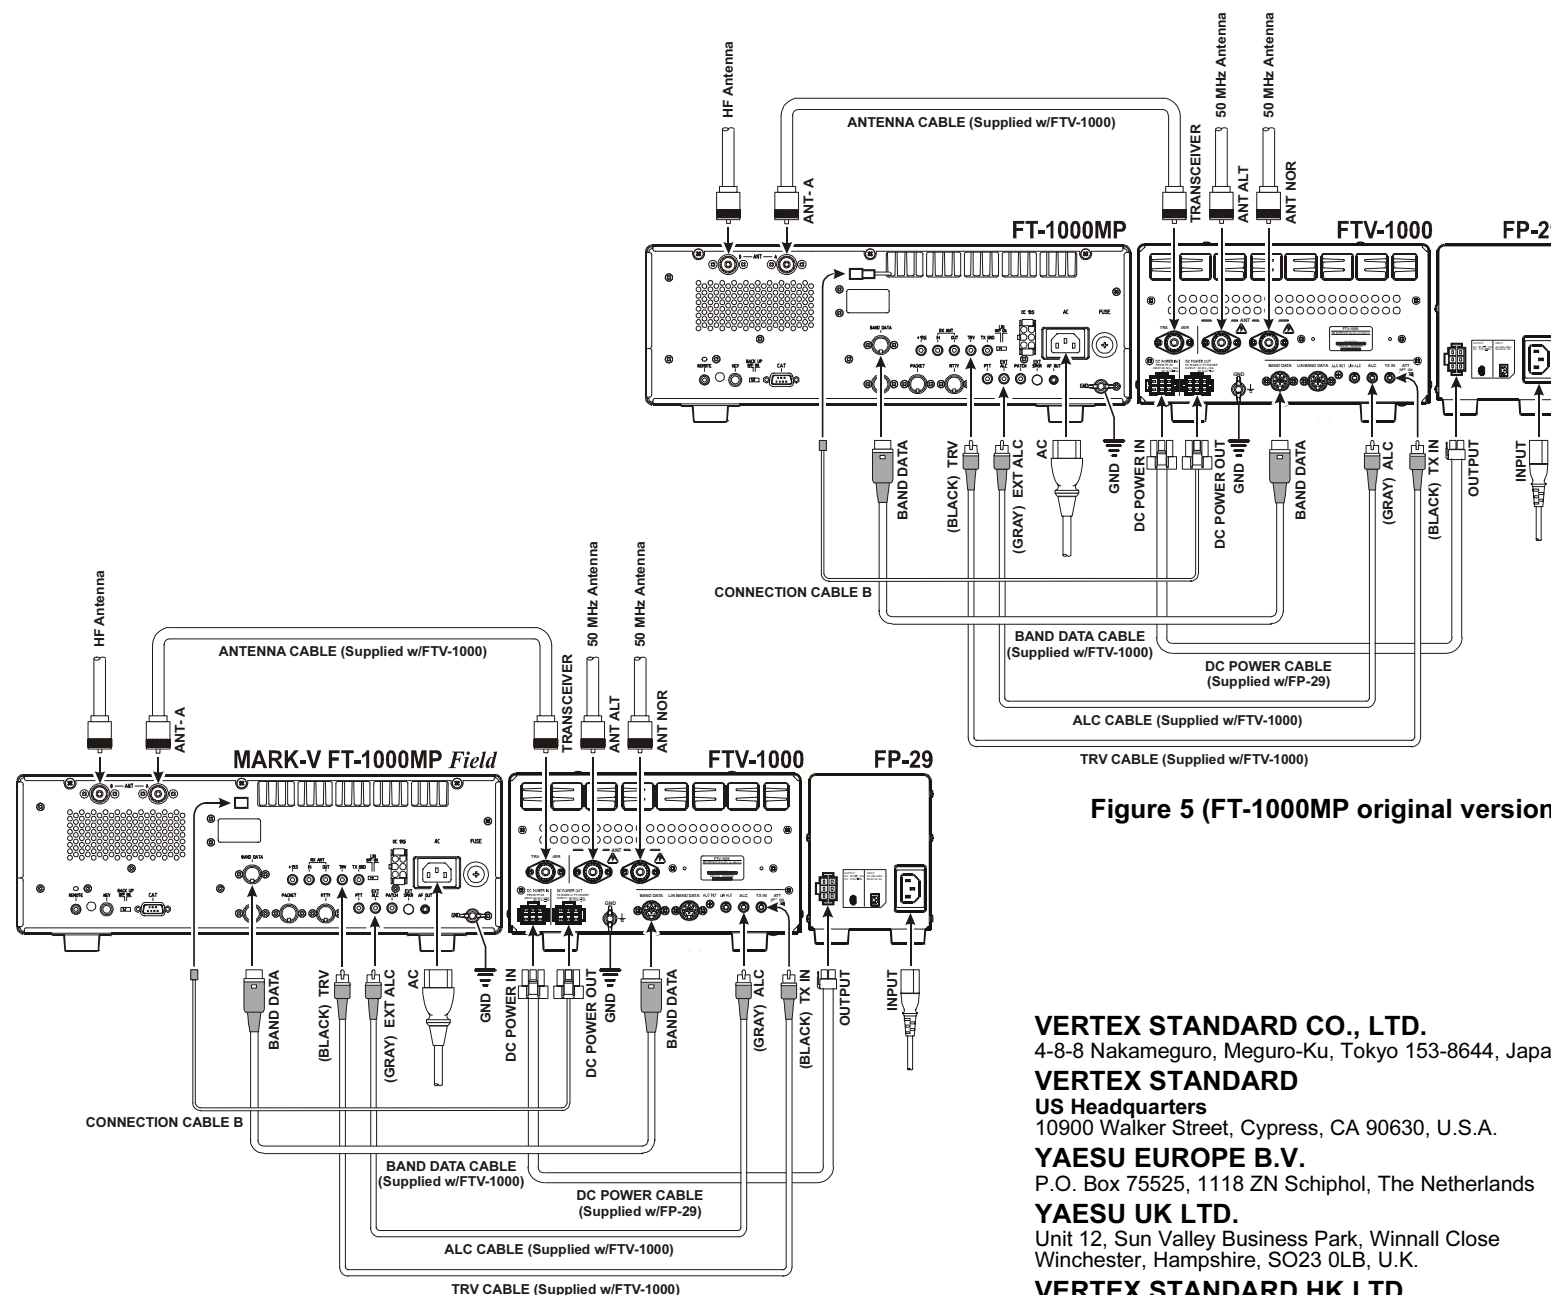


Figure 5 (FT-1000MP original version)

Figure 6 (MARK-V FT-1000MP Field)



VERTEX STANDARD CO., LTD.
 4-8-8 Nakameguro, Meguro-Ku, Tokyo 153-8644, Japan
VERTEX STANDARD
 US Headquarters
 10900 Walker Street, Cypress, CA 90630, U.S.A.
YAESU EUROPE B.V.
 P.O. Box 75525, 1118 ZN Schiphol, The Netherlands
YAESU UK LTD.
 Unit 12, Sun Valley Business Park, Winnall Close
 Winchester, Hampshire, SO23 0LB, U.K.
VERTEX STANDARD HK LTD.
 Unit 5, 20/F., Seaview Centre, 139-141 Hoi Bun Road,
 Kwun Tong, Kowloon, Hong Kong