


Receive and Transmit Expansion

ICOM
IC-R10

Expansion Range

800 MHz restore

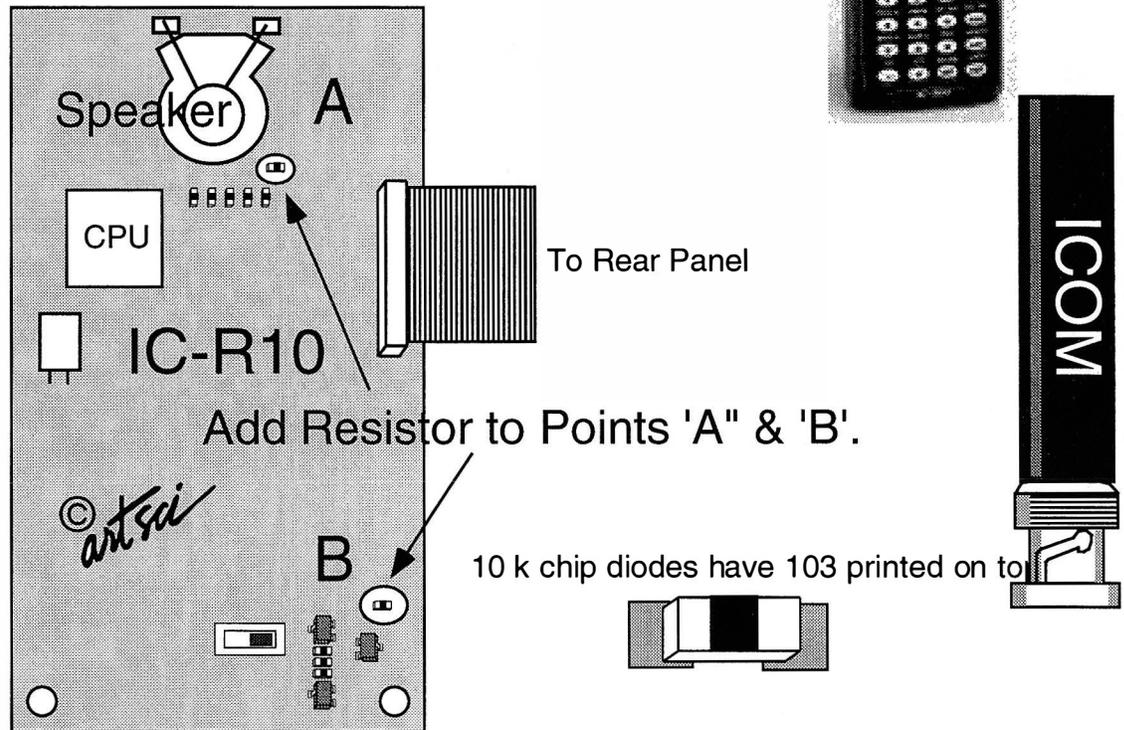

Expanded RF Modification

1. Remove battery and antenna.
2. Remove screws open case.
3. Locate logic board.
4. **Add 10k resistors to pads 'A' & 'B'.**
5. Reset the microprocessor. (see user manual)
6. Reassemble the radio.

CAUTION:

This modification requires soldering or desoldering CMOS components. It requires special CMOS rated equipment and familiarity with surface mount soldering techniques.

Radio/Tech Modifications Volume A

Photocopies are a violation of copyright law. © artsci inc. all rights reserved.
Have the original book with you when you call with a question. **Use at your own Risk!**
The Author and all other parties take no responsibility for any damages or violations caused by these modifications. Some modifications may violate FCC rules.
(818) 843-4080 12-4 PST • www.artscipub.com • artsci@artscipub.com

© artsci

ICOM - 77