




SECTION 10

BLOCK DIAGRAM

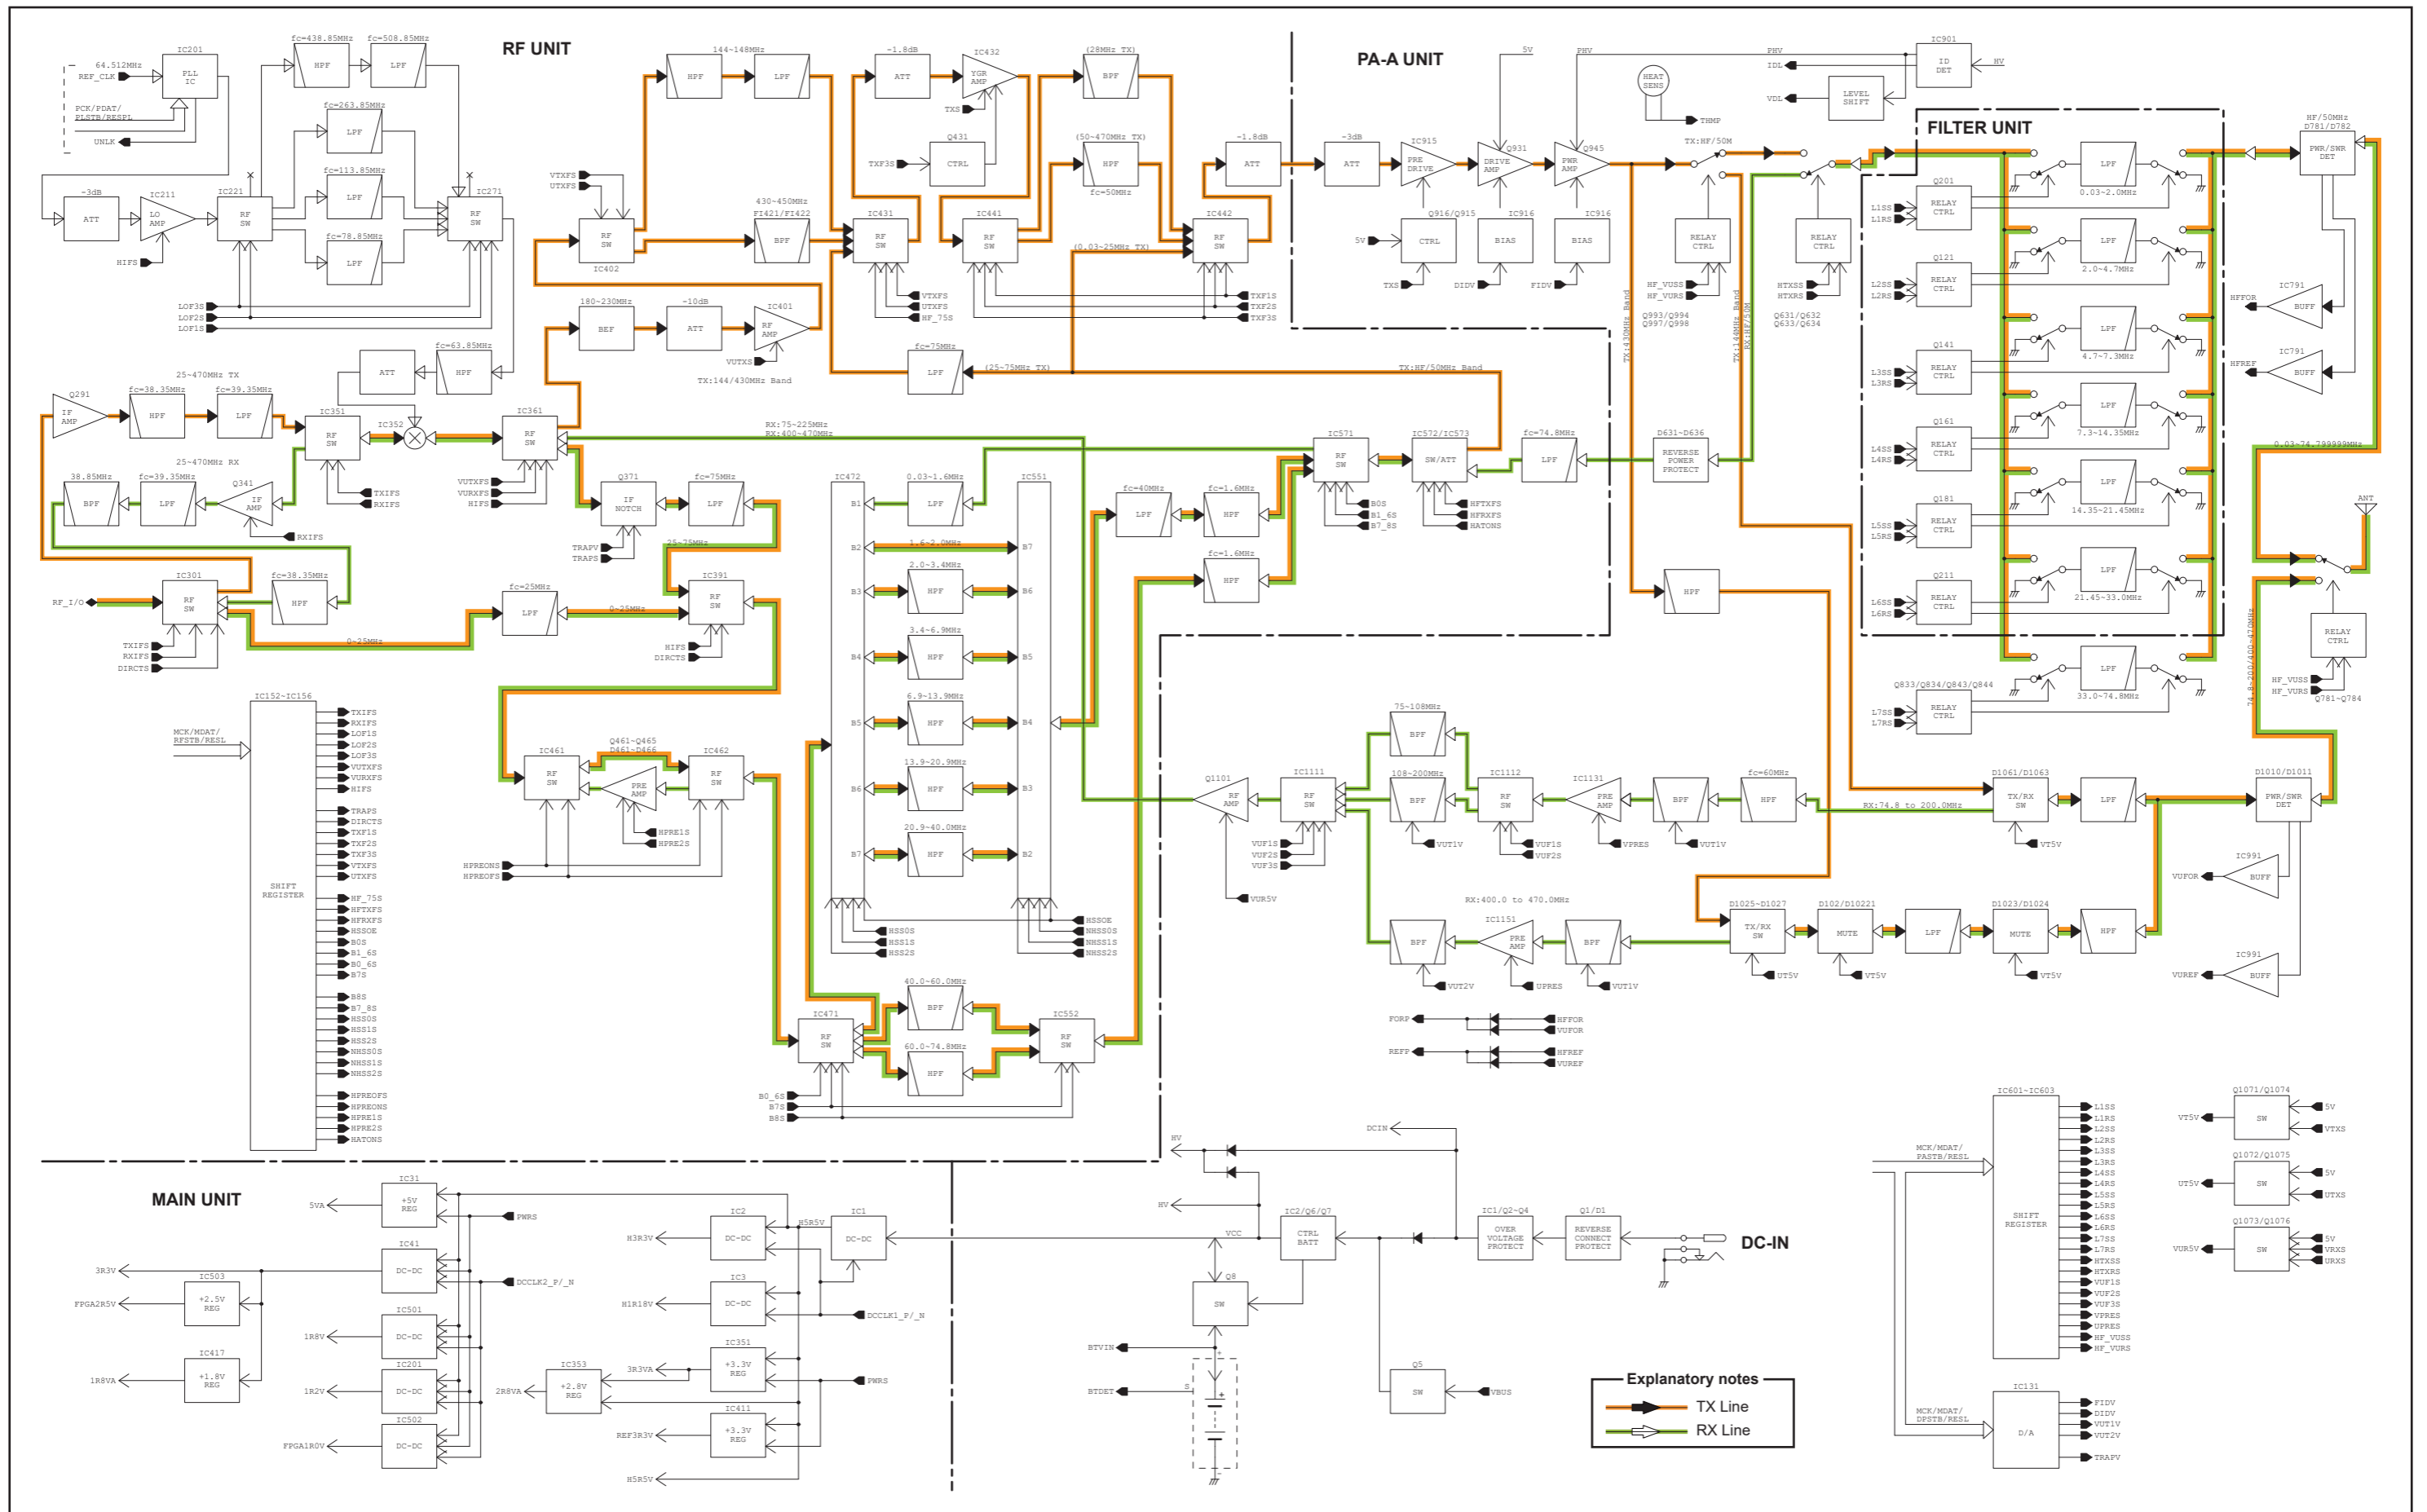

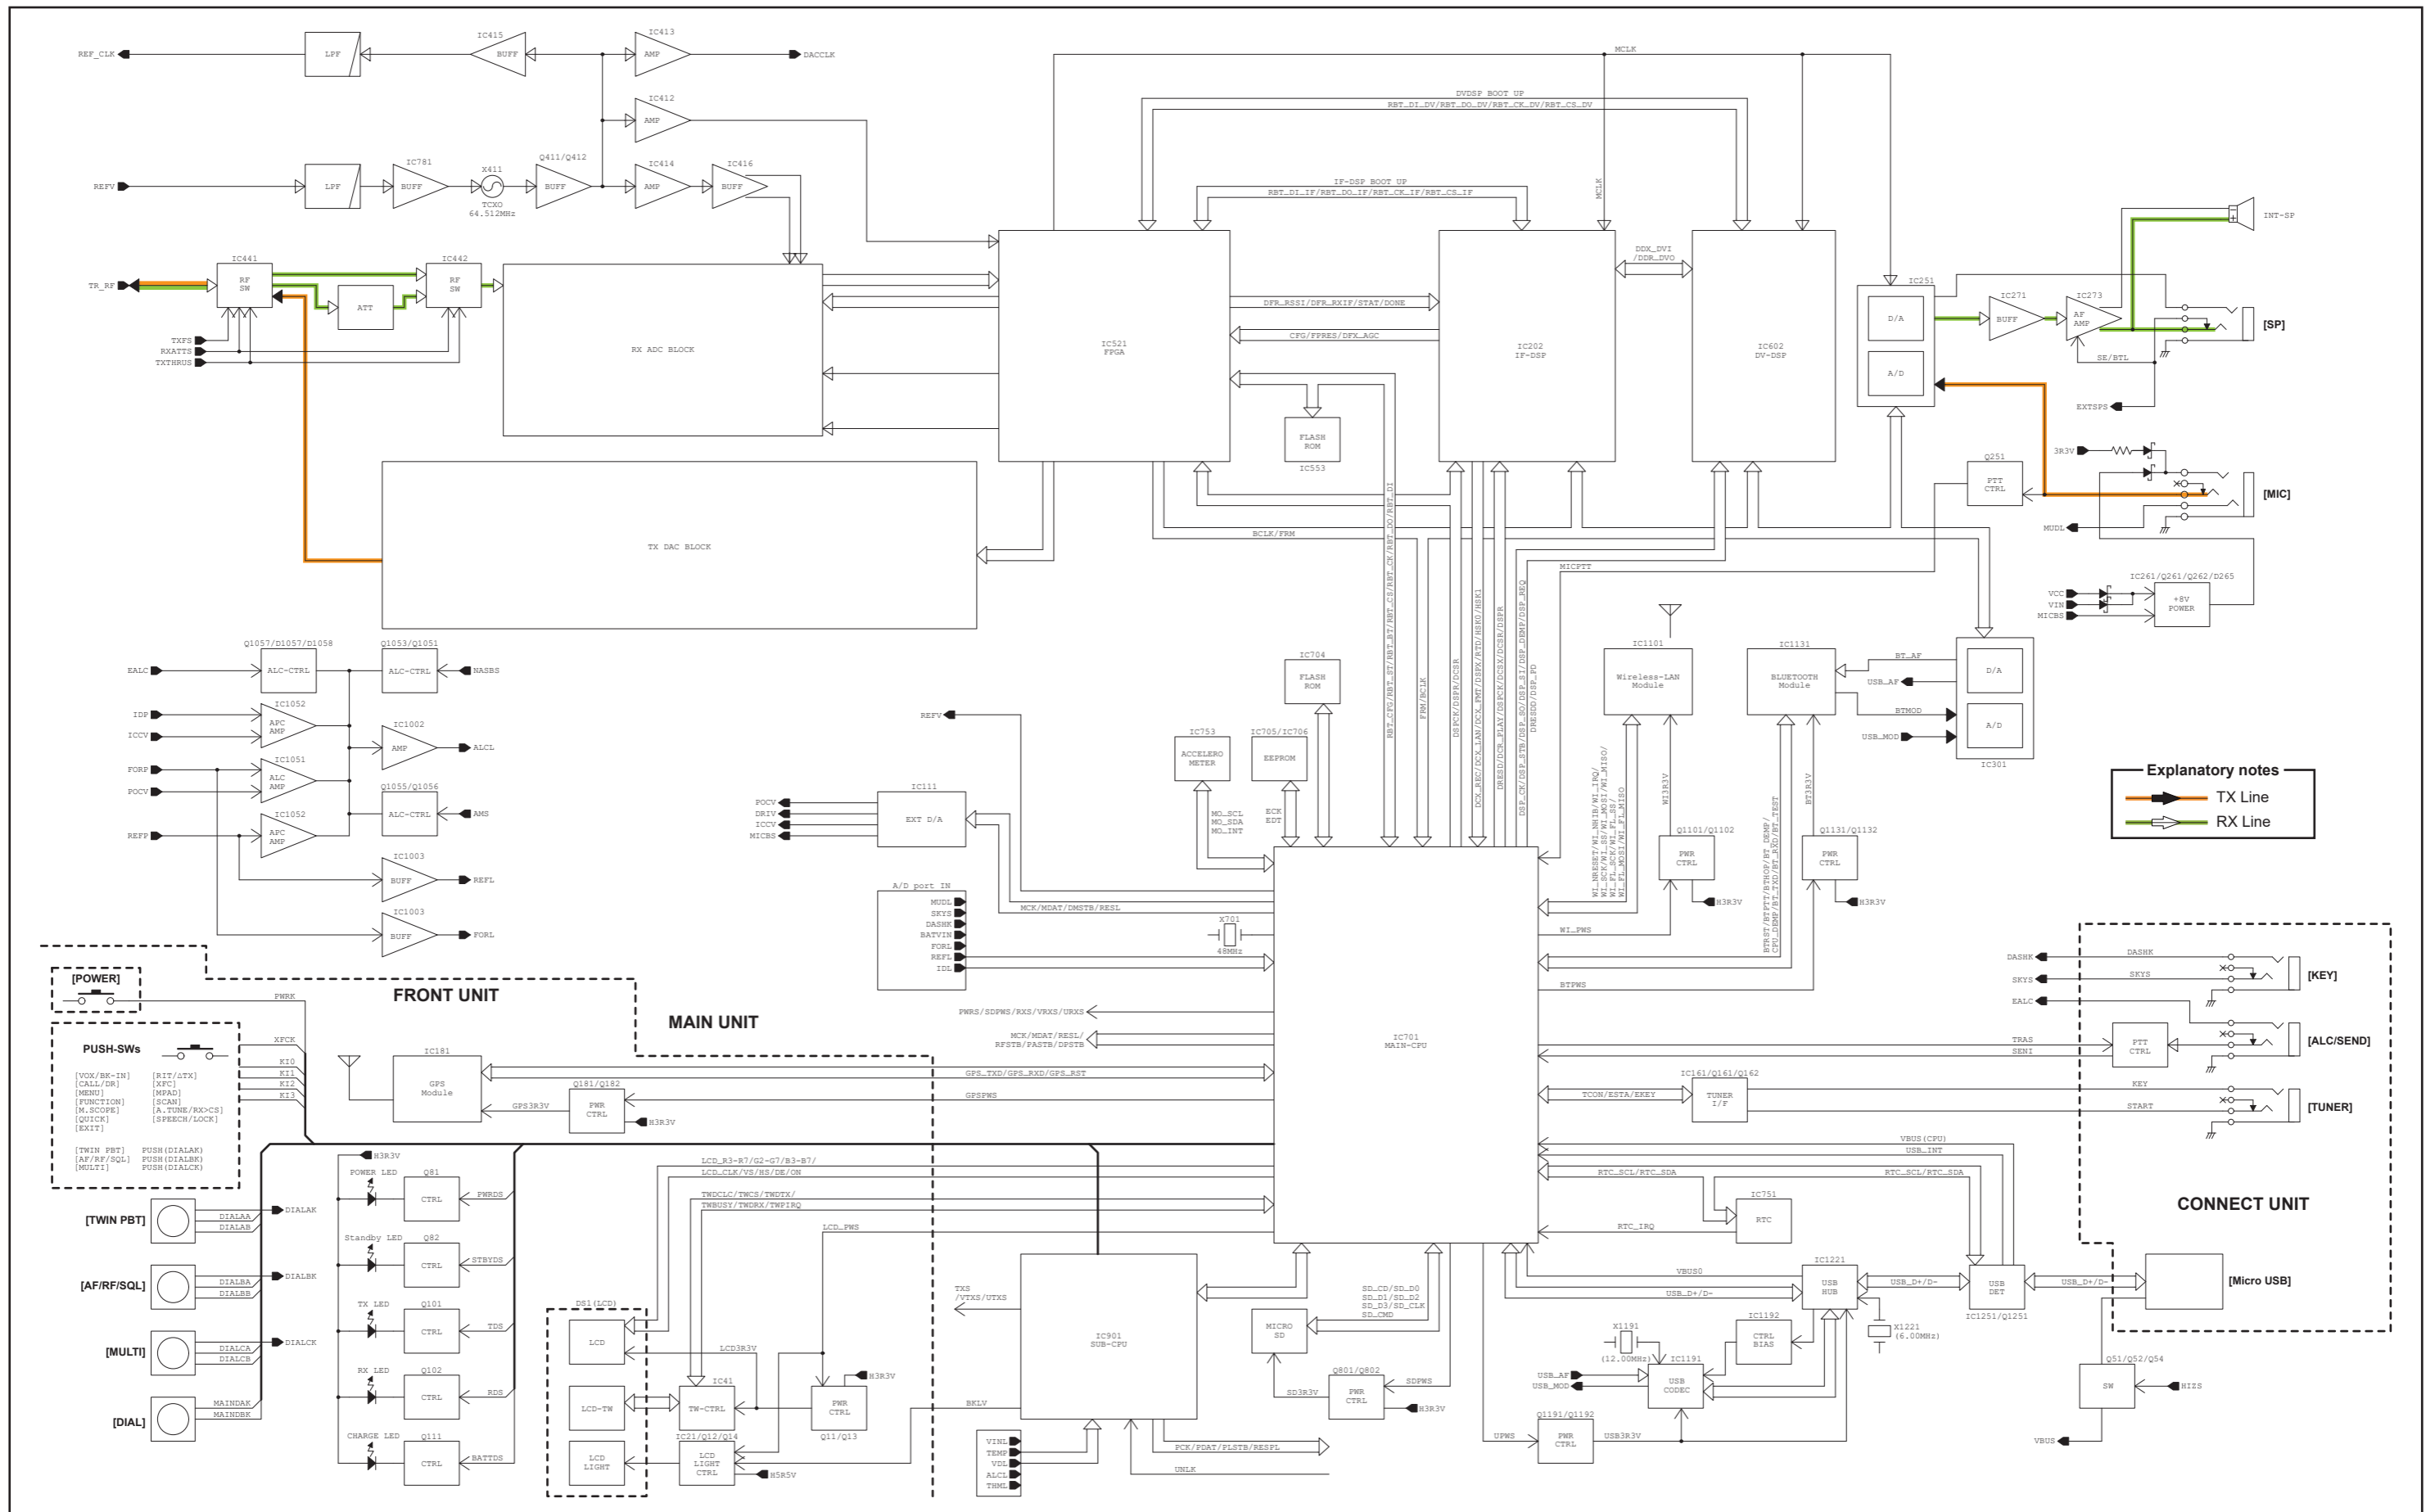


• DISPLAY UNIT

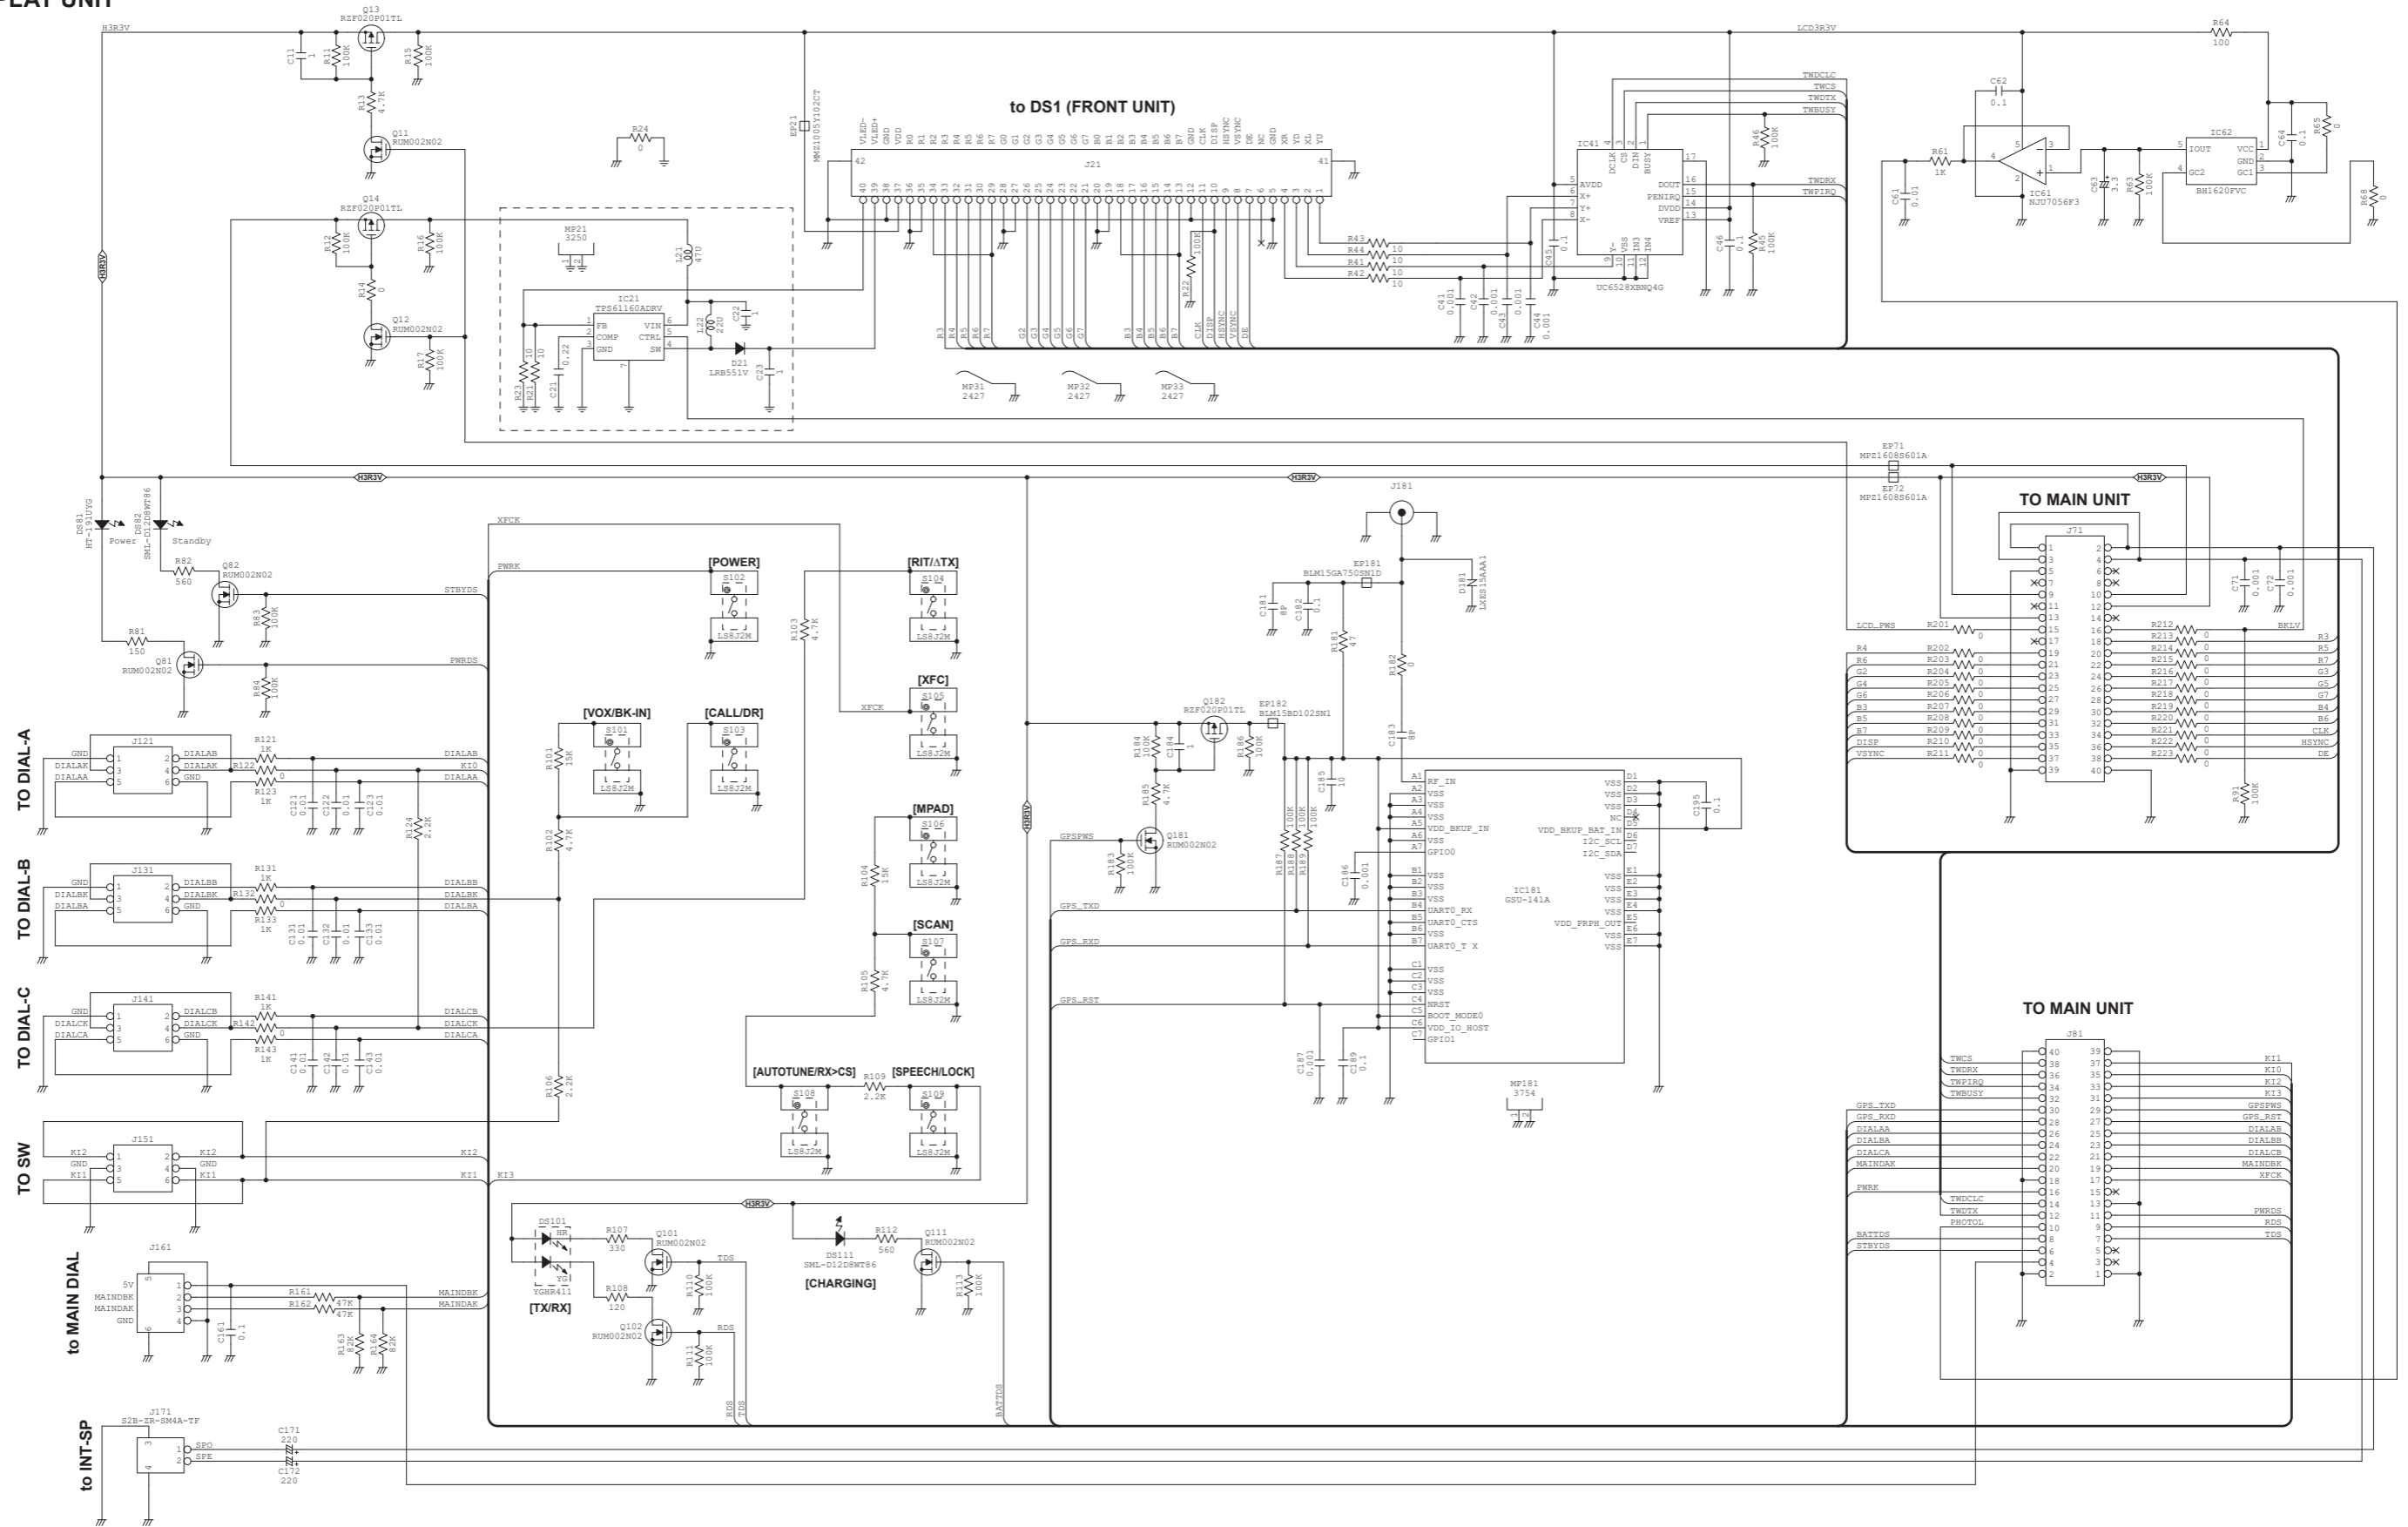


• FRONT UNIT


• DIAL-A UNIT

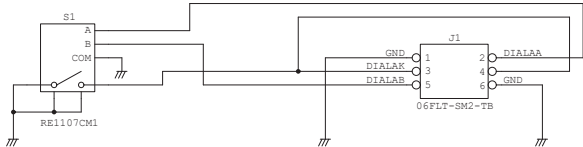


• DIAL-B UNIT

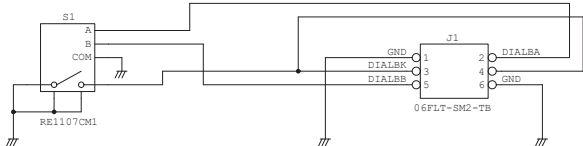


• DIAL-C UNIT

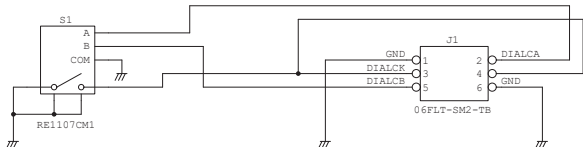


• MAIN UNIT (1/8)

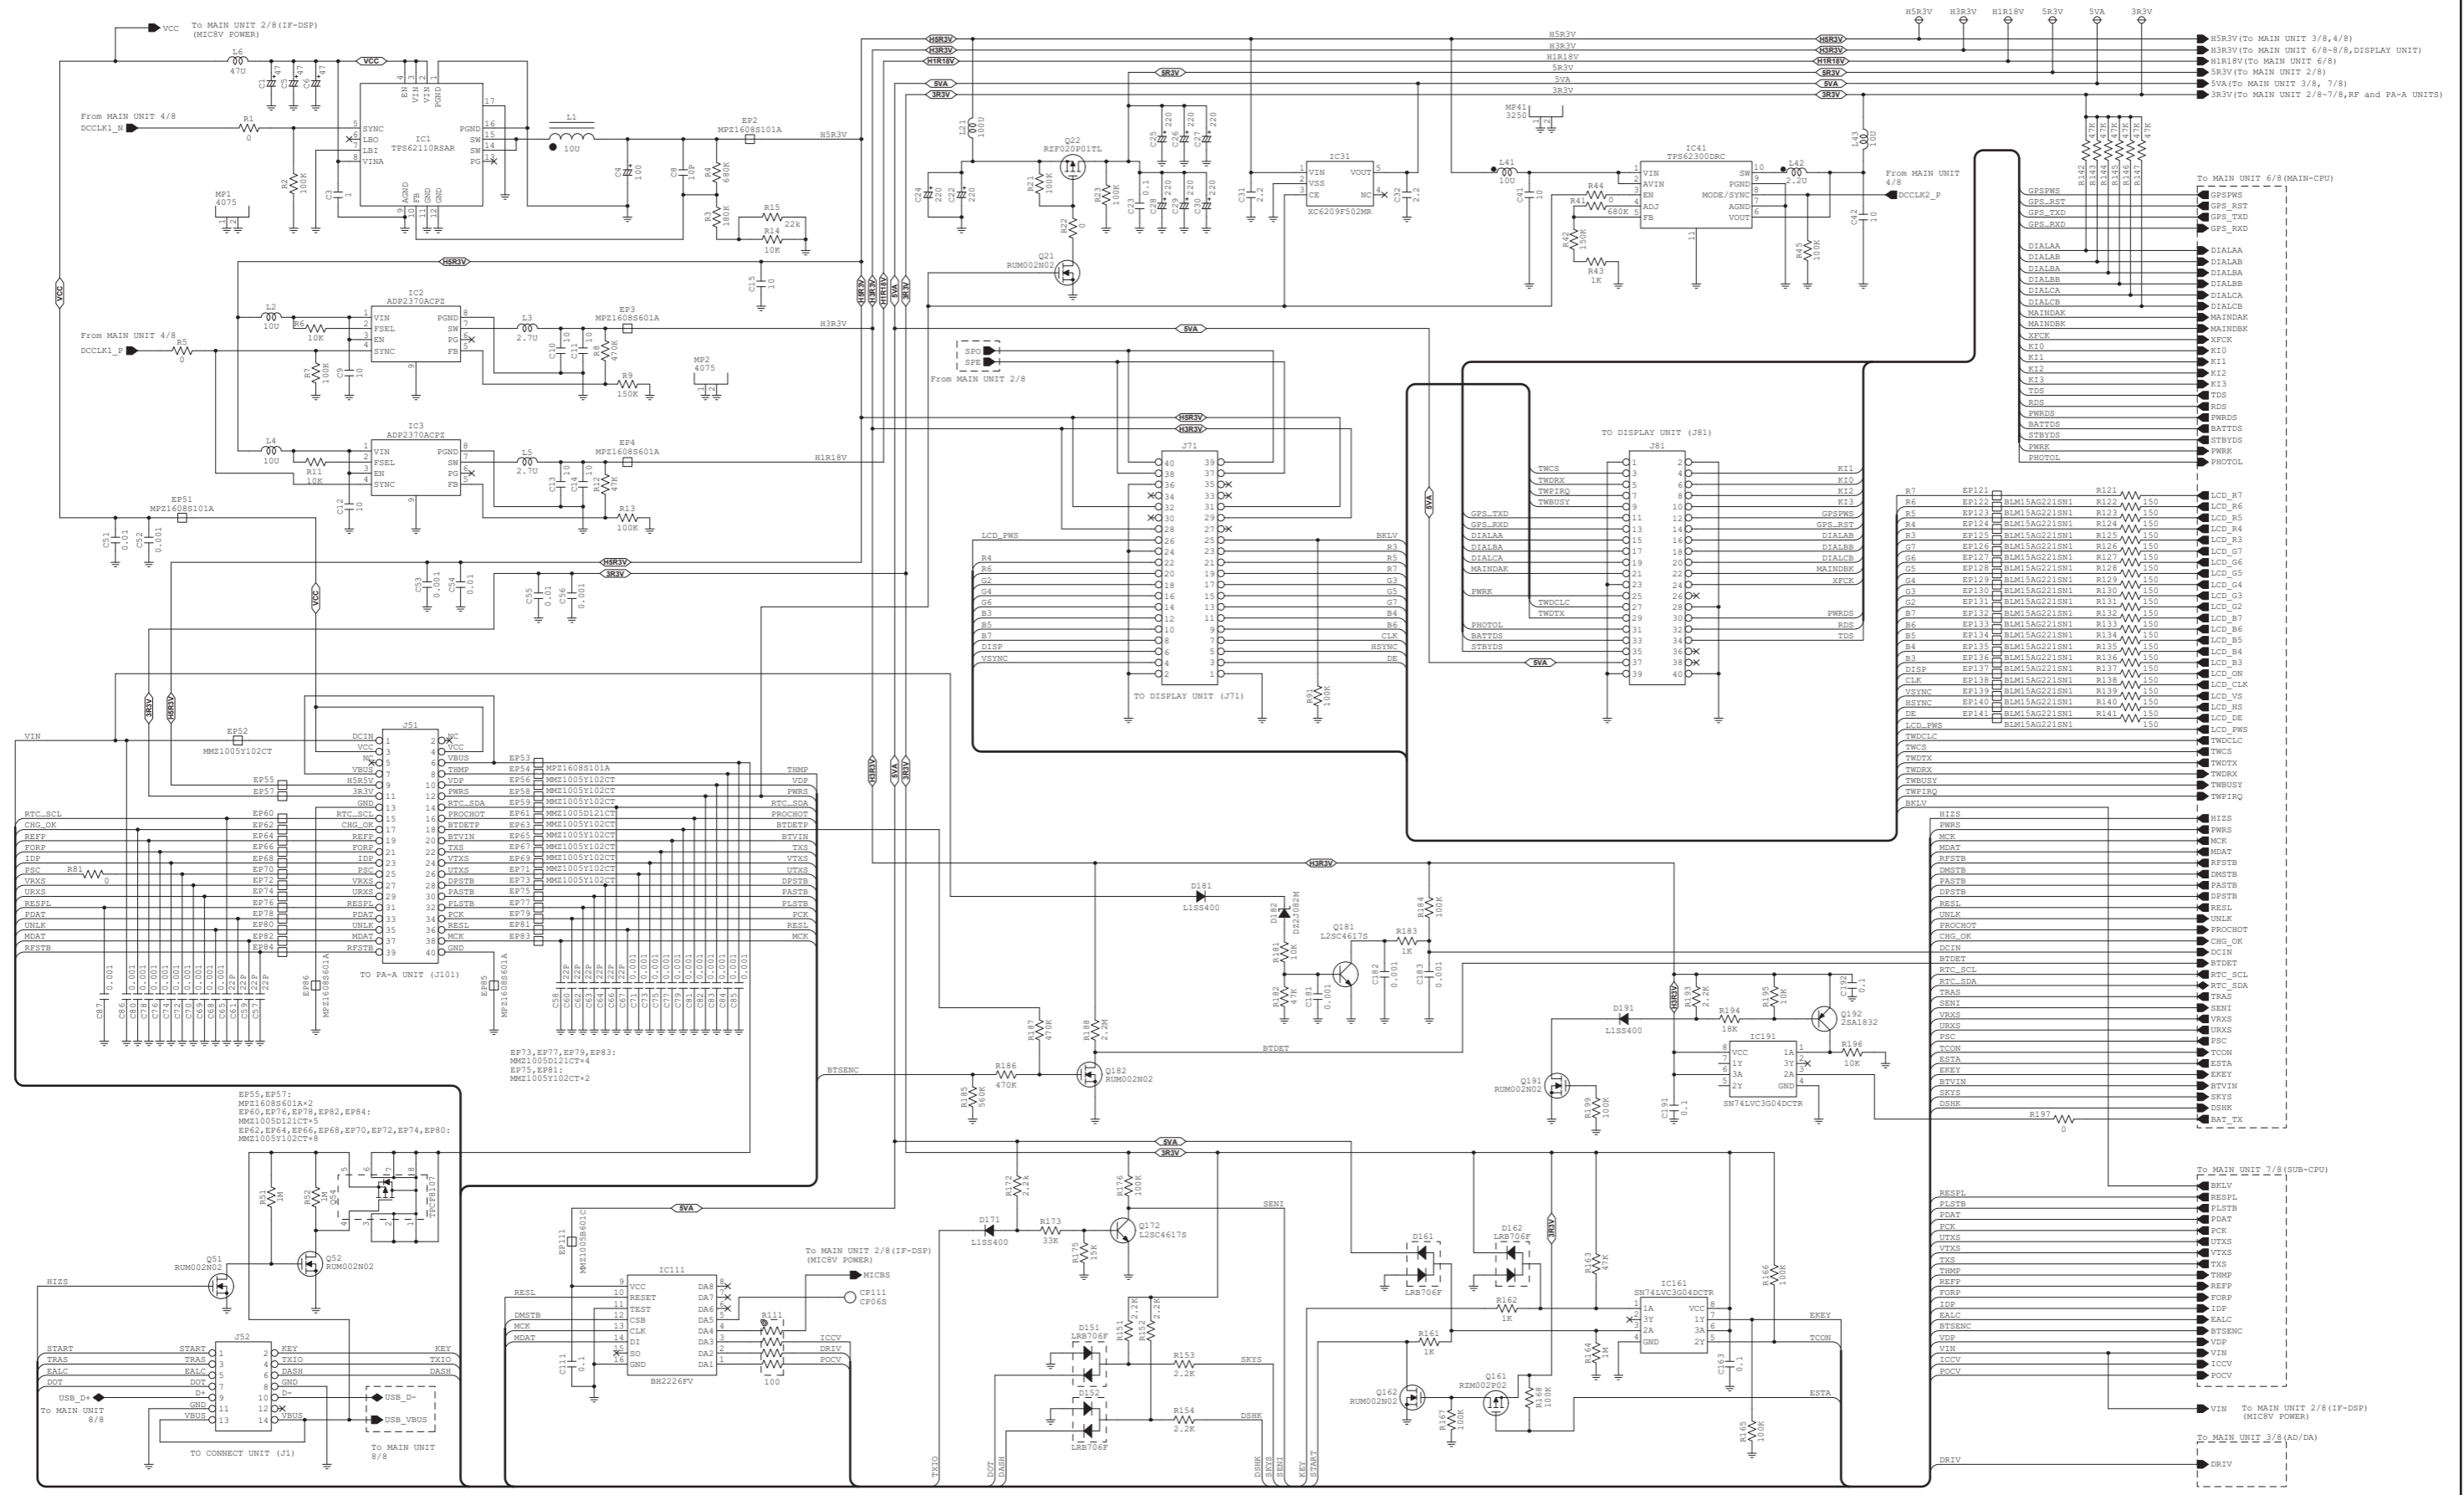


• MAIN UNIT (2/8)

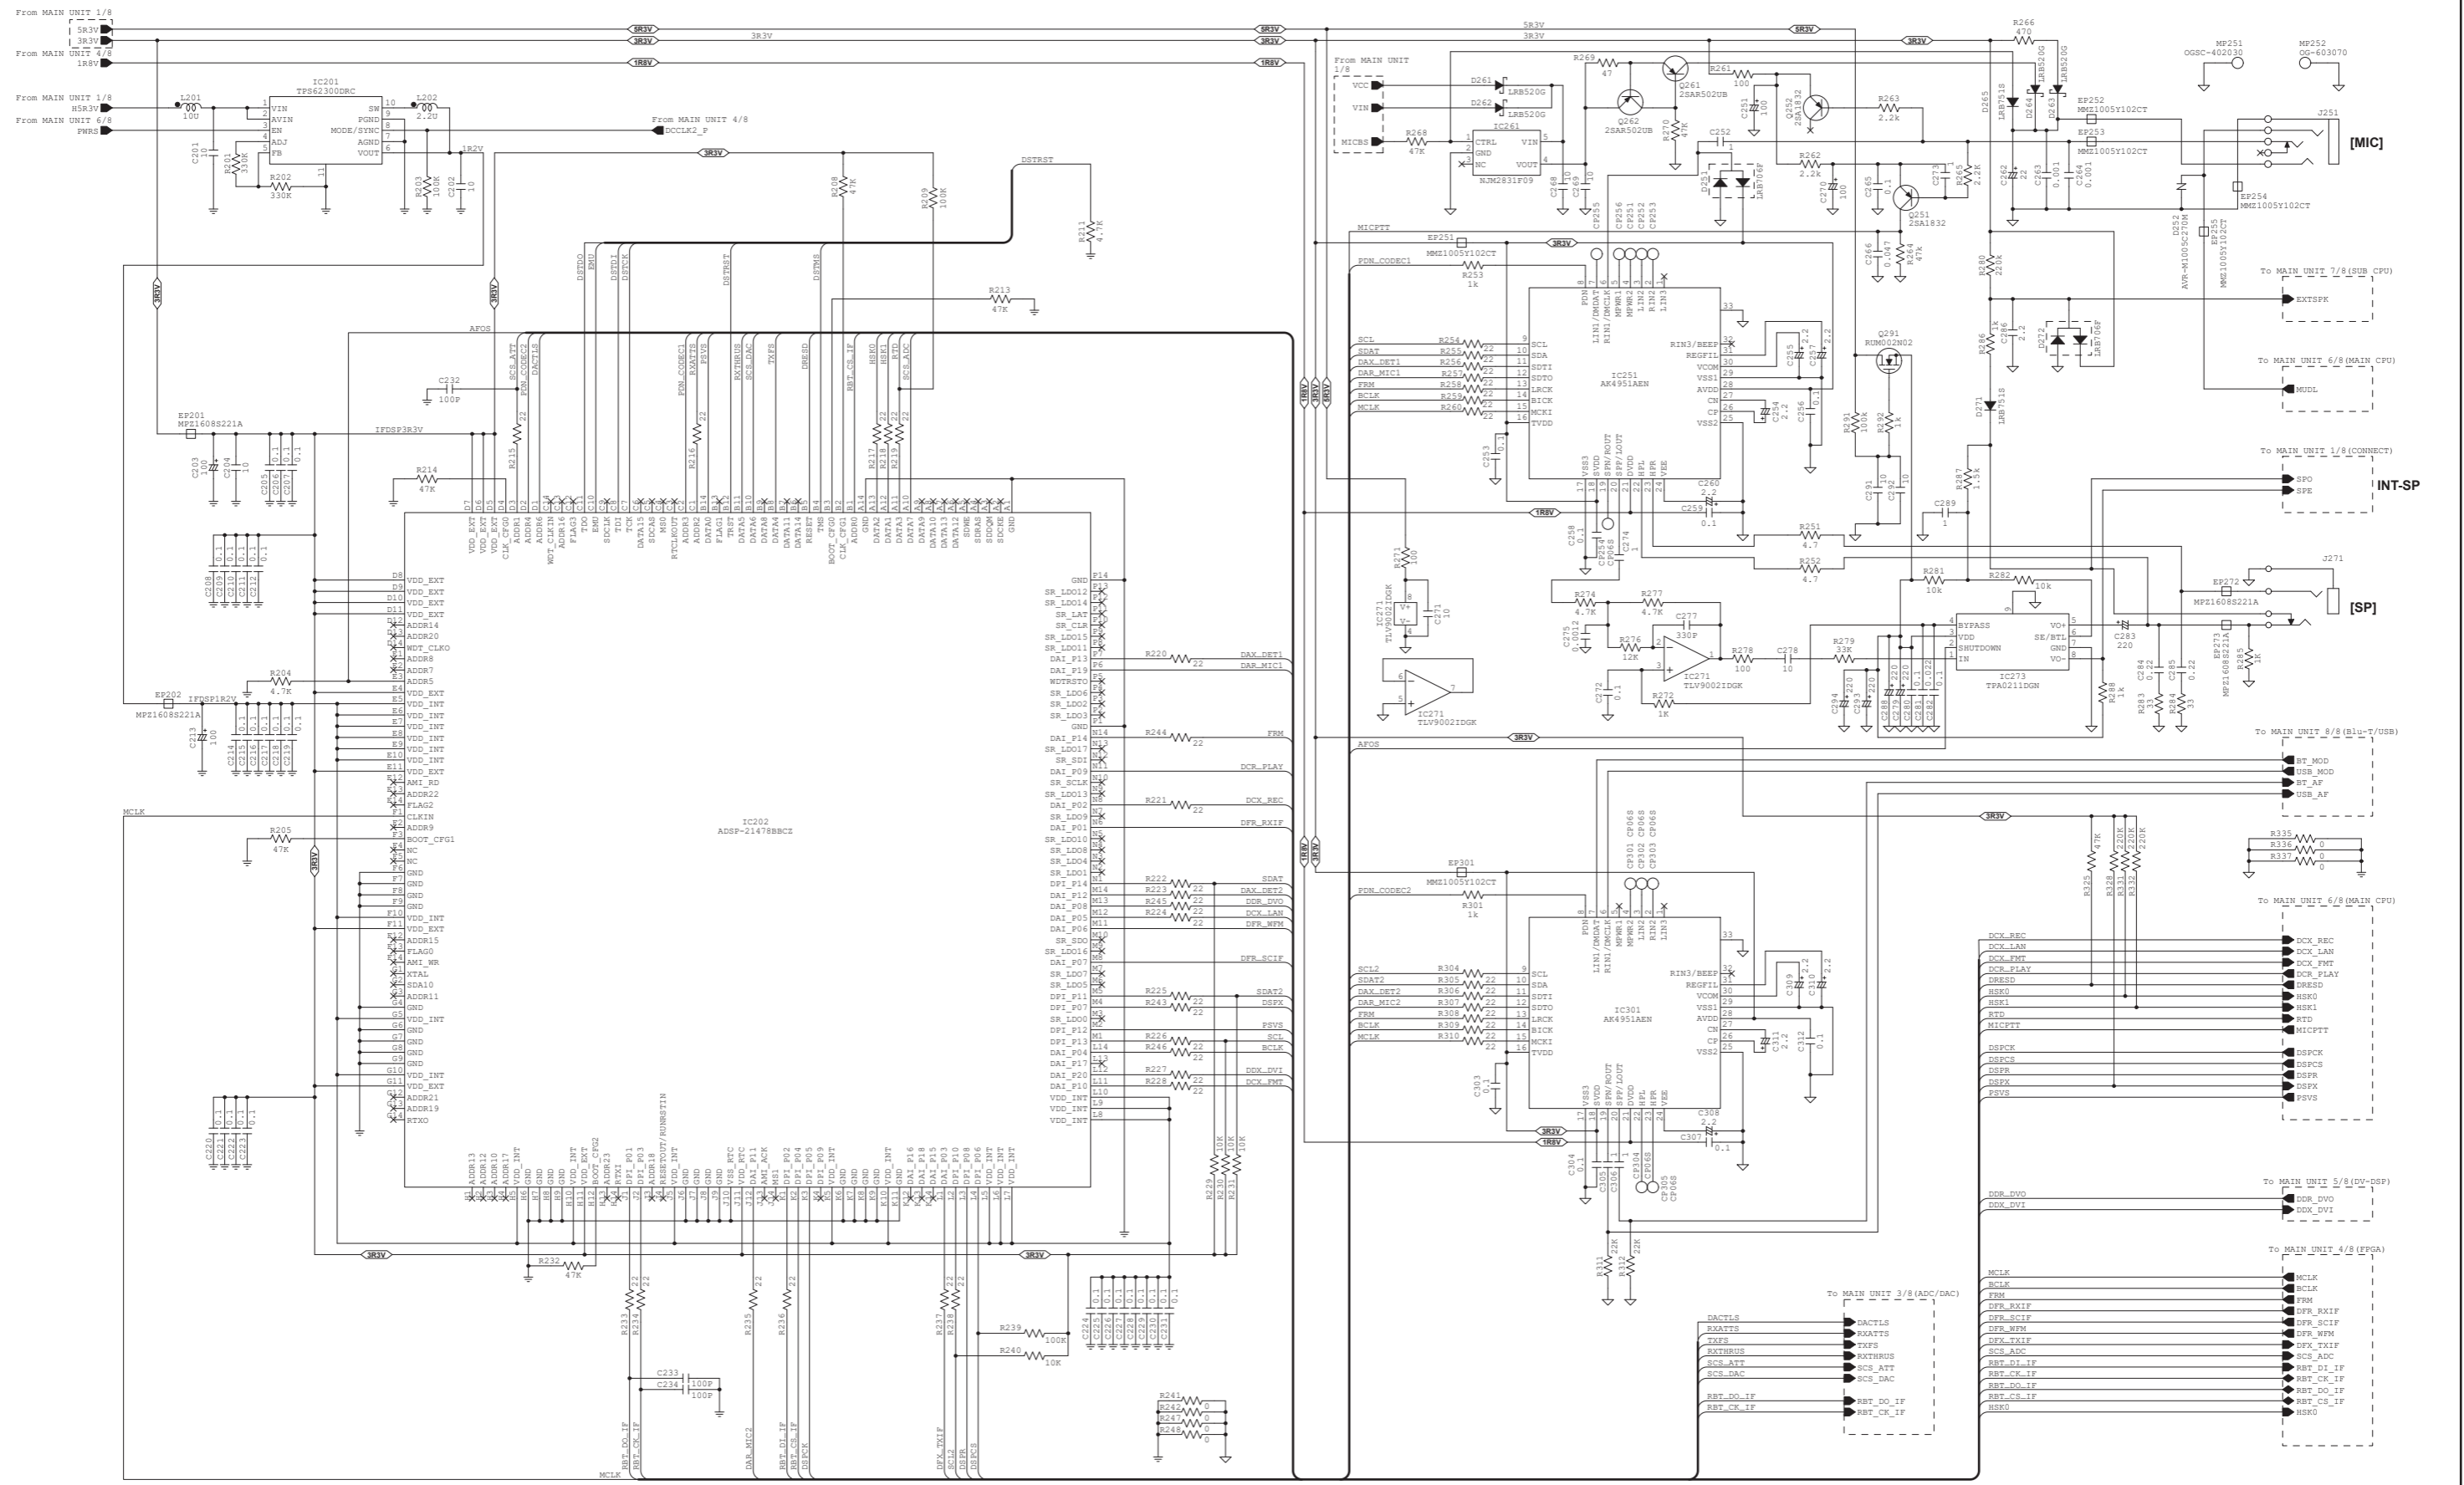


• MAIN UNIT (3/8)

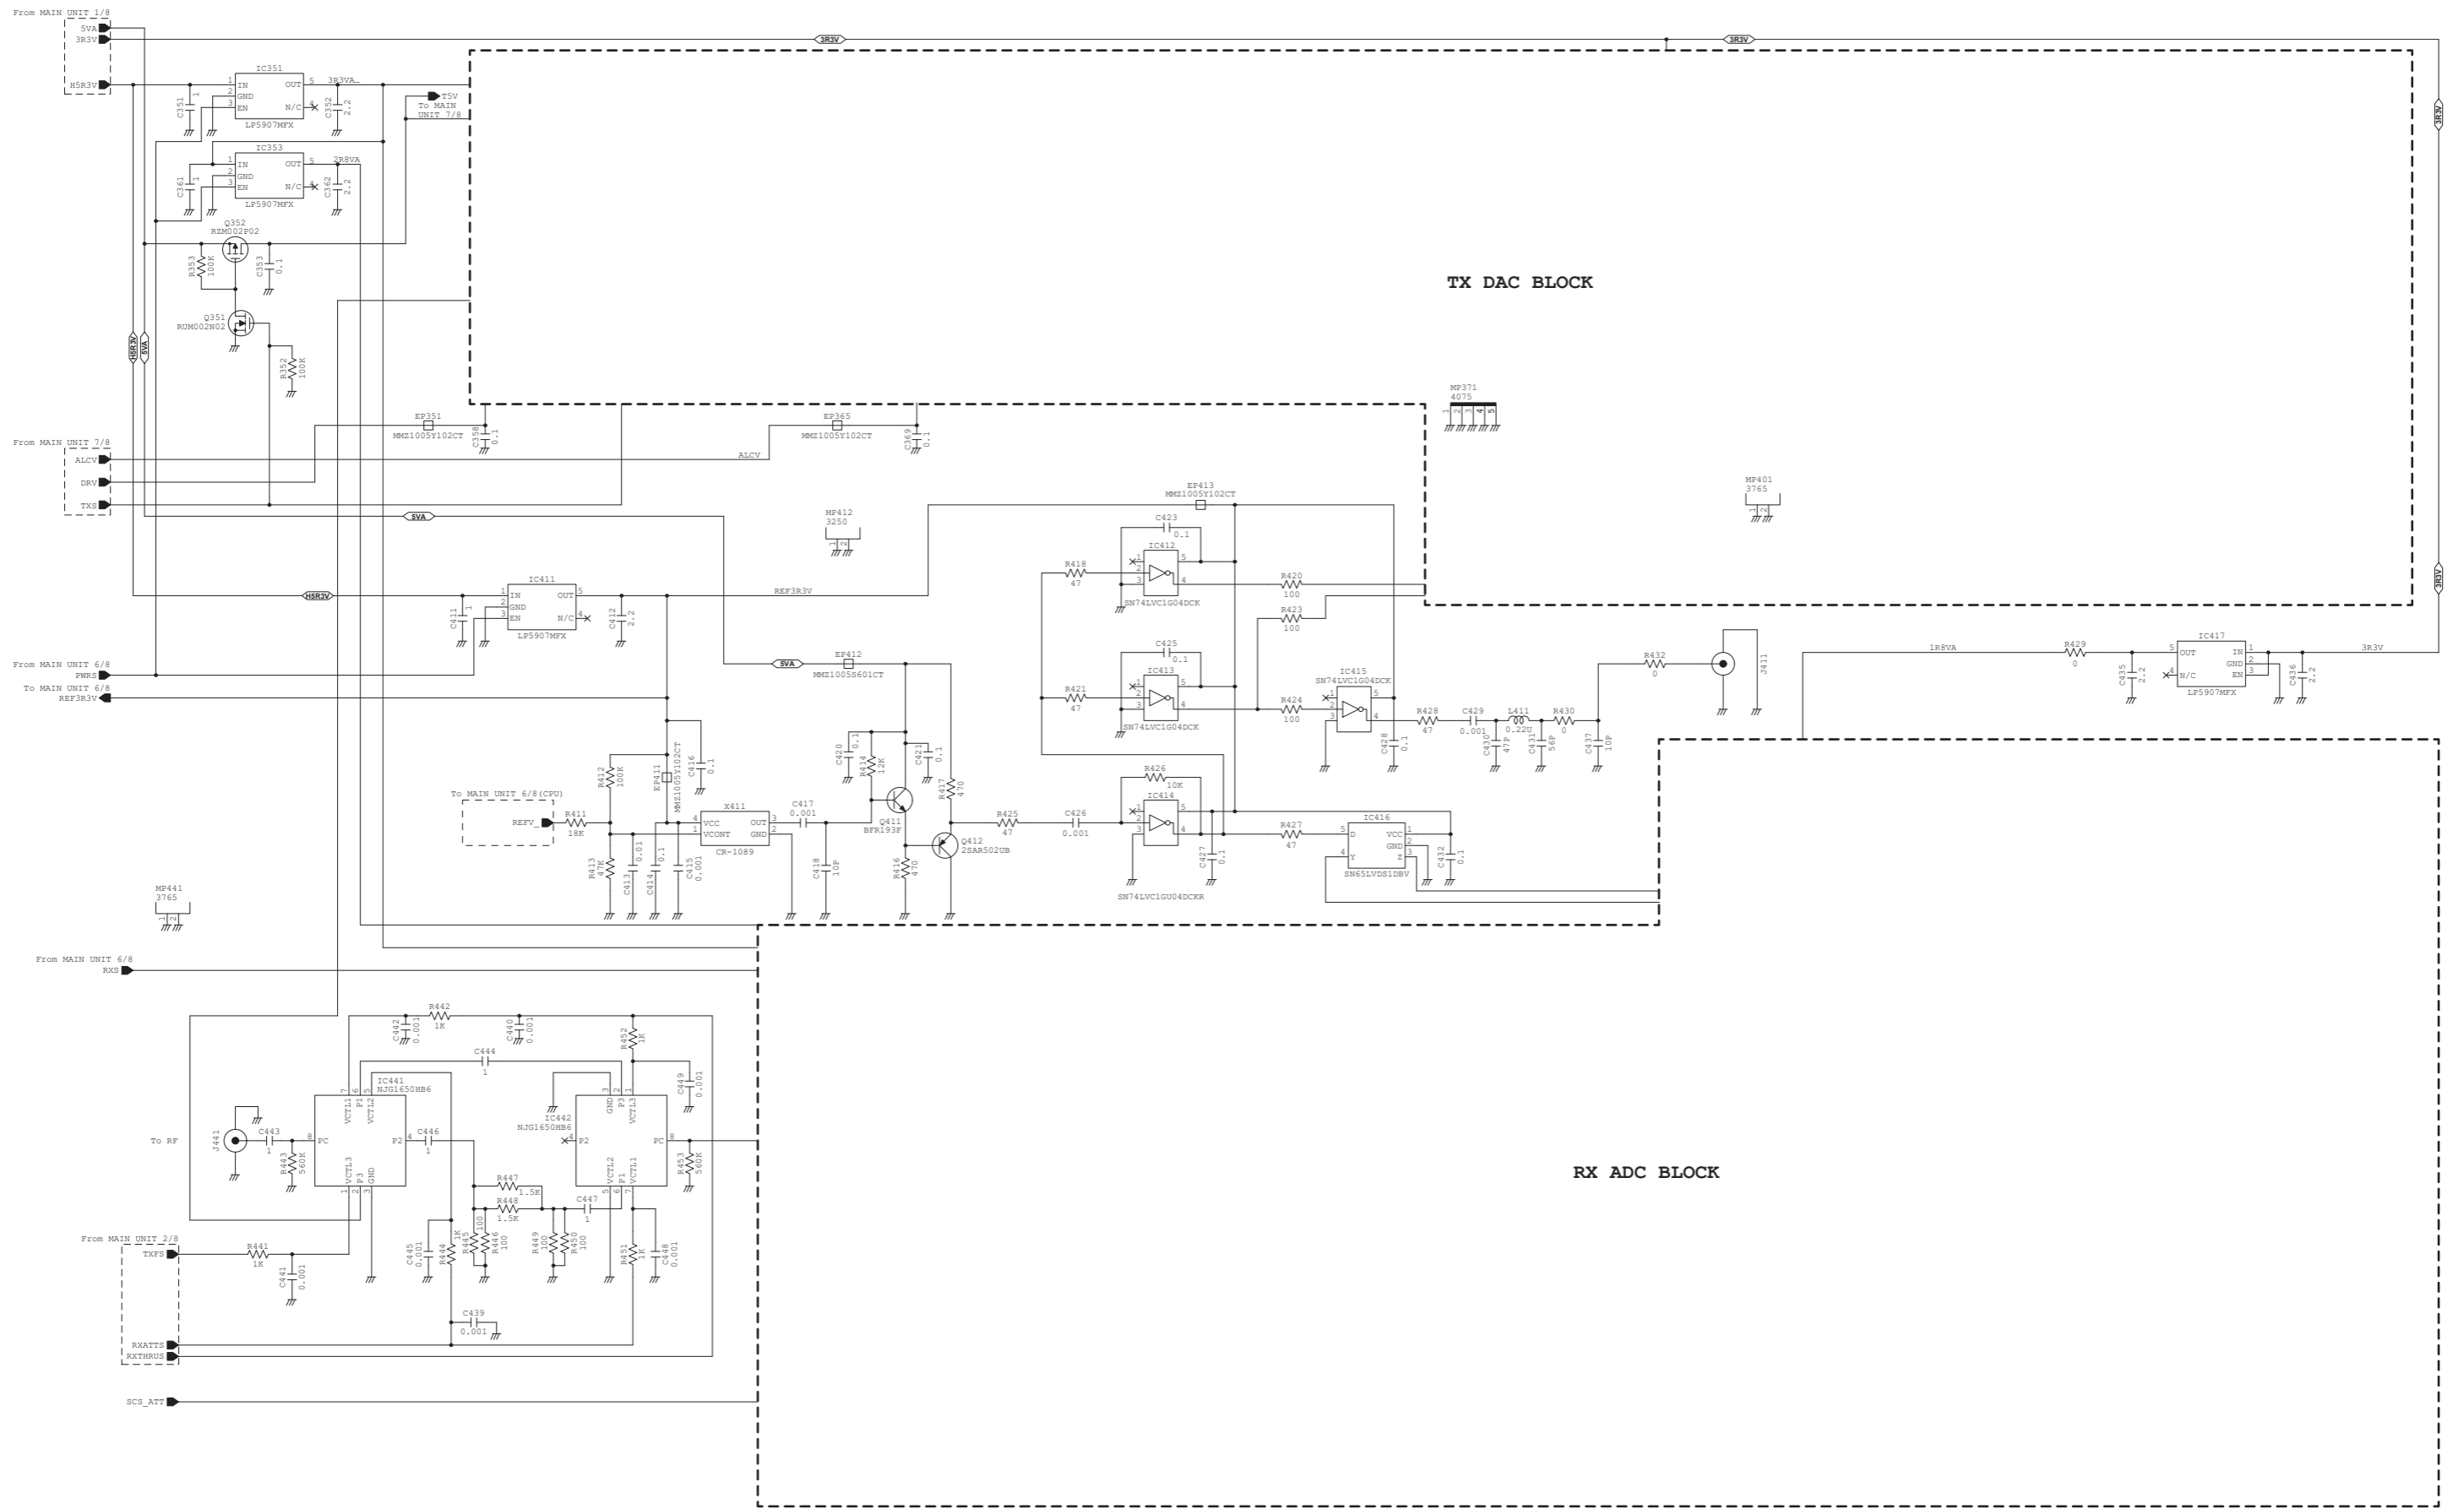


• MAIN UNIT (4/8)

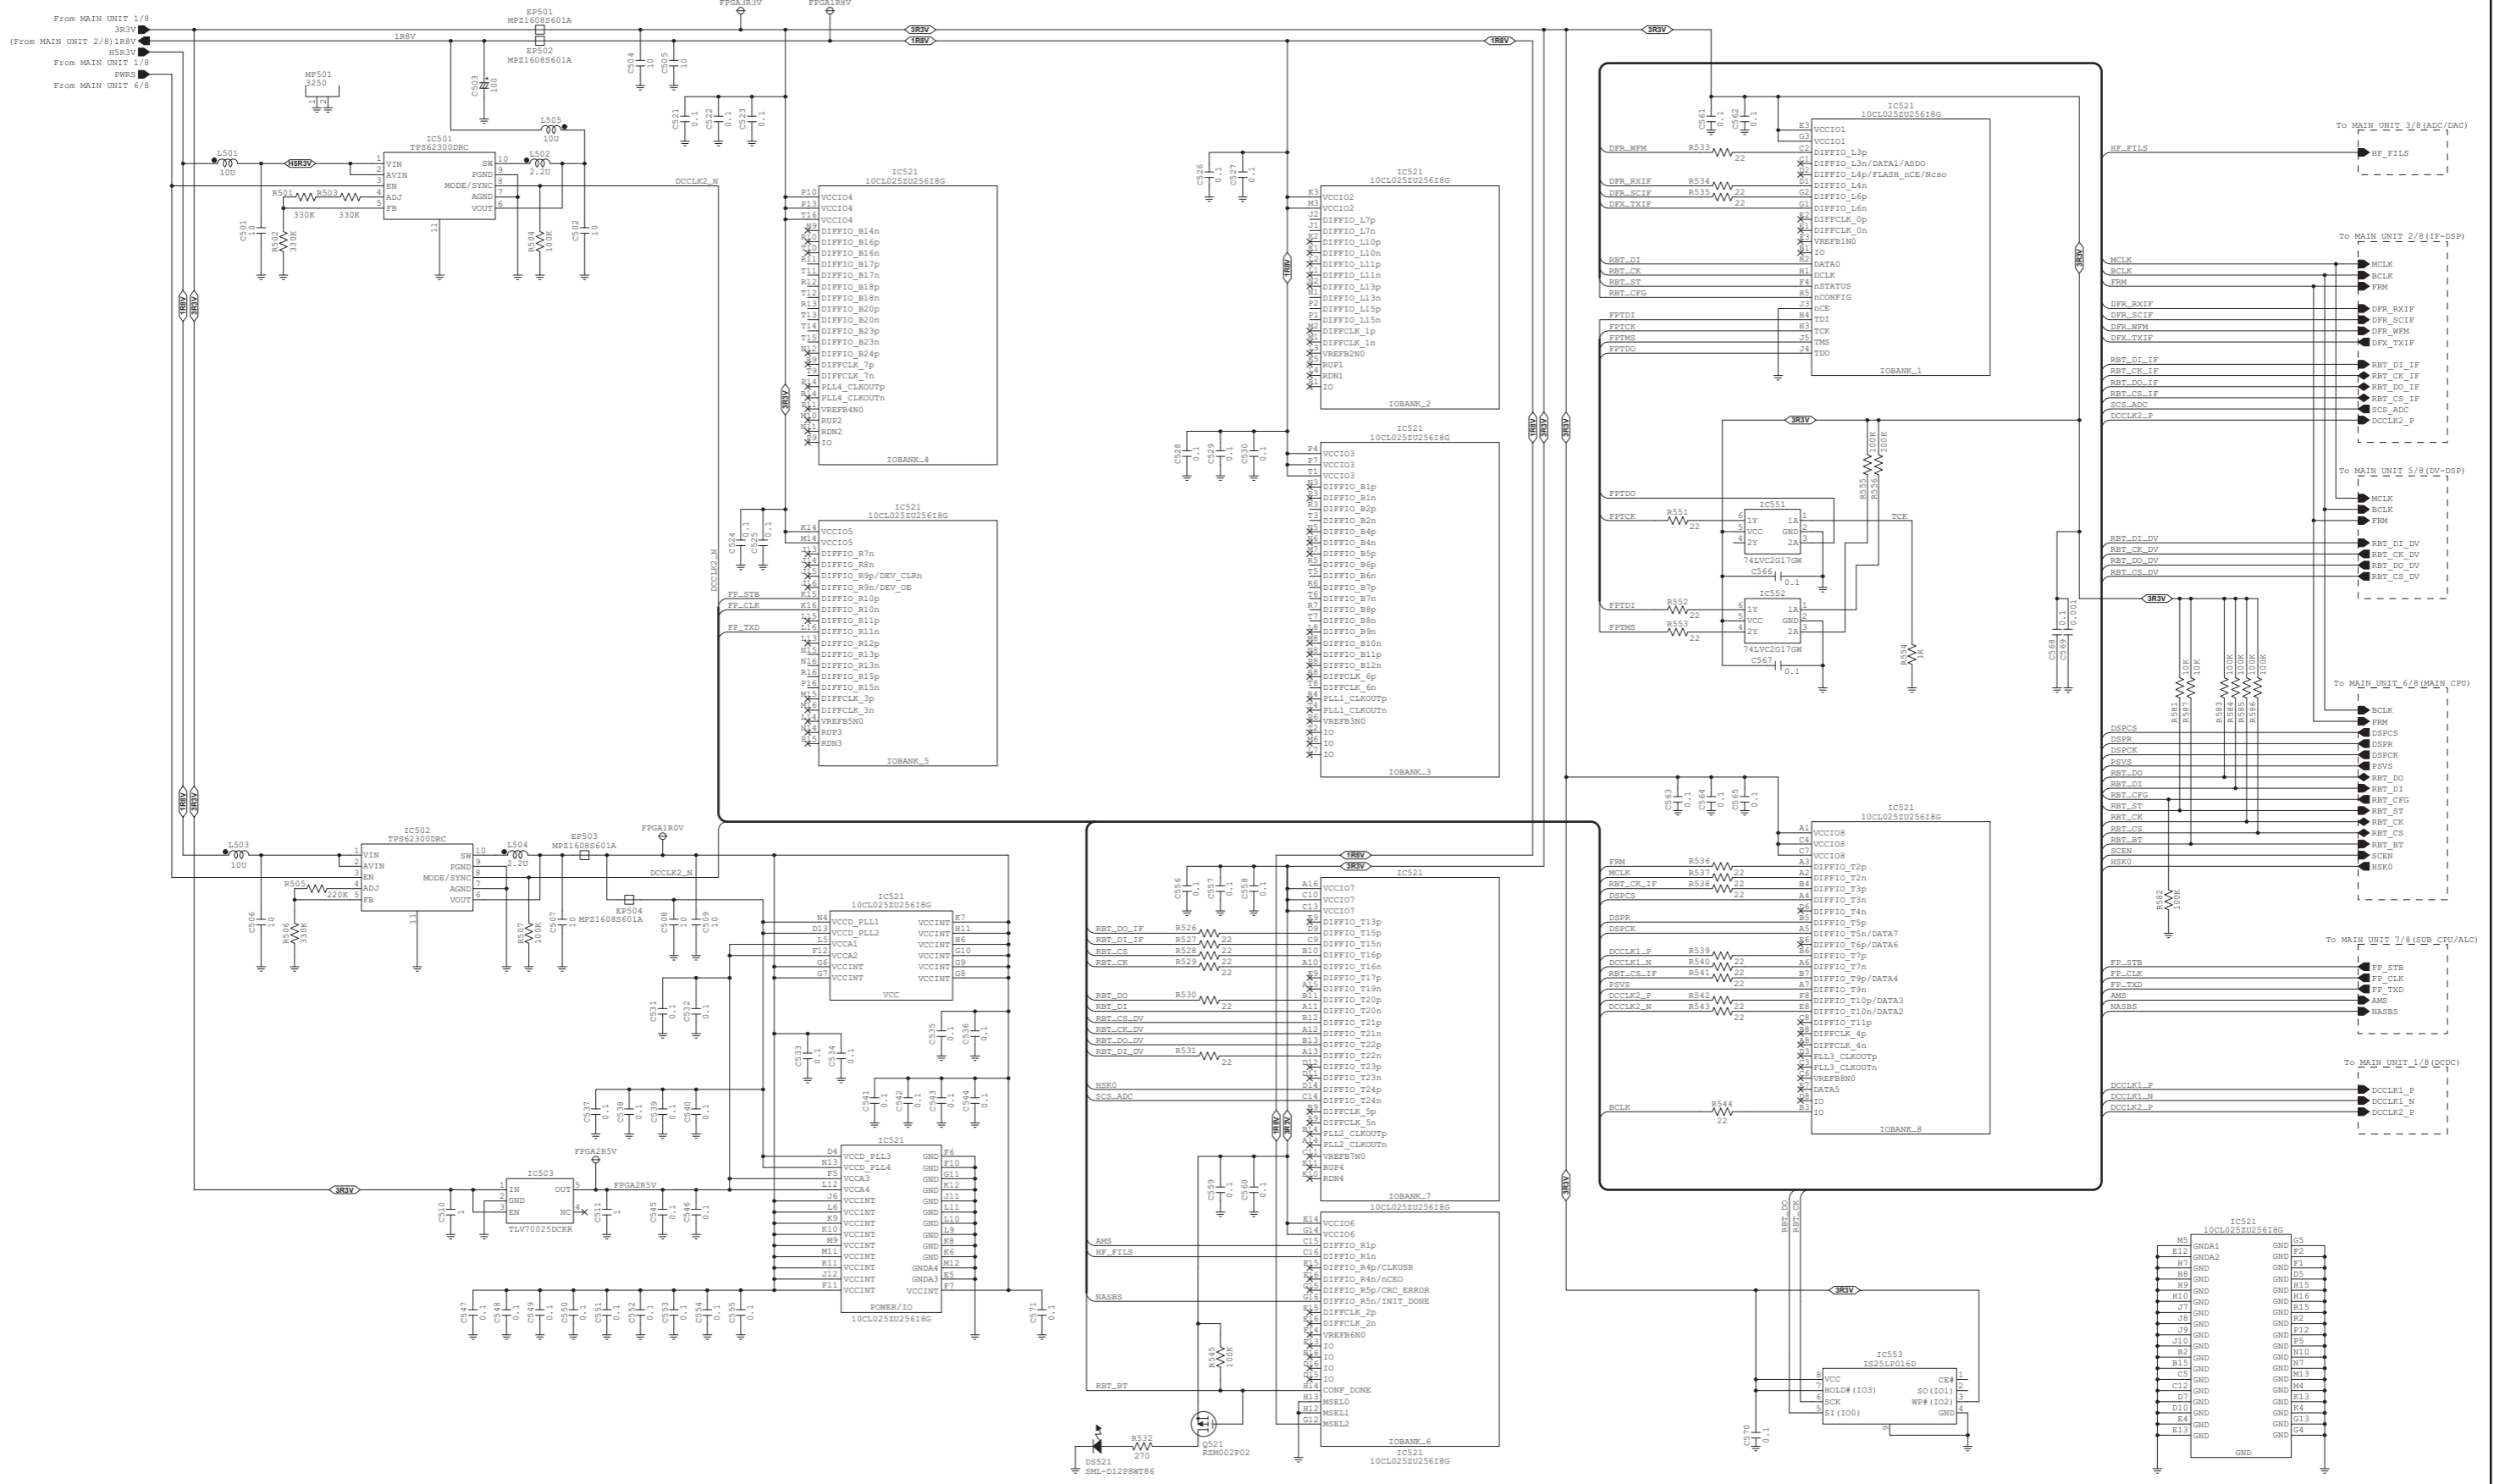


• MAIN UNIT (5/8)

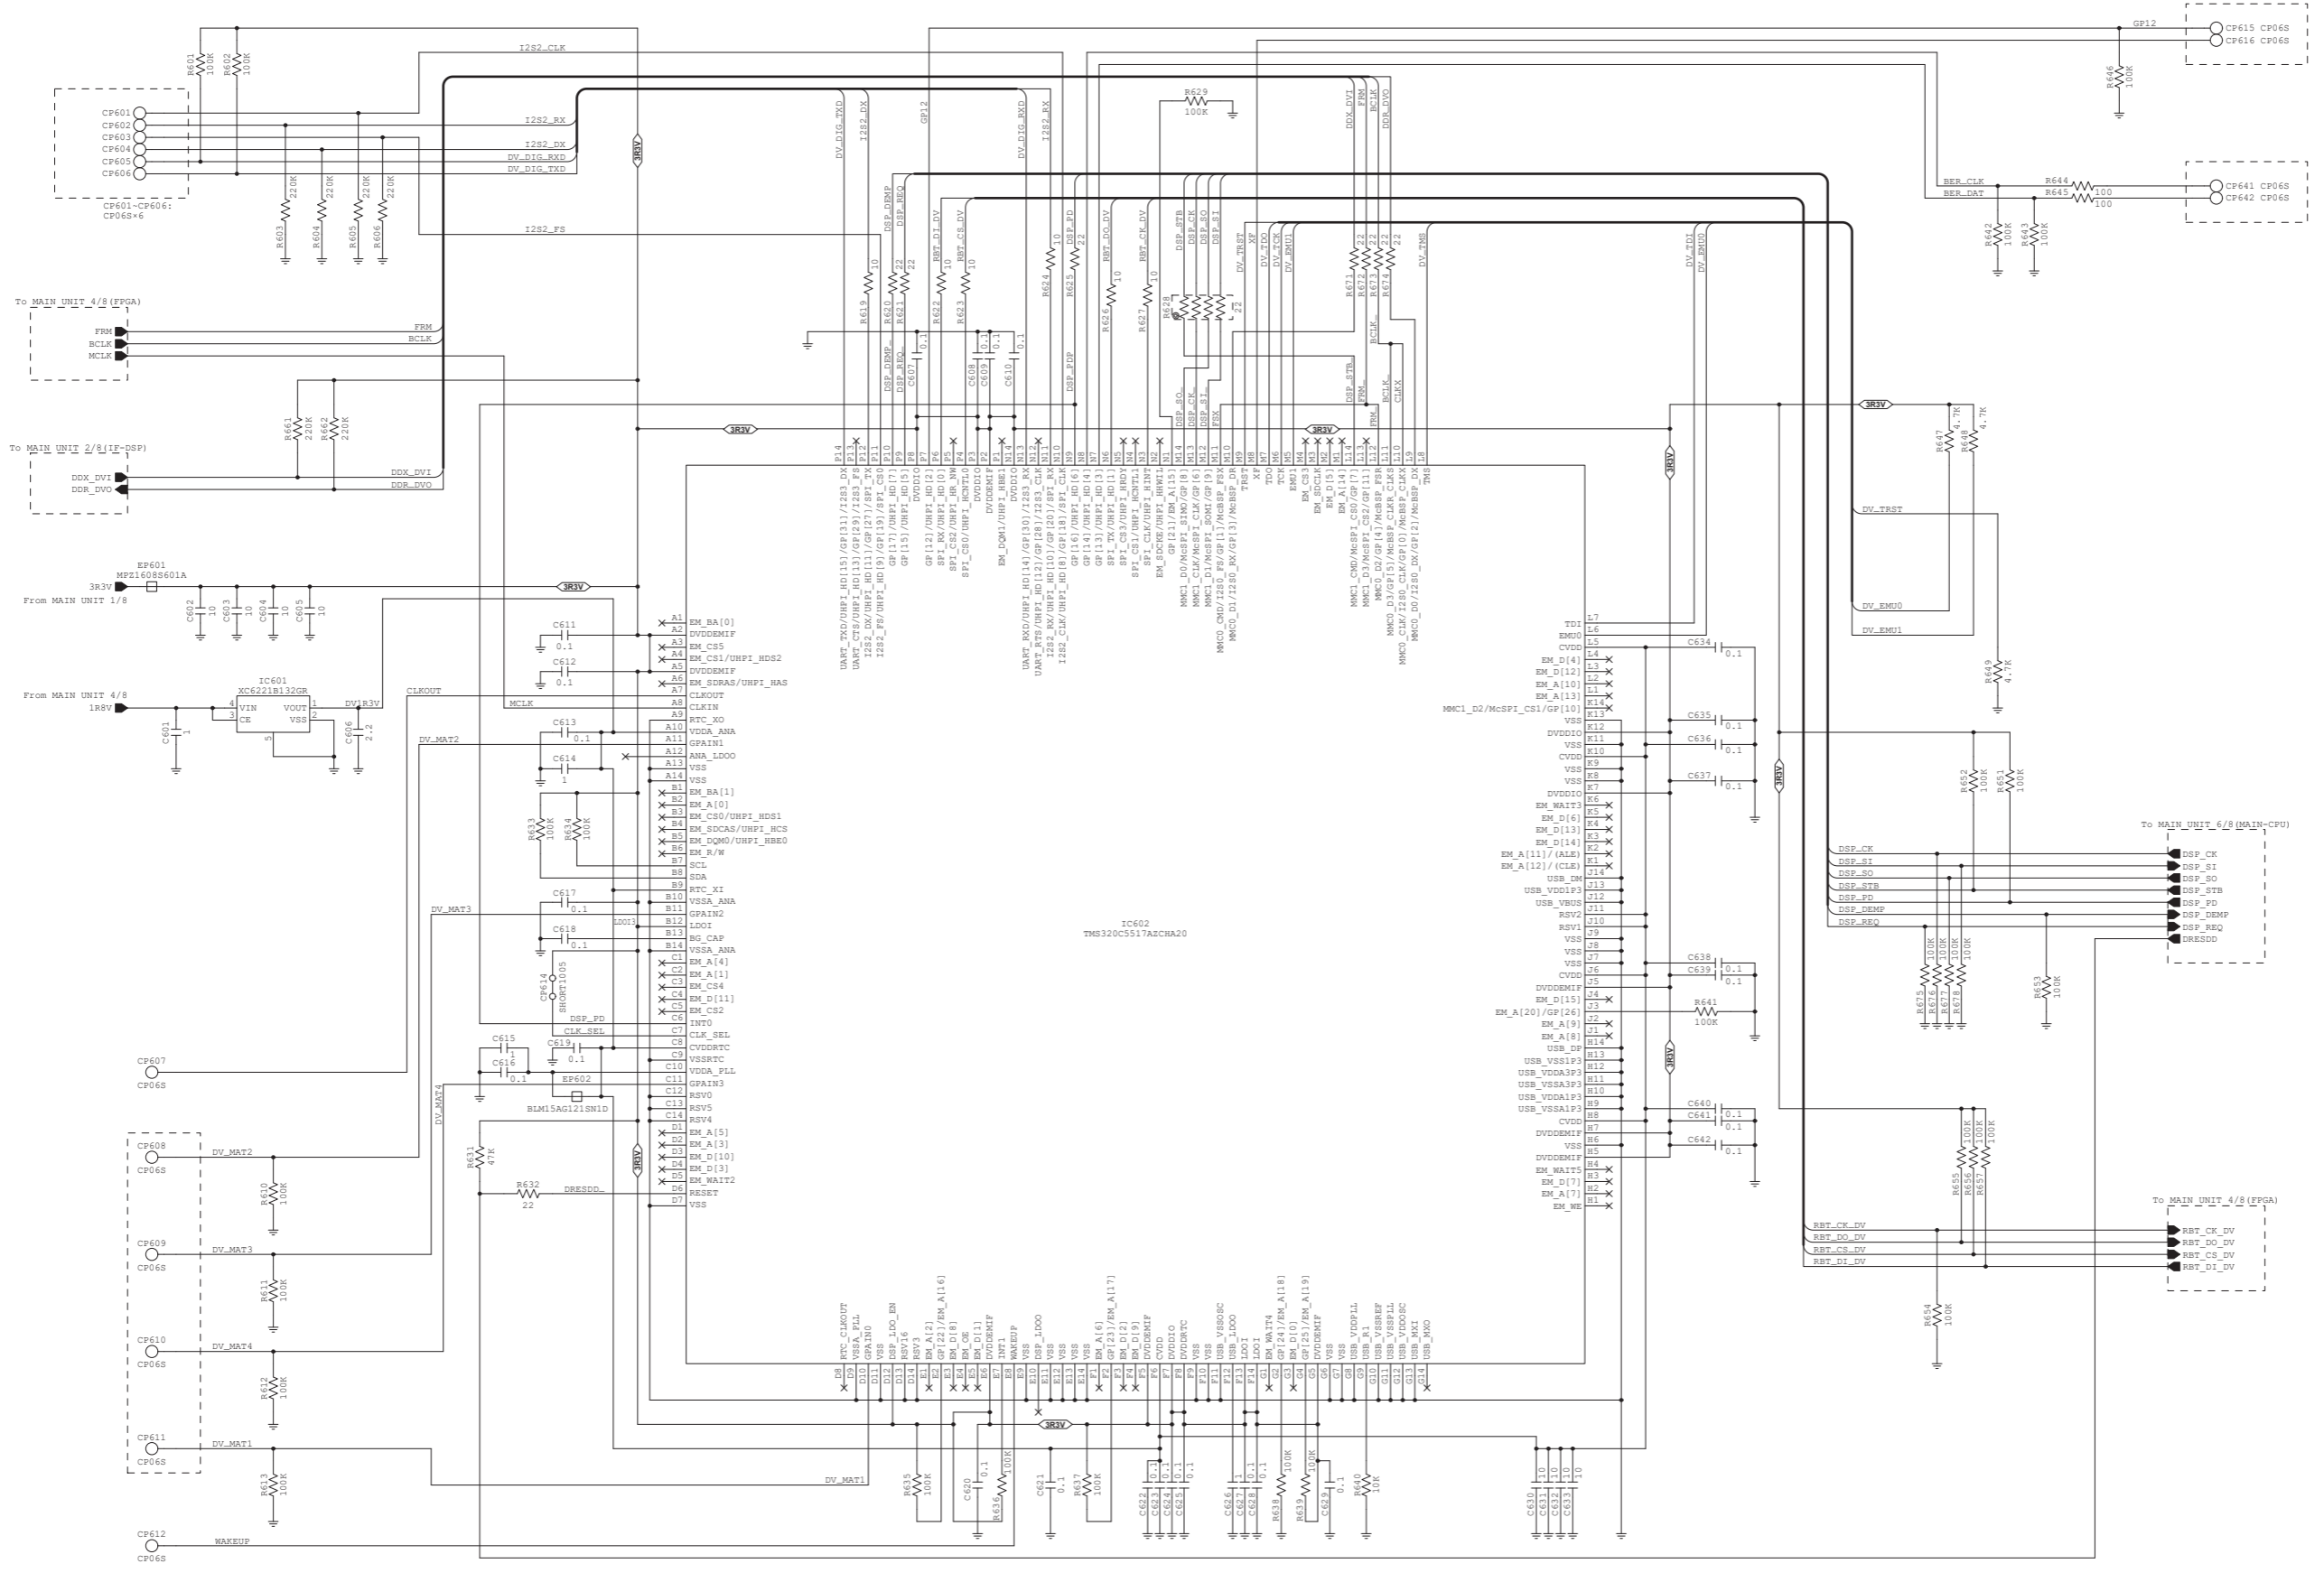


• MAIN UNIT (7/8)

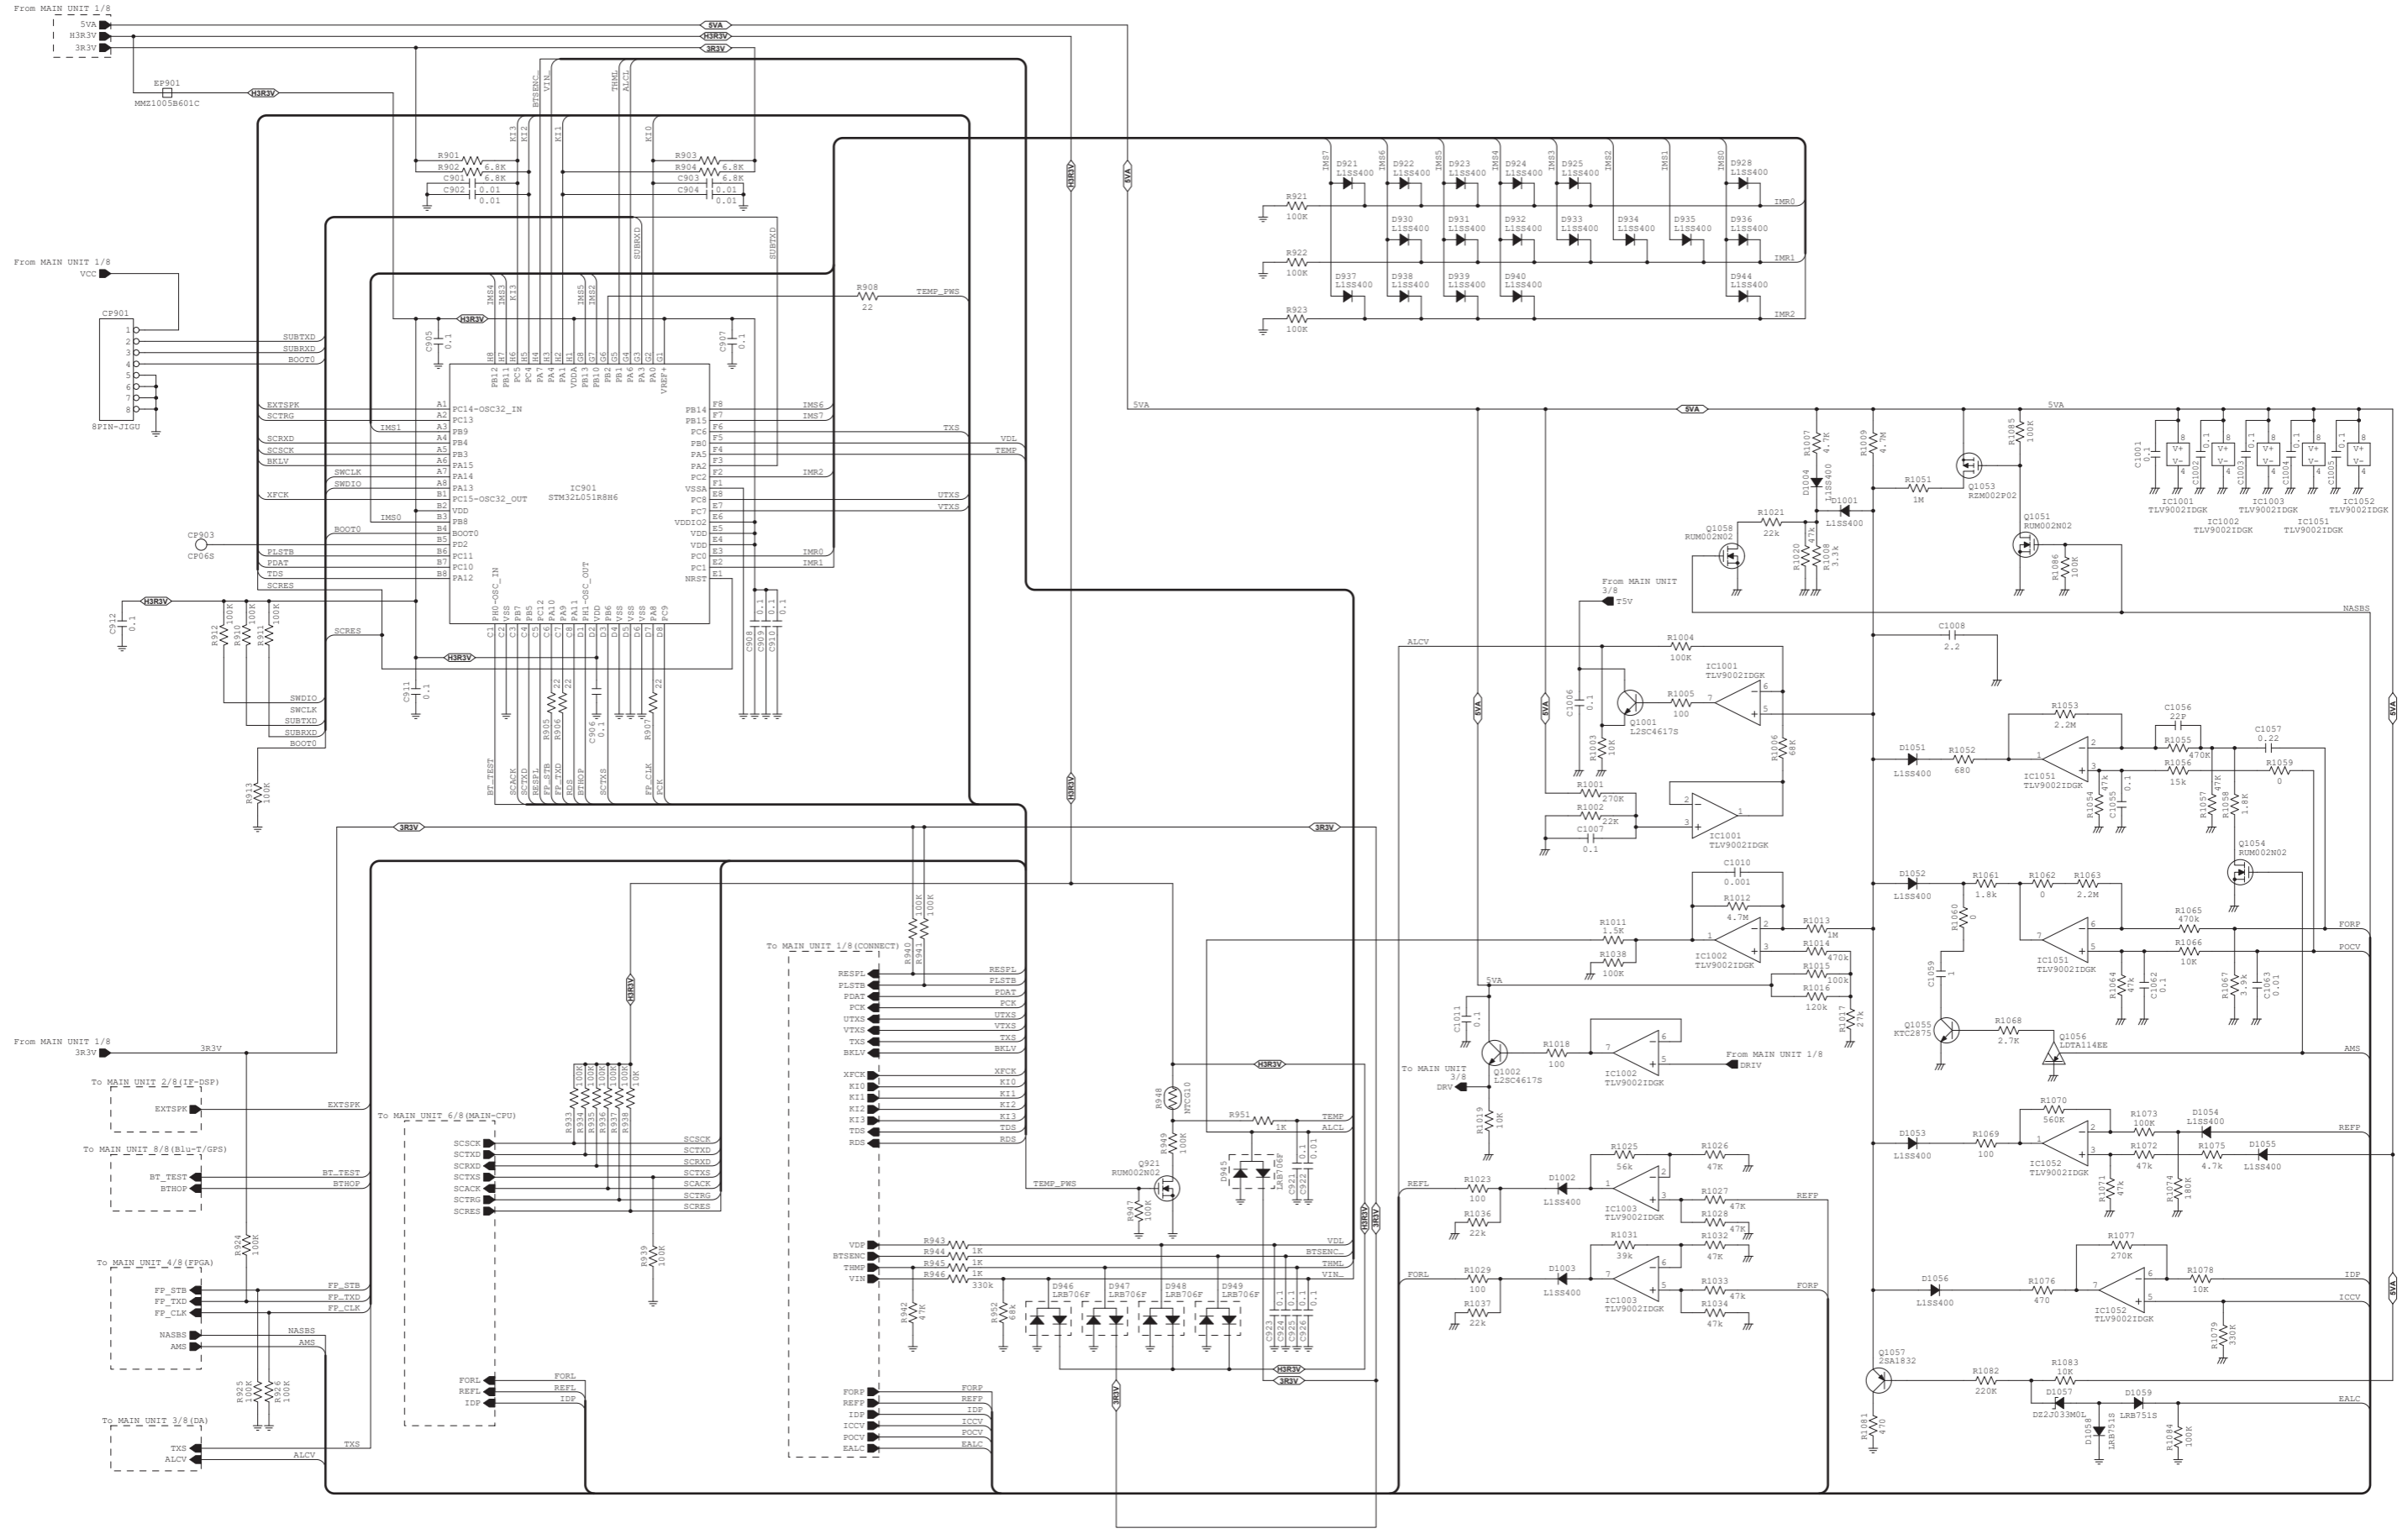


• MAIN UNIT (8/8)

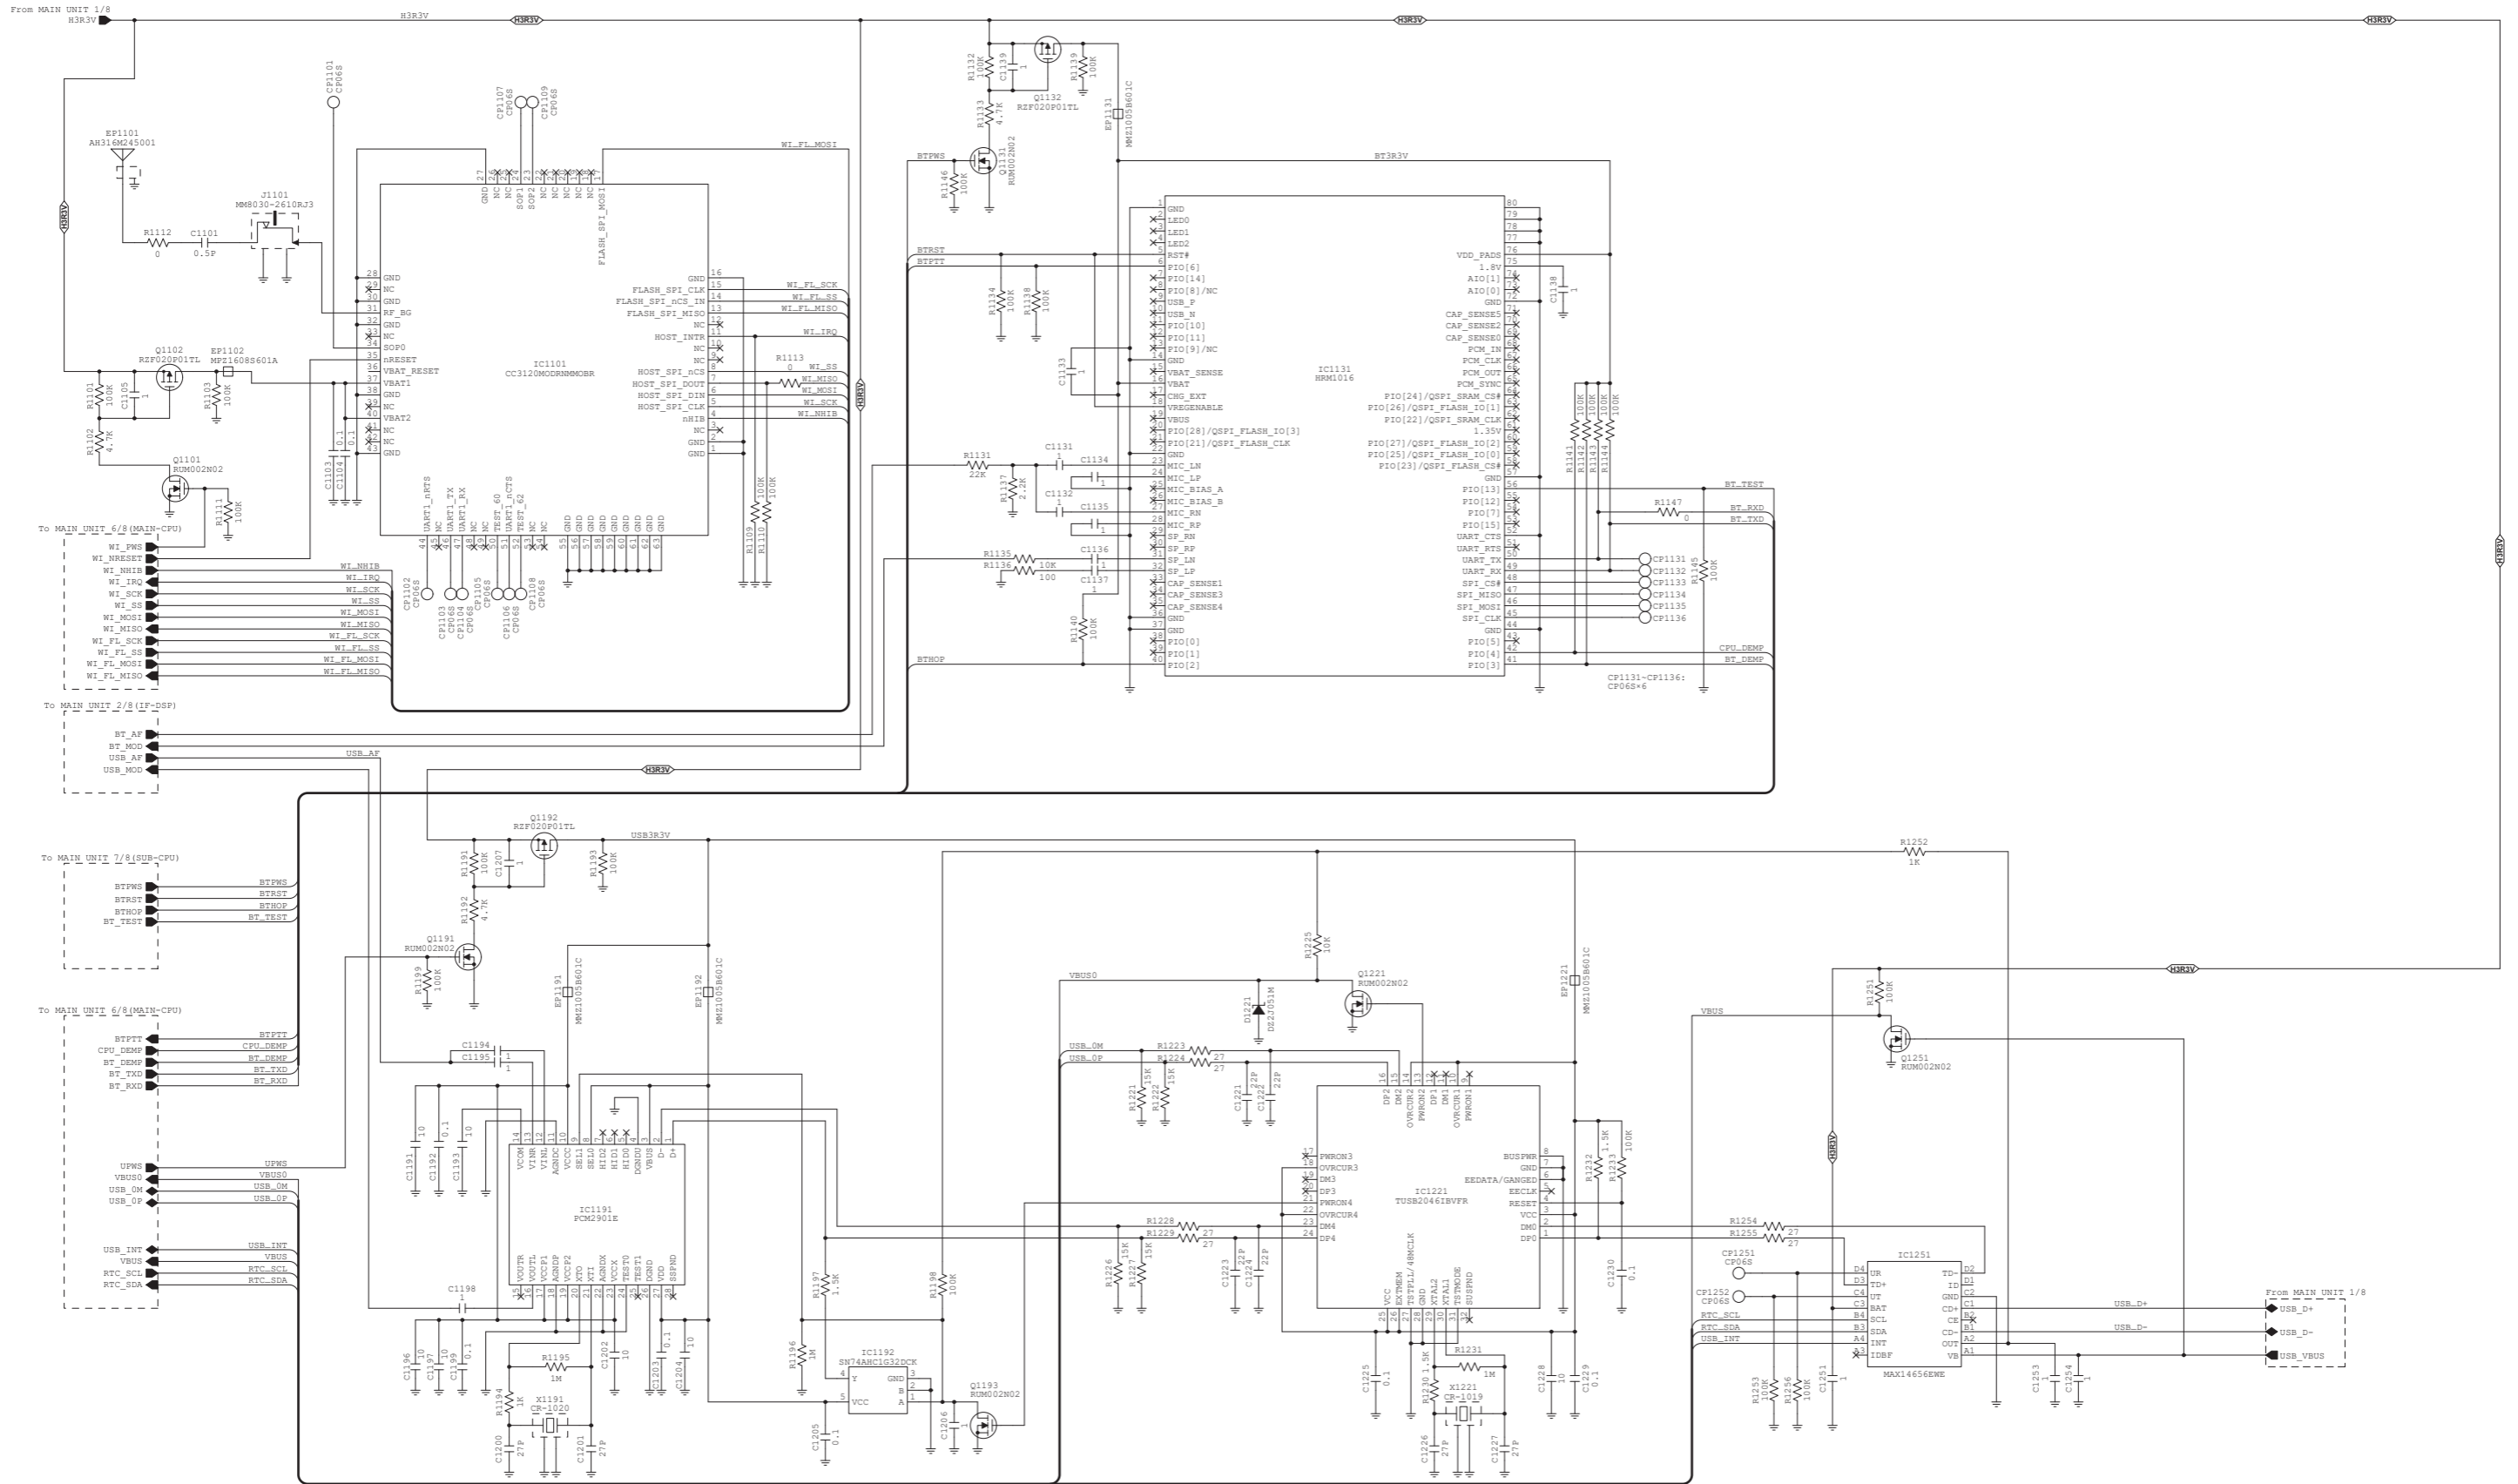


• CONNECT UNIT

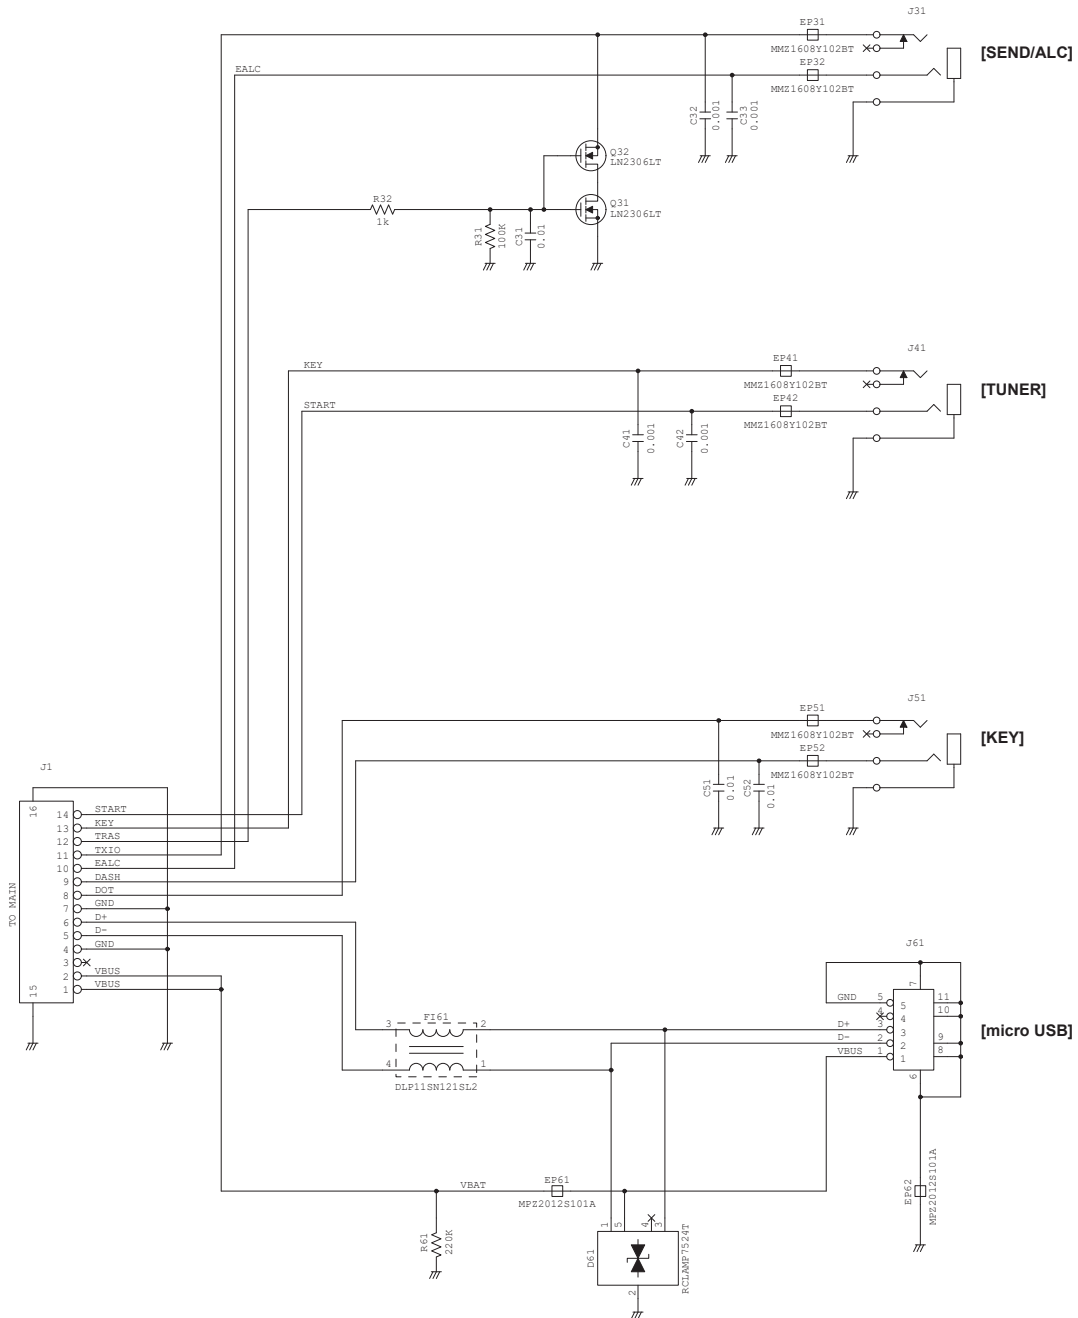


• RF UNIT (1/3)

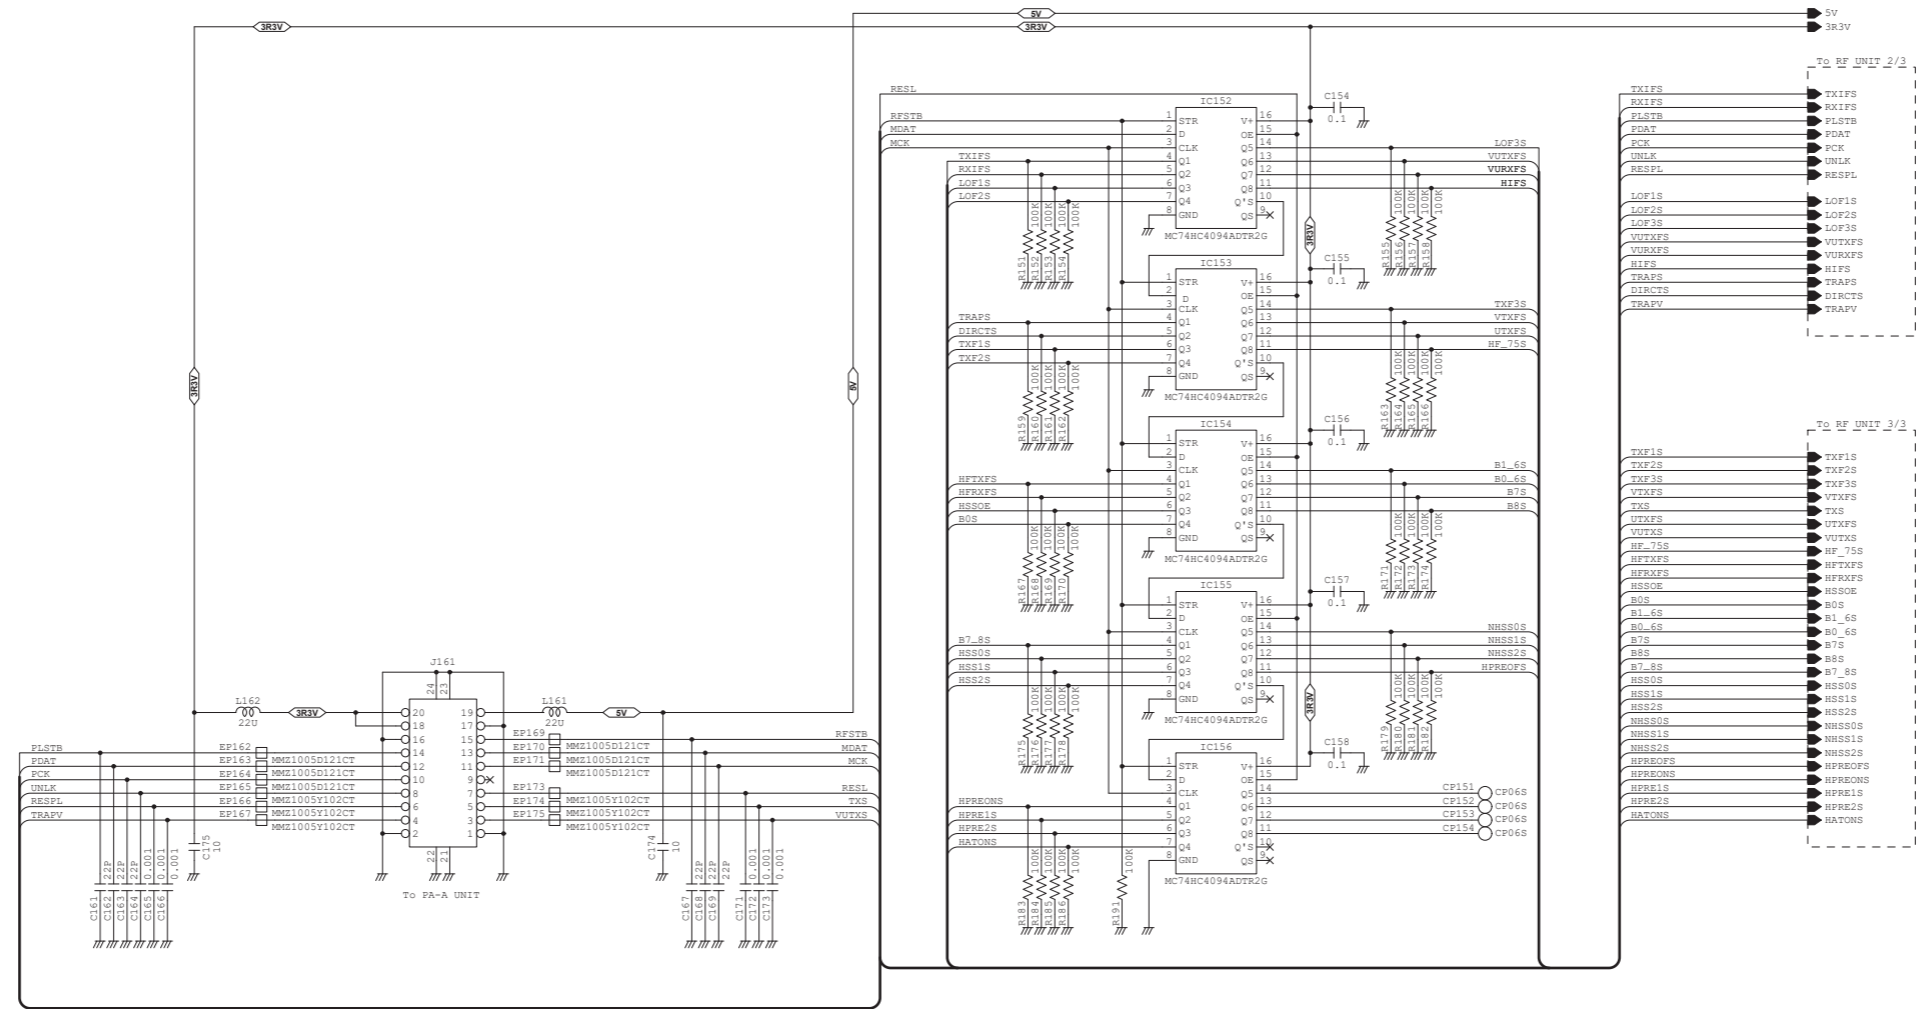


• RF UNIT (2/3)

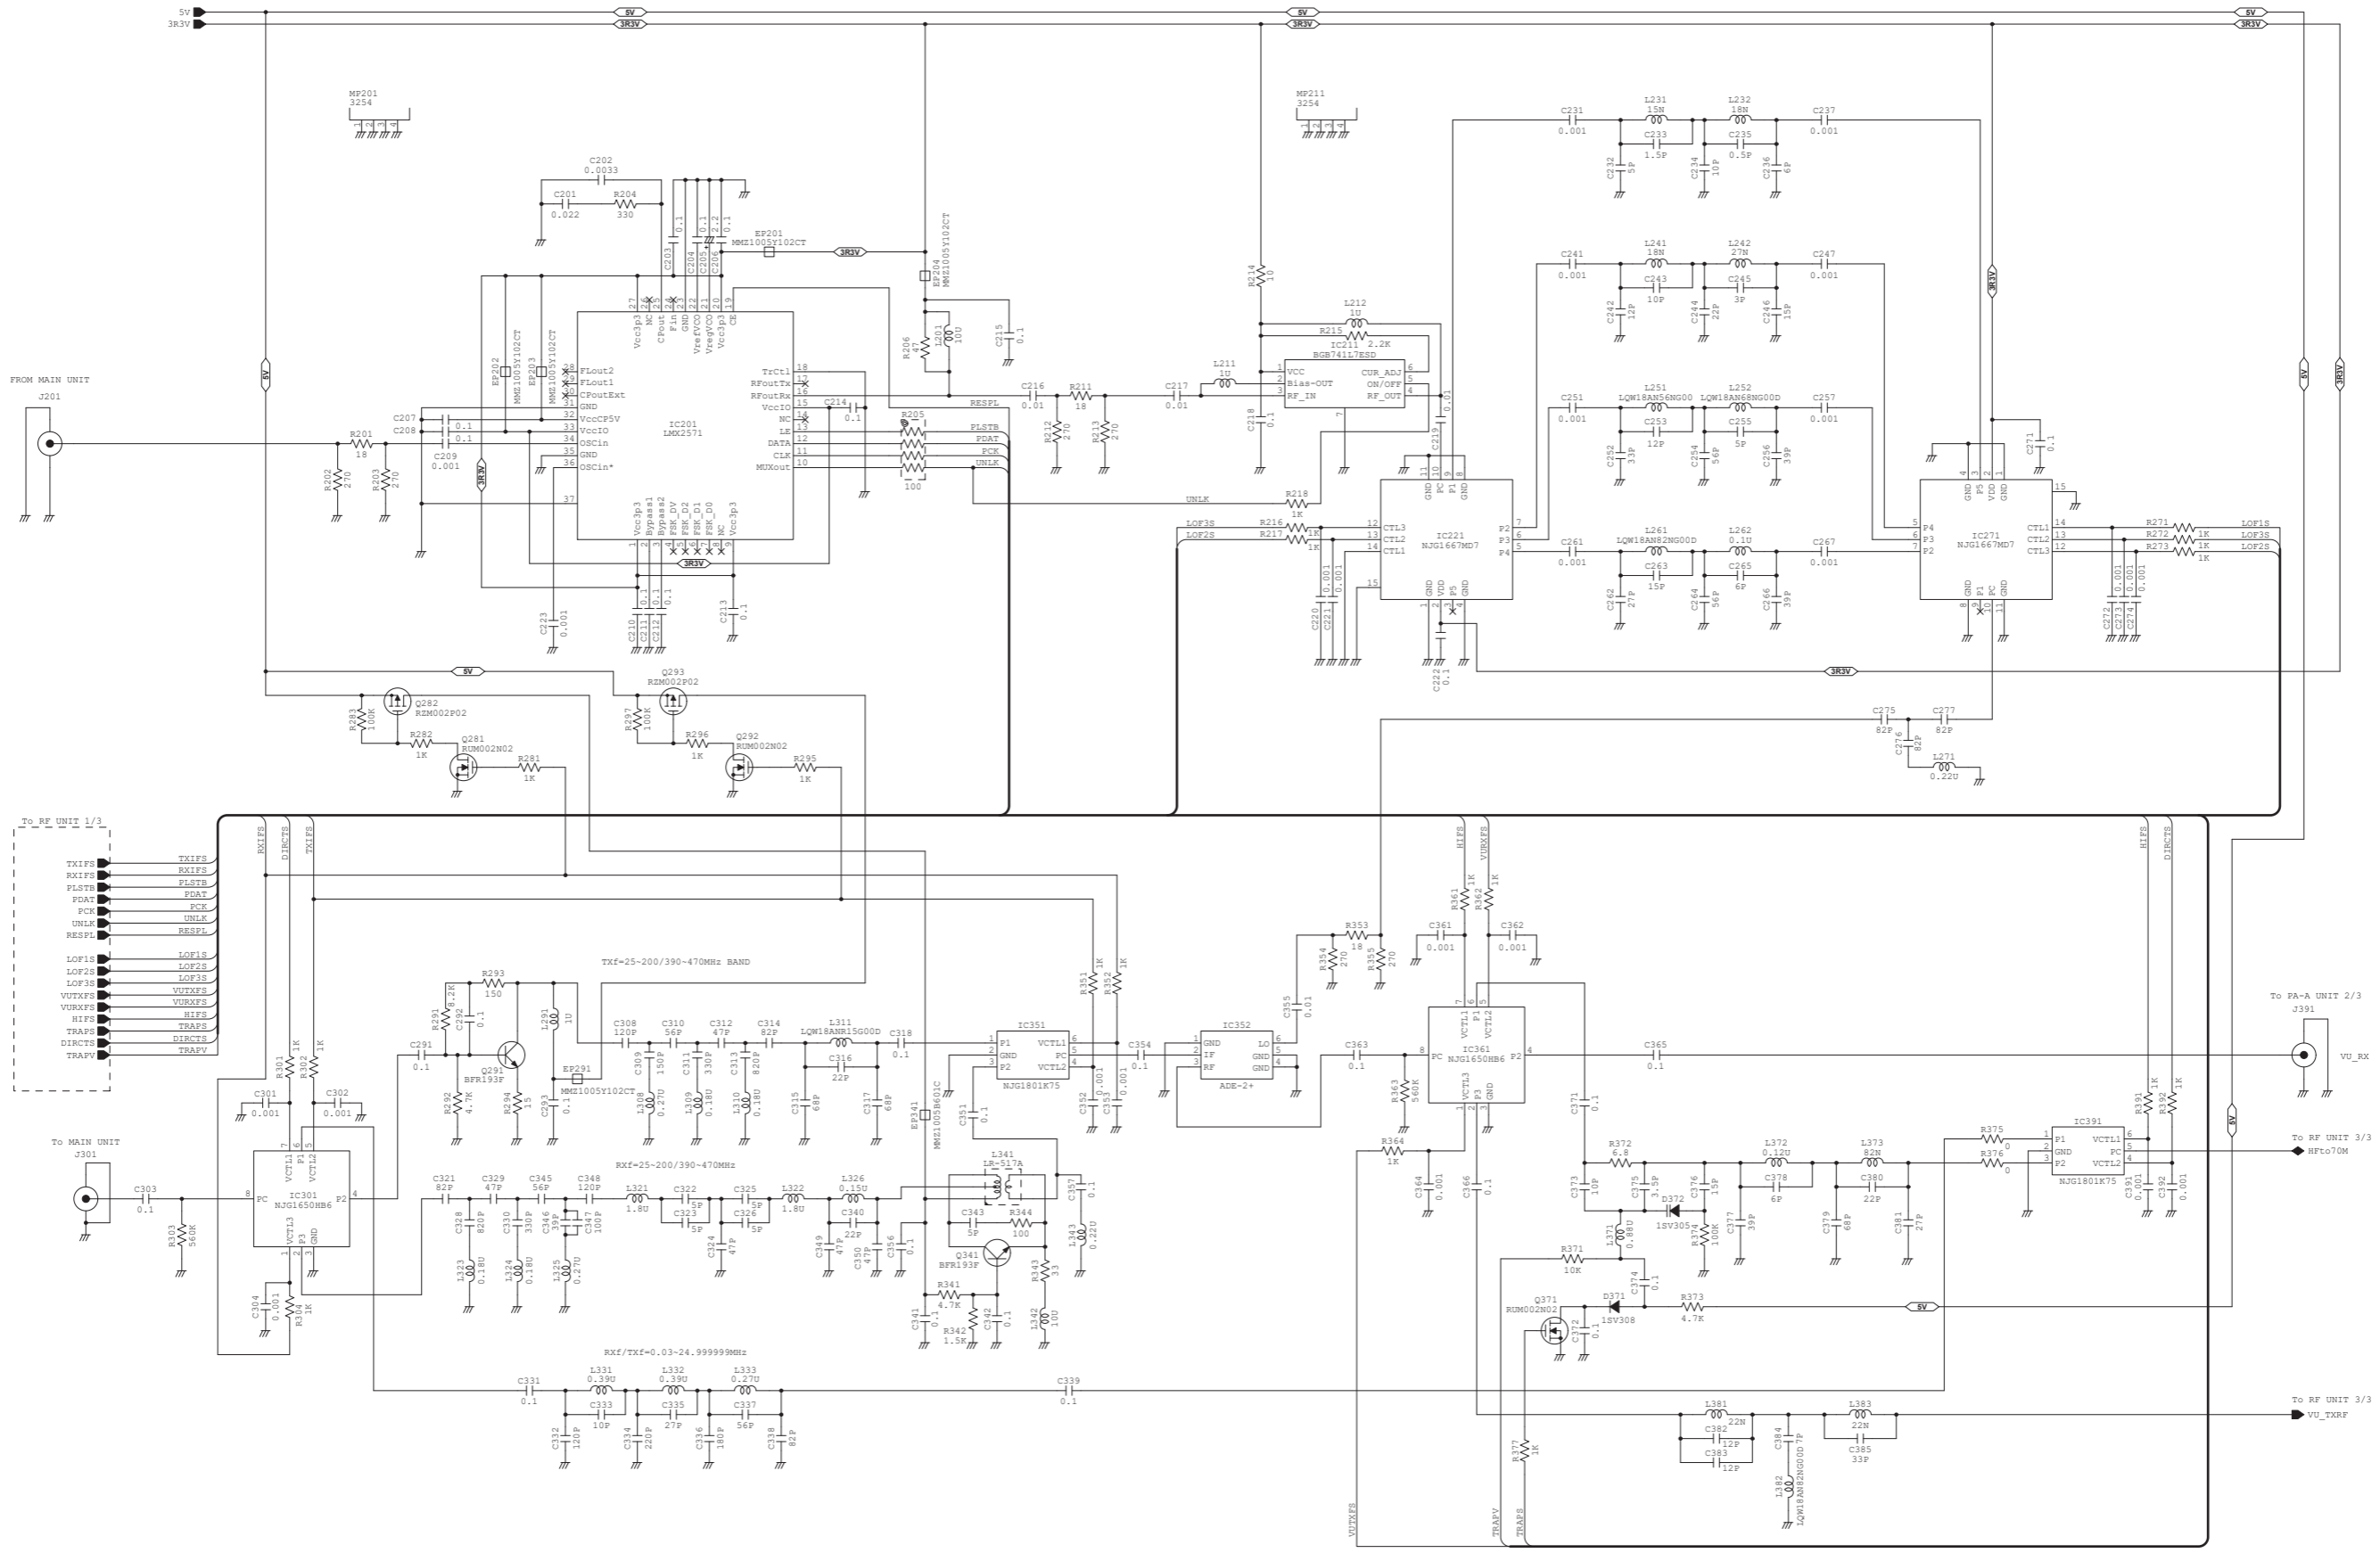

• RF UNIT (3/3)

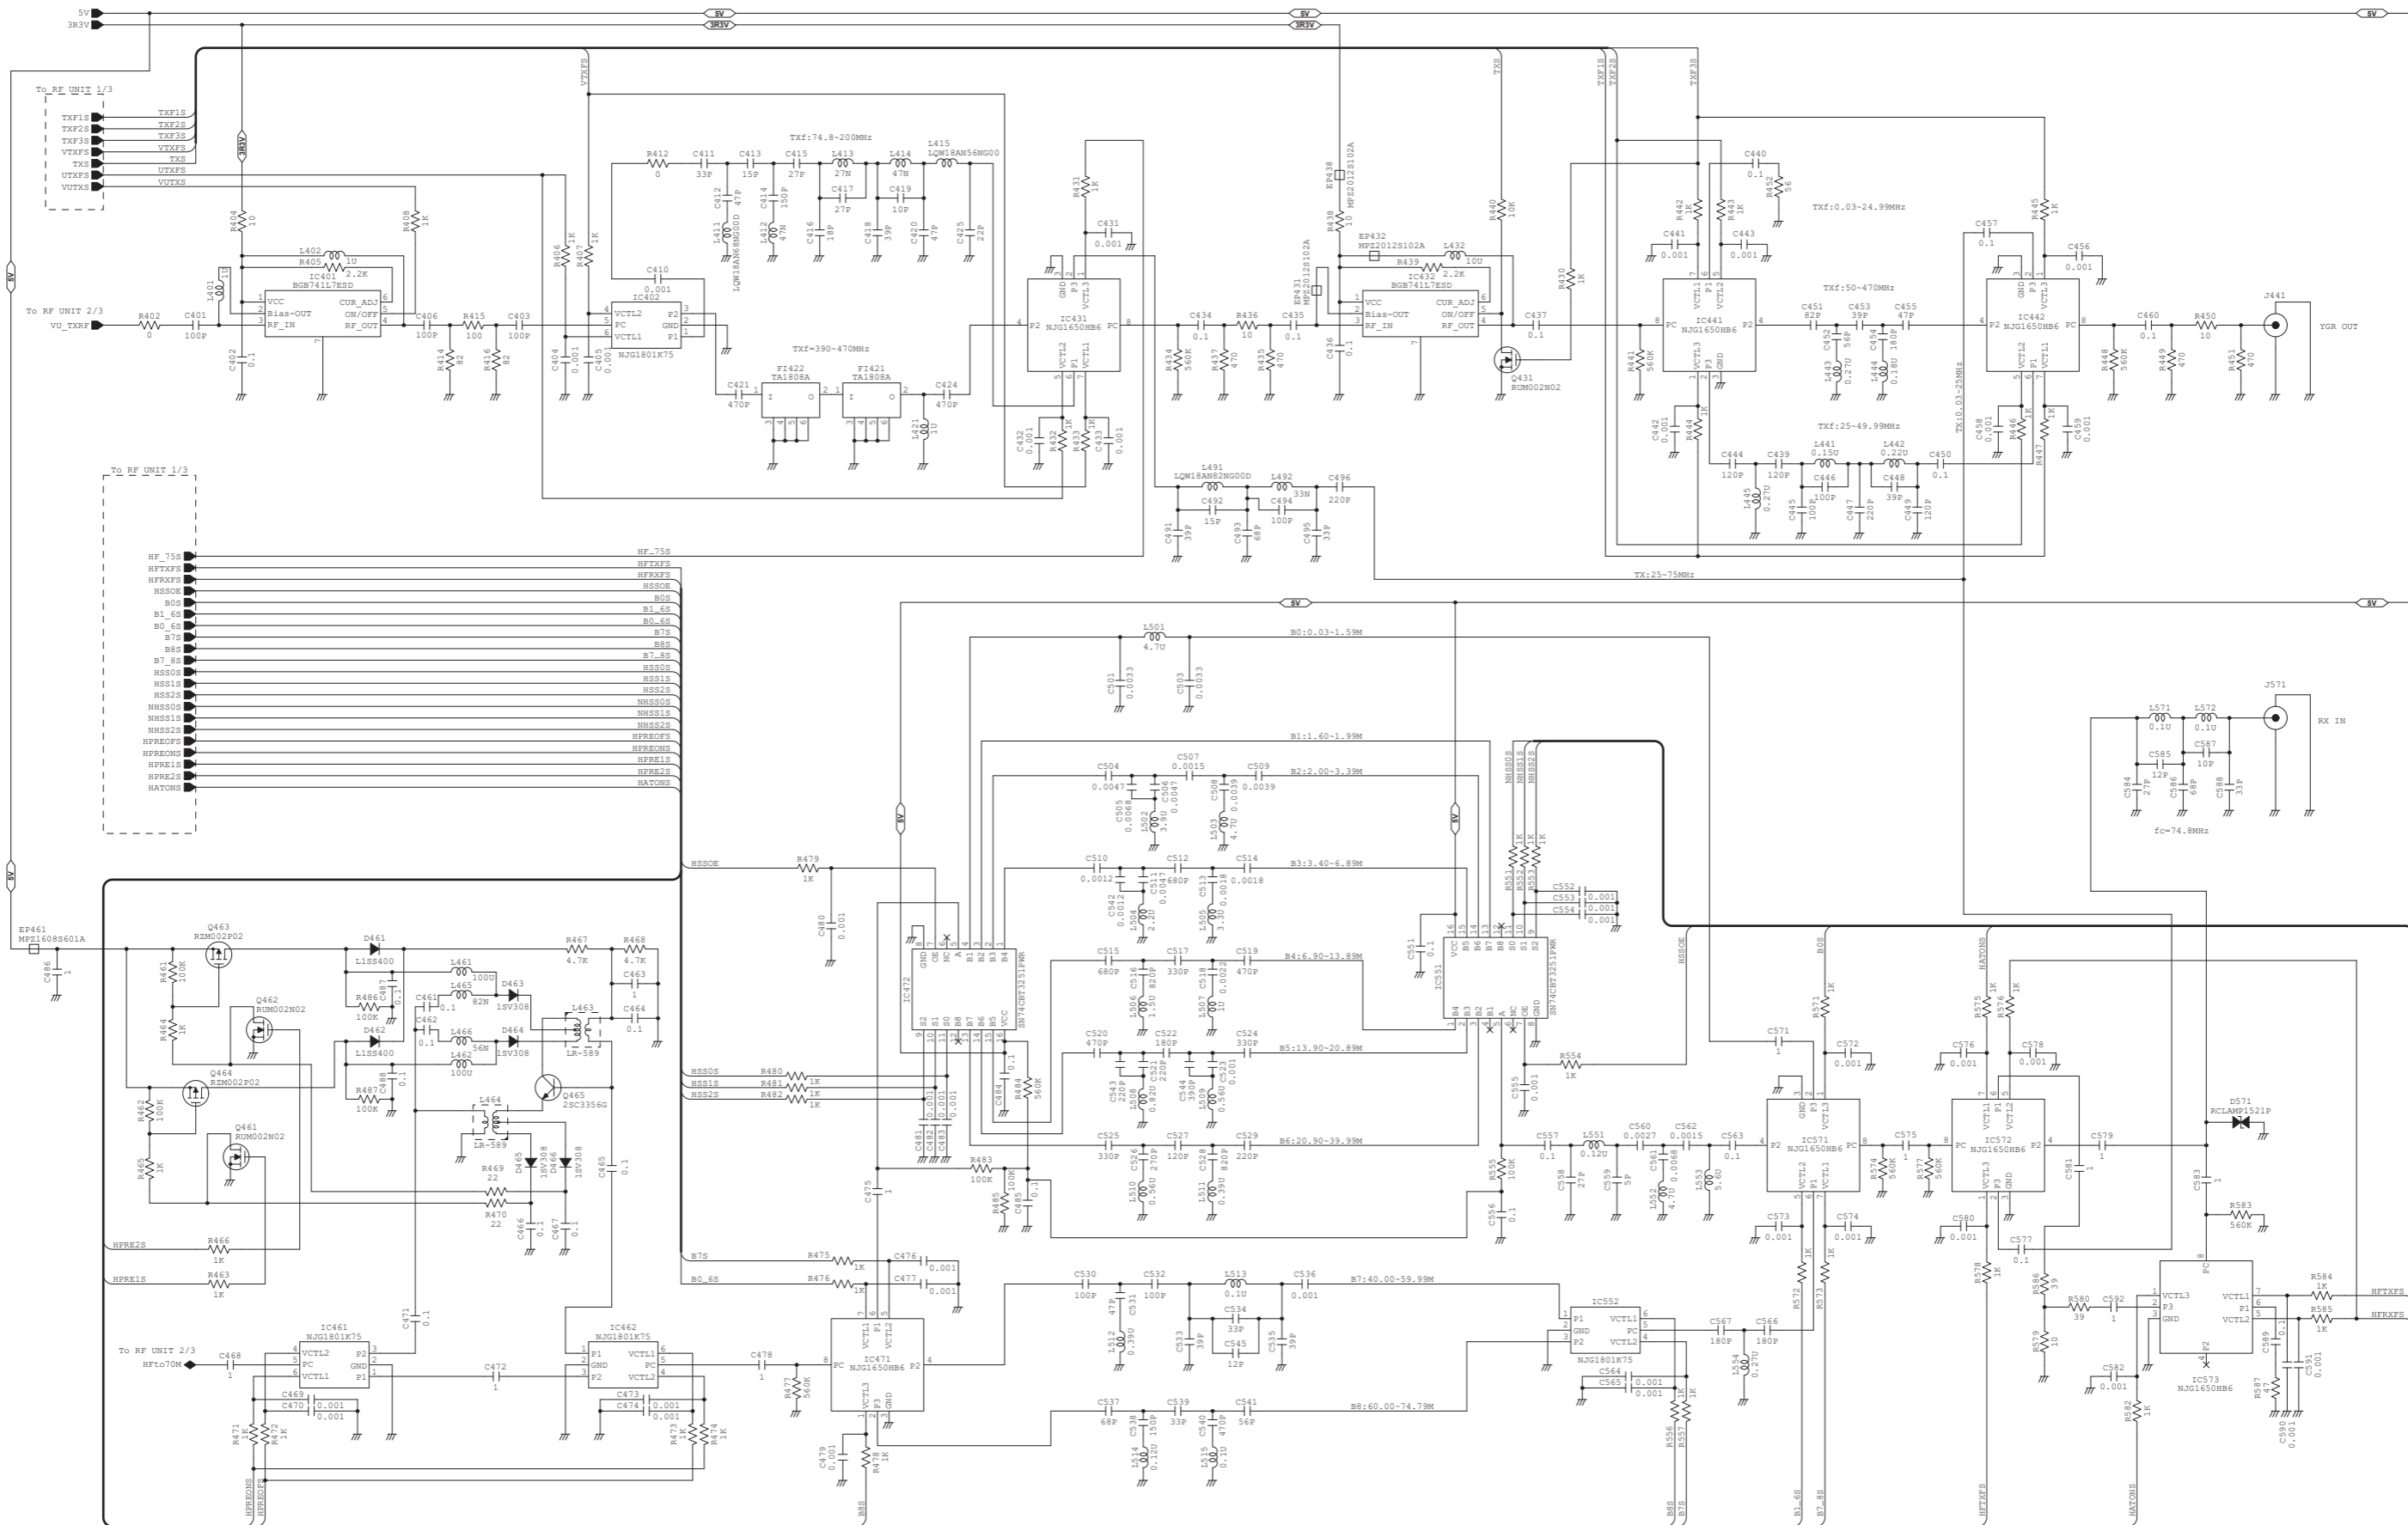


• PA-A UNIT (1/3)


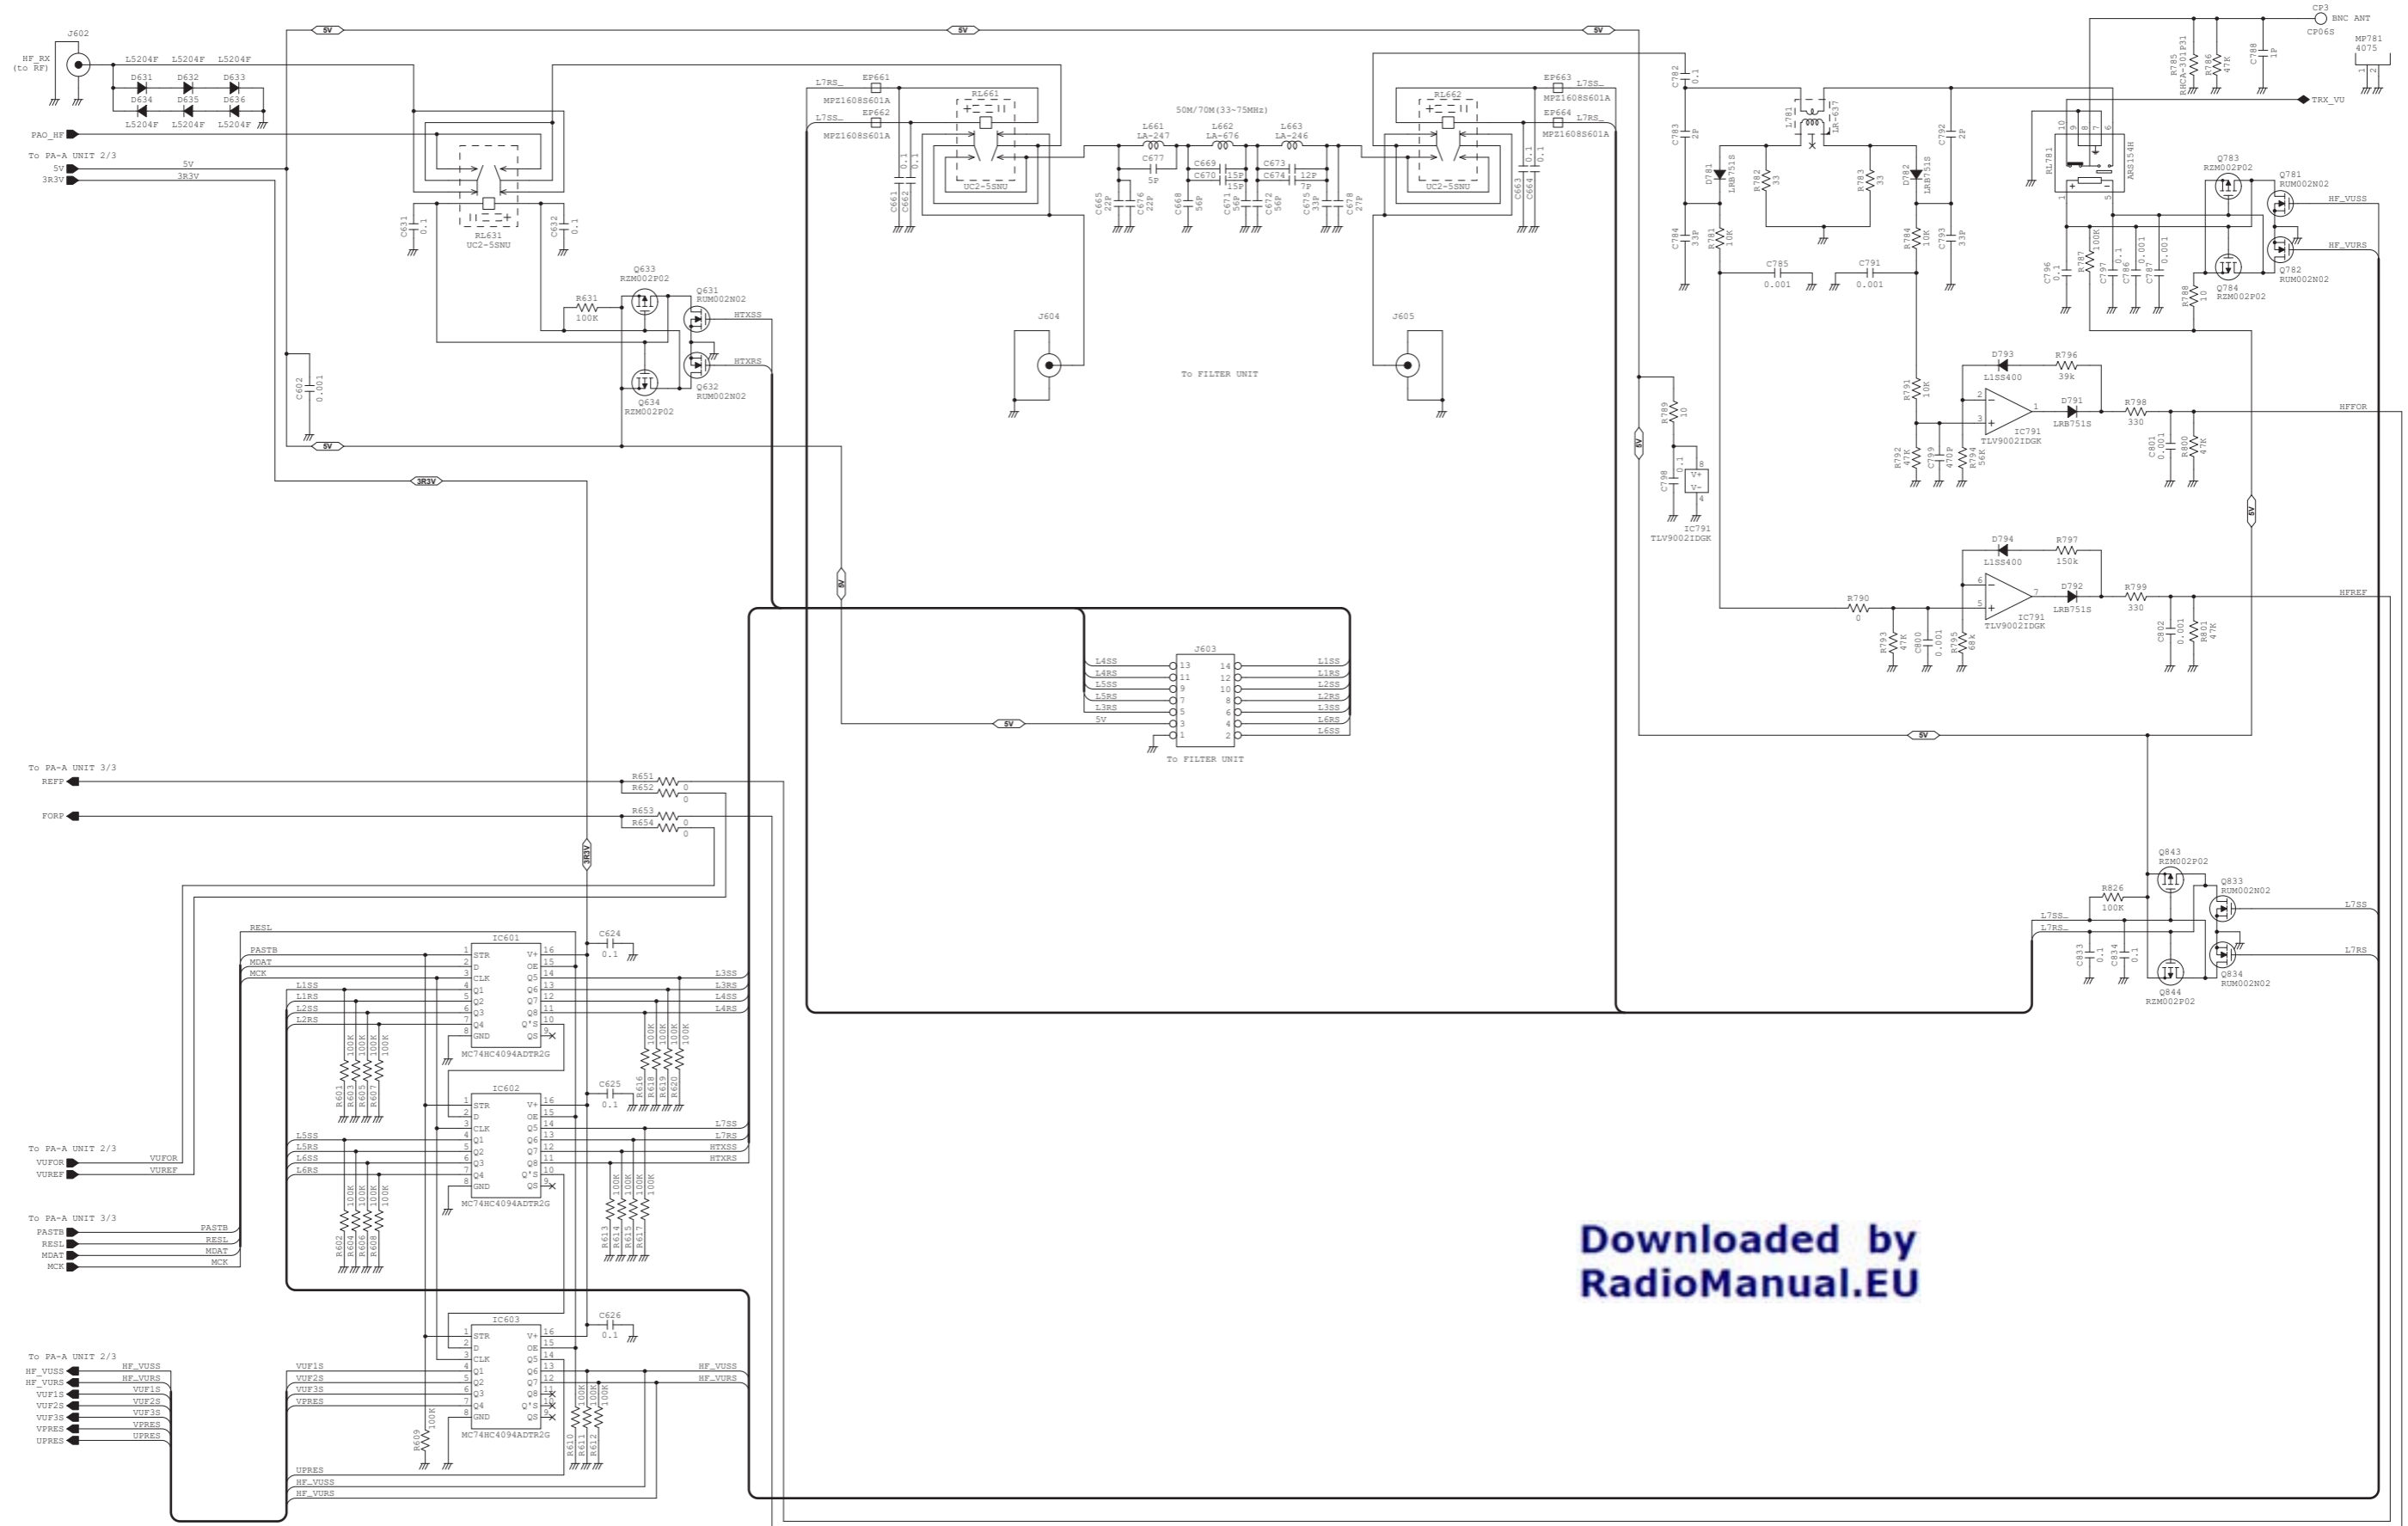


Downloaded by
RadioManual.EU

• PA-A UNIT (3/3)

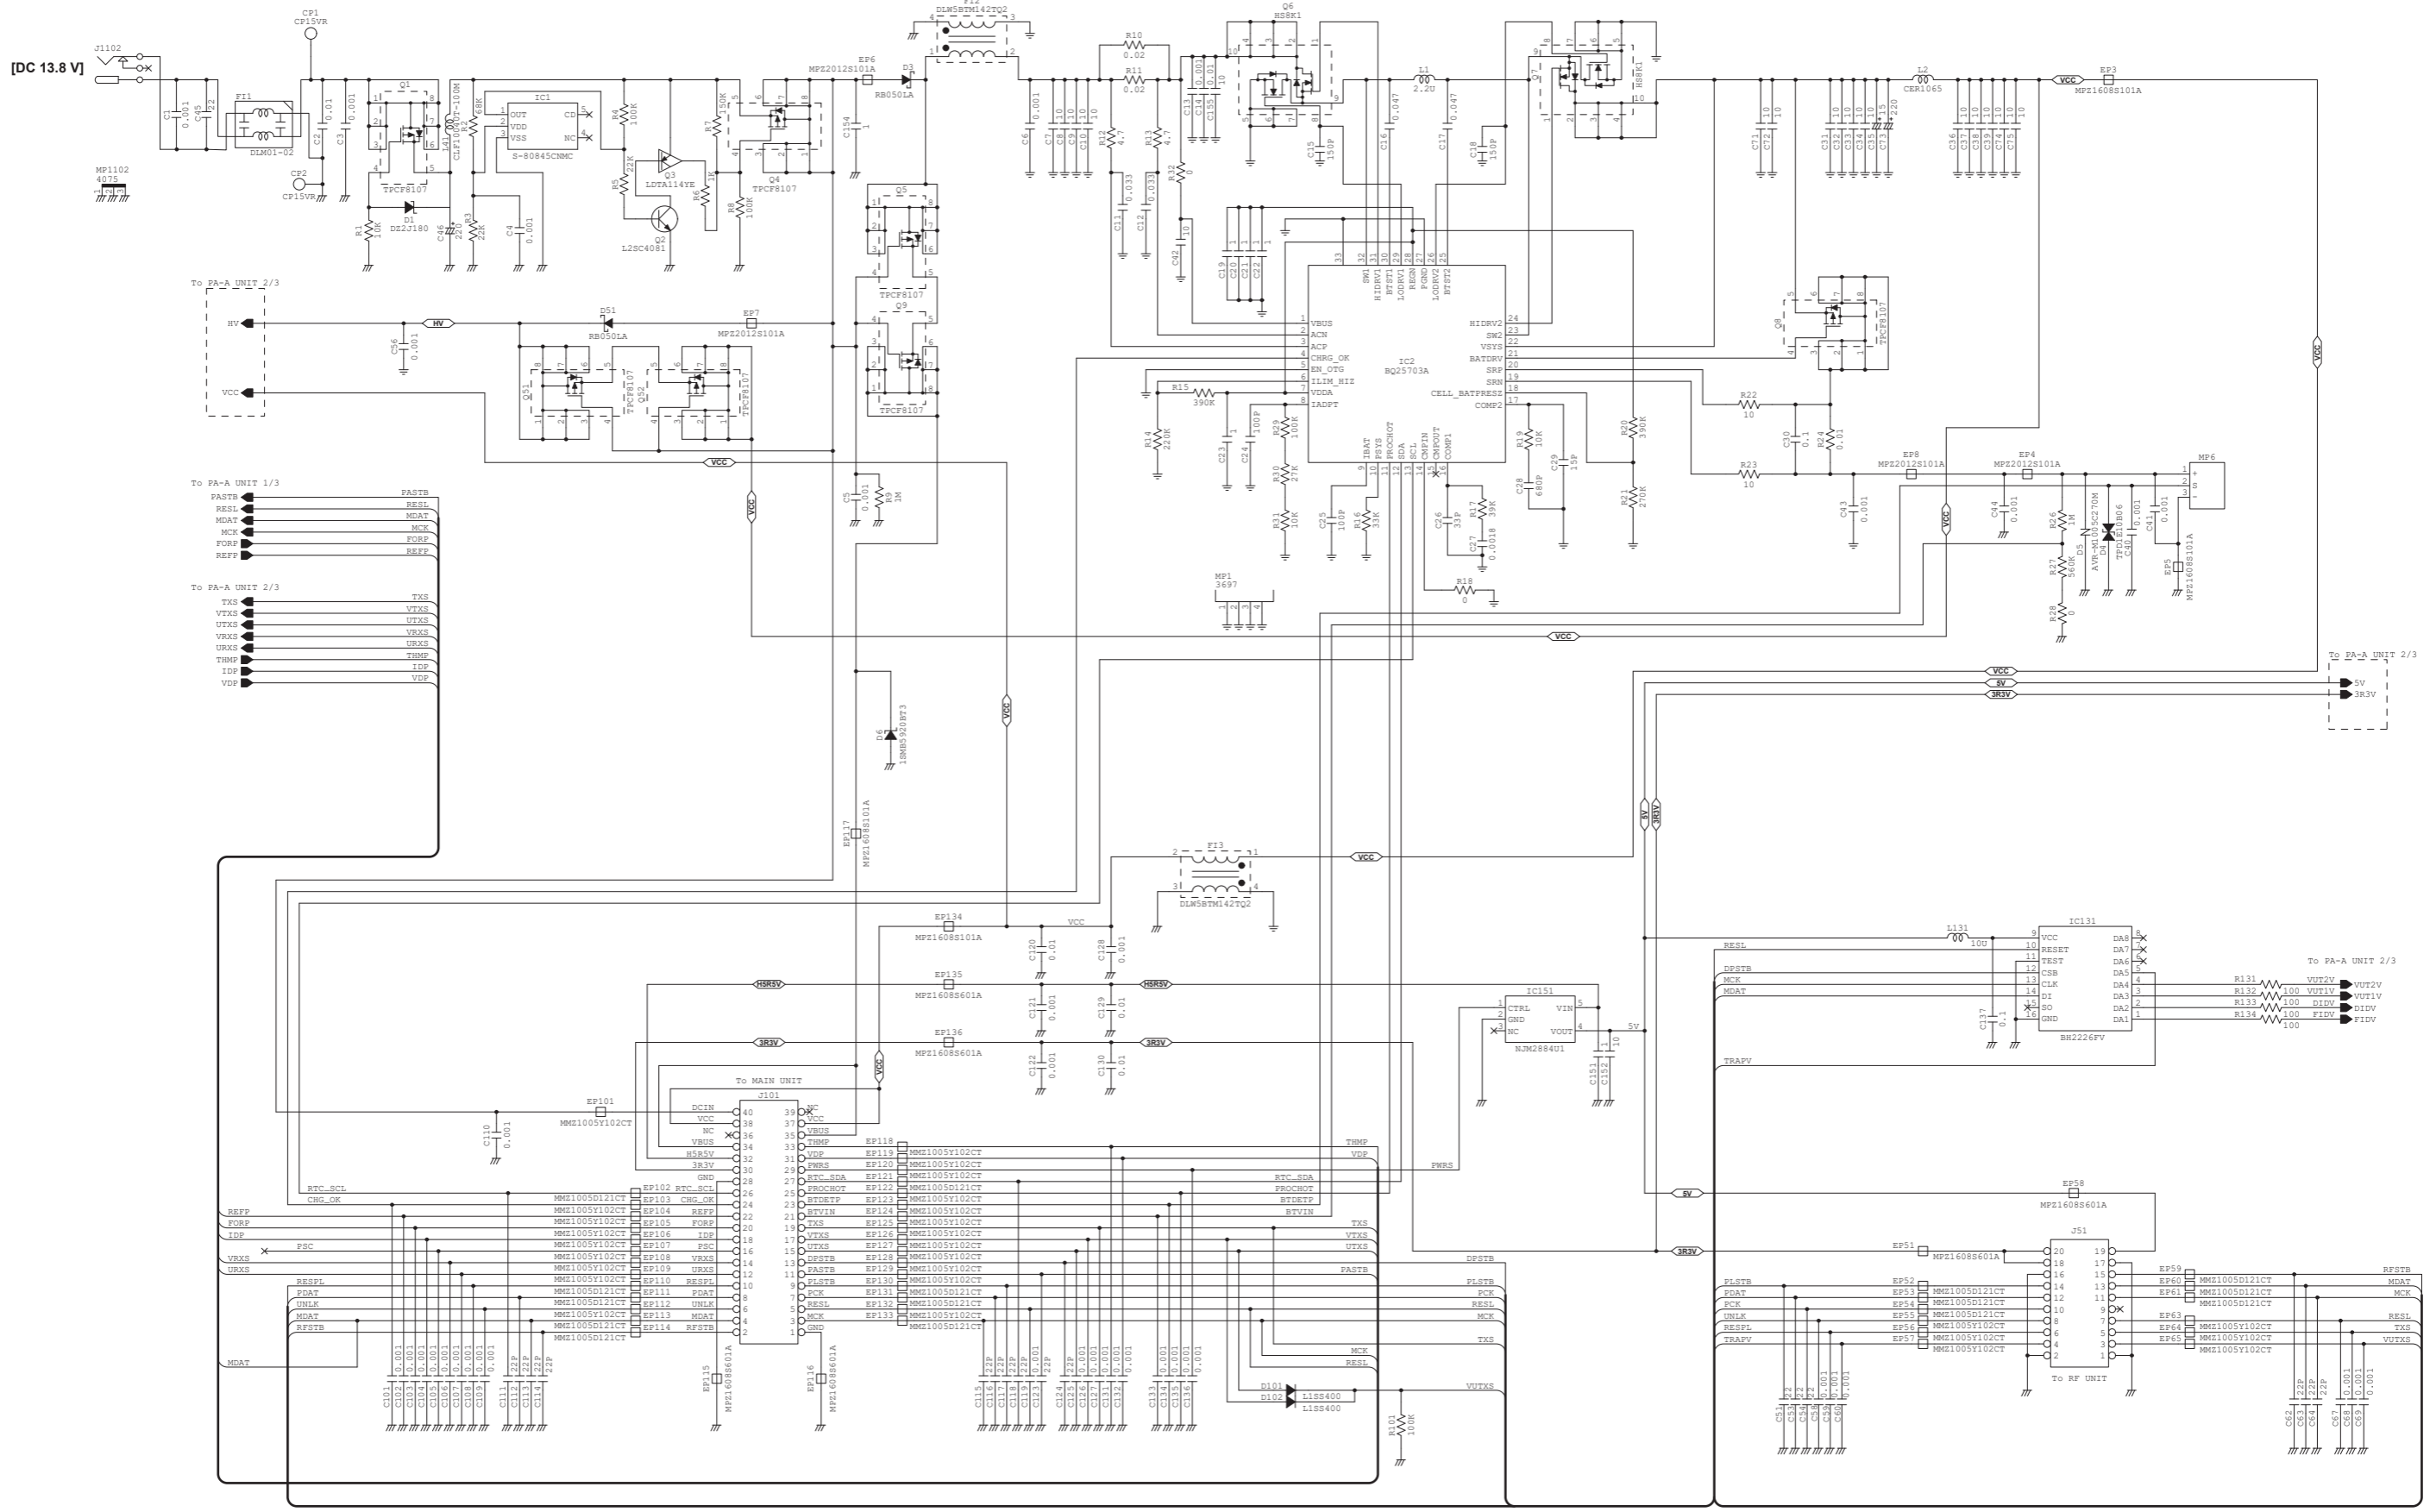

• FILTER UNIT

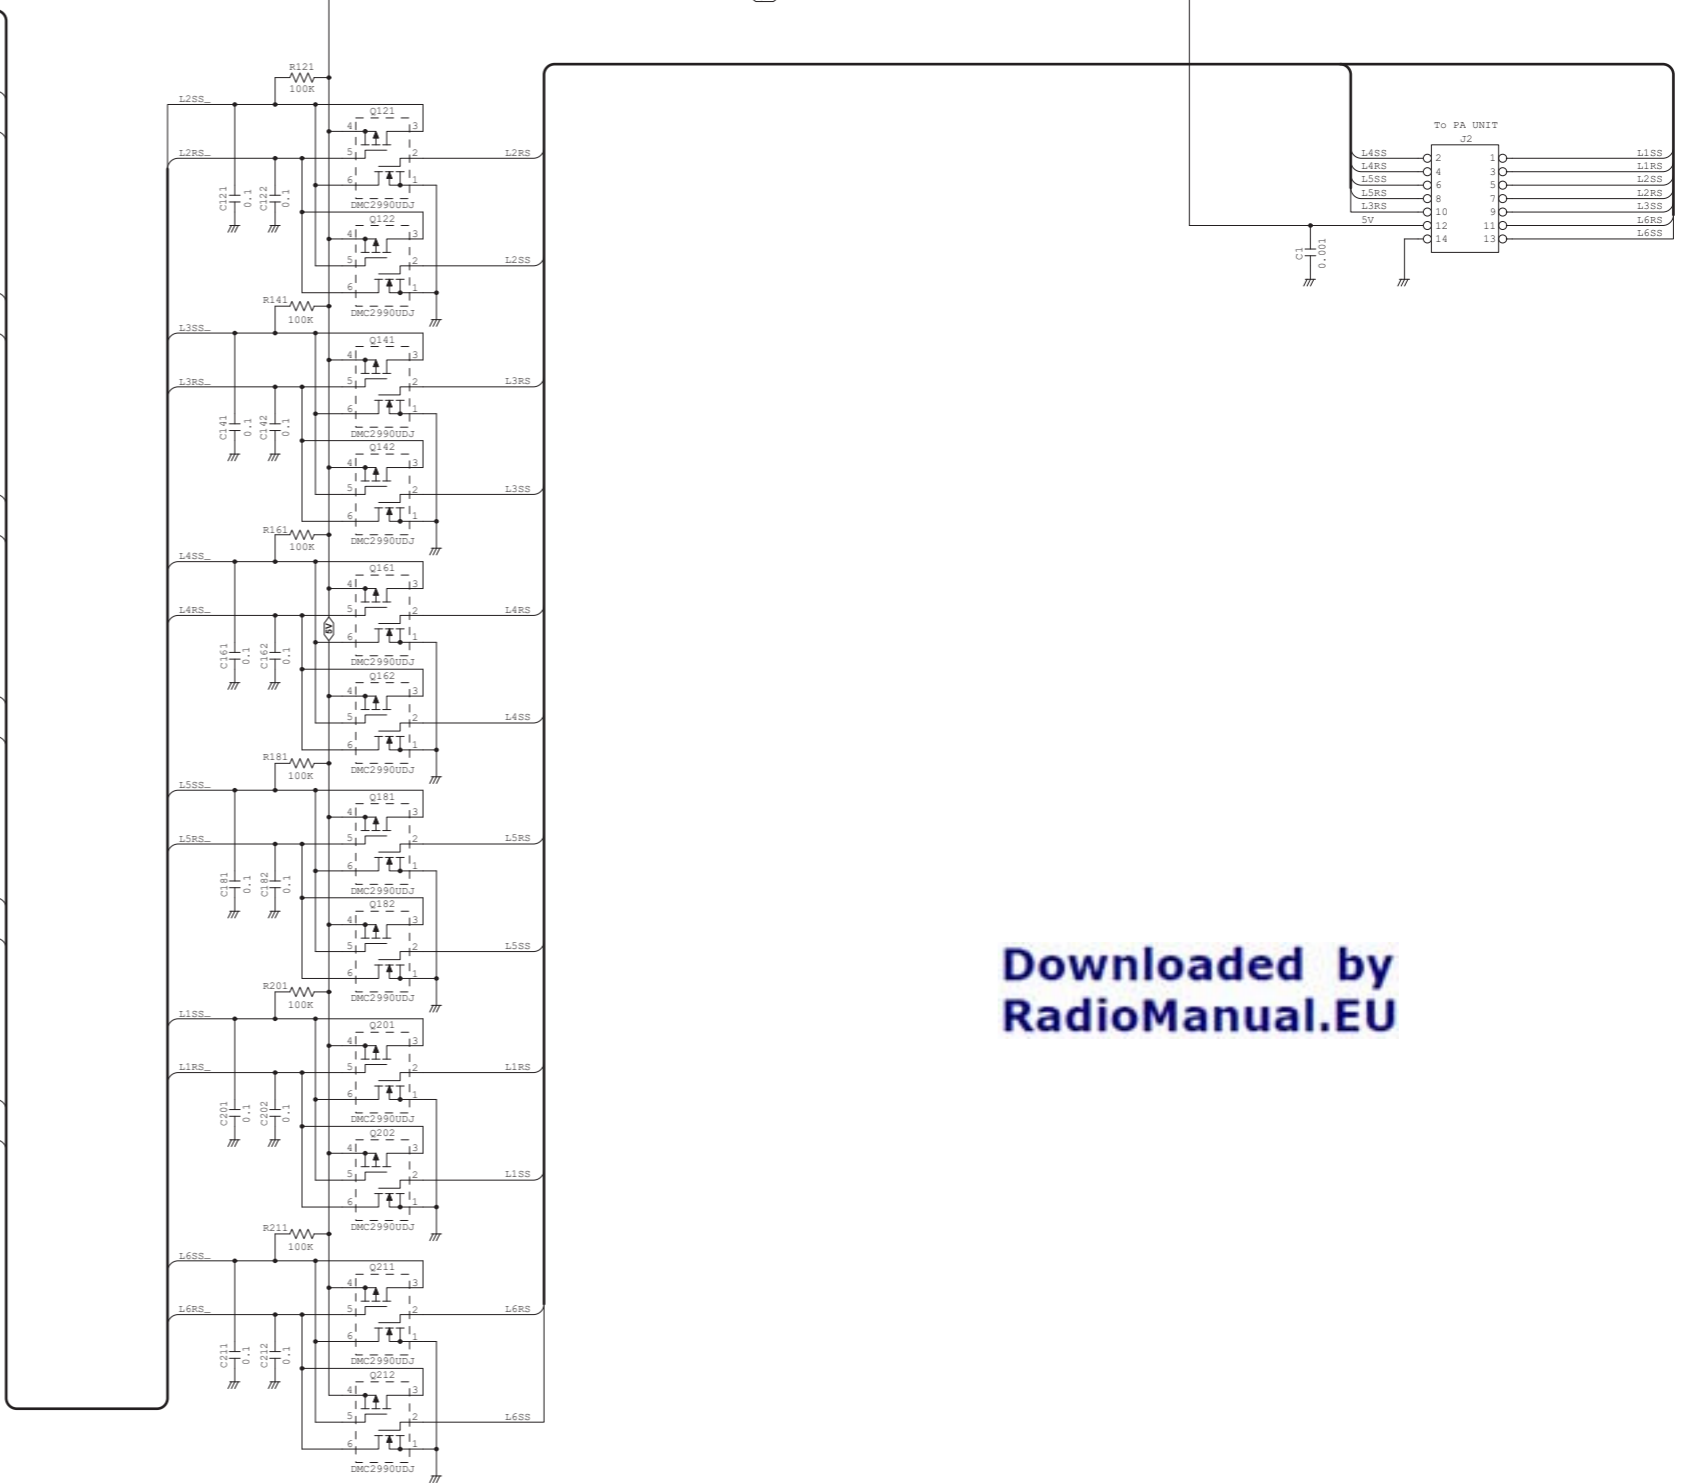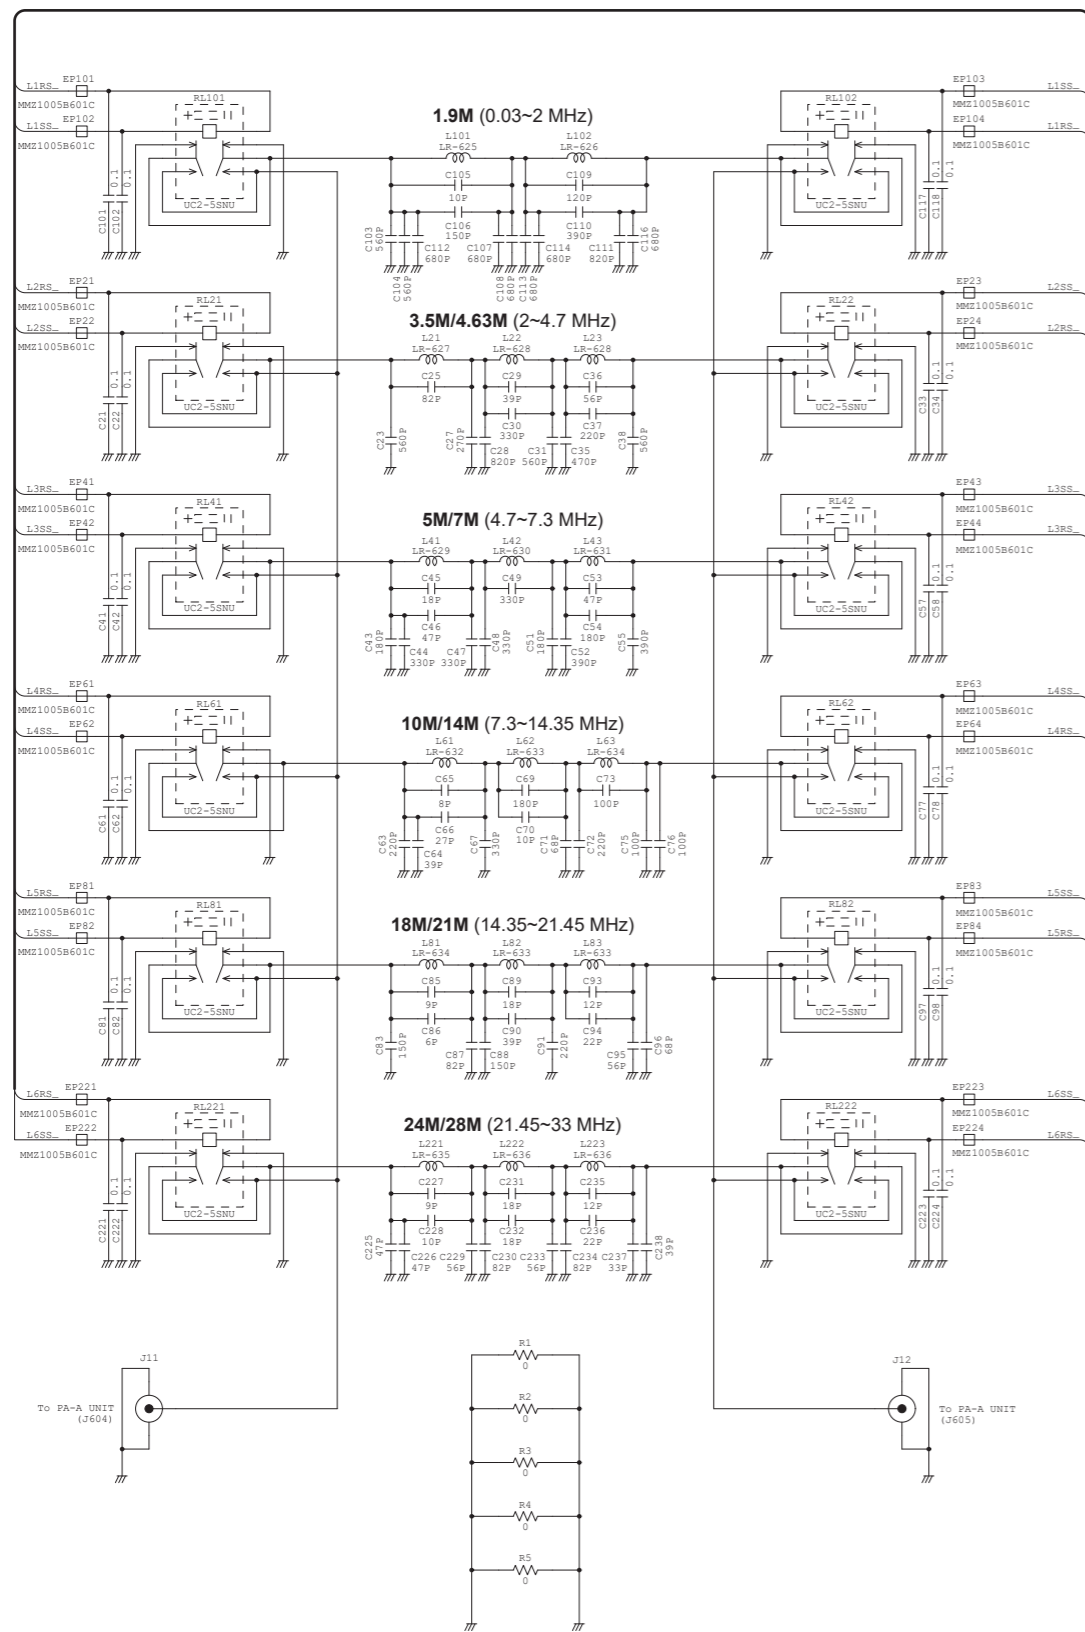

Downloaded by
RadioManual.EU