

C200D02R/C200D10R/C200D30R Operating and Maintenance Manual

SOLID-STATE RADIO FREQUENCY POWER AMPLIFIER

HENRY RADIO, INC.

2050 S. Bundy Drive Los Angeles, CA 90025 USA 310-820-1234 310-826-7790 fax

LIMITED WARRANTY: Henry Radio warrants each new product to be free from defective material and workmanship. Henry Radio agrees to remedy any such defect or to furnish a new part in exchange for any part of any unit which under normal installation, use, and service discloses such defect. The equipment or part must be delivered by the original owner to us intact for our examination, with all transportation charges prepaid to our factory, within 1 year from the date of sale to the original purchaser. Provided that our evaluation discloses, in our judgement, such a defect, Henry Radio will repair at no charge, or replace at their discretion, such defective part or equipment.

EXCLUSIONS: Henry Radio does not warrant any vacuum tube used in their equipment. These are warranted by the tube manufactuer. Warranty claims must include proof of the date of purchase. The warranty does not extend to damage or failure caused by transportation damage, misuse, neglect, accident, incorrect installation, acts of nature, or to equipment modified or repaired without our prior approval.

This warranty does not include incidental or consequential damages and the Henry Radio warranty disclaims any liability for any such damage. All implied warranties, if any, are limited in duration to the above stated 1 year.

Henry Radio reserves the right to make any improvements to its products which it may deem desireable without obligation to install such improvements in its previously sold products.

C200D02R/C200D10R/C200D30R

SPECIFICATIONS

RF Output Power: 200 watts maximum.

RF Input Power: 2-4 watts (C200D02R), 8-10 watts (C200D10R),

30-35 watts (C200D30R) maximum.

Frequency Range: 400 to 512 MHz (10 MHz tuned bandwidth).

Input/Output Impedance: 50 ohms nominal. Harmonic Suppression: 70 dB nominal.

Mode: Class C (for FM operation).

RF Connectors: N type (female).

Duty Cycle: Continuous at rated output.

Cooling: Built-in DC fans with thermostat control.

Power Requirements: 13.8 VDC, negative ground, 45 amps maximum.

Dimensions: 19" wide x 6.25" high x 6" deep.

Shipping Weight: 15 pounds.

Options: Bypass (dropout) Relay.

AC power supply (110 or 220 VAC).

Warranty: 1 year parts and labor. Made in the USA

INSTALLATION NOTES

INTRODUCTION

Remove the amplifier from its packing material and examine it carefully for damage in shipping. If the amplifier was damaged in shipment, save the box and packing material and notify the transportation company immediately.

The amplifier was tested and tuned at our factory at the operating frequency specified when the order was placed. A description of the frequency and test results is included on an enclosed test sheet. These tests were made into a 50 ohm dummy load.

The installer is responsible to provide the following items:

A 50 ohm antenna tuned to the operating frequency - An operating location with proper ventilation to prevent overheating - Output coax to connect the amplifier and antenna that can handle 200+ watts at 450 MHz (RG142, 9913, or hardline) without overheating - An operating location protected from environmental hazards such as water, heat, pests, or dust - A stable drive signal at the input jack of the amplifier adjusted to a proper power level.

INSTALLATION

Connect the amplifier to a 13.8 VDC power supply capable of supplying at least 50 amps of power in continuous service. You must use a wire large enough to prevent voltage drop at high current levels.

Connect your transmitter/repeater to the RF input connector on the amplifier using 50 ohm coax cable.

Connect the amplifier to your antenna or a

50 ohm dummy load on your test bench.

Install a through-line wattmeter in the output cable (either a Bird 43 or equal). Turn on the power supply and the transmitter.

Slowly increase the power from your transmitter until the output power of the amplifier reaches the desired level - as shown on the wattmeter,

If you do not have a wattmeter, an alternate method is to use the performance figures shown on the supplied test sheet to approximate the output.

At the operating power level, reverse the wattmeter element and confirm that the reflected power is near zero. If the reflected power is greater than 10% of the output power, your antenna is not properly tuned and you may damage the amplifier!

You can increase reliability and save money by installing proper lightning protection on your antenna system.


SERVICE AND REPAIR

Should it be necessary to return the amplifier for warranty or non-warranty repair, pack it very carefully to prevent shipping damage.

Be certain to include a written description of the problem, your operating frequency, and any special instructions.

It is wise to call first to make sure it is necessary to return the equipment.

INSTALLATION DRAWING

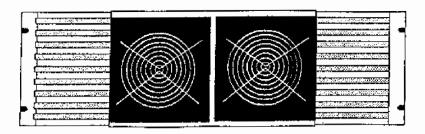

GOOD RELIABILITY REQUIRES:


Stable RF drive at the proper designated wattage. A proper power supply, regulated, 13.8 VDC, 50 amps plus. Minimum SWR at the output connector.

Professional lightning protection on the antenna.

Professional lightning protection on the AC mains.

Proper environmental protection from dust, moisture, and heat.


Proper coax on the antenna line.

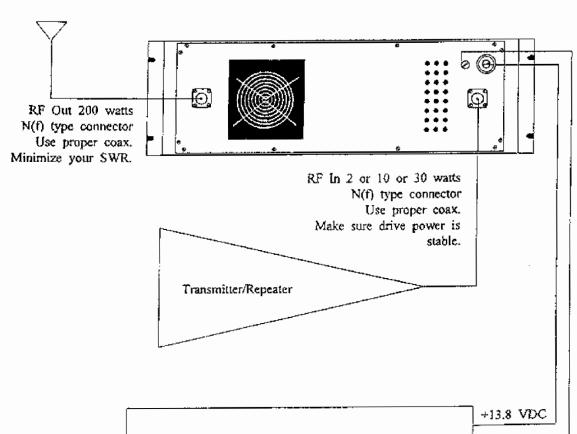

Power Leads must be 8 ga to handle rated current.


A well regulated 13.8 VDC power supply capable of supplying 50 amps continuous duty output.

Ground Lead

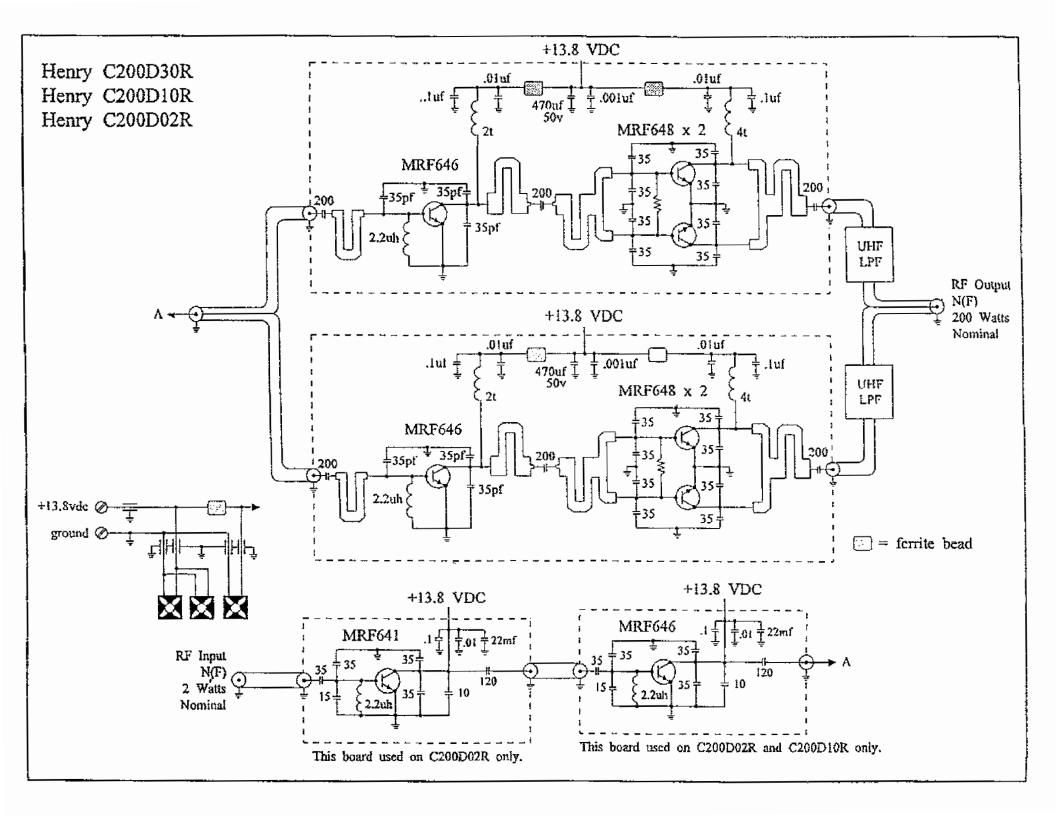

NOTE; SOME COMPONENTS AND WIRING OMITTED FOR CLARITY.

NOTE: FULL SCALE ON C SIZE DRAWING. NOTE: ALL CAPACITANCES IN PICOFARADS UNLESS OTHERWISE NOTED.

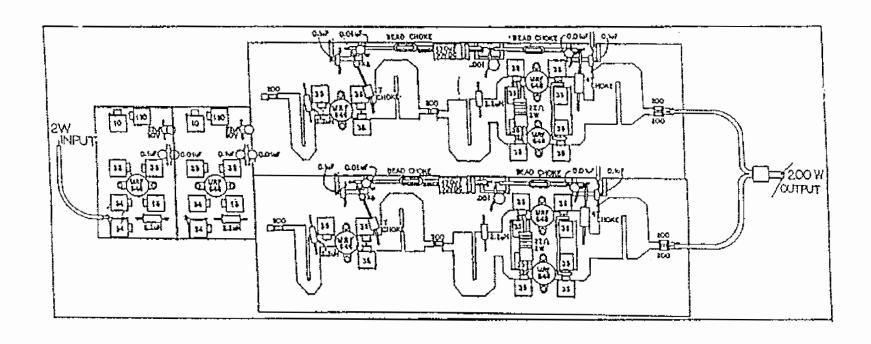


430 - 460MHz CONFIGURATION SHOWN. ANY 30MH BAND BETWEEN 400 AND 512MH AVAILABLE.

> HENRY ELECTRONICS INC 2000 COUTH BUNDY DRIVE LOS ANGELES CA 00026

NOTE: SOME COMPONENTS AND WIRING OMITTED FOR CLARITY.

NOTE: FULL SCALE ON U SIZE DRAWING. NOTE: ALL CAPACITANCES IN PICOFARADS UNLESS OTHERWISE NOTED.

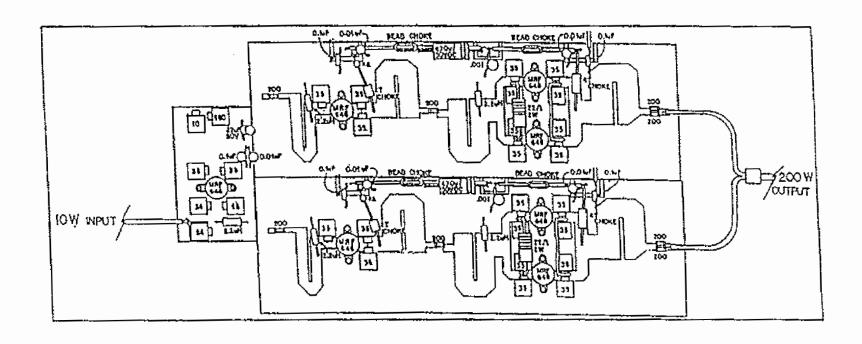


430 - 460MHz CONFIGURATION SHOWN. ANY 30MH BAND BETWEEN 400 AND 512MH AVAILABLE.

> HENRY ELECTRONICS INC 2000 SOUTH BURIDY DRIVE LOS ANGELES CA 09025

NOTE; SOME COMPONENTS AND WIRING OMITTED FOR CLARITY


NOTE: FULL SCALE ON C SIZE DRAWING. NOTE: ALL CAPACITANCES IN PICOFARADS UNLESS OTHERWISE NOTED.

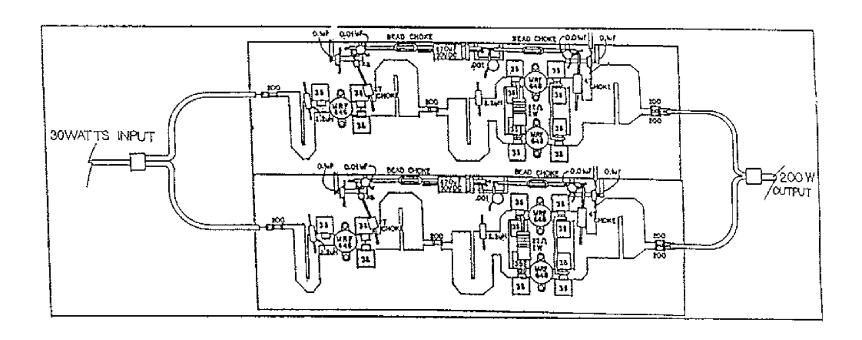

430 - 460MHz CONFIGURATION SHOWN. ANY 30MH BAND BETWEEN 400 AND 512MH AVAILABLE.


> 07-12-56 Pt HENRY ELECTRONICS INC 2050 COUTH BUR DY DRIVE LOS ANGELES CÀ 00025

 $Henry\ 9600\text{--}1075$ RF Power Amplifier Module – UHF – 150-200 mw to 10 watts

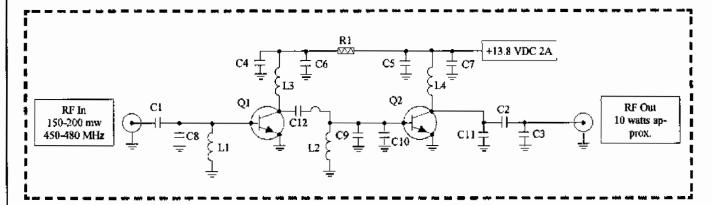

Schematic No.	Description	Part Number
C1-C2	Capacitor: Mica chip, miniature, 200 pf, 125 vdc.	Capacitor
C3	Capacitor: Mica chip, miniature, 10 pf, 125 vdc.	Capacitor
C4-C5	Capacitor: Bypass, .1 mf, 25 vdc.	Capacitor
C6-C7	Capacitor: Electrolytic, bypass, 10 mf, 25 vdc.	Capacitor
C8-C9-C10-C11	Capacitor: Mica chip, miniature, 27 pf, 125 vdc.	Capacitor
C12	Capacitor: Mica chip, miniature, 15 pf, 125 vdc.	Capacitor
L1-L2	Choke: Encapsulated, 1 microhenry, miniature.	Miller 9230-20
L3-L4	Coil: 4 turn open buss wire.	Непгу
Q 1	Transistor: Bipolar, RF power amplifier, UHF.	Motorola MRF555
Q2	Transistor: Bipolar, RF power amplifier, UHF.	Motorola MRF641
R1	Resistor: Wire wound 10 ohm, 3 watt, 1%.	Resistor

All specifications and part numbers are subject to change without notice.

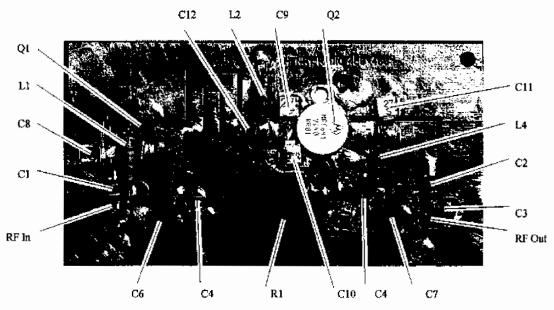

www.benryradio.com

Revised February 2000