


Radio Shack

ONE DOLLAR AND
NINETY-FIVE CENTS

62-2030

Tube Substitution HANDBOOK



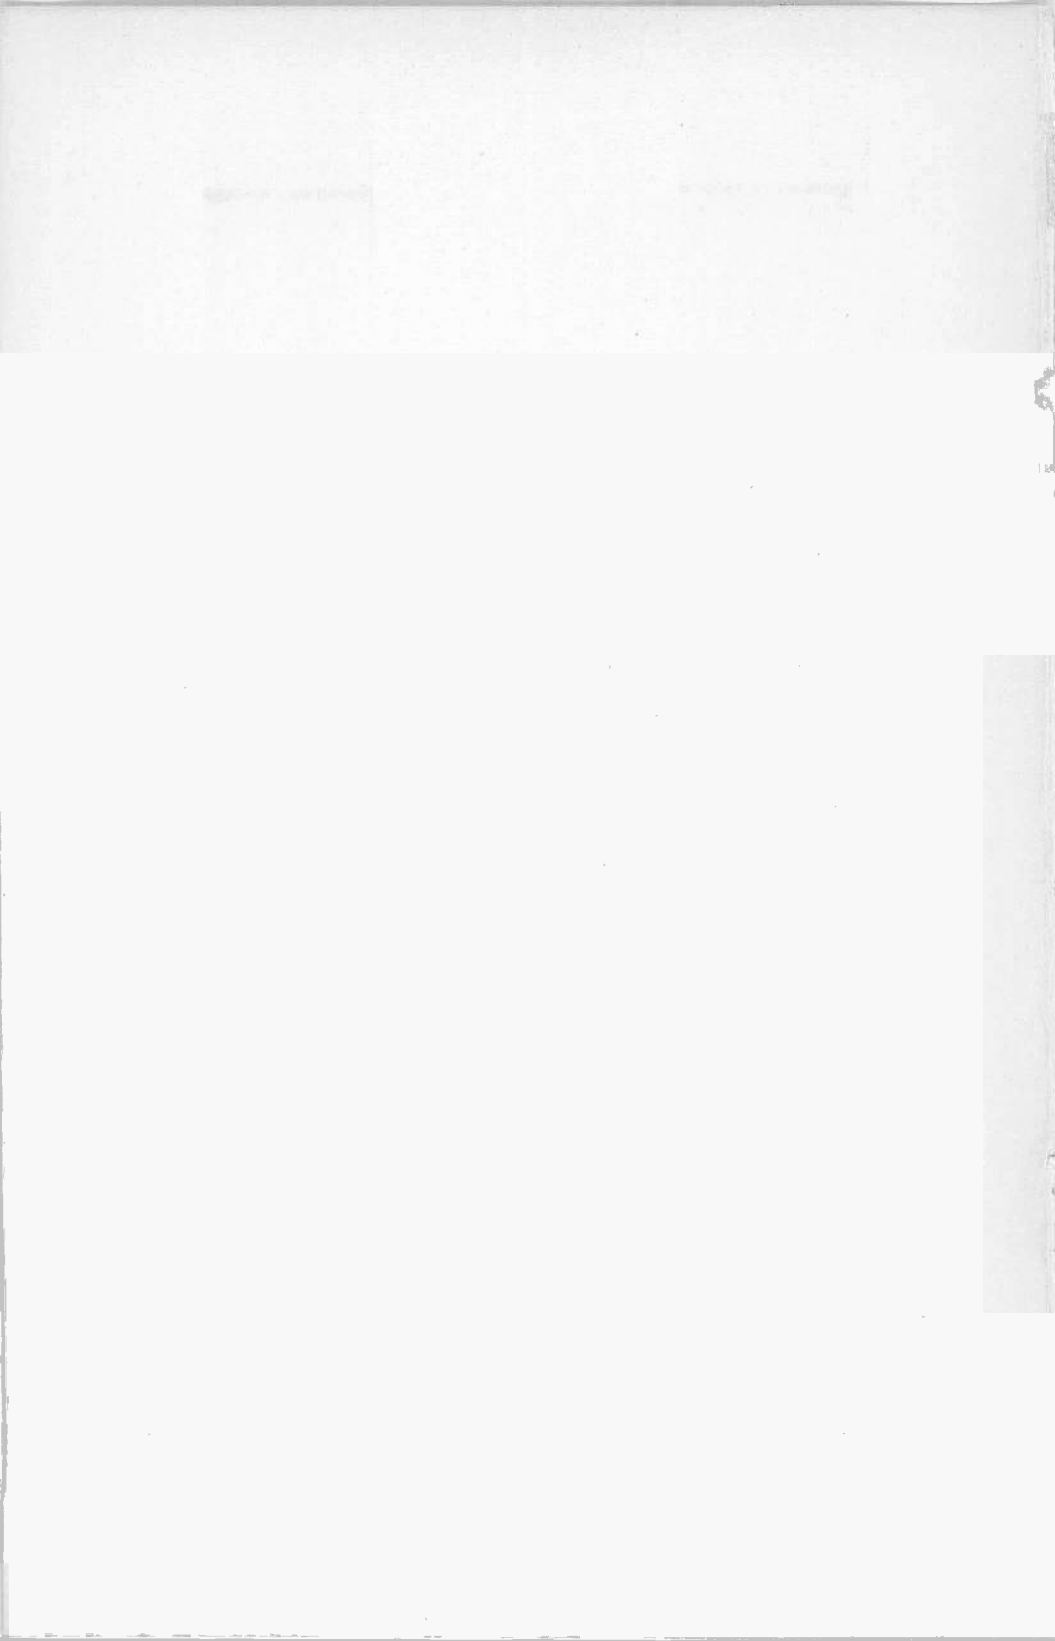

21750-519.1

TUBE SUBSTITUTION HANDBOOK

by

The Howard W. Sams Engineering Staff

Howard W. Sams & Co., Inc.
4300 WEST 62ND ST. INDIANAPOLIS, INDIANA 46268 USA

Copyright © 1960, 1961, 1962, 1963, 1964, 1966, 1967, 1968,
1969, 1970, 1971, 1972, 1973, 1974, 1975, 1977, and 1980
by Howard W. Sams & Co., Inc., Indianapolis, Indiana 46268

TWENTY-FIRST EDITION
SPECIAL PRINTING—1981


All rights reserved. No part of this book shall be reproduced, stored in a retrieval system, or transmitted by any means, electronic, mechanical, photocopying, recording, or otherwise, without written permission from the publisher. No patent liability is assumed with respect to the use of the information contained herein. While every precaution has been taken in the preparation of this book, the publisher assumes no responsibility for errors or omissions. Neither is any liability assumed for damages resulting from the use of the information contained herein.

International Standard Book Number (Regular): 0-672-21746-5
International Standard Book Number (Twin Pack): 0-672-21748-1
Library of Congress Catalog Card Number: 60-13842

Printed in the United States of America.

Contents

Introduction	5
SECTION 1	
Cross Reference of American Receiving Tubes	7
SECTION 2	
Picture-Tube Substitutes	45
SECTION 3	
Industrial Substitutes for Receiving Tubes	81
SECTION 4	
Communications and Special-Purpose Tubes	85
SECTION 5	
Foreign Substitutes for American Types	93
SECTION 6	
American Substitutes for Foreign Types	103
SECTION 7	
Tube Basing Diagrams	113



Introduction

Although tube substitution should not be performed indiscriminately, there are numerous occasions when it is necessary and feasible. For example, when you don't have the exact tube type with you on a service call, you'll either have to take the chassis to the shop (without knowing if a new tube would fix the trouble), or else make a special trip just to get the tube. The same applies if you're working in the shop and need a replacement you don't have—you have to make a special trip to the distributor.

Also, when a tube is out of production or the distributor does not have it in stock, a substitute is needed. On occasion, too, it is desirable to use an improved version of the tube being replaced. For example, replacing a 6BK4 with the improved 6EN4 will usually result in better performance.


For your convenience, this handbook is divided into seven sections. The first section lists receiving tubes and their substitutes. The second section lists picture tubes and their substitutes. There are numerous occasions when a picture-tube substitute is necessary: The exact type may be out of production, or it may not be immediately available from the distributor; in either case it is necessary to use a substitute. Also, in custom installations a shorter-necked picture tube may have to be chosen. At the end of the picture-tube section is a listing of those tubes requiring odd filament voltages (other than 6.3 volts), or low E_{g2} potentials. This information can be very useful when setting up your picture tube testing and rejuvenating equipment.

Section 3 lists receiving tubes which can be replaced with industrial types. (Industrial tubes are more rugged than receiving types in that their peak ratings and power-handling characteristics are much higher; therefore, it may be desirable to substitute an industrial tube to get more satisfactory results.) Section 4 lists communications and special-purpose tubes.

Sections 5 and 6 list American and foreign equivalents. If you have an American tube and want to know what foreign type will serve as a substitute, refer to Section 5. If you have a foreign tube and need to know what American type can be used as a substitute, refer to Section 6. (Additional substitutes may be obtained by cross-referencing the American substitutes given in Section 6 with listings in Section 1.)

For additional information, refer to the introductions to each section. Also pay particular attention to the various notes pertaining to the substitutions.

The basing diagrams for tubes listed in Sections 1, 2, and 4 are given in Section 7. This section provides a handy reference to pin numbers for quick checks on a tube.



SECTION 1

Cross Reference of American Receiving Tubes

This section lists all American receiving tubes which have been or are being manufactured. Also included are the latest tube types registered with EIA, but not yet in production.

To use this listing, locate in the left-hand column the tube type to be replaced. Then, refer to the right-hand column for the substitute. The substitutes are only those tubes which have similar, or improved, characteristics and can be inserted directly into the socket. No rewiring or mechanical changes are needed, although the associated service controls may have to be readjusted.

The x-radiation levels emitted from all television receivers produced after January 15, 1970 must meet rigid government standards. These radiations are primarily produced by high-voltage rectifier tubes, shunt-regulator tubes, and picture tubes. The radiation level is controlled in later designed tubes. In this tube substitution guide, wherever possible, only the newer tubes are suggested as replacements. While other substitutes may appear suitable, they have not been listed because of the possibility of excessive radiation which might occur.

In some instances, the available space around the tube should be considered. For example, although electrically identical to a 6L6GB, a 6L6G is more than one inch taller and a half inch larger in diameter. Thus, the substitution may be physically impossible in some compact equipment.

Do not replace a tube in the right-hand column with one in the left-hand column because this may result in a tube with lesser qualifications being used. For example, where a high heater-to-cathode potential exists, a 6AX4GTA will hold up, whereas a 6W4 will not. Thus, you'll find the 6AX4GTA listed as a substitute for the 6W4, but not vice versa.

When no substitutes are shown, none are recommended. Refer to Section 3 to see if an industrial replacement is recommended.

The Basing Code is given in the second column. Use this number and refer to Section 7 for the pin connections of the tube.

Tube Type	Basing	Replacement	Tube Type	Basing	Replacement
00A	4D		1AM4	6AR	1AF4, 1AJ4, 1T4SF, 1AE4*, 1T4*
01A	4D	12A, 112A	1AN5	7ES	
0A2	5B0		1AQ5	7AT	1R5SF, 1R5*
0A3	4AJ	0A3A, VR75	1AR5	6AU	1AF5, 1AH5, 1S5*
0A3A	4AJ	0A3, VR75	1AS5	6BW	1U5SF, 1DN5*, 1U5*
0A4G	4V		1AU2	9U	
0A5	6CB		1AU3	3C	1N2, 1N2A
0B2	5B0		1B3GT	3C	1AU3, 1G3GT, 1G3-GTA, 1G3GT/1B3GT, 1J3, A, 1K3, A, 1N2, A
0B3	4AJ	0B3A, VR90	1B4	4M	1B4G, P, T, 951, 1A4, P, T, 32, 34, 1C4*, 1K4*
0B3A	4AJ	0B3, VR90	1B4G	4M	1B4, P, T, 951, 1A4, P, T, 32, 34, 1C4*, 1K4*
0C2	5B0		1B4P	4M	1B4, G, T, 32, 951, 1A4, P, T, 34, 1C4*, 1K4*
0C3	4AJ	0C3A, VR105	1B4T	4K	1B4, G, T, 32, 951, 1A4, P, T, 34, 1C4*, 1K4*
0C3A	4AJ	0C3, VR105	1B5	6M	1B5/25S, 25, 25S
0D3	4AJ	0D3A, VR150	1B5/25S	6M	1B5, 25, 25S
0D3A	4AJ	0D3, VR150	1B6	7AV	
0Y4	4BU	0Y4G	1B7G	7Z	1B7GT, 1A7G*, GT*, GT/G*, 1B7GT/G
0Y4G	4BU	0Y4	1B7GT	7Z	1B7G, 1A7G*, GT*, GT/G*, 1B7G/G
0Z4	4R	0Z4A, 0Z4G (may require shield)	1B7GT/G	7Z	1B7G, GT, 1A7G*, GT*, GT/G*
0Z4A	4R	0Z4, 0Z4G (may require shield)	1B8GT	8AJ	1D8GT§
0Z4G	4R	0Z4, 0Z4A	1BC2	9RG	1BC2-A, 1BC2-B
1A3	5AP		1BC2-A	9RG	1BC2-B
1A4	4K	1A4P, T, 1B4, G, P, T, 951, 32, 34, 1C4*, 1K4*	1BC2-B	9RG	
1A4P	4K	1A4, T, 1B4, G, P, T, 951, 32, 34, 1C4*, 1K4*	1BH2	9RG	1BH2-A
1A4T	4K	1A4, P, 1B4, G, P, T, 951, 32, 34, 1C4*, 1K4*	1BH2-A	9RG	
1A5G	6X	1A5GT, 1A5GT/G, 1T5GT	1BK2	9Y	1S2
1A5GT	6X	1A5G, 1A5GT/G, 1T5GT	1BX2	9Y	1X2-C
1A5GT/G	6X	1A5G, 1A5GT, 1T5GT	1BY2	12HZ	1BY2-A
1A6	6L	1C6*	1BY2-A	12HZ	
1A7G	7Z	1A7GT, 1B7G*, GT*	1C4	4K	1K4, 1A4*, P*, T*, 1B4*, G*, P*, T*, 32*, 34*, 951*
1A7GT	7Z	1A7G, 1B7G*, GT*	1C5G	6X	1C5GT, GT/G, 1Q5G, GT, GT/G, 1T5GT*
1A7GT/G	7Z	1A7G, GT, 1B7G*, GT*	1C5GT	6X	1C5G, GT/G, 1Q5G, GT, GT/G, 1T5GT*
1AB5	5BF		1C5GT/G	6X	1C5G, GT, 1Q5G, GT, GT/G, 1T5GT*
1AB6	7DH	1AC6*	1C6	6L	1A6*
1AC6	7DH	1AB6*	1C7G	7Z	1D7G*
1AD2	12GV	1AD2-A			
1AD2-A	12GY				
1AE4	6AR				
1AF4	6AR	1AJ4, 1AM4, 1T4SF, 1AE4*, 1T4*, 1U4*			
1AF5	6AU	1AH5, 1AR5, 1S5*			
1AH5	7DJ	1AF5, 1AR5, 1S5*			
1AJ2	12EL				
1AJ4	7DP	1AF4, 1AM4, 1T4SF, 1AE4*, 1T4*			

Tube Type	Basing	Replacement	Tube Type	Basing	Replacement
1D4G	5B	1D4GT	1G6GT	7AB	1G6G, GT/G
1D4GT	5B	1D4G	1G6GT/G	7AB	1G6G, GT
1D5G	5R	1D5GP, GT, 1E5G, GP, GT, 1K5G*, 1M5G*	1H2	9LX	
1D5GP	5Y	1D5G, GT, 1E5G, GP, GT, 1K5G*, 1M5G*	1H4G	5S	1H4GT
1D5GT	5R	1D5G, GT, 1E5G, GP, GT, 1K5G*, 1M5G*	1H4GT	5S	1H4G
1D7G	7Z	1C7G*	1H5	5Z	1H5G, GT, GT/G
1D8GT	8AJ	1B8GT§	1H5G	5Z	1H5, GT, GT/G
1DG3	8ND	1DG3-A	1H5GT	5Z	1H5, G, GT/G
1DG3-A	8ND		1H5GT/G	5Z	1H5, G, GT
1DN5	6BW	1U5, 1A5S*, 1U5SF*	1H6G	7AA	1H6GT
1DY4	7DK	1DY4A	1H6GT	7AA	1H6G
1DY4A	7DK	1DY4	1J3	3C	1G3-GTA, 1K3-A
1E3	9BG		1J3A	3C	1G3-GTA, 1K3-A
1E4G	5S	1E4GT, 1G4G, GT, GT/G	1J5G	6X	1J5GT, 1G5G, GT, GT/G
1E4GT	5S	1E4G, 1G5G, GT, GT/G	1J5GT	6X	1J5G, 1G5G, GT, GT/G
1E5G	5R	1E5GP, GT, 1D5G, GP, GT, 1K5G*, 1M5G*	1J6G	7AB	1J6GT, GX
1E5GP	5Y	1E5G, GT, 1D5G, GP, GT, 1K5G*, 1M5G*	1J6GT	7AB	1J6G, GX
1E5GT	5R	1E5G, GP, 1D5G, GP, GT, 1K5G*, 1M5G*	1J6GX	7AB	1J6G, GT
1E7G	8C	1E7GT	1K3	3C	1G3-GTA, 1K3-A
1E7GT	8C	1E7G	1K3-A	3C	1G3-GTA
1F4	5K		1K4	4M	1C4, 1A4*, P*, T*, 1B4*, G*, P*, T*, 32*, 34*, 951*
1F5G	6X	1L5G*	1K5G	5Y	1M5G, 1D5G*, GP*, GT*, 1E5G*, GP*, GT*
1F6	6W		1K7G	7AD	
1F7G	7AD	1F7GH, GT, GV, GY	1L4	6AR	1AE4*
1F7GH	7AD	1F7G, GT, GV, GY	1L5G	6X	1F5G*
1F7GT	7AD	1F7G, GH, GV, GY	1L6	7DC	1U6*
1F7GY	7AF	1F7G, GH, GT, GY	1LA4	5AD	1LA4E
1F7GY	7AD	1F7G, GH, GT, GV	1LA4E	5AD	1LA4
1G3GT	3C	1G3-GTA, 1K3-A	1LA6	7AK	1LC6
1G3-GTA	3C	1K3-A	1LB4	5AD	
1G3GT/1B3GT	3C	1G3-GTA, 1K3-A	1LB6	8AX	
1G4G	5S	1G4GT, GT/G, 1E4G, GT	1LC5	7AO	1LN5
1G4GT	5S	1G4G, GT/G, 1E4G, GT	1LC6	7AK	1LA6
1G4GT/G	5S	1G4G, GT, 1E4G, GT	1LD5	6AX	
1G5G	6X	1G5GT, GT/G, 1J5G, GT	1LE3	4AA	1LF3
1G5GT	6X	1G5G, GT/G, 1J5G, GT	1LF3	4AA	1LE3
1G5GT/G	6X	1G5G, GT, 1J5G, GT	1LG5	7AO	
1G6G	7AB	1G6GT, GT/G	1LH4	5AG	
			1LN5	7AO	1LC5
			1M3	8EM	1N3
			1M5G	5Y	1K5G, 1D5G*, GP*, GT*, 1E5G*, GP*, GT*
			1N3	8EM	1M3
			1N5G	5Y	1N5GT, GT/G, 1P5G, GT

§ May not work in all circuits.

* Parallel-filament circuits.

† Series circuit not requiring controlled warm-up time.

Tube Type	Basing	Replacement	Tube Type	Basing	Replacement
1N5GT	5Y	1N5G, 1N5GT/G, 1P5G, 1P5GT	2AH2	12DG	
1N5GT/G	5Y	1N5G, GT, 1P5G, GT	2AS2	12EW	2AS2A
1N6G	7AM	1N6GT	2AS2A	12EW	
1N6GT	7AM	1N6G	2AV2	9U	2BA2
1P5G	5Y	1P5GT, 1N5G, GT, GT/G	2AZ2	9Y	2BJ2A
1P5GT	5Y	1P5G, 1N5G, GT, GT/G	2B3	8HC	
1Q5G	6AF	1Q5GT, GT/G, 1C5G, GT, GT/G, 1T5GT*	2B6	7J	
1Q5GT	6AF	1Q5G, GT/G, 1C5G, GT, GT/G, 1T5GT*	2B7	7D	2B7S
1Q5GT/G	6AF	1Q5G, GT, 1C5G, GT, GT/G, 1T5GT*	2B7S	7D	2B7
1R4	4AH		2BA2	9U	2AV2
1R5	7AT	1R5SF*, 1AQ5*	2BJ2	9RT	2BJ2A
1R5SF	7AT	1AQ5, 1R5*	2BJ2A	9RT	
1S2A	9DT	1S2B	2BN4	7EG	2BN4A
1S2B	9DT		2BN4A	7EG	2BN4
1S4	7AV		2BU2	12JB	
1S5	6AU	1AF5*, 1AH5*, 1AR5*	2CN3A	8MU	2CN3B
1SA6GT	6BD		2CN3B	8MU	
1SB6GT	6BE		2CQ3	8MK	
1T4	6AR	1AE4*, 1AF4*, 1AJ4*, 1AM4*, 1T4SF*	2CW4	12AQ	2DS4
1T4SF	6AR	1AE4*, 1AF4, 1AJ4, 1AM4, 1T4*	2CY5	7EW	2EA5, 2EV5
1T5GT	6X	1A5G, GT, GT/G, 1C5*, GT*, GT/G*, 1Q5G*, GT/G*	2DF4	9JL	
1U4	6AR	1AF4*	2DS4	12AQ	2CW4
1U5	6BW	1DN5, 1AS5*, 1U5SF*	2DV4	12EA	
1U5SF	6BW	1AS5, 1DN5*, 1U5*	2DX4	7DK	
1U6	7DC	1L6*	2DY4	7DK	2DY4A
1V	4G	6Z3	2DY4A	7DK	2DY4
1V2	9U		2DZ4	7DK	2AF4B§
1W4	5BZ		2E5	6R	
1X2	9Y	1BX2, 1X2-C	2EA5	7EW	2EV5
1X2A	9Y	1BX2, 1X2-C	2EG4	12AQ	
1X2B	9Y	1BX2, 1X2-C	2EN5	7FL	
1X2-C	9Y	1BX2	2ER5	7FN	2ES5, 2FQ5, 2FQ5A, 2FY5
1Y2	4P		2ES5	7FN	2ER5*†
1Z2	7CB		2EV5	7EW	2EA5
2A3	4D	2A3H	2FH5	7FP	2ES5, 2FQ5, 2FQ5A, 2GK5
2A3H	4D	2A3	2FQ5	7FP	2FQ5A, 2ES5, 2FY5*†, 2GK5
2A5	6B		2FQ5A	7FP	2FQ5, 2ES5, 2FY5*†, 2GK5
2A6	6G		2FS5	7GA	2GU5
2A7	7C	2A7S	2FV6	7FQ	
2A7S	7C	2A7	2FY5	7FP	2ER5, 2FQ5, A, 2GK5
2AF4	7DK	2AF4A, B, 2DZ4§, 2T4§	2G5	6R	
2AF4A	7DK	2AF4B, 2DZ4§, 2T4§	2GK5	7FP	2FQ5, A
2AF4B	7DK	2DZ4§	2GU5	7GA	2FS5
			2GW5	7GK	
			2HA5	7GM	2HK5, 2HM5, 2HQ5
			2HK5	7GM	2HM5, 2HQ5, 2HA5†
			2HM5	7GM	2HA5, 2HK5, 2HQ5
			2HQ5	7GM	2HA5, 2HK5, 2HM5
			2HR8	9BJ	
			2J2	9DT	

Tube Type	Basing	Replacement	Tube Type	Basing	Replacement
2S/4S	5D	4S	3BF2	12GQ	
2T4	7DK	2AF4§, A§, B§, 2DZ4§	3BL2	12HK	3AT2B, 3BL2A, 3BM2A, 3BN2A
2V2	8FV	3C2	3BL2A	12HK	3AT2B, 3BM2A, 3BN2A
2V3G	4Y		3BM2	12HK	3AT2B, 3BL2A, 3BM2A
2W3	4X	2W3GT	3BM2A	12HK	3AT2B, 3BL2A
2W3GT	4X	2W3	3BN2	12FV	3AT2B, 3BL2A, 3BM2A
2X3G	4X		3BN2A	12FV	3AT2B, 3BL2A, 3BM2A
2Y2	4AB	2X2, A	3BN4	7EG	3BN4A
2Z2	4B	2Z2/G84, G84	3BN4A	7EG	3BN4
2Z2/G84	4B	2Z2, G84	3BN6	7DF	
3A2	9DT	3A2A	3BS2	12HY	3BS2B, 3BT2A, 3BW2
3A2A	9DT		3BS2A	12HY	3BS2B, 3BT2A, 3BW2
3A3	8EZ	3A3B, C, 3CU3A, 3CV3A, 3DB3, 3DJ3	3BS2B	12HY	3BT2A
3A3A	8EZ	3A3B, C, 3CU3A, 3CV3A, 3DB3, 3DJ3	3BT2	12HY	3BS2B, 3BT2A
3A3B	8EZ	3A3C, 3CV3A, 3DB3, 3DJ3	3BT2A	12HY	3BS2B, 3BW2
3A3C	8EZ	3DJ3	3BU8	9FG	3BU8A, 3GS8, 3HS8, 3KF8
3A4	7BB		3BU8A	9FG	3BU8, 3GS8, 3HS8, 3KF8
3A5	7BC		3BW2	12HY	3BS2B, 3BT2A
3A8G	8AS	3A8GT	3BX6	9AQ	3BY7
3A8GT	8AS	3A8G	3BY6	7CH	3BE6, 3CS6
3AF4A	7DK	3AF4B, 3DZ4§	3BY7	9AQ	3BX6
3AF4B	7DK	3DZ4§	3BZ6	7CM	3BA6§, 3CB6§, 3CE6§, 3CF6§, 3DK6§
3AJ8	9CA		3C2	8FV	
3AL5	6BT		3C4	6BX	3E5, 3V4*
3AT2	12FV	3AT2A, 3BL2A, 3BM2A, 3BN2A	3C5GT	7AP	3B5, GT, 3Q5, G, GT, GT/G
3AT2A	12FV	3AT2B	3C6	7BW	XXB
3AT2B	12FV		3CA3	8MH	3CA3A
3AU6	7BK	3BA6, 3BC5§, 3CB6§, 3CE5§, 3CF6§	3CA3A	8MH	
3AV6	7BT		3CB6	7CM	3CF6, 3DK6, 3AU6§, 3BC5§, 3BZ6§, 3EC5§
3AW2	12HA	3AW2A	3CE5	7BD	3BC5, 3AU6§, 3BZ6§, 3CB6§, 3CF6§, 3DK6§
3AW2A	12HA		3CF6	7CM	3CB6, 3DK6, 3AU6§, 3BC5§, 3BZ6§, 3CE5§
3AW3	8EZ	3A3B, C, A, 3DB3, 3DJ3	3CN3	8MU	3CN3A, B
3B2	8GH	3A3B, C, 3CV3A, 3CZ3A, 3DB3	3CN3A	8MU	3CN3, B
3B4	7CY		3CN3B	8MU	
3B5	7AP	3B5GT, 3C5GT, 3Q5, 3Q5G, GT, GT/G	3CS6	7CH	3BE6, 3BY6
3B5GT	7AP	3B5, 3C5GT, 3Q5, G, GT, GT/G	3CU3	8MK	3A3C, 3CU3A, 3CV3A
3B7	7BE		3CU3A	8MK	3A3C, 3CV3A
3BA6	7BK	3AU6, 3BZ6§	3CV3	8EZ	3A3C, 3CU3A,
3BC5	7BD	3CE5, 3AU6§, 3CB6§, 3CF6§, 3DK6§			
3BE6	7CH	3BY6, 3CS6			

§ May not work in all circuits.

* Parallel-filament circuits.

† Series circuit not requiring controlled warm-up time.

Tube Type	Basing	Replacement	Tube Type	Basing	Replacement
		3CV3A, 3CZ3A, 3DB3, 3DJ3	3JC6	9PM	3HM6, 3HT6, 3JC6A, 3JD6
3CV3A	8EZ	3A3C, 3CZ3A	3JC6A	9PM	3HM6, 3HT6, 3JC6, 3JD6
3CX3	8MT	3DF3A	3JD6	9PM	3HM6, 3HT6, 3JC6, A
3CY3	8MX	3DB3, 3DJ3	3KF8	9FG	3BU8, 3BU8A, 3GS8, 3HS8
3CY5	7EW	3EA5, 3EV5	3KT6	9PM	
3CZ3	8EZ	3A3C, 3CZ3A	3LE4	6BA	3LF4§, 3D6*
3CZ3A	8EZ	3A3C	3LF4	6BA	3LE4§, 3D6*
3D6	6BA	3LE4*, 3LF4*	3Q4	7BA	3S4§, 3S4SF*, 3W4*§, 3Z4*§
3DA3	8MY		3Q5	7AP	3Q5G, GT, GT/G, 3B5, GT, 3C5GT
3DB3	8MX	3DJ3	3Q5G	7AP	3Q5, GT, GT/G, 3B5, GT, 3C5GT
3DC3	8MZ		3Q5GT	7AP	3Q5, G, GT/G, 3B5, GT, 3C5GT
3DF3	8MT	3DF3A	3Q5GT/G	7AP	3Q5, G, GT, 3B5, GT, 3C5GT
3DF3A	8MT		3S4	7BA	3S4SF*, 3Q4§, 3W4*, 3Z4*
3DG4	5DE		3S4SF	7BA	3W4, 3Z4, 3S4*, 3Q4*§
3DH3	8NG		3V4	6BX	3C4*, 3E5*
3DJ3	8M8	3DB3	3W4	7BA	3S4SF, 3Z4, 3S4*, 3Q4*§
3DK6	7CM	3CB6, 3CF6, 3BC5§, 3BZ6§, 3CE5§	3Z4	7BA	3S4SF, 3W4, 3S4*, 3Q4*§
3DR3	8NL		4A6	8L	4A6G
3DS3	8NL	3DR3	4A6G	8L	4A6
3DT6	7EN	3DT6A	4AU6	7BK	4BA6, 4BC5§, 4BZ6§, 4CB6§, 4CE5§, 4DE6§, 4CF6§
3DT6A	7EN	3DT6	4AV6	7BT	
3DX4	7DK		4BA6	7BK	4AU6, 4BZ6§
3DY4	7DK	3DY4A	4BC5	7BD	4CE5, 4AU6§, 4CB6§, 4DE6§, 4DK6§, 4CF6§
3DY4A	7DK	3DY4	4BC8	9AJ	4BQ7A, 4BS8, 4BX8, 4BZ7, 4BZ8, 5BK7A
3DZ4	7DK	3AF4B§	4BE6	7CH	4CS6
3E5	6BX	3C4, 3V4*	4BL8	9DC	5EA8, 5U8, 5CQ8§
3E6	7CJ		4BN4	7EG	
3EA5	7EW	3EV5	4BN6	7DF	
3EH7	9AQ	3EJ7, 3HM6§, 3HT6§, 3JC6§, A§, 3JD6§	4BQ7A	9AJ	4BC8, 4BS8, 4BX8, 4BZ7, 4BZ8, 5BK7A
3EJ7	9AQ	3EH7, 3HM6§, 3HT6§, 3JC6§, A§, 3JD6§	4BS8	9AJ	4BC8, 4BQ7A, 4BX8, 4BZ7, 4BZ8, 5BK7A
3ER5	7FN	3FQ5, A, 3FY5	4BU8	9FG	4GS8, 4HS8, 4KE8, 4MK8
3ES5	7FN		4BX8	9AJ	4BC8, 4BQ7A, 4BS8, 4BZ7, 4BZ8, 5BK7A
3EV5	7EW	3EA5	4BZ6	7CM	4JH6, 4AU6§, 4BA6§,
3FH5	7FP	3ES5, 3FQ5, 3FQ5A, 3GK5			
3FQ5	7FP	3FQ5A, 3ES5, 3GK5			
3FQ5A	7FP	3FQ5, 3GK5			
3F55	7GA	3GU5			
3FY5	7FP	3ER5			
3GK5	7FP	3FQ5, A			
3GS8	9LW	3BU8, A, 3HS8, 3KF8			
3GU5	7GA	3FS5			
3GW5	7GK				
3HA5	7GM	3HK5, 3HM5, 3HQ5			
3HK5	7GM	3HA5, 3HM5, 3HQ5			
3HM5	7GM	3HA5, 3HK5, 3HQ5			
3HM6	9PM	3HT6, 3JC6, A, 3JD6			
3HQ5	7GM	3HA5, 3HK5, 3HM5			
3HS8	9FG	3BU8, A, 3GS8, 3KF8			
3HT6	9PM	3HM6, 3JC6, A, 3JD6			

Tube Type	Basing	Replacement	Tube Type	Basing	Replacement
		5U4G, GA, GB, 5V4G, GA, GY	5GS7	9GF	5LJ8§
5AZ3	12BR		5GX6	7EN	5HZ6
5AZ4	5T		5GX7	9GA	5GJ7
5B8	9EC	5AV8§	5HA7	12FQ	
5BC3	9NT	5BC3A	5HB7	9QA	
5BC3A	9NT	5BC3	5HC7	12FR	
5BE8	9EG	5BR8§, 5CL8§, 5CL8A§, 5FG7§, 5FV8§	5HG8	9MP	
			5HZ6	7EN	5GX6
			5J6	7BF	
5BK7A	9AJ	4BC8, 4BQ7A, 4BS8, 4BX8, 4BZ7, 4BZ8	5JK6	7CM	5EW6, 5JL6§
			5JL6	7CM	5EW6, 5JK6§
5BQ7A	9AJ	5BS8, 5BZ7	5JW8	9DC	4JW8
5BR8	9FA	5FV8, 5BE8§, 5CL8§, 5CL8A§	5KD8	9AE	
			5KE8	9DC	
5BS8	9AJ	5BQ7A, 5BZ7	5KZ8	9FZ	5CR8§
5BT8	9FE		5LJ8	9GF	5GS7†§
5BW8	9HK		5MB8	9FA	
5BZ7	9AJ	5BQ7A, 5BS8	5MQ8	9AE	5CQ8§, 5GH8§
5CG4	5L	5AR4, 5V4G, GA, GY, 5Z4, G, GT, GT/G, 5Z4MG	5R4G	5T	5R4GTY, GY, GYA, GYB
			5R4GTY	5T	5R4G, GY, GYA, GYB
5CG8	9GF	5FG7, 5AT8§, 5BE8§, 5BR8§, 5CL8§, A§, 5FV8§	5R4GY	5T	5R4G, GTY, GYA, GYB
			5R4GYA	5T	5R4G, GTY, GY, GYB
5CL8	9FX	5CL8A, 5BE8§, 5BR8§, 5FV8§	5R4GYB	5T	5R4G, GTY, GY, GYA
5CL8A	9FX	5CL8, 5BE8§, 5BR8§, 5FV8§	5T4	5T	5AR4, 5R4G, GTY, GY, GYA, GYB
			5T8	9E	
5CM6	9CK		5U4G	5T	5U4GA, GB, 5AR4, 5AS4, A, 5AU4, 5DB4, 5R4G, GTY, GY, GYA, GYB, 5T4, 5V3, 5V3A
5CM8	9FZ	5CR8§			
5CQ8	9GE	5EA8§, 5U8§, 5MQ8§	5U4GA	5T	5U4GB, 5AS4, A, 5AU4, 5DB4, 5R4G, GTY, GY, GYA, GYB, 5V3, A
5CR8	9GJ	5CM8§, 5KZ8§			
5CU4	8KD		5U4GB	5T	5AS4, A, 5AU4, 5DB4, 5V3, A
5CZ5	9HN		5U8	9AE	5EA8, 5GH8, A, 5GQ8§
5DB4	5T	5AS4, A, 5U4GB	5V3	5T	5V3A, 5AU4
5DH8	9EG	5BR8§, 5CL8§, A§, 5FG7§, 5FV8§	5V3A	5T	
			5V4G	5L	5V4GA, GY, 5AR4
5DJ4	8KS	5DN4	5V4GA	5L	5V4G, GY, 5AR4
5DN4	8KS		5V4GY	5L	5V4G, GA, 5AR4
5EA8	9AE	5GH8, A, 5U8, 5GQ8§	5V6GT	7S	
5EH8	9JG	5X8§	5W4	5T	5W4G, GT, GT/G, 5AR4, 5CG4, 5R4G, GTY, GY, GYA, GYB, 5T4, 5V4G, GA, GY, 5Y3G, GA, GT, GT/G, 5Z4, G, GT, GT/G, MG
5ES8	9DE				
5EU8	9JF				
5EW6	7CM	5GM6			
5FG7	9GF	5BE8§, 5BR8§			
5FV8	9FA	5BR8, 5BE8§, 5CL8§, 5CL8A§, 5DH8§			
5GH8	9AE	5GH8A, 5EA8, 5U8, 5GQ8§			
5GH8A	9AE	5EA8, 5GH8, 5GQ8§, 5MQ8§			
5GJ7	9QA	5GX7			
5GM6	7CM	5EW6	5W4G	5T	5W4, GT, GT/G,

Tube Type	Basing	Replacement	Tube Type	Basing	Replacement
		5AR4, 5CG4, 5R4G, GTY, GY, GYA, GYB, 5T4, G, GA, GY, 5Y3G, GA, GT, GT/G, 5Z4, G, GT, GT/G, MG	5Y4G	5Q	5Y4GA, GT
5W4GT	5T	5W4, G, GT/G, 5AR4, 5CG4, 5R4G, GTY, GY, GYA, GYB, 5T4, 5V4G, GA, GY, 5Y3G, GA, GT, GT/G, 5Z4, G, GT, GT/G, MG	5Y4GA	5Q	5Y4G, GT
			5Y4GT	5Q	5Y4G, GA
			5Z3	4C	83
			5Z4	5L	5Z4G, GT, GT/G, MG, 5AR4, 5CG4, 5V4G, GA, GY
			5Z4G	5L	5Z4, GT, GT/G, MG, 5AR4, 5CG4, 5V4G, GA, GY
5W4GT/G	5T	5W4, G, GT, 5AR4, 5CG4, 5R4G, GTY, GY, GYA, GYB, 5T4, 5V4G, GA, GY, 5Y3G, GA, GT, GT/G, 5Z4, G, GT, GT/G, MG	5Z4GT	5L	5Z4, G, GT/G, MG, 5AR4, 5CG4, 5V4G, GA, GY
			5Z4GT/G	5L	5Z4, G, GT, MG, 5AR4, 5CG4, 5V4G, GA, GY
			5Z4MG	5L	5Z4, G, GT, GT/G, 5AR4, 5CG4, 5V4GA, GY
5X3	4C	13, 80, 83V, 88	6A3	4D	
5X4G	5Q	5X4GA	6A4	5B	6A4LA§
5X4GA	5Q	5X4G	6A4LA	5K	6A4§
5X8	9AK	5EH8§	6A5	6T	6A5G
5Y3G	5T	5Y3GA, GT, GT/G, 5AR4, 5AX4GT, 5CG4, 5R4G, GTY, GY, GYA, GYB, 5T4, 5V4, GA, GY, 5Z4, G, GT, GT/G, MG	6A5G	6T	6A5
			6A6	7B	6A6X
			6A6X	7B	6A6
			6A7	7C	6A7S
			6A7S	7C	6A7
			6A8	8A	6A8G, GT, GTX, MG, 6D8*, G*
5Y3GA	5T	5Y3G, GT, GT/G, 5AR4, 5AX4GT, 5CG4, 5R4G, GTY, GY, GYA, GYB, 5T4, 5V4, GA, GY, 5Z4, G, GT, GT/G, MG	6A8G	8A	6A8, GT, GTX, MG, 6D8*, G*
			6A8GT	8A	6A8, G, GTX, MG, 6D8*, G*
			6A8GTX	8A	6A8, G, GT, MG, 6D8*, G*
			6A8MG	8A	6A8, G, GT, GTX, 6D8*, G*
5Y3GT	5T	5Y3G, GA, GT/G, 5AR4, 5AX4GT, 5CG4, 5R4G, GTY, GY, GYA, GYB, 5T4, 5V4, GA, GY, 5Z4, G, GT, GT/G, MG	6AB4	5CE	
			6AB5	6R	6N5, G, 6AB5/6N5
			6AB5/6N5	6R	6AB5, 6N5, G
			6AB6G	7AU	6N6*, G*, MG*
			6AB7	8N	6AB7Y, 6AC7, A, Y, 6AJ7, 6SG7*§, GT*§, Y*§, 6SH7*§, GT*
5Y3GT/G	5T	5Y3G, GA, GT, 5AR4, 5AX4GT, 5CG4, 5R4G, GTY, GY, GYA, GYB, 5T4, 5V4G, GA, GY, 5Z4, G, GT, GT/G, MG	6AB7Y	8N	6AB7, 6AC7, A, Y, 6AJ7, 6SG7*§, GT*§, Y*§, 6SH7*§, GT*
			6AB8	9AT	
			6AB9	10N	

§ May not work in all circuits.

* Parallel-filament circuits.

† Series circuit not requiring controlled warm-up time.

Tube Type	Basing	Replacement	Tube Type	Basing	Replacement
6AC5	6Q	6AC5G, GT, GT/G			6DE6\$, 6CY5*\$,
6AC5G	6Q	6AC5, GT, GT/G			6EA5*\$, 6EV5*\$
6AC5GT	6Q	6AC5, G, GT/G	6AG6G	7S	6M6G*
6AC5GT/G	6Q	6AC5, G, GT	6AG7	8Y	6AG7Y, 6AK7
6AC6G	7W	6AC6GT	6AG7Y	8Y	6AG7, 6AK7
6AC6GT	7W	6AC6G	6AG9	12HE	6AL9
6AC7	8N	6AC7A, Y, 6AB7, Y, 6AJ7, 6SG7*\$,	6AG10	12GT	
		GT*\$, Y*\$,	6AG11	12DA	
		6SH7*\$, GT*\$	6AH4GT	8EL	
6AC7A	8N	6AC7, Y, 6AB7, Y, 6AJ7, 6SG7*\$,	6AH5	6AP	6AH5G
		GT*\$, Y*\$,	6AH5G	6AP	6AH5
		6SH7*\$, GT*\$	6AH6	7BK	6AH6V
6AC7Y	8N	6AC7, A, 6AB7, Y, 6AJ7, 6SG7*\$,	6AH6V	7BK	6AH6
		GT*\$, Y*\$,	6AH7GT	8BE	
		6SH7*\$, GT*\$	6AH9	12HJ	
6AC9	12GN		6AJ4	9BX	6AM4\$, 6CR4*\$
6AC10	12FE	6U10\$	6AJ5	7BD	
6AD5G	6Q	6AD5GT	6AJ7	8N	6AB7, Y, 6AC7, A, Y, 6SG7*\$, GT*\$, Y*\$, 6SH7*\$, GT*\$
6AD5GT	6Q	6AD5G	6AJ8	9CA	
6AD6G	7AG	6AF6G, GT	6AK5	7BD	6AG5*, 6BC5*, 6CE5*, 6CY5*\$,
6AD7G	8AY				6EA5*\$, 6EV5*\$
6AD8	9T	6DC8, 6N8	6AK6	7BK	
6AD10	12EZ	6AD10-A, 6T10\$	6AK7	8Y	6AG7, Y
6AD10-A	12EZ		6AK8	9E	6T8, A
6AE5	6Q	6AE5G, GT, GT/G, 6AF5G	6AK9	12GZ	
6AE5G	6Q	6AE5, GT, GT/G, 6AF5G	6AK10	12FE	
6AE5GT	6Q	6AE5, G, GT/G, 6AF5G	6AL3	9CB	
6AE5GT/G	6Q	6AE5, G, GT, 6AF5G	6AL5	6BT	6EB5
6AE6	7AH	6AE6G	6AL6	6AM	6AL6G
6AE6G	7AH	6AE6	6AL6G	6AM	6AL6
6AE7G	7AX	6AE7GT	6AL7	8CH	6AL7GT
6AE7GT	7AX	6AE7G	6AL7GT	8CH	6AL7
6AE8	8DU		6AL9	12HE	6AG9
6AF3	9CB	6BR3, 6AL3*	6AL11	12BU	
6AF4	7DK	6AF4A, 6AN4\$, 6T4\$	6AM4	9BX	6AJ4\$
6AF4A	7DK	6AF4, 6AN4\$, 6DZ4\$, 6T4\$	6AM5	6CH	
6AF5G	6Q	6AE5, G, GT, GT/G	6AM6	7DB	
6AF6G	7AG	6AF6GT, 6AD6G	6AM8	9CY	6AM8A, 6HJ8
6AF6GT	7AG	6AF6G, 6AD6G	6AM8A	9CY	6AM8*†, 6HJ8
6AF7G	8AG	6CD7*	6AN4	7DK	6AF4\$, 6AF4A\$, 6T4\$
6AF10	12GX		6AN5	7BD	
6AF11	12DP	6AS11, 6BD11	6AN6	7BJ	
6AG5	7BD	6BC5, 6CE5, 6AK5*, 6AU6\$, A\$, 6AW6\$, 6CB6\$, A\$, 6CF6\$, 6DC6\$,	6AN7	9Q	
			6AN8	9DA	6AN8A
			6AN8A	9DA	6AN8*†
			6AQ4	7DT	
			6AQ5	7BZ	6AQ5A, 6BM5, 6HG5
			6AQ5A	7BZ	6HG5, 6AG5*†, 6BM5*†
			6AQ6	7BT	6AT6*, 6AV6*, 6BK6*, 6BT6*

Tube Type	Basing	Replacement
6AQ7GT	8CK	
6AQ8	9DE	6DT8*
6AR5	6CC	
6AR6	6BQ	6AR6G
6AR6G	6BQ	6AR6
6AR7GT	7DE	
6AR8	9DP	
6AR11	12DM	
6AS4GT	4CG	6DM4, A, 6DQ4, 6DT4, 6CQ4*, 6DE4*
6AS5	7CV	6CA5*
6AS6	7CM	6DB6*
6AS7G	8BD	6AS7GA, GT, 6080
6AS7GA	8BD	6AS7G, GT, 6080
6AS7GT	8BD	6AS7G, GA, 6080
6AS8	9DS	
6AS11	12DP	6AF11, 6BD11
6AT6	7BT	6AV6, 6BK6, 6BT6, 6AQ6*
6AT8	9DW	6AT8A, 6BE8§, A§, 6BR8§, A§, 6CG8§, A§, 6CL8§, A§, 6FG7§, 6FV8§, A§
6AT8A	9DW	6AT8*†, 6BE8A§, 6BR8A§, 6CG8A§, 6CL8§, 6CL8A§, 6FG7§, 6FV8§, A§
6AU4GT	4CG	6AU4GTA, 6CQ4*, 6DA4A*, 6DE4*, 6DM4*, A*, 6DQ4*, 6DT4*
6AU4GTA	4CG	6DM4A*, 6DT4*
6AU5GT	6CK	6FW5, 6AV5GA*, GT*
6AU6	7BK	6AU6A, 6BA6, 7543, 6AW6§, 6AG5§, 6BC5§, 6CB6§, A§, 6CE5§, 6CF6§, 6DE6§, 6DK6§
6AU6A	7BK	6AU6*†, 7543*†, 6BA6*†, 6CB6A§, 6CE5§
6AU7	9A	7AU7, 6AX7§
6AU8	9DX	6AU8A, 6AW8, A, 6BA8, A, 6BH8, 6CX8*, 6EH8*§, 6X8*, A*
6AU8A	9DY	6AU8, 6AW8, A, 6BA8, A, 6BH8, 6CX8*, 6EH8*§, 6X8*, A*

Tube Type	Basing	Replacement
6AV4	5BS	6BX4*
6AV5GA	6CK	6AV5GT, 6FW5, 6AU5GT*
6AV5GT	6CK	6AV5GA, 6FW5, 6AU5GT*
6AV6	7BT	6AT6, 6BK6, 6BT6, 6AQ6*
6AV11	12BY	6K11§, 6Q11§
6AW6	7CM	6CB6, A, 6CF6, 6DC6, 6DE6, 6AG5§, 6AU6§, A§, 6BC5§, 6BH6*, 6CE5§
6AW7GT	8CQ	
6AW8	9DX	6AW8A, 6AU8, A, 6BA8, A, 6JV8, 6KS8, 6LF8, 6EB8*, 6EH8*§, 6X8*§, 6X8A*§
6AW8A	9DX	6AW8, 6AU8, A, 6BA8, A, 6JV8, 6KS8, 6LF8, 6EB8*, 6EH8*§, 6X8*§, 6X8A*§
6AX3	12BL	
6AX4GT	4CG	6AX4GTA, GTB, 6AS4GT, 6DA4, A, 6DM4, A, 6DQ4, 6DT4, 6AU4GT*, GTA*, 6CQ4*, 6DE4*
6AX4GTA	4CG	6AX4GTB, 6DA4, A, 6DM4, A, 6DQ4, 6DT4, 6AU4GT*, GTA*, 6CQ4*, 6DE4*
6AX4GTB	4CG	6DM4A, 6CQ4*, 6DA4A*†, 6DE4*, 6DM4*†, 6DQ4*†, 6DT4*†
6AX5GT	6S	
6AX6G	7Q	
6AX7	9A	6AU7§, 6GU7*, 7AU7§
6AX8	9AE	6EA8, 6GH8, A, 6LM8, 6U8, A, 6CQ8§, 6GJ8§
6AY3	9HP	6AY3A, B, 6BA3, 6BS3, A, 6CK3, 6CL3, 6DW4, A, B, 6BH3*, A*
6AY3A	9HP	6AY3, B, 6BA3, 6BS3, A, 6CK3, 6CL3,

§ May not work in all circuits. * Parallel-filament circuits.
† Series circuit not requiring controlled warm-up time.

Tube Type	Basing	Replacement	Tube Type	Basing	Replacement
		6DW4, A, B, 6BH3*, A*	6BE3	12GA	6BE3A
6AY3B	9HP	6AY3, A, 6BA3, 6BS3, A, 6CK3, 6CL3, 6DW4, A, B, 6BH3*, A*	6BE3A	12GA	6BE3
			6BE6	7CH	6BY6, 6CS6
			6BE7	9AA	
			6BE8	9EG	6BE8A, 6BR8§, A§, 6CL8§, A§, 6FG7§, 6FV8§, A§
6AY11	12DA		6BE8A	9EG	6BE8*†, 6BR8A§, 6CL8§, A§, 6FG7§, 6FV8§, A§
6AZ8	9ED				
6B3	9BD	6V3*, A*	6BF5	7BZ	
6B4G	5S		6BF6	7BT	6BU6
6B5	6AS		6BF8	9NX	
6B6	7V	6BG6, 6Q7, G, GT, MG, 6T7G*	6BF11	12EZ	
6B6G	7V	6B6, 6Q7, G, GT, MG, 6T7G*	6BG6G	5BT	6BG6GA
			6BG6GA	5BT	6BG6G
6B7	7D	6B7S	6BH3	9HP	6BH3A, 6DW4A*, B*, 6CJ3*, 6CK3*, 6CL3*
6B7S	7D	6B7			
6B8	8E	6B8G, GT	6BH3A	9HP	6BH3, 6DW4A*, B*, 6CJ3*, 6CK3*, 6CL3*
6B8G	8E	6B8, GT			
6B8GT	8E	6B8, G	6BH5	9AZ	
6B10	12BF		6BH6	7CM	6AW6*, 6CB6*, A*, 6CF6*, 6DC6*
6BA3	9HP	6AY3, A, B, 6BS3, A, 6CK3, 6CL3, 6DW4, A, B, 6BH3*, A*	6BH8	9DX	6AU8, A, 6AW8, A, 6BA8, A
6BA6	7BK	6AU6, A, 6BD6, 6CG6, 7543, 6BZ6§	6BH11	12FP	
6BA7	8CT		6BJ3	12BL	6AX3
6BA8	9DX	6BA8A, 6AU8, A, 6AW8, A, 6BH8	6BJ5	6CH	
6BA8A	9DX	6BA8, 6AU8, A, 6AW8, A, 6BH8	6BJ6	7CM	6BJ6A
6BA11	12ER		6BJ6A	7CM	6BJ6
6BC4	9DR		6BJ7	9AX	
6BC5	7BD	6AG5, 6CE5, 6AK5*, 6AU6§, A§, 6AW6§, 6CB6§, A§, 6CF6§, 6DC6§, 6DE6§, 6DK6§, 6CY5*§, 6EA5*§, 6EV5*§	6BJ8	9ER	6BN8§
			6BK4	8GC	6BK4C, 6EL4, A, 6EN4
6BC7	9AX		6BK4A	8GC	6BK4C, 6EL4, A, 6EN4
6BC8	9AJ	6BQ7, A, 6BS8, 6BX8, 6BZ7, 6BZ8, 6HK8, X155, 6BK7*, A*, B*	6BK4B	8GC	6BK4C, 6EL4, A, 6EN4
			6BK4C	8GC	6EL4, A, 6EN4
6BD4	8FU	6BD4A, 6BK4*§, A*§, B*§	6BK5	9BQ	
6BD4A	8FU	6BK4*§, A*§, B*§	6BK6	7BT	6AT6, 6AV6, 6BT6, 6AQ6*
6BD5GT	6CK	6AU5GT*, 6AV5GA*, GT*, 6FW5*	6BK7	9AJ	6BK7A, B, 6BC8*, 6BQ7*, A*, 6BS8*, 6BX8*, 6BZ7*, 6BZ8*, 6HK8*, X155*
6BD6	7BK	6BA6, 6CG6	6BK7A	9AJ	6BK7, B, 6BC8*, 6BQ7*, A*, 6BS8*, 6BX8*, 6BZ7*, 6BZ8*, 6HK8*, X155*
6BD7	9Z				
6BD11	12DP	6AF11	6BK7B	9AJ	6BK7*, A*, 6BC8*, 6BQ7*, A*, 6BS8*, 6BX8*, 6BZ7*,

Tube Type	Basing	Replacement	Tube Type	Basing	Replacement
		6BZ8*, 6HK8*, X155*			6HK8, X155, 6BK7*, A*, B*
6BK8	9BJ		6BR3	9CB	6AL3*
6BK11	12BY	6K11§, 6Q11§	6BR5	9DB	6DA5
6BL4	8GB	6AU4GTA*, 6CQ4*, 6DM4A*, 6DT4*	6BR7	9BC	
6BL7GT	8BD	6BL7GTA, 6BX7GT, 6DN7	6BR8	9FA	6BR8A, 6FV8, A, 6JN8, 6BE8§, A§, 6CL8§, A§
6BL7GTA	8BD	6BL7GT, 6BX7GT, 6DN7	6BR8A	9FA	6FV8, A, 6JN8, 6BR8*†, 6BE8A§, 6CL8§, A§
6BL8	9DC	6LN8	6BS3	9HP	6BS3A, 6CK3, 6CL3, 6DW4, A, B
6BM5	7BZ	6AQ5, A, 6DL5*, 6DS5*	6BS3A	9HP	6BS3, 6CK3, 6CL3, 6DW4, A, B
6BM8	9EX		6BS5	9BK	
6BN4	7EG	6BN4A	6BS7	9BB	
6BN4A	7EG	6BN4	6BS8	9AJ	6BC8, 6BQ7, A, 6BX8, 6BZ7, 6BZ8, 6HK8, X155, 6BK7*, A*, B*
6BN5	9CR		6BT4	8HA	
6BN6	7DF	6KS6	6BT6	7BT	6AT6, 6AV6, 6BK6, 6AQ6*
6BN7	9AJ		6BT8	9FE	
6BN8	9ER	6BJ8§	6BU5	8FP	
6BN11	12GF		6BU6	7BT	6BF6
6BQ5	9CV	7189, 7189A	6BU8	9FG	6BU8A, 6GS8, 6HS8, 6KF8
6BQ6G	6AM	6BQ6GA, GT, GTA, GTB, GTB/6CU6, 6CU6, 6DQ6, A, B, 6FH6, 6GW6	6BU8A	9FG	6BU8, 6GS8, 6HS8, 6KF8
6BQ6GA	6AM	6BQ6G, GT, GTA, GTB, GTB/6CU6, 6CU6, 6DQ6, A, B, 6FH6, 6GW6	6BV7	9BU	
6BQ6GT	6AM	6BQ6G, GA, GTA, GTB, GTB/6CU6, 6CU6, 6DQ6, A, B, 6FH6, 6GW6	6BV8	9FJ	
6BQ6GTA	6AM	6BQ6G, GA, GT, GTB, GTB/6CU6, 6CU6, 6DQ6, A, B, 6FH6, 6GW6	6BV11	12HB	
6BQ6GTB	6AM	6BQ6GTB/6CU6, 6CU6, 6DQ6, A, B, 6FH6, 6GW6	6BW3	12FX	6AX3, 6BE3, 6BE3A
6BQ6GTB/6CU6	6AM	6BQ6GTB, 6CU6, 6DQ6, A, B, 6FH6, 6GW6	6BW4	9DJ	
6BQ7	9AJ	6BQ7A, 6BC8, 6BS8, 6BX8, 6BZ7, 6BZ8, 6HK8, X155, 6BK7*, A*, B*	6BW6	9AM	
6BQ7A	9AJ	6BQ7, 6BC8, 6BS8, 6BX8, 6BZ7, 6BZ8,	6BW7	9AQ	6BX6, 6EL7, 6HM6§
			6BW8	9HK	
			6BW11	12HD	
			6BX4	5BS	6AV4*
			6BX6	9AQ	6BW7, 6BY7, 6EL7, 6EC7*
			6BX7GT	8BD	6BL7GT, GTA, 6DN7
			6BX8	9AJ	6BC8, 6BQ7, A, 6BS8, 6BZ7, 6BZ8, 6HK8, X155, 6BK7*, A*, B*
			6BY5G	6CN	6BY5GA
			6BY5GA	6CN	6BY5G
			6BY6	7CH	6BE6, 6CS6
			6BY7	9AQ	6BX6, 6EC7*

§ May not work in all circuits.

* Parallel-filament circuits.

† Series circuit not requiring controlled warm-up time.

Tube Type	Basing	Replacement	Tube Type	Basing	Replacement
6BY8	9FN				6AU6A§, 6CE5§, 6HS6*§
6BY11	12E2				
6BZ3	12FX	6BE3, A, 6CD3*, 6CE3*	6CD3	12FX	
6BZ6	7CM	6DC6, 6HQ6, 6JH6, 6BA6§	6CD6G	5BT	6CD6GA, 6DN6, 6EX6
6BZ7	9AJ	6BC8, 6BQ7, A, 6BS8, 6BX8, 6BZ8, 6HK8, X155, 6BK7*, A*, B*	6CD6GA	5BT	6EX6
6BZ8	9AJ	6BC8, 6BQ7, A, 6BS8, 6BX8, 6BZ7, 6HK8, X155, 6BK7*, A*, B*	6CD7	8EV	6AF7G*
6C4	6BG		6CE3	12GK	6CD3, 6DU3
6C5	6Q	6C5G, GT, GT/G, MG, 6J5, G, GT, GT/G, GTX, GX, MG, 6L5G	6CE5	7BD	6AG5*†, 6AK5*, 6AU6A§, 6BC5*†, 6CB6A§, 6CY5*§, 6EA5*§, 6EV5*§, 6HS6*§
6C5G	6Q	6C5, GT, GT/G, MG, 6J5, G, GT, GT/G, GTX, GX, MG, 6L5G	6CF6	7CM	6AW6, 6CB6, A, 6DC6, 6DE6, 6DK6, 6AG5§, 6AU6§, A§, 6BC5§, 6BH6*, 6CE5§, 6HS6*§
6C5GT	6Q	6C5, G, GT/G, 6C5MG, 6J5, G, GT, GT/G, GTX, GX, MG, 6L5G	6CG3	12HF	6CD3
6C5GT/G	6Q	6C5, G, GT, MG, 6J5, G, GT, GT/G, GTX, GX, MG, 6L5G	6CG6	7BK	6BA6, 6BD6
6C5MG	6Q	6C5, G, GT, GT/G, 6J5, G, GT, GT/G, GTX, GX, MG, 6L5G	6CG7	9AJ	6FQ7
6C6	6F	77, 57A*, 57AS*	6CG8	9GF	6CG8A, 6FG7, 6AT8§, A§, 6BE8§, A§, 6BR8§, A§, 6FV8§, A§
6C7	7G		6CG8A	9GF	6FG7, 6CG8*†, 6AT8A§, 6BE8A§, 6BR8A§, 6FV8§, A§
6C8G	8G	6FB8*§	6CH3	9SD	6CJ3
6C9	10F		6CH6	9BA	
6C10	12BQ	6K11§, 6Q11†§	6CH7	9FC	6CX7
6CA4	9M		6CH8	9FT	6CU8§
6CA5	7CV	6EH5, 6AS5*	6CJ3	9SD	6CH3
6CA7	8EP		6CJ5	8GW	
6CA11	12HN		6CJ6	9AS	6DR6
6CB5	8GD	6CB5A, 6CL5	6CK3	9HP	6CL3, 6DW4, A, B, 6CH3*, 6CJ3*
6CB5A	8GD	6CL5	6CK4	8JB	
6CB6	7CM	6CB6A, 6AW6, 6CF6, 6DC6, 6DE6, 6DK6, 6HQ6, 6AG5§, 6AU6§, 6AU6A§, 6BC5§, 6CE5§, 6BH6§, 6HS6*§	6CK5	8GW	
6CB6A	7CM	6CB6*†, 6CF6*†, 6DC6*†, 6DE6*†, 6DK6*†, 6HQ6*†	6CK6	9AR	
			6CL3	9HP	6CK3, 6DW4A, B, 6CH3*, 6CJ3*
			6CL5	8GD	
			6CL6	9BV	
			6CL8	9FX	6CL8A, 6BE8A§, 6BR8A§, 6FV8§, A§
			6CL8A	9FX	6CL8, 6BE8A§, 6BR8A§, 6FV8§, A§
			6CM3	9HP	6DN3
			6CM4	9KG	
			6CM5	8GT	
			6CM6	9CK	
			6CM7	9ES	
			6CM8	9FZ	6CR8§, 6CS8§

Tube Type	Basing	Replacement	Tube Type	Basing	Replacement
6CN6	8EW		6DA4A	4CG	6DM4A, 6DQ4, 6DT4, 6CQ4*, 6DE4*
6CN7	9EN		6DA5	9DB	6BR5
6CQ4	4CG	6DT4*, 6DE4	6DA6	9AU	
6CQ6	7DR		6DA7	9EF	
6CQ8	9GE	6EA8§, 6U8A§	6DB5	9GR	
6CR4	9BX	6AJ4*§	6DB6	7CM	6AS6*
6CR5	9HC		6DC6	7CM	6AW6, 6BZ6, 6CB6, A, 6CF6, 6DE6, 6DK6, 6AG5§, 6AU6§, A§, 6BC5§, 6BH6*, 6CE5§
6CR6	7EA		6DC8	9HE	6AD8, 6N8
6CR8	9GJ	6CM8§, 6CS8§	6DE4	4CG	6CQ4, 6DA4A*, 6DM4*, A*, 6DQ4*, 6DT4*
6CS5	9CK	6DW5, 6CM6*	6DE6	7CM	6AW6, 6CB6, A, 6CF6, 6DC6, 6DK6, 6HQ6, 6AG5§, 6AU6§, A§, 6BC5§, 6BH6*, 6CE5§
6CS6	7CH	6BE6, 6BY6	6DE7	9HF	6EW7
6CS7	9EF	6DA7*	6DG6GT	7S	6W6, GT, 6EF6*, 6EY6*, 6EZ5*
6CS8	9FZ	6CM8§, 6CR8§	6DG7	9BA	
6CT3	9RX		6DJ8	9DE	6ES8, 6FW8*, 6KN8*
6CT7	8GX		6DK3	9SG	
6CU5	7CV	6AS5*	6DK6	7CM	6CB6, A, 6CF6, 6DC6, 6DE6, 6HQ6, 6BC5§, 6CE5§, 6HS6*§
6CU6	6AM	6BQ6GTB/6CU6, 6BQ6GTB, 6DQ6, A, B, 6FH6, 6GW6	6DL3	9GD	
6CU7	8GY		6DL4	9NY	
6CU8	9GM		6DL5	7DQ	6BM5*
6CV7	8GZ		6DL7	8EV	
6CW4	12AQ	6DS4	6DM4	4CG	6DM4A, 6DA4A, 6DQ4, 6DT4, 6CQ4*, 6DE4*
6CW5	9CV		6DM4A	4CG	6DT4, 6CQ4*
6CW7	9DD	6FC7	6DN3	9HP	6CM3
6CX7	9FC	6CH7	6DN6	5BT	6CD6G, GA, 6EX6
6CX8	9DX	6EB8, 6GN8, 6HF8, 6JA8, 6JE8, 6AU8*, A*, 6AW8*, A*, 6JV8*	6DN7	8BD	
6CY5	7EW	6EA5, 6EV5, 6AG5*§, 6AK5*§, 6BC5*§, 6CE5*§, 6HS6*§	6DQ3	12HF	6DQ3A
6CY7	9EF		6DQ3A	12HF	
6CZ5	9HN	6DW5*	6DQ4	4CG	6DT4, 6CQ4*, 6DE4*
6D5	6Q	6D5G, MG	6DQ5	8JC	
6D5G	6Q	6D5, MG	6DQ6	6AM	6DQ6A, B, 6FH6, 6GW6
6D5MG	6Q	6D5, 6D5G	6DQ6A	6AM	6DQ6B, 6FH6, 6GW6
6D6	6F	78, 58AS*	6DQ6B	6AM	6GW6*†
6D7	7H		6DR4	6BG	
6D8	8A	6D8G, 6A8*, G*, GT*, GTX*, MG*	6DR6	9AS	6CJ6
6D8G	8A	6D8, 6A8*, G*, GT*, GTX*, MG*			
6D10	12BQ	6AV11*§, 6C10§, 6K11*§, 6Q11*§			
6DA4	4CG	6DA4A, 6AX4GTA, GTB, 6DM4, A, 6DQ4, 6DT4, 6AU4GT*, GTA*, 6CQ4*, 6DE4*			

§ May not work in all circuits. * Parallel-filament circuits.

† Series circuit not requiring controlled warm-up time.

Tube Type	Basing	Replacement
6DR7	9HF	6FD7, 6FR7
6DR8	9HE	
6DS4	12AQ	6CW4
6DS5	7BZ	6AQ5*, A*, 6BM5*
6DS8	9CA	
6DT3	12HF	
6DT4	4CG	
6DT5	9HN	6EM5*
6DT6	7EN	6DT6A
6DT6A	7EN	6DT6
6DT8	9AJ	
6DU3	12JK	
6DV4	12EA	
6DW4	9HP	6DW4A, B, 6CK3, 6CL3
6DW4A	9HP	6DW4, B, 6CK3, 6CL3
6DW4B	9HP	6DW4, A, 6CJ3, 6CK3, 6CL3
6DW5	9CK	
6DX4	7DK	6DY4*§, A*§
6DX8	9HX	
6DY4	7DK	6DY4A, 6DX4*§
6DY4A	7DK	6DY4, 6DX4*§
6DY5	9CV	6CW5*
6DY7	8JP	6DZ7§
6DZ4	7DK	6AF4§, 6AF4A§, 6T4§
6DZ7	8JP	6DY7§
6DZ8	9JE	6FY8*
6E5	6R	6G5§
6E6	7B	
6E7	7H	
6E8	8O	6E8G
6E8G	8O	6E8
6EA4	12FA	6EH4, A
6EA5	7EW	6EV5, 6AG5*§, 6AK5*§, 6BC5*§, 6CE5*§
6EA7	8BD	6GL7, 6EM7
6EA8	9AE	6CQ8§, 6GH8§, 6KD8§, 6MQ8*, 6U8A*
6EB5	6BT	6AL5
6EB8	9DX	6CX8, 6GN8, 6HF8, 6JA8, 6JE8, 6AU8*, 8A*, 6HZ8*, 6JV8*
6EC7	9AQ	6BX6*, 6BY7*
6EF4	12HC	6EJ4, 6EJ4A
6EF6	7S	6EY6*, 6EZ5*
6EH4	12FA	6EH4A
6EH4A	12FA	
6EH5	7CV	6CA5
6EH7	9AQ	6EJ7, 6HM6§, 6HT6§, 6JC6§, A§, 6JD6§

Tube Type	Basing	Replacement
6EH8	9JG	6AU8*§, A*§, 6AW8*§, A*§, 6X8A§
6EJ4	12HC	6EJ4A
6EJ4A	12HC	
6EJ7	9AQ	6EH7, 6HM6§, 6HT6§, 6JC6A§, 6JD6§
6EL4	8MW	6EL4A, 6EN4
6EL4A	8MW	6EN4
6EL7	9AQ	6BW7, 6BX6, 6HM6§
6EM5	9HN	
6EM7	8BD	6EA7, 6GL7
6EN4	8NJ	
6EQ7	9LQ	6KL8§
6ER5	7FN	6FY5*
6ES5	7FN	
6ES6	7EN	6ET6, 6FD6
6ES8	9DE	6DJ8, 6FW8*, 6KN8*
6ET6	7EN	6ES6, 6FD6
6ET7	9LT	
6EU7	9LS	
6EU8	9JF	
6EV5	7EW	6EA5, 6AG5*§, 6AK5*§, 6BC5*§, 6CE5*§
6EV7	9LP	
6EW6	7CM	6GM6, 6HS6*§
6EW7	9HF	
6EX6	5BT	6CD6GA
6EY6	7AC	6EZ5*
6EZ5	7AC	
6EZ8	9KA	
6F4	7BR	6L4
6F5	5M	6F5G, GT, MG
6F5G	5M	6F5, GT, MG
6F5GT	5M	6F5, G, MG
6F5MG	5M	6F5, G, GT
6F6	7S	6F6G, GT, GT/G, MG
6F6G	7S	6F6, GT, GT/G, MG
6F6GT	7S	6F6, G, GT/G, MG
6F6GT/G	7S	6F6, G, GT, MG
6F6MG	7S	6F6, G, GT, GT/G
6F7	7E	6F7S
6F7S	7E	6F7
6F8G	8G	6C8G*§
6FA7	9MR	
6FC7	9DD	6CW7
6FD6	7BK	6ES6, 6ET6
6FD7	9HF	6FR7
6FE5	8KB	
6FE8	9AJ	
6FG5	7GA	6HS6*§
6FG6	9GA	
6FG7	9GF	6BE8A§, 6BR8A§

Tube Type	Basing	Replacement	Tube Type	Basing	Replacement
6FH5	7FP	6ES5, 6FQ5*, A*, 6GK5*	6GJ5	9QK	6GJ5A
6FH6	6AM	6DQ6B, 6GW6	6GJ5A	9QK	6GJ5
6FH8	9KP		6GJ7	9QA	
6FJ7	12BM		6GJ8	9AE	6AX8*, 6CQ8*§, 6EA8*, 6GH8*, A*, 6U8*, A*
6FM7	12EJ				6FQ5, A
6FMB	9KR		6GK5	7FP	
6FN5	8GD		6GK6	9GK	
6FQ5	7FP	6FQ5A, 6GK5, 6ES5*	6GK7	9AQ	
6FQ5A	7FP	6FQ5, 6GK5, 6ES5*	6GL7	8BD	6EA7, 6EM7
6FQ7	9LP		6GM5	9MQ	
6FR7	9HF	6FD7	6GM6	7CM	6EW6, 6HQ6*, 6JH6*
6FS5	7GA	6FG5, 6GU5*	6GM8	9DE	
6FV6	7FQ		6GN6	7FW	
6FV8	9FA	6FV8A, 6BE8A§, 6BR8*†, 6CL8§, 6CL8A§	6GN8	9DX	6CX8, 6EB8, 6HF8, 6JE8, 6AU8*, A*, 6AW8*, A*, 6HZ8*, 6JA8, 6JV8*, 6LF8*
6FV8A	9FA	6FV8, 6BR8A, 6BE8A, 6BR8*†, 6CL8§, 6CL8A§	6GQ7	9RB	6BC7§
6FW5	6CK		6GS8	9LW	6BU8, 6BU8A, 6HS8, 6KF8
6FW8	9AJ	6KN8, 6DJ8*, 6ES8*			
6FY5	7FP	6ER5*	6GT5	9NZ	6GT5A
6FY7	12EO		6GT5A	9NZ	6GT5
6FY8	9EX		6GU5	7GA	6FS5*
6G5	6R	6G5/6H5, 6H5, 6T5, 6U5/6G5, 6U5	6GU7	9LP	
6G5/6H5	6R	6G5, 6H5, 6U5, 6U5/6G5	6GV5	12DR	
6G6G	7S	6G6GT	6GV7	9KN	
6G6GT	7S	6G6G	6GV8	9LY	
6G11	12BU		6GW5	7GK	
6GA7	12EB		6GW6	6AM	6DQ6B
6GA8	9AJ	6CG7*	6GW8	9LZ	
6GB5	9NH		6GX6	7EN	6GY6, 6HZ6
6GC5	9EU		6GX7	9QA	
6GC6	8JX		6GY5	12DR	
6GD7	9GF	6LJ8§	6GY6	7EN	6GX6, 6HZ6
6GE5	12BJ		6GY8	9MB	
6GE8	9LC		6GZ5	7CV	
6GF5	12BJ	6GE5	6H4	5AF	6H4GT
6GF7	9QD	6GF7A	6H4GT	5AF	6H4
6GF7A	9QD	6GF7	6H5	6R	6G5, 6G5/6H5, 6T5, 6U5, 6U5/6G5
6GH8	9AE	6GH8A, 6EA8, 6U8A, 6AX8*†, 6CQ8§, 6GJ8*†, 6LM8*†, 6U8*†, 6HL8*†, 6KE8*	6H6	7Q	6H6G, GT, GT/G, MG
6GH8A	9AE	6GH8, 6EA8, 6AX8*†, 6CQ8§, 6GJ8*†, 6LM8*†, 6U8*†, 6HL8*†, 6KE8*	6H6G	7Q	6H6, GT, GT/G, MG
			6H6GT	7Q	6H6, G, GT/G, MG
			6H6GT/G	7Q	6H6, G, GT, MG
			6H6MG	7Q	6H6, G, GT, GT/G
			6H8G	8E	
			6HA5	7GM	6HK5, 6HM5, 6HQ5
			6HA6	9NW	
			6HB5	12BJ	
			6HB6	9NW	

§ May not work in all circuits.

* Parallel-filament circuits.

† Series circuit not requiring controlled warm-up time.

Tube Type	Basing	Replacement	Tube Type	Basing	Replacement
6HB7	9QA				GX, MG, 6C5, G,
6HC8	9EX	6BM8*			GT, GT/G, MG,
6HD5	12ES				6L5G
6HD7	9QA		6J5GT	6Q	6J5, G, GT/G, GTX,
6HE5	12EY	6JB5, 6JC5			GX, MG, 6C5, G,
6HE7	12FS				GT, GT/G, MG,
6HF5	12FB				6L5G
6HF8	9DX	6CX8, 6EB8, 6GN8, 6JA8, 6JE8, 6HZ8*, 6JV8*, 6LF8*	6J5GT/G	6Q	6J5, G, GT, GTX, GX, MG, 6C5, G, GT, GT/G, MG, 6L5G
6HG5	7BZ	6AQ5A, 6AQ5*†	6J5GTX	6Q	6J5, G, GT, GT/G,
6HG8	9MP				GX, MG, 6C5, G,
6HJ5	12FL				GT, GT/G, MG,
6HJ7	9QA				6L5G
6HJ8	9CY	6AM8A, 6AM8*†	6J5GX	6Q	6J5, G, GT, GT/G,
6HK5	7GM	6HA5, 6HM5, 6HQ5			GTX, MG, 6C5, G,
6HK8	9DE	6BC8, 6BQ7A, 6BS8, 6BX8, 6BZ7, 6BZ8, X155, 6BK7*, A*, B*	6J5MG	6Q	GT, GT/G, MG, 6L5G
6HL5	9QW				6J5, G, GT, GT/G, GTX, GX, 6C5, G, GT, GT/G, MG, 6L5G
6HL8	9AE	6BL8*, 6GH8*†, A*†	6J6	7BF	6J6A
6HM5	7GM	6HA5, 6HK5, 6HQ5	6J6A	7BF	6J6*†
6HM6	9PM	6HT6, 6JC6, 6JC6A, 6JD6	6J7	7R	6J7G, GT, GTX, MG, 6W7G*
6HQ5	7GM	6HA5, 6HK5, 6HM5	6J7G	7R	6J7, GT, GTX, MG, 6W7G*
6HQ6	7CM	6BZ6, 6CB6, 6SB6A, 6DE6, 6DK6, 6JK6, 6GM6*	6J7GT	7R	6J7, G, GTX, MG, 6W7G*
6HR5	7BZ		6J7GTX	7R	6J7, G, GT, MG, 6W7G*
6HR6	7BK		6J7MG	7R	6J7, G, GT, GTX, 6W7G*
6HS5	12GY	6HV5, A			
6HS6	7BK	6CB6*§, A*§, 6CE5*§, 6CF6*§, 6CY5*§, 6DK6*§, 6EW6*§, 6FG5*§	6J8G	8H	
6HS8	9FG	6BU8, A, 6GS8, 6KF8, 6MK8, A	6J9	10G	
6HT6	9PM	6HM6, 6JC6, A, 6JD6	6J10	12BT	6Z10
6HU6	9GA		6J11	12BW	
6HU8	9NJ		6JA5	12EY	
6HV5	12GY	6HS5, 6HV5A	6JA8	9DX	6CX8, 6EB8, 6GN8, 6HF8, 6JE8, 6JT8, 6HZ8*, 6JV8*, 6LF8*
6HV5A	12GY				
6HW8	9NQ		6JB5	12EY	6JC5, 6HE5
6HZ5	12GY		6JB5	9QL	6JB6A
6HZ6	7EN	6GX6, 6GY6	6JB6A	9QL	6JB6
6HZ8	9DX	6EB8*, 6GN8*, 6HF8*, 6JE8*, 6JV8*, 6LF8*	6JB8	9AE	
6J4	7BQ		6JC5	12EY	6JB5, 6HE5
6J5	6Q	6J5G, GT, GT/G, GTX, GX, MG, 6C5, G, GT/G, MG, 6L5G	6JC6	9PM	6HM6, 6HT6, 6JC6A, 6JD6
6J5G	6Q	6J5, GT, GT/G, GTX,	6JC6A	9PM	6HM6, 6HT6, 6JC6, 6JD6
			6JC8	9PA	
			6JD5	12GY	6HV5A

Tube Type	Basing	Replacement	Tube Type	Basing	Replacement
6JD6	9PM	6HM6, 6HT6, 6JC6, A	6K5GT	5U	6K5, G
6JE6	9QL	6JE6A, B, C	6K6	7S	6K6G, GT, GT/G, MG
6JE6A	9QL	6JE6B, 6JE6C	6K6G	7S	6K6, GT, GT/G, MG
6JE6B	9QL	6JE6C, 6LQ6, 6LZ6, 6ME6	6K6GT	7S	6K6, G, GT/G, MG
6JE6C	9QL	6JE6B, 6LQ6, 6LZ6, 6ME6, 6MJ6	6K6GT/G	7S	6K6, G, GT, MG
6JE8	9DX	6EB8, 6GN8, 6HF8, 6JA8, 6HZ8*, 6JV8*, 6LF8*	6K6MG	7S	6K6, G, GT, GT/G
6JF6	9QL	6JE6*, 6KM6, 6LQ6*	6K7	7R	6K7G, GT, GTX, MG, 6U7G
6JG5	9SF		6K7G	7R	6K7, GT, GTX, MG, 6U7G
6JG6	9QU	6JG6A, 6JR6, 6KV6A	6K7GT	7R	6K7, G, GTX, MG, 6U7G
6JG6A	9QU	6JG6, 6JR6, 6KV6A	6K7GTX	7R	6K7, G, GT, MG, 6U7G
6JH5	12JE	6JK5	6K7MG	7R	6K7, G, GT, GTX, 6U7G
6JH6	7CM	6BZ6, 6HQ6, 6GM6*	6K8	8K	6K8G, GT, GTX
6JH8	9DP		6K8G	8K	6K8, GT, GTX
6JK5	12JE	6JH5	6K8GT	8K	6K8, G, GTX
6JK6	7CM	6EW6, 6JL6	6K8GTX	8K	6K8, G, GT
6JK8	9AJ		6K11	12BY	6Q11
6JL6	7CM	6EW6, 6JK6	6KA8	9PV	
6JL8	9DX		6KD6	12GW	
6JM6	12FJ	6JM6A	6KD8	9AE	6EA8, 6GH8, A, 6U8, A
6JM6A	12FJ	6JM6	6KE6	12GM	
6JN6	12FK	6JN6A	6KE8	9DC	
6JN6A	12FK	6JN6	6KF8	9FG	6BU8, A, 6GS8, 6HS8
6JN8	9FA	6BR8A, 6FV8, A, 6BR8*†	6KG6	9RJ	
6JQ6	9RA		6KL8	9LQ	6EQ7§
6JR6	9QU	6JG6, A	6KM6	9QL	6JF6, 6LQ6*
6JS6	12FY	6JS6A, B, C, 6KD6	6KM8	9QG	
6JS6A	12FY	6JS6, B, C, 6KD6	6KN6	12GU	
6JS6B	12FY	6JS6, A, C, 6LB6	6KN8	9AJ	
6JS6C	12FY	6JS6B, 6LB6A	6KR8	9DX	6KR8A, 6JT8, 6KV8, 6LB8, 6LQ8, 6LY8
6JT6	9QU	6JT6A, 6JG6*, A*	6KR8A	9DX	6KR8, 6JT8, 6KV8, 6LB8, 6LQ8, 6LY8
6JT6A	9QU	6JT6, 6JG6*, A*	6KS6	7DF	6BN6
6JT8	9DX	6JA8, 6KR8, A, 6KV8, 6LB8, 6LQ8, 6LY8	6KS8	9DX	6AU8, A, 6AW8, 6AW8A, 6JV8, 6LF8, 6CX8*, 6EB8*, 6GN8*, 6HF8*, 6HZ8*, 6JA8*, 6JE8*
6JU6	9QL		6KT6	9PM	
6JU8	9PQ	6JU8A	6KT8	9QP	
6JU8A	9PQ	6JU8	6KU8	9LT	
6JV8	9DX	6AW8, A, 6KS8, 6LF8, 6CX8*, 6EB8*, 6GN8*, 6HF8*, 6HZ8*, 6JA8*, 6JE8*	6KV6	9QU	6KV6A
6JW6	9PU		6KV6A	9QU	
6JW8	9DC	6LX8	6KV8	9DX	6JT8, 6KR8, A, 6LB8, 6LQ8, 6LY8
6JZ6	12GD				
6JZ8	12DZ				
6K5	5U	6K5G, GT			
6K5G	5U	6K5, GT			

§ May not work in all circuits.

* Parallel-filament circuits.

† Series circuit not requiring controlled warm-up time.

Tube Type	Basing	Replacement	Tube Type	Basing	Replacement
6KY6	9GK		6LJ6	8MQ	6LJ6A
6KY8	9QT	6KY8A	6LJ6A	8MQ	
6KY8A	9QT	6KY8	6LJ8	9GF	6GD7§, 6MB8§
6KZ8	9FZ		6LM8	9AE	6AX8, 6GH8, 6GH8A, 6CQ8§, 6LM8A
6L4	7BR		6LM8A	9AE	6AX8, 6CQ8§, 6GH8, A
6L5G	6Q	6C5, G, GT, GT/G, MG, 6J5, G, GT, GT/G, GTX, GX, MG	6LN8	9DC	6BL8*†
6L6	7AC	6L6A, G, GA, GAY, GB, GC, GT, GX, Y, 5881, 7581, 7581A	6LQ6	9QL	6JE6B, 6JE6C, 6LZ6, 6ME6, 6MJ6
6L6A	7AC	6L6, G, GA, GAY, GB, GC, GT, GX, Y, 5881, 7581, 7581A	6LQ8	9DX	6JT8, 6KR8, A, 6KV8, 6LB8, 6LY8
6L6G	7AC	6L6, A, GA, GAY, GB, GC, GT, GX, Y, 5881, 7581, 7581A	6LR6	12FY	6JS6C
6L6GA	7AC	6L6, A, G, GAY, GB, GC, GT, GX, Y, 5881, 7581, 7581A	6LR8	9QT	
6L6GAY	7AC	6L6, A, G, GA, GB, GC, GT, GX, Y, 5881, 7581, 7581A	6LT8	9RL	
6L6GB	7AC	6L6, A, G, GA, GAY, GC, GT, GX, Y, 5881, 7581, 7581A	6LU6	7CM	
6L6GC	7AC	7581, 7581A	6LU8	12DZ	6MY8
6L6GT	7AC	6L6, A, G, GA, GAY, GB, GC, GX, Y, 5881, 7581, 7581A	6LV6	12GW	6LF6
6L6GX	7AC	6L6, A, G, GA, GAY, GB, GC, GT, Y, 5881, 7581, 7581A	6LW6	8NC	
6L6Y	7AC	6L6, A, G, GA, GAY, GB, GC, GT, GX, 5881, 7581, 7581A	6LX6	12JA	
6L7	7T	6L7G	6LX8	9DC	6JW8*†
6L7G	7T	6L7	6LY8	9DX	6JT8, 6KR8, A, 6KV8, 6LB8, 6LQ8
6LB6	12JF		6LZ6	9QL	6ME6, 6MJ6
6LB8	9DX	6JT8, 6KR8, A, 6KV8, 6LQ8, 6LY8	6M3	8GV	
6LC6	8ML	6LH6, A	6M5	9N	6CK6§
6LC8	9QY		6M6G	7S	6AG6G*
6LE8	9QZ		6M7G	7R	6K7§, G§, GT§, GTX§, MG§
6LF6	12GW	6LV6	6M8G	8AU	6M8GT
6LF8	9DX	6AW8, A, 6JV8, 6KS8, 6CX8*, 6GN8*, 6HF8*, 6HZ8*, 6JA8*, 6JE8*	6M8GT	8AU	6M8G
6LG6	12HL		6M11	12CA	
6LH6	8ML	6LH6A	6MA6	8NP	
6LH6A	8ML		6MB6	12FY	6JE6B, C, 6LZ6
			6MB8	9FA	6LJ8§
			6MC6	9QL	6MJ6
			6MD8	9RR	
			6ME6	9QL	6JE6B, C, 6MJ6, 6LZ6
			6ME8	9RU	
			6MF8	12DZ	
			6MG8	9DC	6EA8, 6U8, A, 6CQ8§
			6MJ6	9QL	
			6MJ8	12HG	
			6MK8	9FG	6HS8, 6MK8A
			6MK8A	9FG	6HS8, 6MK8
			6ML8	9RQ	
			6MN8	12HU	
			6MQ8	9AE	6EA8*, 6U8*, A*
			6MU8	9AE	
			6MV8	9DX	
			6MY8	12DZ	6LU8
			6N3	9BM	6U3
			6N4	7CA	

Tube Type	Basing	Replacement	Tube Type	Basing	Replacement
6N5	6R	6N5G, 6AB5, 6AB5/ 6N5	6SA7	8R	6SA7G, GT, GT/G, GTX, GTY, Y, 6SB7, Y, GTY
6N5G	6R	6N5, 6AB5, 6AB5/ 6N5	6SA7G	8R	6SA7, GT, GT/G, GTX, GTY, Y, 6SB7, Y, GTY
6N6	7AU	6N6G, 6N6, 6AB6G*	6SA7GT	8R	6SA7, G, GT/G, GTX, GTY, Y, 6SB7, Y, GTY
6N6G	7AU	6N6, MG, 6AB6G*	6SA7GT/G	8R	6SA7, G, GT, GTX, GTY, Y, 6SB7, Y, GTY
6N6MG	7AU	6N6, G, 6AB6G*	6SA7GTX	8R	6SA7, G, GT, GT/G, GTY, Y, 6SB7, Y, GTY
6N7	8B	6N7G, GT, GT/G, MG	6SA7GTY	8R	6SA7, G, GT, GT/G, GTX, Y, 6SB7, Y, GTY
6N7G	8B	6N7, GT, GT/G, 6N7MG	6SA7Y	8R	6SA7, G, GT, GT/G, GTX, GTY, 6SB7, Y, GTY
6N7GT	8B	6N7, G, GT/G, MG	6SB7	8R	6SB7GTY, Y
6N7GT/G	8B	6N7, G, GT, MG	6SB7GTY	8R	6SB7, Y
6N7MG	8B	6N7, G, GT, GT/G	6SB7Y	8R	6SB7, GTY
6N8	9T	6AD8, 6DC8	6SC7	8S	6SC7GT, GTY
6P5G	6Q	6P5GT, GT/G	6SC7GT	8S	6SC7, GTY
6P5GT	6Q	6P5G, GT/G	6SC7GTY	8S	6SC7, GT
6P5GT/G	6Q	6P5G, GT	6SD7GT	8N	6SE7GT
6P6	6AC		6SE7GT	8N	6SD7GT
6P7G	7U		6SF5	6AB	6SF5GT
6Q4	9S		6SF5GT	6AB	6SF5
6Q6	6Y	6Q6G	6SF7	7AZ	6SF7GT
6Q6G	6Y	6Q6	6SF7GT	7AZ	6SF7
6Q7	7V	6Q7G, GT, MG, 6B6, G, 6T7G*	6SG7	8BK	6SG7Y, 6SH7, GT, 6AB7*§, Y*§, 6AC7*§, A*§, Y*§, 6AJ7*§
6Q7G	7V	6Q7, GT, MG, 6B6, G, 6T7G*	6SG7GT	8BK	6SG7, Y, 6SH7, GT, 6AB7*§, Y*§, 6AC7*§, A*§, Y*§, 6AJ7*§
6Q7GT	7V	6Q7, G, MG, 6B6, G, 6T7G*	6SG7Y	8BK	6SG7, GT, 6SH7, GT, 6AB7*§, Y*§, 6AC7*§, A*§, Y*§, 6AJ7*§
6Q7MG	7V	6Q7, G, GT, 6B6, G, 6T7G*	6SH7	8BK	6SH7GT, L, 6SG7, GT, Y, 6AB7*§, Y*§, 6AC7*§, A*§, Y*§, 6AJ7*§
6Q11	12BY				
6R3	9CB	6AF3*, 6AL3*, 6BR3*			
6R4	9R				
6R6G	6AW				
6R7	7V	6R7G, GT, GT/G, MG			
6R7G	7V	6R7, GT, GT/G, MG			
6R7GT	7V	6R7, G, GT/G, MG			
6R7GT/G	7V	6R7, G, GT, MG			
6R7MG	7V	6R7, G, GT, GT/G			
6R8	9E	6T8, A			
6S2	9DT	6S2A			
6S2A	9DT	6S2			
6S4	9AC	6S4A			
6S4A	9AC				
6S6GT	5AK				
6S7	7R	6S7G, 6K7*, G*, GT*, GTX*, MG*			
6S7G	7R	6S7, 6K7*, G*, GT*, GTX*, MG*			
6S8GT	8CB				

§ May not work in all circuits.

* Parallel-filament circuits.

† Series circuit not requiring controlled warm-up time.

Tube Type	Basing	Replacement	Tube Type	Basing	Replacement
6SH7GT	8BK	6SH7, L, 6SG7, GT, Y, 6AB7*§, Y*§, 6AC7*§, A*§, Y*§, 6AJ7*§	6SR7GT	8Q	6SR7, G, 6ST7*
6SH7L	8BK	6SH7, GT, 6SG7, GT, Y, 6AB7*§, Y*§, 6AC7*§, A*§, Y*§, 6AJ7*§	6SS7	8N	6SS7GT, 6SK7*, G*, GT*, GT/G*, GTX*, GTY*, Y*
6SJ7	8N	6SJ7GT, GTX, GTY, Y	6SS7GT	8N	6SS7, 6SK7*, G*, GT*, GT/G*, GTX*, GTY*, Y*
6SJ7GT	8N	6SJ7, GTX, GTY, Y	6ST7	8Q	6SR7, G*, GT*
6SJ7GTX	8N	6SJ7, GT, GTY, Y	6SU7GT	8BD	6SU7GTX, GTY
6SJ7GTY	8N	6SJ7, GT, GTX, Y	6SU7GTX	8BD	6SU7GT, GTY
6SJ7Y	8N	6SJ7, GT, GTX, GTY	6SU7GTY	8BD	6SU7GT, GTX
6SK7	8N	6SG7, 6SK7GT, GT/G, GTX, GTY, Y, 6SS7*, GT*	6SV7	7AZ	6SV7GT
6SK7G	8N	6SG7, 6SH7, 6SK7, GT, GT/G, GTX, GTY, Y, 6SS7*, GT*	6SV7GT	7AZ	6SV7
6SK7GT	8N	6SG7, 6SH7, 6SK7, G, GT/G, GTX, GTY, Y, 6SS7*, GT*	6SZ7	8Q	6SQ7*, G, GT*, GT/G*
6SK7GT/G	8N	6SK7, G, GT, GTX, GTY, Y, 6SS7*, GT*	6T4	7DK	6AF4§, A§, 6AN4§, 6DZ4§
6SK7GTX	8N	6SK7, G, GT, GT/G, GTY, Y, 6SS7*, GT*	6T5	6R	6G5, 6G5/6H5, 6H5, 6U5, 6U5/6G5
6SK7GTY	8N	6SK7, G, GT, GT/G, GTX, Y, 6SS7*, GT*	6T6	6Z	6T6GM
6SK7Y	8N	6SK7, G, GT, GT/G, GTX, GTY, 6SS7*, GT*	6T6GM	6Z	6T6
6SL7A	8BD	6SL7GT, 6SL7, L	6T7G	7V	6B6*, 6B6G*, 6Q7*, G*, GT*, MC*
6SL7GT	8BD	6SL7A, GTY, L	6T8	9E	6T8A, 6AK8
6SL7GTY	8BD	6SL7A, GTY, L	6T8A	9E	6T8*†, 6AK8*†
6SL7L	8BD	6SL7A, GT, GTY	6T9	12FM	
6SN7A	8BD	6SN7GT, GTA, GTB, GTY, L	6T10	12EZ	6AD10§
6SN7GT	8BD	6SN7A, GTA, GTB, GTY, L	6U3	9BM	
6SN7GTA	8BD	6SN7GTB	6U4GT	4CG	6AS4GT, 6AX4GT, GTA, GTB, 6DA4, A, 6DM4, A, 6DQ4, 6DT4, 6W4GT, GTA, 6AU4GT*, GTA*, 6CQ4*, 6DE4*
6SN7GTB	8BD	6SN7GTA*†	6U5	6R	6G5, 6G5/6H5, 6H5, 6T5, 6U5/6G5
6SN7GTY	8BD	6SN7A, GT, GTA, GTB, L	6U5/6G5	6R	6U5, 6G5, 6G5/6H5, 6H5, 6T5
6SN7L	8BD	6SN7A, GT, GTA, GTB, GTY	6U6GT	7AC	6Y6G*, GA*, GT*
6SQ7	8Q	6SQ7G, GT, GT/G, 6SZ7*	6U7G	7R	6K7, G, GT, GTX, MG, 6S7*, G*
6SQ7G	8Q	6SQ7, GT, GT/G, 6SZ7*	6U8	9AE	6EAB, 6LN8, 6CQ8§, 6KD8*, 6MQ8*, 6U8A
6SQ7GT	8Q	6SQ7, G, GT/G, 6SZ7*	6U8A	9AE	6EAB, 6LN8, 6CQ8§, 6KD8§, 6MQ8§, 6U8*†
6SQ7GT/G	8Q	6SQ7, G, GT, 6SZ7*	6U10	12FE	6AC10§
6SR7	8Q	6SR7G, GT, 6ST7*	6V3	9BD	6V3A
6SR7G	8Q	6SR7, GT, 6ST7*	6V3A	9BD	6V3
			6V4	9M	6CA4*
			6V5G	6AO	6V5GT
			6V5GT	6AO	6V5G

Tube Type	Basing	Replacement	Tube Type	Basing	Replacement
6V6	7AC	6V6G, GT, GTA, GT/G, GTX, GTY, GX, Y, 7408	6W7G	7R	6J7*, G*, GT*, GTX*, MG*
6V6G	7AC	6V6, GT, GTA, GT/G, GTX, GTY, GX, Y, 7408	6X4	5BS	6BX4, 6AV4*
6V6GT	7AC	6V6, G, GTA, GT/G, GTX, GTY, GX, Y, 7408	6X5	6S	6X5G, GT, GT/G, L, MG, 6AX5GT*, 6W5G*, GT*
6V6GTA	7AC	6V6*†, G*†, GT*†, GT/G*†, GTX*†, GTY*†, GX*†, Y*†, 7408*†	6X5G	6S	6X5, GT, GT/G, L, MG, GT*, 6W5G*, GT*
6V6GT/G	7AC	6V6, G, GT, GTA, GTX, GTY, GX, Y, 7408	6X5GT	6S	6X5, G, GT/G, L, MG, 6AX5GT*, 6W5G*, GT*
6V6GTX	7AC	6V6, G, GT, GTA, GT/G, GTY, GX, Y, 7408	6X5GT/G	6S	6X5, G, GT, L, MG, 5GT*, 6W5G*, GT*
6V6GTY	7AC	6V6, G, GT, GTA, GT/G, GTX, GX, GY, 7408	6X5L	6S	6X5, G, GT, GT/G, MG, 6AX5GT*, 6W5G*, GT*
6V6GX	7AC	6V6, G, GT, GTA, GT/G, GTY, GTX, Y, 7408	6X5MG	6S	6X5, G, GT, L, GT/G, 6AX5GT*, 6W5G*, GT*
6V6Y	7AC	6V6, G, GT, GTA, GT/G, GTX, GTY, GX, 7408	6X8	9AK	6X8A, 6AU8*§, A*§, 6AW8*§, A*§, 6EH8§
6V7G	7V		6X8A	9AK	6X8*†, 6AU8*§, A*§, 6AW8*§, A*§, 6EH8§
6V8	9AH		6Y3	4AC	6Y3G
6W4GT	4CG	6W4GTA, 6AS4GT, 6AX4GT, GTA, GTB, 6DA4, A, 6DM4, A, 6DQ4, 6DT4, 6U4GT, 6AU4GT*, GTA*, 6CQ4*, 6DE4*	6Y3G	4AC	6Y3
6W4GTA	4CG	6AX4GTA, GTB, 6DA4, A, 6DM4, A, 6DQ4, 6DT4, 6U4GT, 6AU4GT*, GTA*, 6CQ4*, 6DE4*	6Y5	6J	6Y5G, GT, V
6W5	6S	6W5G, GT, 6AX5GT*	6Y5G	6J	6Y5, GT, V
6W5G	6S	6W5, GT, 6AX5GT*	6Y5GT	6J	6Y5, G, V
6W5GT	6S	6W5, G, 6AX5GT*	6Y5V	6J	6Y5, G, GT
6W6	7AC	6W6GT, 6DG6GT, 6EF6*, 6EY6*, 6EZ5*	6Y6G	7AC	6Y6GA, GT, 6U6GT*
6W6GT	7AC	6W6, 6DG6GT, 6EF6*, 6EY6*, 6EZ5*	6Y6GA	7AC	6Y6G, GT, 6U6GT*
			6Y6GT	7AC	6Y6G, GA, 6U6GT*
			6Y7G	8B	
			6Y9	10L	
			6Y10	12EZ	6AD10
			6Z3	4G	1V
			6Z4	5D	84/6Z4, 98
			6Z5	6K	12Z5, 6Z5/12Z5
			6Z5/12Z5	6K	6Z5, 12Z5
			6Z6G	7Q	6Z6GT, MG
			6Z6GT	7Q	6Z6G, MG
			6Z6MG	7Q	6Z6G, GT
			6Z7G	8B	
			6Z10	12BT	6J10
			6ZY5G	6S	6X5*, G*, GT*, GT/G*, L*, MG*
			7A4	5AC	XXL
			7A5	6AA	
			7A6	7AJ	

§ May not work in all circuits.

* Parallel-filament circuits.

† Series circuit not requiring controlled warm-up time.

Tube Type	Basing	Replacement	Tube Type	Basing	Replacement
7A7	8V	7A7LM, 7H7, 7B7*	7S7	8B1	7J7
7A7LM	8V	7A7, 7H7, 7B7*	7T7	8V	7AG7*, 7V7*
7A8	8U	7B8*, 7B8LM*	7V7	8V	7G7, 7L7*, 7T7*
7AB7	8B0		7W7	8B1	
7AD7	8V		7X6	7DX	
7AF7	8AC		7X7	8BZ	XXFM
7AG7	8V	7AH7, 7G7*, 7T7*	7Y4	5AB	7Z4*
7AH7	8V	7AG7, 7B7, 7H7*	7Z4	5AB	
7AJ7	8V	7C7*	8A8	9DC	9A8, 9EA8, 9U8, A
7AK7	8V		8AC9	12GN	
7AN7	9DD	7EK7	8AC10	12FE	8AC10A
7AU7	9A	6AU7, 6AX7§	8AC10A	12FE	
7B4	5AC	7A4§, XXI§	8AL9	12HE	
7B5	6AE	7B5LT, 7C5*, 7C5LT*	8AR11	12DM	8BQ11§
7B5LT	6AE	7B5, 7C5*, 7C5LT*	8AU8	9DX	8AU8A, 8AW8A, 8BA8A, 8BH8
7B6	8W	7B6LM, 7C6*	8AU8A	9DX	8AU8, 8AW8A, 8BA8A, 8BH8
7B6LM	8W	7B6, 7C6*	8AW8A	9DX	8AU8, A, 8BA8A, 8BH8, 8KS8, 8JV8
7B7	8V	7AH7, 7A7*, 7A7LM*, 7H7*	8B8	9EX	
7B8	8X	7B8LM, 7A8*	8B10	12B4	
7B8LM	8X	7B8, 7A8*	8BA8A	9DX	8AU8, A, 8AW8A, 8BH8
7C4	4AH		8BA11	12ER	
7C5	6AA	7C5LT, 7B5*, 7B5LT*	8BH8	9DX	8AU8, A, 8AW8A, 8BA8A
7C5LT	6AA	7C5, 7B5*, 7B5LT*	8BM11	12FU	
7C6	8W	7B6*, 7B6LM*	8BN8	9ER	
7C7	8V	7AJ7*, 7G7*, 7L7*	8BN11	12GF	
7D7	8AR		8BQ5	9CV	
7DJ8	9DE	7ES8	8BQ7A	9AJ	
7E5	8BN		8BQ11	12DM	8AR11§
7E6	8W		8BU11	12FP	
7E7	8AE	7R7	8CB11	12DM	
7ED7	9AQ		8CG7	9AJ	8FQ7§
7EK7	9DD	7AN7	8CM7	9ES	
7ES8	9DE	7DJ8	8CN7	9EN	
7EY6	7AC		8CS7	9EF	
7F7	8AC		8CW5	9CV	8CW5A
7F8	8BW		8CW5A	9CV	8CW5†
7FC7	9DD	7EK7	8CX8	9DX	8EB8, 8GN8, 8JE8
7G7	8V	7V7, 7AG7*, 7C7*, 7L7*	8CY7	9EF	
7G8	8BV		8EB8	9DX	8CX8, 8GN8, 8JE8
7GS7	9GF		8EM5	9HN	
7GV7	9KN		8ET7	9LT	
7H7	8V	7A7, LM, 7AH7*, 7B7*	8FQ7	9LP	
7HG8	9MP	8HG8	8GJ7	9QA	8GX7
7J7	8B1	7S7	8GK6	9GK	
7K7	8BF		8GN8	9DX	8CX8, 8EB8, 8JE8
7KY6	9GK		8GU7	9LP	
7KZ6	9GK		8GX7	9QA	8GJ7
7L7	8V	7C7*, 7G7*, 7V7*	8HA6	9NW	
7N7	8AC	7AF7*	8HG8	9MP	7HG8
7Q7	8AL				
7R7	8AE	7E7			

Tube Type	Basing	Replacement	Tube Type	Basing	Replacement
8JE8	9DX	8CX8, 8EB8, 8GN8	10AL11	12BU	
8JK8	9AJ		10BQ5	9CV	
8JL8	9DX		10C8	9DA	
8JT8	9DX		10CW5	9CV	
8JU8A	9PQ		10DA7	9EF	
8JV8	9DX	8AW8A, 8KS8	10DE7	9HF	10EW7
8KA8	9PV		10DR7	9HF	10FD7, 10FR7
8KR8	9DX		10DX8	9HX	
8KS8	9DX	8AU8, A, 8AW8A, 8JV8	10EB8	9DX	10GN8, 10HF8, 10JA8, 11JE8
8LC8	9QY		10EG7	8BD	10EM7
8LE8	9QZ		10EM7	8BD	10EG7
8LS6	9GK		10EW7	9HF	
8LT8	9RL		10FD7	9HF	10FR7
8MU8	9AE		10FR7	9HF	10FD7
8SN7GTB	8BD		10GF7	9QD	10GF7A
9A8	9DC	8A8, 9EA8, 9U8, 9UBA	10GF7A	9QD	10GF7
9AH9	12HJ		10GK6	9GK	
9AK8	9E		10GN8	9DX	10EB8, 10HF8, 11JE8, 10LZ8, 10JY8, 10JA8
9AK10	12FE		10HA6	9NW	
9AM10	12FE		10HF8	9DX	10EB8, 10GN8, 11JE8, 10LZ8, 10JY8, 10JA8
9AQ8	9DE		10J10	12BT	
9AU7	9A		10JA5	12EY	
9BJ11	12FU		10JA8	9DX	11JE8, 10EB8, 10GN8, 10HF8, 10JY8
9BM5	7DQ		10JT8	9DX	10KR8, 10LB8*, 10LW8, 10LY8, 11KV8, 11LQ8
9BR7	9CF		10JY8	9DX	10EB8, 10GN8, 10HF8, 10LZ8, 11JE8, 10JA8
9BR8	9FA	9CL8§	10KR8	9DX	10LW8, 10JT8, 10LB8, 11KV8, 11LQ8
9BW6	9AM		10KU8	9LT	
9CG8A	9GF	9BR8†§	10LB8	9DX	10LW8, 10KR8, 10JT8, 11KV8, 11LQ8
9CL8	9FX	9BR8§†	10LE8	9QZ	
9DZ8	9JE		10LW8	9DX	10JT8, 10KR8, 10LB8, 11KV8, 11LQ8
9EA8	9AE	8A8, 9U8A, 9A8†, 9U8†	10LY8	9DX	10JT8
9EF6	7S		10LZ8	9DX	10EB8, 10GN8, 10HF8, 11JE8, 10JY8
9EN7	9LM		10T10	12EZ	
9GB8	9DA		10X	4D	10, 10Y
9GH8A	9AE	9EA8	10Y	4D	10, 10X
9GV8	9LY		10Z10	12BT	
9JW8	9DC				
9KC6	9RF				
9KX6	9GK				
9KZ8	9FZ				
9LA6	9GK				
9ML8	9RQ				
9MN8	12HU				
9U8	9AE	8A8, 9U8A, 9A8, 9EA8			
9U8A	9AE	8A8, 9U8†, 9A8†, 9EA8			
9X8	9AK				
10	4D	10X, 10Y			

§ May not work in all circuits. * Parallel-filament circuits.

† Series circuit not requiring controlled warm-up time.

Tube Type	Basing	Replacement	Tube Type	Basing	Replacement
11	4F		12EA6A	7BT	12AE6, 12FT6
11AR11	12DM	11BQ11§	12AE7	9A	
11BM8	9EX		12AE10	12EZ	13V10
11BQ11	12DM	11AR11§	12AF3	9CB	12BR3
11BT11	12GS		12AF6	7BK	12BL6, 12AC6, 12EK6§
11C5	7CV	12DM5			12AD6
11CA11	12HN		12AG6	7CH	
11CF11	12HW		12AH6	7BK	
11CH11	12GS		12AH7GT	8BE	
11CY7	9EF		12AH8	9BP	
11DS5	7BZ		12AJ6	7BT	
11FY7	12EO		12AJ7	9CA	
11HM7	9BF		12AL5	6BT	
11JE8	9DX	10EB8, 10GN8, 10HF8, 10JA8, 10LZ8, 10JY8	12AL8	9GS	
			12AL11	12BU	
11KV8	9DX	10JT8, 10KR8, 10LW8, 10LB8, 11LQ8	12AQ5	7BZ	12BM5*
			12AS5	7CV	12CA5*, 12R5*
11LQ8	9DX	11KV8, 10LB8, 10LW8, 10KR8, 10JT8	12AT6	7BT	12AT6A, 12AV6A, A, 12BK6, 12BT6
			12AT6A	7BT	12AV6A, 12AT6*†, 12BK6*†, 12BT6*†
11LT8	9RL		12AT7	9A	12AZ7*, A*
11LY6	9GK	12BY7A†	12AU6	7BK	12AU6A, 12BA6A, A, 12AW6§
11MS8	9LY				12BA6A, 12AU6*†
11Y9	10L		12AU6A	7BK	12AU7A, 12AX7§, A§
12	4D		12AU7	9A	12AU7, 12AX7§, A§
12A	4D	12A/112A, 112A	12AU7A	9A	12AU7, 12AX7§, A§
12A/112A	4D	12A, 112A	12AU8	9DX	
12A4	9AG		12AV5GA	6CK	12AV5GT*†
12A5	7F		12AV5GT	6CK	12AV5GA
12A6	7AC	12A6G, GT, GTY, Y, 12V6GT*§	12AV6	7BT	12AV6A, 12AT6A, A, 12BK6, 12BT6
12A6G	7AC	12A6, GT, GTY, Y, 12V6GT*§	12AV6A	7BT	12AT6A, 12AV6*†, 12BK6*†, 12BT6*†
12A6GT	7AC	12A6, G, GTY, Y, 12V6GT*§	12AV7	9A	
12A6GTY	7AC	12A6, G, GT, Y, 12V6GT*§	12AW6	7CM	12AU6§, 12AU6A§
12A6Y	7AC	12A6, G, GT, GTY, 12V6GT*§	12AX3	12BL	
12A7	7K		12AX4GT	4CG	12AX4GTA, GTB, 12D4, 12D4A, 12DM4, A, 12DQ4
12A8	8A	12A8G, GT	12AX4GTA	4CG	12AX4GTB, 12D4, A, 12DM4, A, 12DQ4, 12AX4GT*†
12A8G	8A	12A8, GT			12AX4GT*†
12A8GT	8A	12A8, G	12AX4GTB	4CG	12D4A, 12DM4, A, 12DQ4
12AB5	9EU				
12AC5	8GW		12AX7	9A	12AX7A, 12DF7, 12DT7, 7025, A, 12AD7*, 12AU7§, A§, 12BZ7*, 12DM7*
12AC6	7BK	12AF6§			
12AC10A	12FE		12AX7A	9A	12AX7, 12DF7, 12DT7, 7025, A, 12AD7*, 12AU7§, A§, 12BZ7*, 12DM7*
12AD5	9AZ				
12AD6	7CH	12AG6			
12AD7	9A	12AX7*, A*, 12BZ7*, 12DF7*, 12DM7*, 12DT7*, 7025*, A*			
12AE6	7BT	12AE6A, 12FT6			

Tube Type	Basing	Replacement
12AY3	9HP	12AY3A, 12BS3, A, 12CK3, 12CL3, 12DW4A
12AY3A	9HP	12AY3, 12BS3, A, 12CK3, 12CL3, 12DW4A
12AY7	9A	
12AZ7	9A	12AZ7A, 12AT7*
12AZ7A	9A	12AZ7*†, 12AT7*
12B3	9BD	
12B4	9AG	12B4A
12B4A	9AG	12B4*†
12B6M	6Y	
12B7	8V	12B7ML, 14A7, 14H7, 14A7/12B7, 14A7ML, 14A7ML/12B7ML
12B7ML	8V	12B7, 14A7, 14H7, 14A7/12B7, 14A7ML, 14A7ML/12B7ML
12B8	8T	12B8GT
12B8GT	8T	12B8
12BA6	7BK	12AU6, A, 12BA6A, 12BZ6§
12BA6A	7BK	12AU6A, 12BA6*†
12BA7	8CT	
12BD6	7BK	12BA6, 12BA6A
12BE3	12GA	12BE3A
12BE3A	12GA	12BE3
12BE6	7CH	12BE6A, 12CS6
12BE6A	7CH	12BE6*†, 12CS6*†
12BF6	7BT	12BU6
12BF11	12EZ	
12BH7	9A	12BH7A
12BH7A	9A	12BH7*†
12BK5	9BQ	
12BK6	7BT	12AT6, A, 12AV6, A, 12BT6
12BL6	7BK	12AF6, 12EK6§
12BM5	7DQ	12AQ5*
12BN6	7DF	12BN6A
12BN6A	7DF	12BN6*†
12BQ6GA	6AM	12BQ6GTA, GTB, 12BQ6GTB/12CU6, 12CU6, 12DQ6, A, B, 12GW6
12BQ6GT	6AM	12BQ6GA, GTA, GTB, 12BQ6GTB/12CU6, 12CU6, 12DQ6, A, B, 12GW6

Tube Type	Basing	Replacement
12BQ6GTA	6AM	12BQ6GA, GTB, 12BQ6GTB/12CU6, 12CU6, 12DQ6, A, B, 12GW6
12BQ6GTB	6AM	12BQ6GTB/12CU6, 12CU6, 12DQ6A, B, 12GW6
12BQ6GTB/12CU6	6AM	12BQ6GTB, 12CU6, 12DQ6, A, B, 12GW6
12BR3	9CB	
12BR7	9CF	12BR7A
12BR7A	9CF	12BR7*†
12BS3	9HP	12BS3A, 12CK3, 12CL3, 12DW4
12BS3A	9HP	12BS3, 12CK3, 12CL3, 12DW4
12BT3	12BL	
12BT6	7BT	12AT6, A, 12AV6, A, 12BK6
12BU6	7BT	12BF6
12BV7	9BF	12BY7, A, 12DQ7
12BV11	12HB	
12BW4	9DJ	
12BX6	9AQ	13EC7*
12BY3	9CB	
12BY7	9BF	12BY7A, 12BV7, 12DQ7
12BY7A	9BF	12DQ7, 12BY7*†, 12BV7*†
12BZ6	7CM	12BA6§, 12BA6A§
12BZ7	9A	
12C5	7CV	12C5/12CU5, 12CU5, 12R5, 12AS5*, 12DM5*
12C5/12CU5	7CV	12C5, 12CU5, 12R5, 12AS5*, 12DM5*
12C8	8E	12C8Y
12C8Y	8E	12C8
12CA5	7CV	12EH5, 12AS5*, 12ED5*, 12FX5*
12CK3	9HP	12CL3, 12DW4A
12CL3	9HP	12CK3, 12DW4A
12CM6	9CK	
12CN5	7CV	
12CR5	9HC	
12CR6	7EA	
12CS5	9CK	12DW5, 12CM6*
12CS6	7CH	12BE6, 12BE6A
12CT3	9RX	
12CT8	9DA	

§ May not work in all circuits.

* Parallel-filament circuits.

† Series circuit not requiring controlled warm-up time.

Tube Type	Basing	Replacement	Tube Type	Basing	Replacement
12CU5	7CV	12C5, 12C5/12CU5, 12R5, 12AS5*, 12DM5*	12DZ8	9JE	12FY8*
12CU6	6AM	12BQ6GTB/12CU6, 12BQ6GTB, 12DQ6, A, B, 12GW6	12E5GT	6Q	12J5, 12J5GT
12CX6	7BK	12EZ6	12EA6	7BK	12DZ6, 12EK6
12CY6	7BK		12EC8	9FA	
12D4	4CG	12D4A, 12AX4GTB, 12DM4, A, 12DQ4	12ED5	7CV	12FX5, 12CA5*, 12EH5*
12D4A	4CG	12DM4, A, 12DQ4	12EF6	7S	
12DB5	9GR		12EG6	7CH	
12DE8	9HG		12EH5	7CV	12CA5, 12ED5*, 12FX5*
12DF5	9BS		12EK6	7BK	12DZ6, 12EA6
12DF7	9A	12AX7, A, 12DT7, 7025, A, 12AD7*, 12BZ7*, 12DM7*	12EL6	7FB	
12DJ8	9DE		12EM6	9HV	
12DK5	9GT		12EN6	7S	12L6GT, 12W6GT
12DK6	7CM		12EQ7	9LQ	12KL8§
12DK7	9HZ		12EZ6	7BK	12CX6
12DL8	9HR	12DS7§, A§	12F5	5M	12F5GT
12DM4	4CG	12DM4A, 12D4A, 12DQ4	12F5GT	5M	12F5
12DM4A	4CG		12F8	9FH	
12DM5	7CV	11C5, 12AS5*, 12C5*, 12C5/12CU5*, 12CU5*, 12R5*	12FA6	7CH	
12DM7	9A	12AD7*, 12AX7*, 12AX7A*, 12BZ7*, 12DF7*, 12DT7*, 7025*, A*	12FB5	9CV	
12DQ4	4CG		12FK6	7BT	12FM6
12DQ6	6AM	12DQ6A, B, 12GW6	12FM6	7BT	12FK6
12DQ6A	6AM	12DQ6B, 12GW6	12FQ7	9LP	
12DQ6B	6AM	12GW6	12FQ8	9KT	
12DQ7	9BF	12BY7A, 12BV7*†	12FR8	9KU	
12DS7	9JU	12DS7A	12FT6	7BT	12AE6, 12AE6A
12DS7A	9JU	12DS7	12FV7	9A	
12DT5	9HN		12FX5	7CV	12ED5, 12EH5*
12DT6	7EN		12FX8	9KV	12FX8A
12DT7	9A	12AX7, A, 12DF7, 7025, A, 12AD7*, 12BZ7*, 12DM7*	12FX8A	9KV	12FX8
12DT8	9AJ		12FY8	9EX	
12DU7	9JX		12G4	6BG	12H4
12DV7	9JY		12G8	9CZ	
12DV8	9HR		12G11	12BU	
12DW4A	9HP	12CK3, 12CL3	12GA6	7CH	
12DW5	9CK		12GC6	8JX	
12DW7	9A	7247	12GE5	12BJ	
12DW8	9JC		12GJ5	9QK	
12DY8	9JD		12GN6	7FW	
12DZ6	7BK	12EA6, 12EK6	12GN7	9BF	12GN7A, 12HG7*†
			12GN7A	9BF	12HG7*†
			12GT5	9NZ	12GT5A
			12GT5A	9NZ	12GT5
			12GV5	12DR	
			12GW6	6AM	12DQ6B
			12H4	7DW	
			12H6	7Q	
			12HE7	12FS	
			12HG7	9BF	12GN7*, A†
			12HL5	9QW	
			12HL7	9BF	
			12HU8	9NJ	
			12J5	6Q	12J5GT

Tube Type	Basing	Replacement
12J5GT	6Q	12J5
12J7	7R	12J7G, GT, GT/G
12J7G	7R	12J7, GT, GT/G
12J7GT	7R	12J7, G, GT/G
12J7GT/G	7R	12J7, G, GT
12J8	9GC	
12JB6	9QL	12JB6A
12JB6A	9QL	12JB6
12JF5	12JH	
12JN6	12FK	12JN6A
12JN6A	12FK	12JN6
12JN8	9FA	
12JQ6	9RA	
12JS6	12FY	
12JT6	9QU	12JT6A
12JT6A	9QU	12JT6
12K5	7FD	
12K7G	7R	12K7GT, GT/G
12K7GT	7R	12K7G, GT/G
12K7GT/G	7R	12K7G, GT
12K8	8K	12K8GT, Y
12K8GT	8K	12K8, Y
12K8Y	8K	12K8, GT
12K18	9LQ	
12L6GT	7AC	12EN6, 12W6GT
12L8GT	8BU	
12MD8	9RQ	
12Q7	7V	12Q7G, GT, GT/G, 12G7G
12Q7G	7V	12Q7, GT, GT/G, 12G7G
12Q7GT	7V	12Q7, G, GT/G, 12G7G
12Q7GT/G	7V	12Q7, G, GT, 12G7G
12R5	7CV	
12S7	8GX	
12S8	8CB	12S8G, GT
12S8G	8CB	12S8, GT
12S8GT	8CB	12S8, G
12SA7	8R	12SA7G, GT, GT/G, GTY, Y, 12SY7, GT
12SA7G	8R	12SA7, GT, GT/G, GTY, Y, 12SY7, GT
12SA7GT	8R	12SA7, G, GT/G, GTY, Y, 12SY7, GT
12SA7GT/G	8R	12SA7, G, GT, GTY, Y, 12SY7, GT
12SA7GTY	8R	12SA7, G, GT, GT/G, Y, 12SY7, GT
12SA7Y	8R	12SA7, G, GT, GT/G, GTY, GT
12SC7	8S	

Tube Type	Basing	Replacement
12SF5	6AB	12SF5GT
12SF5GT	6AB	12SF5
12SF7	7AZ	12SF7GT, Y
12SF7GT	7AZ	12SF7, Y
12SF7Y	7AZ	12SF7, GT
12SG7	8BK	12SG7GT, Y
12SG7GT	8BK	12SG7, Y
12SG7Y	8BK	12SG7, GT
12SH7	8BK	12SH7GT
12SH7GT	8BK	12SH7
12SJ7	8N	12SJ7GT
12SJ7GT	8N	12SJ7
12SK7	8N	12SK7G, GT, GT/G, GTY, Y
12SK7G	8N	12SK7, GT, GT/G, GTY, Y
12SK7GT	8N	12SK7, G, GT/G, GTY, Y
12SK7GT/G	8N	12SK7, G, GT, GTY, Y
12SK7GTY	8N	12SK7, G, GT, GT/G, Y
12SK7Y	8N	12SK7, G, GT, GT/G, GTY
12SL7GT	8BD	
12SN7GT	8BD	12SN7GTA, 12SX7GT
12SN7GTA	8BD	
12SQ7	8Q	12SQ7G, GT, GT/G
12SQ7G	8Q	12SQ7, GT, GT/G
12SQ7GT	8Q	12SQ7, G, GT/G
12SQ7GT/G	8Q	12SQ7, G, GT
12SR7	8Q	12SR7GT, 12SW7, GT
12SR7GT	8Q	12SR7, 12SW7, GT
12SW7	8Q	12SW7GT, 12SR7, GT
12SW7GT	8Q	12SW7, 12SR7, GT
12SX7GT	8BD	12SN7GT, GTA
12SY7	8R	12SY7GT, 12SA7, G, GT, GT/G, GTY, Y
12SY7GT	8R	12SY7, 12SA7, G, GT, GT/G, GTY, Y
12T10	12EZ	
12U7	9A	
12V6GT	7AC	12A6*§, G*§, GT*§, GTY*§, Y*§
12W6GT	7AC	12EN6, 12L6GT
12X4	5BS	
12Z3	4G	14Z3
12Z5	6K	6Z5, 6Z5/12Z5
13	4C	5X3, 80, 83V, 88
13CM5	8GT	
13CW4	12AQ	
13DE7	9HF	15EW7
13DR7	9HF	13FD7, 13FR7

§ May not work in all circuits.

* Parallel-filament circuits.

† Series circuit not requiring controlled warm-up time.

Tube Type	Basing	Replacement
13EC7	9AQ	12BX6*
13EM7	8BP	15EA7
13FD7	9HF	13FR7
13FM7	12EJ	
13FR7	9HF	13FD7
13GB5	9NH	
13GC8	9KZ	
13GF7	9QD	13GF7A
13GF7A	9QD	13GF7
13J10	12BT	13Z10/13J10
13JZ8	12DZ	13JZ8A
13JZ8A	12DZ	
13V10	12EZ	12AE10
13Z10	12BT	13Z10/13J10
14	5E	
14A4	5AC	
14A5	6AA	
14A7	8V	12B7, ML, 14H7, 14A7/12B7, 14A7ML, 14A7ML/ 12B7ML
14A7ML	8V	12B7, ML, 14A7, 14A7/12B7, 14A7ML/12B7ML, 14H7
14A7/12B7	8V	12B7, ML, 14A7, 14H7, 14A7ML, 14A7ML/12B7ML
14A7ML/ 12B7ML	8V	12B7, ML, 14A7, ML, 14A7/12B7, 14H7
14AF7	8AC	XXD, 14N7*
14B6	8W	
14B8	8X	
14BL11	12GC	
14BR11	12GL	
14C5	6AA	
14C7	8V	
14DA7	9EF	
14E6	8W	
14E7	8AE	14R7
14F7	8AC	
14F8	8BW	
14G6	9Z	
14GT8	9KR	14GT8A, 14JG8
14GT8A	9KR	14GT8†, 14JG8†
14H7	8V	12B7, ML, 14A7, 14A7/12B7, 14A7ML, 14A7ML/ 12B7ML
14J7	8BL	14S7
14JG8	9KR	14GT8, 14GT8A
14K7	8GY	
14L7	8GZ	

Tube Type	Basing	Replacement
14N7	8AC	14AF7*
14Q7	8AL	
14R7	8AE	14E7
14S7	8BL	14J7
14V7	8V	
14W7	8BJ	
14X7	8BZ	
14Y4	5AB	
14Y7	9Q	
14Z3	4G	12Z3
15	5F	
15A6	9AR	
15A8	8GS	
15AB9	10N	17AB9
15AF11	12DP	15BD11, A
15BD11	12DP	15BD11A, 15AF11
15BD11A	12DP	15BD11, 15AF11
15CW5	9CV	
15DQ8	9HX	
15EA7	8BD	13EM7
15EW6	7CM	
15EW7	9HF	
15FM7	12EJ	
15FY7	12EO	
15HB6	9NW	
15KY8	9QT	15KY8A, 15MX8
15KY8A	9QT	15KY8, 15MX8
15LE8	9QZ	
15MF8	12DZ	
15MX8	9QT	15KY8A
16	4B	16B, 81
16A5	9BL	15CW5
16A8	9EX	
16AK9	12GZ	
16AQ3	9CB	
16B	4B	16, 81
16BQ11	12DM	
16BX11	12CA	
16GK6	9GK	
16GK8	9JE	
16GY5	12DR	
16KA6	12GH	
16L8	12DZ	16LU8A, 16MY8
16LU8A	12DZ	16LU8, 16MY8
16MY8	12DZ	16LU8A
16Y9	10L	
17	5A	
17A8	9DC	19EA8, 19EA8A
17AB9	10N	15AB9
17AB10	12BT	
17AV5GA	6CK	
17AX3	12BL	
17AX4GT	4CG	17AX4GTA, 17D4, A, 17DM4, A, 17DQ4

Tube Type	Basing	Replacement	Tube Type	Basing	Replacement
17AX4GTA	4CG	17D4, A, 17DM4, A, 17DQ4	17H3	9FK	
17AY3	9HP	17AY3A, 17BS3, A, 17CK3, 17CL3, 17DW4A	17HC8	9EX	
17AY3A	9HP	17AY3, 17BS3, A, 17CK3, 17CL3, 17DW4A	17JB6	9QL	17JB6A
17BE3	12GA	17BE3A, 17BZ3	17JB6A	9QL	17JB6
17BE3A	12GA	17BE3, 17BZ3	17JF6	9QL	
17BF11	12EZ	17BF11A	17JG6	9QU	17JG6A, 17KV6
17BF11A	12EZ	17BF11	17JG6A	9QU	17JG6, 17KV6
17BH3	9HP	17BH3A	17JK8	9AJ	
17BH3A	9HP	17BH3	17JM6	12FJ	17JM6A
17BQ6GTB	6AM	17DQ6, A, B, 17GW6	17JM6A	12FJ	17JM6
17BR3	9CB		17JN6	12FK	17JN6A
17BS3	9HP	17BS3A, 17CK3, 17CL3, 17DW4A	17JN6A	12FK	17JN6
17BS3A	9HP	17BS3, 17CK3, 17CL3, 17DW4A	17JQ6	9RA	
17BW3	12FX	17AX3*, 17BE3*, A*	17JR6	9QU	17JG6, A
17BZ3	12FX	17BE3, A	17JT6	9QU	17JT6A
17C5	7CV	17CU5, 17R5	17JT6A	9QU	17JT6
17C8	9T		17JZ8	12DZ	17JZ8A
17C9	10F	17C9A	17JZ8A	12DZ	
17C9A	10F	17C9†	17KV6	9QU	17KV6A
17CA5	7CV		17KV6A	9QU	
17CK3	9HP	17CL3, 17DW4A	17L6GT	7AC	17W6GT
17CL3	9HP	17CK3, 17DW4A	17LD8	9QT	
17CQ4	4CG	17DE4	17R5	7CV	
17CT3	9RX		17W6GT	7AC	17L6GT
17CU5	7CV	17C5, 17R5	17X10	12BT	
17D4	4CG	17D4A, 17AX4GTA, 17DM4, A, 17DQ4	17Z3	9CB	
17D4A	4CG	17DM4, A, 17DQ4	18	6B	
17DE4	4CG	17CQ4	18A5	6CK	
17DM4	4CG	17DM4A, 17D4A, 17DQ4	18AJ10	12EZ	
17DM4A	4CG		18DZ8	9JE	
17DQ4	4CG		18FW6	7BK	18FW6A, 18GD6, 18GD6A
17DQ6	6AM	17DQ6A, B, 17GW6	18FW6A	7BK	18GD6A, 18FW6†, 18GD6†
17DQ6A	6AM	17DQ6B, 17GW6	18FX6	7CH	18FX6A
17DQ6B	6AM	17GW6	18FX6A	7CH	18FX6†
17DW4A	9HP	17CK3, 17CL3	18FY6	7BT	18FY6A, 18GE6, 18GE6A
17EW8	9AJ		18FY6A	7BT	18GE6A, 18FY6†, 18GE6†
17GE5	12BJ		18GB5	9NH	
17GJ5	9QK	17GJ5A	18GD6	7BK	18GD6A, 18FW6, 18FW6A
17GJ5A	9QK	17GJ5	18GD6A	7BK	18FW6A, 18GD6†, 18FW6†
17GT5	9NZ	17GT5A	18GE6	7BT	18GE6A, 18FY6, 18FY6A
17GT5A	9NZ	17GT5	18GE6A	7BT	18FY6A, 18GE6†, 18FY6†
17GV5	12DR		18GV8	9LY	
17GW6	6AM	17DQ6B	18HB8	9ME	
			19	6C	

§ May not work in all circuits.

* Parallel-filament circuits.

† Series circuit not requiring controlled warm-up time.

Tube Type	Basing	Replacement	Tube Type	Basing	Replacement
19AQ5	7BZ		21J56A	12FY	
19AU4	4CG	19AU4GT, 19AU4GTA, 17CQ4, 17DE4	21JV6	12FK	
			21JZ6	12GD	
19AU4GT	4CG	19AU4, 19AU4GTA, 17CQ4, 17DE4	21KA6	12GH	
			21KQ6	9RJ	
19AU4GTA	4CG		21LG6	12HL	21LG6A
19BG6G	5BT	19BG6GA	21LG6A	12HL	21LG6
19BG6GA	5BT	19BG6G	21LR8	9QT	
19C8	9E	19T8, 19T8A	21LU8	12DZ	21MY8
19CG3	12HF		21MY8	12DZ	21LU8
19CL8A	9FX	19CL8B, 19JN8	22	4K	
19CL8B	9FX	19CL8A†, 19JN8†	22BH3	9HP	22BH3A
19CS4	8JT		22BH3A	9HP	22BH3
19D8	9CA		22BW3	12FX	25CG3
19DE3	12HX		22DE4	4CG	
19DE7	9HF	19EW7, 20EW7	22JF6	9QL	22KM6
19DK3	9SG		22JG6	9QU	22JG6A, 22JR6
19DQ3	12HF		22JG6A	9QU	22JG6, 22JR6
19EA8	9AE	19EA8A, 17A8	22JR6	9QU	
19EA8A	9AE	19EA8†, 17A8†	22JU6	9QL	
19EW7	9HF	20EW7	22KM6	9QL	
19EZ8	9KA		22KV6A	9QL	
19FX5	7CV		23JS6A	12FY	
19GQ7	9RB		23MB6	12FY	
19HR6	7BK		23Z9	12GZ	
19HS6	7BK		24A	5E	24S, 35S, 35/51S, 35S\$, 51S\$, 35S/ 51S\$
19HV8	9FA				
19J6	7BF		24BF11	12EZ	
19JN8	9FA	19CL8A, 19CL8B	24GA7	12EB	
19KG8	9LY		24JE6A	9QL	24LQ6
19Q9	10H		24JZ8	12DZ	25JZ8
19T8	9E	19T8A, 19C8	24LQ6	9QL	24JE6A
19T8A	9E	19T8†, 19C8†	24LZ6	9QL	
19Y8	9AH		24S	5E	24A, 35S, 35/51S, 51S, 35S\$, 51S\$, 35S/51S\$
19X3	9BM				
19X8	9AK		25	6M	25S, 1B5, 1B5/25S
19Y3	9BM	19X3	25A6	7S	25A6G, GT, GT/G, MG
20	4D				
20AQ3	9CB		25A6G	7S	25A6, GT, GT/G, MG
20EQ7	9LG		25A6GT	7S	25A6, G, GT/G, MG
20EW7	9HF	19EW7	25A6GT/G	7S	25A6, G, GT, MG
20EZ7	9MJ		25A6MG	7S	25A6, G, GT, GT/G
20J8	8H		25A7G	8F	25A7GT, GT/G
20LF6	12GW		25A7GT	8F	25A7G, GT/G
21A6	9AS	21B6	25A7GT/G	8F	25A7G, GT
21A7	8AR		25AC5G	6Q	25AC5GT, GT/G
21B6	9AS	21A6	25AC5GT	6Q	25AC5G, GT/G
21EX6	5BT	25CD6GB	25AC5GT/G	6Q	25AC5G, GT
21GY5	12DR		25AV5GA	6CK	25AV5GT
21HB5	12BJ	21HB5A	25AV5GT	6CK	25AV5GA
21HB5A	12BJ	21HB5	25AX4GT	4CG	25D4
21HD5	12ES		25B5	6D	
21HJ5	12FL				

Tube Type	Basing	Replacement	Tube Type	Basing	Replacement
25B6	7S	25B6G, GT	25L6	7AC	25L6G, GT, 25L6GT/ G, 25W6GT
25B6G	7S	25B6, GT	25L6G	7AC	25L6, GT, GT/G, 25W6GT
25B6GT	7S	25B6, G	25L6GT	7AC	25L6, G, GT/G, 25W6GT
25B8	8T	25B8GT	25L6GT/G	7AC	25L6, G, GT, 25W6GT
25B8GT	8T	25B8	25N6	7W	25N6G
25BK5	9BQ		25N6G	7W	25N6
25BQ6GA	6AM	25BQ6GTB, GTB/ 25CU6, 25CU6, 25DQ6, A	25S	6M	25, 1B5, 1B5/25S
25BQ6GT	6AM	25BQ6GA, GTB, 25BQ6GTB/25CU6, 25CU6, 25DQ6, A	25U4GT	4CG	25AX4GT, 25D4, 25W4GT
25BQ6GTB	6AM	25BQ6GTB/25CU6, 25CU6, 25DQ6, A	25W4GT	4CG	25AX4GT, 25D4, 25U4GT
25BQ6GTB/ 25CU6	6AM	25BQ6GTB, 25CU6, A	25W6GT	7AC	25L6, G, GT, GT/G
25BR3	9CB		25X6GT	7Q	
25C5	7CV		25Y4	5AA	25Y4GT
25C6G	7AC	25C6GA	25Y4GT	5AA	25Y4
25C6GA	7S	25C6G	25Y5	6E	25Z5, MG
25CA5	7C	25C5, 25EH5	25Z3	4G	
25CD6G	5BT	25CD6GA, GB, 25DN6, 21EX6	25Z4	5AA	25Z4GT
25CD6GA	5BT	25CD6GB, 25DN6, 21EX6	25Z4GT	5AA	25Z4
25CD6GB	5BT	21EX6	25Z5	6E	25Z5MG, 25Y5
25CG3	12HF		25Z5MG	6E	25Z5, 25Y5
25CK3	9HP		25Z6	7Q	25Z6G, GT, GT/G, MG
25CM3	9HP		25Z6G	7Q	25Z6, GT, GT/G, MG
25CR5	9HC		25Z6GT	7Q	25Z6, G, GT/G, MG
25CT3	9RX		25Z6GT/G	7Q	25Z6, G, GT, MG
25CU6	6AM	25BQ6GTB/25CU6, 25BQ6GTB, 25DQ6, A	25Z6MG	7Q	25Z6, G, GT, GT/G
25D4	4CG		26	4D	
25D8GT	8AF		26A6	7BK	26CG6
25DK3	9SG		26A7	8BU	26A7GT
25DK4	5BQ		26A7GT	8BU	26A7
25DN6	5BT	25CD6GB, 21EX6	26B6	7CH	26D6
25DQ6	6AM	25DQ6A	26BK6	7BT	
25DQ6A	6AM		26C6	7BT	
25DT5	9HN		26CG6	7BK	26A6
25E5	8GT		26D6	7CH	26B6
25EC6	5BT	25CD6GB, 21EX6	26E6G	7S	
25EH5	7CV	25CA5	26HU5	8NB	
25F5	7CV	25F5A	26LW6	8NC	
25F5A	7CV	25F5†	26LX6	12JA	
25FY8	9EX		26Z5	9BS	
25GF6	6AM		27	5A	27S, 56, 56S, 27A*
25HX5	9SB		27A	5A	27*, 27S*
25JQ6	9RA		27GB5	9NH	28GB5
25JZ8	12DZ	24JZ8	27KG6	9RJ	
			27S	5A	27, 56, 56S, 27A*
			28D7	8BS	
			28GB5	9NH	27GB5
			28HA6	9NW	

§ May not work in all circuits.

* Parallel-filament circuits.

† Series circuit not requiring controlled warm-up time.

Tube Type	Basing	Replacement	Tube Type	Basing	Replacement
28HD5	12ES	30HD5	35/51	5E	35, 35S/51S, 51, 35S, 51S, 24A§, 24S§
28Z5	6BJ		35A3	7ET	35C3
29GK6	9GK		35A5	6AA	35A5LT
29KQ6	9RJ	29LE6	35A5LT	6AA	35A5
29LE6	9RJ	29KQ6	35B5	7BZ	
30	4D		35C3	7ET	35A3
30A5	7CV	35C5, 35C5A	35C5	7CV	35C5A, 30A5
30AE3	9CB		35C5A	7CV	35C5†, 30A5†
30AG11	12DA		35CD6GA	5BT	
30CW5	9CV		35D5	9FU	
30HD5	12ES	28HD5	35DZ8	9JE	
30HJ5	12FL		35EH5	7CV	35EH5A
30JZ6	12GD		35EH5A	7CV	35EH5†
30KD6	12GW		35FN5	8GD	
30MB6	12FY		35GL6	7FZ	
31	4D		35HB8	9ME	
31A3	8HB		35L6G	7AC	35L6GT, GT/G
31AL10	12HR		35L6GT	7AC	35L6G, GT/G
31BX7GT	8BD		35L6GT/G	7AC	35L6G, T
31JS6A	12FY	31JS6C	35LR6	12FY	
31JS6C	12FY	31JS6A	35S	5E	35S/51S, 51S, 35/51, 35, 51, 24A§, 24S§
31LQ6	9QL		35S/51S	5E	35S, 51S, 35/51, 35, 51, 24A§, 24S§
31LR8	9QT		35W4	5BQ	35W4A
31LZ6	9Q6		35W4A	5BQ	35W4†
32	4K	1A4, P, T, 1B4, G, P, T, 34, 951, 1C4*, 1K4*	35Y4	5AL	
32A8	9EX		35Z3	4Z	35Z3LT
32ET5	7CV	32ET5A, 34GD5, A	35Z3LT	4Z	35Z3
32ET5A	7CV	32ET5†, 34GD5A	35Z4	5AA	35Z4GT
32GA7	12EB		35Z4GT	5AA	35Z4
32HQ7	12HT		35Z5	6AD	35Z5G, GT, GT/G
32L7GT	8Z		35Z5G	6AD	35Z5, GT, GT/G
33	5K		35Z5GT	6AD	35Z5, G, GT/G
33GT7	12FC		35Z5GT/G	6AD	35Z5, G, GT
33GY7	12FN	33GY7A	35Z6G	6AD	35Z6GT
33GY7A	12FN	33GY7	35Z6GT	6AD	35Z5
33HE7	12FS		36	5E	36A, 64*, 64A*
33JR6	9QU		36A	5E	36, 64*, 64A*
33JV6	12FK		36AM3	5BQ	36AM3A, B
34	4M	1A4, P, T, 1B4, G, P, T, 32, 951, 1C4*, 1K4*	36AM3A	5BQ	36AM3, B
34CD3	12FX		36AM3B	5BQ	36AM3†, A†
34CE3	12GK		36KD6	12GW	40KD6†
34CM3	9HP		36MC6	9QL	
34DK3	9SG		37	5A	37A, 76, 56A*, 56AS*, 67*, 67A*
34GD5	7CV	34GD5A, 32ET5, A	37A	5A	37, 76, 56A*, 56AS*, 67*, 67A*
34GD5A	7CV	32ET5A, 34GD5†, 32ET5†	38	5F	38A
34R3	9CB		38A	5F	38
35	5E	35S, 35/51, 35S/51S, 51, 51S, 24A§, 24S§	38A3	9BM	
			38HE7	12FS	
			38HK7	12FS	38HE7

Tube Type	Basing	Replacement	Tube Type	Basing	Replacement
39	5F	39/44, 44	50FK5	7CV	
39/44	5F	39, 44	50FY8	9EX	
40	4D		50GY7	12FN	50GY7A
40A1	8ES		50GY7A	12FN	
40B2	8ES		50HC6	7FZ	
40FR5	7CV		50HK6	7FZ	50HC6
40KD6	12GW		50HN5	9QW	
40KG6	9RJ		50JY6	8MG	
40Z5	6AD	40Z5GT, 40Z5/ 45Z5GT, 45Z5GT	50L6G	7AC	50L6GT
40Z5/ 45Z5GT	6AD	40Z5, 40Z5GT, 45Z5GT	50L6GT	7AC	50L6G
40Z5GT	6AD	40Z5, 40Z5/45Z5GT, 45Z5GT	50X6	7DX	
41	6B	42*	50Y6G	7Q	50Y6GT, GT/G
42	6B	41*	50Y6GT	7Q	50Y6G, GT/G
42KN6	12GU		50Y6GT/G	7Q	50Y6G, GT
43	6B	43MG	50Y7GT	8AN	50Z7G, GT
43MG	6B	43	50Z6G	7Q	50AX6G, GT
44	5F	39, 39/44	50Z7G	8AN	50Z7GT, 50Y7GT
45	4D	45A	50Z7GT	8AN	50Z7G, 50Y7GT
45A	4D	45	51	5E	51S, 35, 35/51, 35S/ 51S, 35S, 24A§, 24S§
45A5	8GW		51S	5E	51, 35, 35/51, 35S/ 51S, 35S, 24A§, 24S§
45B5	9CV		52	5C	
45Z3	5AM		53	7B	
45Z5GT	6AD	40Z5, 40Z5/45Z5GT, 40Z5GT	53HK7	12FS	58HE7
46	5C		55	6G	55S
47	5B		55N3	9BM	
48	6A		55S	6G	55
49	5C		56	5A	56S, 27, S
50	4D		56A	5A	56AS, 67, A, 37*, A*, 76*
50A1	9CM		56AS	5A	56A, 67, A, 37*, A*, 76*
50A5	6AA		56R9	12EN	
50AX6G	7Q	50AX6GT	56S	5A	56, 27, S
50AX6GT	7Q	50AX6G	57	6F	57S
50B5	7BZ		57A	6F	57AS, 6C6*, 77*
50BK5	9BQ		57AS	6F	57A, 6C6*, 77*
50BMB	9EX		57S	6F	57
50C5	7CV	50C5A	58	6F	58S
50C5A	7CV	50C5†	58AS	6F	6D6*, 78*
50C6G	7AC	50C6GA	58HE7	12FS	
50C6GA	7S	50C6G	58S	6F	58
50CA5	7CV	50EH5, 50EH5A	59	7A	
50CD6G	5BT		60E3	7ET	
50DC4	5BQ		60EH5	7CV	
50E5	8GT		60FX5	7CV	
50EH5	7CV	50EH5A, 50CA5	60HL5	9QW	
50EH5A	7CV	50EH5†, 50CA5†	64	5E	64A, 65, A, 36*, A*
50FA5	7CV		64A	5E	64, 65, A, 36*, A*
50FE5	8KB				

§ May not work in all circuits.

* Parallel-filament circuits.

† Series circuit not requiring controlled warm-up time.

Tube Type	Basing	Replacement	Tube Type	Basing	Replacement
65	5E	65A, 64, A	VR150	4AJ	OD3, A
65A	5E	65, 64, A	182B/482B	4D	71*, A*, B*
67	5A	67A, 56A, AS, 37*, A*, 76*	183/483	4D	
67A	5A	67, 56A, AS, 37*, A*, 76*	485	5A	
68	5E	68A	807	5AW	
68A	5E	68	950	5K	
70A7GT	8AB		951	4K	1A4, P, T, 1B4P, G, T, 32, 34, 1C4*, 1K4*
70L7GT	8AA		5879	9AD	
71	4D	71A*, B*	5881	7AC	6L6GC, 7581, A
71A	4D	71*, B*	6080	8BD	6AS7G, GA, GT
71B	4D	71*, A*	6267	9CQ	
75	6G	75S	6550	7S	
75S	6G	75	6973	9EU	
VR75	4AJ	OA3, A	7025	9A	7025A, 12AX7, A, 12DF7, 12DT7, 12AD7*, 12BZ7*, 12DM7*
76	5A	37, A, 56A*, AS*, 67*, A*	7025A	9A	7025, 12AX7, A, 12DF7, 12DT7, 12AD7*, 12BZ7*, 12DM7*
77	6F	6C6, 57A*, AS*	7027	8HY	7027A
78	6F	6D6, 58AS	7189	9CV	7189A
79	6H		7189A	9LE	
80	4C	5X3, 13, 83V, 88	7199	9JT	
81	4B	16, B	7247	9A	12DW7
82	4C	82V	7355	8KN	
82V	4C	82	7408	7AC	6V6, G, GT, GTA, GT/G, GTY, GTX
83	4C	5Z3	7534	8KE	
83V	4AD		7543	7BK	6AU6, A
84/6Z4	5D	6Z4, 98	7581	7AC	7581A, 6L6GC
G84	4B	2Z2, 2Z2/G84	7581A	7AC	
85	6G	85S	7591	8KQ	7591A
85AS	6G		7591A	8KQ	
85S	6G	85	7687	9AE	
88	4C	82, 82V	7695	9MQ	
89	6F	89Y	7754	9MQ	
89Y	6F	89	7867	5BT	6EX6*
VR90	4AJ	OB3, A	7868	9RW	
95	6B	2A5	8278	9QB	
96	4G		9001	7BD	
98	5D	84/6Z4, 6Z4	9002	7BS	
V99	4E		9003	7BD	
X99	4D		XXB	7BW	3C6
VR105	4AJ	OC3, A	XXD	8AC	14AF7
112A	4D	12A	XXFM	8BZ	7X7
117L7GT	8AO	117L7/M7GT, 117M7GT	XXL	5AC	7A4
117L7/M7GT	8AO	117L7GT, M7GT	X155	9AJ	6BC8, 6BQ7, A, 6BS8, 6BZ7, 6BZ8, 6BK7*, A*, B*
117M7GT	8AO	117L7GT, L7/M7GT			
117N7GT	8AV	117P7GT			
117P7GT	8AV	117N7GT			
117Z3	4CB				
117Z4GT	5AA				
117Z6GT	7Q	117Z6G, GT/G			
117Z6GT/G	7Q	117Z6G, GT			

SECTION 2

Picture-Tube Substitutes

This listing is numerical-alphabetical, with the substitutes shown in the right-hand column. Substitutes are not recommended for some types and for this reason are not shown in many instances. The listing of a certain tube type as a substitute for another one does not necessarily mean the reverse is true. Always refer to the left-hand column for the original type number, then find the substitute in the right-hand column.

Minor changes may be necessary when a picture tube is substituted. These changes are indicated by various symbols following the type number. The key to these symbols is given below. Be *absolutely certain* to refer to this key.

The basing code is given in the second column. Use this number and refer to Section 7 for the pin connections.

A listing of those tubes that require odd filament voltages (other than 6.3 volts) is given on page 69. Those tubes having low E_{g2} potentials are listed on pages 68 and 69. This is a handy reference when setting up your picture-tube testing and rejuvenating equipment.

Key to Footnotes:

* Omit ion trap.

** Add ion trap.

† May require longer or shorter H.V. lead.

‡ Connect pin 6 to pin 2 or pin 10.

¹ Parallel-filament circuits only.

² In some cases it may be necessary to reverse the red and green cathode leads to achieve proper balance.

⁶ Add high-voltage filter capacitor.

⁷ Ground the aquadag coating.

⁸ Change the anode connector.

⁹ Change the ion trap.



Tube Type	Basing	Replacement
1VABP4		
1VACP4		
2EP4	8JK	
3VABP4	7GR	
5VABP4	7GR	
5VACPR	7GR	
5VADP4	7GR	
7RP4	12D	7RP4A
7RP4A	12D	7RP4
8AP4	12H	8AP4A
8AP4A	12H	8AP4
8HP4	12L	8MP4
8LP4	7FA	
8MP4	12L	
9ACP4	7GR	9AGP4, 9WP4
9ADP4	8HR	
9AEP4	7GR	
9AGP4	7GR	9ACP4
9QP4	12AD	9QP4A
9QP4A	12AD	9QP4
9SP4	8HR	
9TP4	8HR	
9UP4	7GR	9VP4/230DB4, 9YP4
9VABP4	7GR	
9VACP22	14BL	
9VADP4	7GR	
9VAEP4	7GR	
9VAGP4	7GR	
9VAHP4	7GR	
9VAJP4	7GR	9VAWP4
9VAKP4	7GR	9VALP4, 9VASP4
9VALP4	7GR	9VASP4
9VAMP4	7GR	
9VANP4	7GR	
9VARP4	7GR	
9VASP4	7GR	9VALP4, 9VAUP4
9VATP4	7GR	
9VAUP4	7GR	9VALP4, 9VASP4
9VAWP4	7GR	9VAJP4
9VAZP4	7GR	
9VP4	7GR	9YP4
9WP4	7GR	
9XP4		
9YP4	7GR	
10ABP4	12L	10ABP4A, B, C, 10AEP4 ¹
10ABP4A	12L	10ABP4, B, C, 10AEP4 ¹
10ABP4B	12L	10ABP4, A, C, 10AEP4 ¹
10ABP4C	12L	10ABP4, A, B, 10AEP4 ¹
10ADP4	12L	
10AEP4	12L	10ABP4 ¹ , A ¹ , B ¹ , C ¹

Tube Type	Basing	Replacement
10AJP4	12S	
10ARP4	7GR	
10ASP4	7GR	9AEP4, 9VABP4
10ATP4	7GR	
10AVP4	7GR	9VAHP4
10BP4	12N	10BP4A, C [°] , D [°] , 10FP4*, 10FP4A*
10BP4A	12N	10BP4, C [°] , D [°] , 10FP4*, A*
10BP4C	12N	10BP4D, 10BP4 [°] , A [°] , 10FP4*, A*
10BP4D	12N	10BP4C, 10BP4 [°] , A [°] , 10FP4*, A*
10CP4	12N	
10DP4	12M	
10EP4	12N	10BP4A [°] , 10CP4*, 10FP4* [°] , A* [°]
10FP4	12N	10FP4A, 10BP4**, A**, C**, D**
10FP4A	12N	10FP4, 10BP4**, A**, C**, D**
10MP4	12G	10MP4A
10MP4A	12G	10MP4
10RP4	12L	
10VABP22	14BM	
10VACP4	7GR	
10VADP22	14BM	
10VAEP4	7GR	
10VAFP4	7GR	
10VAGP4	7GR	
10VAHP22	14BP	
11AP4	8HR	11HP4
11BP4	8HR	11HP4
11CP4	8HR	11LP4 ¹
11DP4	8HR	
11EP4	8HR	11FP4 ¹
11FP4	8HR	11EP4 ¹
11GP4	8HR	11MP4 ¹
11HP4	8HR	11HP4A
11HP4A	8HR	11HP4
11JP4	8HR	
11KP4	8HR	
11LP4	8HR	11CP4 ¹
11MP4	8HR	7RP4A
11QP4	7GR	280NB4
11RP4	7GR	11UP4
11SP22	14BJ	11WP22
11TP4	8HR	
11UP4	7GR	11RP4
11WP22	14BJ	
12AYP4	8HR	12AZP4 ¹ , 12BAP4 ¹ , 12BSP4 ¹
12AZP4	8HR	12AYP4 ¹ , 12BAP4 ¹ , 12BSP4 ¹

Tube Type	Basing	Replacement	Tube Type	Basing	Replacement
12BAP4	8HR	12BSP4, 12AYP4 ¹ , 12AZP4 ¹	12DGP4A	7GR	
12BEP4	7FA		12DHP4	8HR	12BKP4, 12BLP4†, A†, 12BQP4†, 12BUP4†, A†, 12VABP4
12BFP4	7GR				
12BGP4	8HR		12DKP4	7GR	
12BJP4	8HR		12DMP4	8HR	
12BKP4	8HR	12BLP4A, 12BQP4, 12DHP4†, 12DQP4†, 12VABP4†	12DQP4	8HR	12BKP4, 12DHP4, 12VABP4†
			12DSP4	7GR	
12BKP4A	8HR		12JP4	12D	12RP4**, 12QP4**, 12QP4A**
12BLP4	8HR	12BKP4, 12BQP4, 12DHP4†	12KP4	12N	12KP4A, 12ZP4**, 12ZP4A**
12BMP4	7GR	12CDP4, A	12KP4A	12N	12KP4, 12ZP4**, 12ZP4A**
12BNP4	8HR	12BNP4A			
12BNP4A	8HR	12BNP4	12LP4	12N	12LP4A, 12LP4C, 12KP4*, 12KP4A*, 12ZP4 ⁹ , 12ZP4A ⁹
12BQP4	8HR	12BKP4, 12BLP4, 12DHP4†	12LP4A	12N	12LP4, 12LP4C, 12KP4*, 12KP4A*, 12ZP4 ⁹ , 12ZP4A ⁹
12BRP4	9RS				
12BSP4	8HR	12AYP4, 12AZP4, 12BAP4	12LP4C	12N	12LP4, 12LP4A, 12KP*, 12KP4A*, 12ZP4 ⁹ , 12ZP4A ⁹
12BTP4	8HR		12QP4	12D	12QP4A, 12RP4, 12JP4*
12BUP4	8HR	12BUP4A, B, 12DQP4	12QP4A	12D	12QP4, 12RP4, 12JP4*
12BUP4A	8HR	12BUP4, B, C, 12DHP4, 12DQP4			
12BUP4B	8HR	12BUP4, A, C, 12DHP4	12TP4	12D	12UP4A, 12UP4B ⁹
12BUP4C	8HR	12BKP4	12UP4	12D	12UP4, 12UP4B ⁹
12BVP4	7GR		12UP4A	12D	12UP4 ⁹ , 12UP4A ⁹
12BWP4	8HR		12UP4B	12D	12UP4 ⁹ , 12UP4A ⁹
12BZP4	7GR		12VABP4	8HR	12BKP4†, 12DHP4, 12DQP4†
12CBP4	7FA				
12CDP4	7GR	12BMP4	12VACP4	7GR	
12CDP4A	7GR	12BMP4, 12CDP4	12VAEP4	7GR	
12CEP4	7GR		12VAFP4	7GR	
12CFP4	7GR	12CNP4, A	12VAGP4	7GR	
12CHP4	7GR	310BYB4B	12VAHP22	14BH	12VALP22, 12VASP22, 12VATP22
12CNP4	7GR	12CNP4A, 12CFP4, 12VAGP4 ¹			
12CNP4A	7GR	12CNP4, 12CFP4, 12VAGP4 ¹	12VAJP22	14BH	12VAHP22, 12VASP22, 12VATP22
12CQP4	8HR	12BKP4	12VALP22	14BH	12VAHP22, 12VASP22, 12VATP22
12CSP4	7GR				
12CTP4	7GR	12DFP4	12VAMP4	7GR	12VAFP4, 12VAWP4
12CTP4A	7GR		12VANP4	7GR	
12CUP4	8HR		12VAQP4	7GR	
12CVP4	7GR		12VARP22	14BH	
12CWP4	7GR	12CWP4A	12VASP22	14BH	12VALP22, 12VAHP22, 12VATP22
12CWP4A	7GR	12CWP4			
12DCP22	14BH	310FGP22			
12CXP4	7GR				
12CZP4	7GR				
12DEP4	7GR				
12DFP4	7GR	12DSP4 ¹			
12DGP4	7GR				

Tube Type	Basing	Replacement
12VATP22	14BH	12VAHP22, 12VALP22, 12VASP22
12VAUP4	7GR	12VAWP4 ¹
12VAWP4	7GR	12VAFP4, 12VAMP4, 12VAUP4 ¹
12VAXP4	7GR	
12VAZP4	7GR	
12VBDP4	7GR	
12VBEP4	7GR	
12VBFP4	7GR	
12VBGP4	7GR	12VBFP4
12VBHP4	7GR	
12VBJP4	7GR	
12VBLP4	7GR	
12VBMP4	7GR	
12VBNP4	7GR	12VCGP4
12VBQP4	7GR	12VCJP4
12VBRP4	7GR	12VCBP4, 12VCKP4, 12VCLP4
12VBWP4	7GR	
12VBXP4	7GR	
12VBYP4	7GR	
12VBZP4	7GR	
12VCAP4	7GR	
12VCBP4	7GR	12VBRP4, 12VCLP4
12VCDP4	7GR	
12VCEP4	7GR	
12VCFP4	7GR	
12VCGP4	7GR	12VBNP4
12VCJP4	7GR	12VBQP4
12VCKP4	7GR	12VBRP4, 12VCBP4
12VCLP4	7GR	12VBRP4, 12VCBP4
12VP4	12G	12VP4A
12VP4A	12G	12VP4
12WP4	9CH	
12XP4	12N	
12YP4	12N	
12ZP4	12N	12ZP4A, 12JP4 ^{6, 8} , 12KP4*, 12KP4A*
12ZP4A	12N	12ZP4, 12JP4 ^{6, 8} , 12KP4*, 12KP4A*
13AP4	8HR	
13DP4	8HR	
13GP22	14BH	13MP22
13JP22	14BH	12VATP22
13LP22	14BH	
13VAEP22	14BH	
13VAFP22	14BP	13VAGP22
13VAGP22	14BP	
13VAJP4	7GR	13VANP4, 13VAQP4
13VAKP22	13D	
13VAMP22	13E	

Tube Type	Basing	Replacement
13VANP4	7GR	13VAJP4, 13VAQP4
13VAQP4	7GR	13VAJP4, 13VANP4
13VARP4	7GR	13VASP4
13VASP4	7GR	13VARP4
13VATP22	13R	
13VAUP22	13M	
13VAWP22	14BP	
13VAYP22	13L	
13VAZP4	7GR	
13VBAP22	13K	
13VBEP22	13M	
14ACP4	12L	14AEP4*
14AEP4	12L	
14AJP4	8HR	14ASP4*, 14AVP4*
14ARP4	12L	14AUP4 ¹
14ASP4	8HR	14AVP4
14ATP4	12L	
14AUP4	12L	14AWP4, 14ARP4 ¹
14AVP4	8HR	14ASP4
14AWP4	12L	14AUP4
14BCP22	14AU	
14BDP4	12L	
14BP4	12N	14BP4A, 14CP4, A, 14EP4, 14CP4B*
14BP4A	12N	14BP4, 14CP4, A, 14EP4, 14CP4B*
14CP4	12N	14CP4A, 14BP4, A, 14EP4, 14CP4B*
14CP4A	12N	14BP4, A, 14CP4, 14EP4, 14CP4B*
14CP4B	12N	14CP4**, A**, 14BP4**, A**, 14EP4**
14DP4	12D	14CP4 ^{7, 9} , A ^{7, 9} , 14EP4 ^{7, 9} , 14FP4 ⁹ , 14UP4*
14EP4	12N	14BP4, A, 14CP4, A, B*
14GP4	12L	
14HP4	12L	
14KP4	12N	14KP4A
14KP4A	12N	
14NP4	12L	14NP4A, 14RP4, A, 14SP4, 14WP4*, 14XP4 ¹ , A ¹ , 14ZP4*
14NP4A	12L	14NP4, 14RP4, A, 14SP4, 14WP4*, 14XP4 ¹ , A ¹ , 14ZP4*
14QP4	12L	14QP4A, B*, 14HP4
14QP4A	12L	14QP4, B*, 14HP4
14QP4B	12L	14QP4**, A**, 14HP4**
14RP4	12L	14RP4A, 14NP4, A, 14SP4, 14WP4*,

Tube Type	Basing	Replacement
		14XP4 ¹ , A ¹ , 14ZP4*
14RP4A	12L	14RP4, 14NP4, A, 14SP4, 14WP4*, 14XP4 ¹ , A ¹ , 14ZP4*
14SP4	12L	14NP4, A, 14RP4, 14RP4A, 14WP4*, 14XP4 ¹ , 14XP4A ¹ , 14ZP4*
14UP4	12D	14DP4**
14VADP22	14BH	14VAHP22
14VAEP22	14BH	14VAGP22, 14VALP22
14VAFP22	14BH	14VABP22
14VAHP22	14BH	14VADP22
14VAJP22	14BE	
14VAKP22	14BE	
14VALP22	14BH	14VAGP22
14VAMP22	14BH	
14VARP4	8HR	
14WP4	12L	14ZP4
14XP4	12L	14XP4A, 14NP4 ¹ , A ¹ , 14RP4 ¹ , 14RP4A ¹ , 14SP4 ¹ , 14WP4* ¹ , 14ZP4* ¹
14XP4A	12L	14XP4, 14NP4 ¹ , A ¹ , 14RP4 ¹ , 14RP4A ¹ , 14SP4 ¹ , 14WP4* ¹ , 14ZP4* ¹
14ZP4	12L	14WP4
15ACP22	14BH	14AFP22
15ADP4	12D	
15AEP22	14BH	14VAGP22, 14VALP22
15AFP22	14BH	14VAGP22, 14VALP22
15AP4	12D	15DP4**, A**
15CP4	12D	
15DP4	12D	15DP4A, 15AP4*
15DP4A	12D	15DP4, 15AP4*
15GP22	20A	
15HP22	20A	
15JP4	8HR	
15KP22	14BH	15LP22, 15NP22
15LP22	14BH	14VADP22, 14VAHP22
15MP22	14BK	
15NP22	14BH	14VADP22, 14VAHP22
15RP22	14BH	15LP22
15SP22	14BH	14VAGP22, 15AFP22
15UP22	14BH	
15VACP4	8HR	
15VADP22	13D	
15VAEP22	13D	
15VAFP22	13D	15VALP22
15VAJP4	7GR	15VAJP4A

Tube Type	Basing	Replacement
15VAJP4A	7GR	15VAJP4
15VALP22	13D	15VAFP22
15VANP4	7GR	15VANP4A
15VANP4A	7GR	15VANP4
15WP22	14BH	15LP22
15XP22	14BH	
15YP22	14BK	
15ZP22	14BH	
16ABP4	12P	16AEP4‡
16ACP4	12P	
16AEP4	12L	16ABP4
16AFP4	12L	
16ANP4	8HR	16AQP4, 16ASP4 ¹ , 16AXP4 ¹
16AP4	12D	16AP4A, 16AP4B
16AP4A	12D	16AP4, B
16AP4B	12D	16AP4, A
16AQP4	8HR	16ANP4, 16ASP4 ¹ , 16AXP4 ¹
16ASP4	8HR	16AXP4, 16ANP4 ¹ , 16AQP4 ¹
16ATP4	8HR	
16AUP4	8HR	16BFP4† ¹ , 16BMP4 ¹
16AVP4	7FA	16BCP4
16AWP4	8HR	16AZP4 ¹
16AXP4	8HR	16ASP4, 16ANP4 ¹ , 16AQP4 ¹
16AYP4	8HR	16BDP4 ¹ , 16CAP4
16AZP4	8HR	16AWP4 ¹
16BAP4	8HR	16BEP4 ¹
16BCP4	7FA	
16BDP4	8HR	16AYP4 ¹
16BEP4	8HR	16BAP4† ¹
16BFP4	8HR	16AUP4† ¹ , 16BMP4†
16BGP4	8HR	16BWP4, 16BHP4 ¹ , 16BVP4†, 16CAP4, 16CMP4A†
16BJP4	8HR	16BGP4 ¹ , 16BWP4 ¹ , 16CMP4A ¹
16BMP4	8HR	16AUP4 ¹ , 16BFP4†
16BNP4	8HR	
16BRP4	8HR	16BVP4 ¹ , 16BWP4 ¹ †, 16CAP4 ¹ †, 16CEP4 ¹ †, 16CJP4 ¹ , 16CKP4 ¹ , 16CMP4 ¹
16BSP4	8HR	16BKP4†, 16BLP4† ¹ , 16BTP4†
16BUP4	8HR	
16BVP4	8HR	16BWP4†, 16CJP4
16BWP4	8HR	16BGP4, 16BVP4†, 16CAP4, 16CJP4†
16BXP4	7FA	
16BYP4	8HR	

Tube Type	Basing	Replacement
16CAP4	8HR	16BWP4, 16CEP4, 16BRP4†, 16BVP4†, 16CJP4†, 16CKP4†, 16CMP4†
16CDP22	14BE	
16CEP4	8HR	16BWP4, 16CAP4, 16BRP4†, 16BVP4†, 16CJP4†, 16CKP4†, 16CMP4†
16CFP4	7GR	
16CHP4	8HR	16CHP4A, 16BSP4†
16CHP4A	8HR	16CHP4, 16BSP4†
16CJP4	8HR	16BWP4†
16CKP4	8HR	16BRP4 ¹ , 16BVP4 ¹ , 16BWP4 ¹ †, 16CAP4 ¹ †, 16CEP4 ¹ †, 16CJP4 ¹ , 16CMP4 ¹
16CMP4	8HR	16BVP4, 16CJP4, 16BRP4 ¹ , 16BWP4†, 16CAP4†, 16CEP4†, 16CKP4 ¹
16CMP4A	8HR	16BGP4†, 16BWP4†
16CNP4	7GR	
16CP4	12D	
16CQP4	7GR	
16CSP22	14BE	16DAP22, 400CUB22
16CTP4	8HR	16BWP4, 16CAP4, 16CEP4, 16BRP4†, 16BVP4†, 16CJP4†, 16CKP4†, 16CMP4†, 16CUP4†
16CUP4	8HR	16BVP4, 16CJP4, 16CMP4, 16BRP4 ¹ , 16BWP4†, 16CAP4†, 16CEP4†, 16CKP4 ¹ , 16CTP4†
16CWP4	7GR	16DCP4, A, 16CXP4
16CWP4A	7GR	
16CXP4	7GR	16CWP4, 16DCP4, A
16CYP22	14BH	400CVB22
16DAP22	14BE	16CSP22, 400CUB22
16DCP4	7GR	16DCP4A, 16CWP4, 16CXP4
16DCP4A	7GR	16DCP4, 16CWP4, 16CXP4
16DP4	12D	16DP4A
16DP4A	12D	16DP4
16EP4	12D	16EP4A, 16EP4B

Tube Type	Basing	Replacement
16EP4A	12D	16EP4, 16EP4B
16EP4B	12D	16EP4, 16EP4A
16FP4	12D	
16GP4	12D	16GP4A
16GP4A	12D	16GP4
16GP4B	12D	16GP4
16GP4C	12D	16GP4
16HP4	12N	16HP4A
16HP4A	12N	16HP4
16JP4	12N	16JP4A
16JP4A	12N	16JP4
16KP4	12N	16KP4A, 16RP4, A, B*, 16TP4
16KP4A	12N	16KP4, 16RP4, A, B*, 16TP4
16LP4	12N	16LP4A, 16ZP4
16LP4A	12N	16LP4, 16ZP4
16MP4	12N	16MP4A, 16JP4, A
16MP4A	12N	16MP4, 16JP4, A
16QP4	12D	16XP4
16RP4	12N	16RP4A, 16KP4, A, 16TP4, 16RP4B*
16RP4A	12N	16RP4, 16KP4, 16KP4A, 16RP4B*
16RP4B	12N	16KP4**, A**, 16RP4**, A**, 16TP4**
16SP4	12N	16SP4A, 16WP4A, B
16SP4A	12N	16SP4, 16WP4A, B
16TP4	12N	16KP4, A, 16RP4, 16RP4A, 16RP4B*
16UP4	12D	16KP4 ⁷ , A ⁷ , 16QP4 ⁹ , 16RP4 ⁷ , A ⁷ , 16TP4 ⁷ , 16XP4 ⁹
16VABP4	8HR	16VAQP4, 17EMP4, 17EWP4
16VABP22	14BH	16VACP22
16VACP22	14BH	16VABP22
16VADP4	7GR	
16VAFP22	14BH	
16VAGP4	8HR	
16VAJP4	8HR	
16VAKP22	14BH	17FBP22
16VALP4	8HR	
16VAMP22	14BE	
16VANP22	14BH	
16VAQP4	8HR	16VABP4, 16VBNP4, 16VBTP4, 17EWP4, 17FDP4
16VARP4	8HR	
16VASP22	14BE	16VATP22
16VATP22	14BE	16VASP22
16VAUP22	14BH	

Tube Type	Basing	Replacement
16VAWP22	14BK	16VBDP22 ¹ , 16VBMP22 ¹
16VAXP22	14BH	
16VAYP4	8HR	16VBCP4A
16VAZP4	8HR	
16VBCP4	8HR	16VBCP4A, 17ESP4
16VBCP4A	8HR	16VAYP4, 16VBCP4
16VBDP22	14BK	16VAWP22 ¹ , 16VBMP22
16VBEP22	14BH	
16VBFP22	14BE	
16VBGP22	14BE	
16VBHP22	14BE	16VBFP22
16VBJP4	7GR	
16VBKP4	7GR	
16VBLP4	8HR	
16VBMP22	14BK	16VAWP22 ¹ , 16VBDP22
16VBNP4	8HR	16VAQP4, 16VBQP4, 16VBTP4, 16VBUP4, 16VBZP4
16VBQP4	8HR	16VBZP4
16VBRP4	8HR	
16VBTP4	8HR	16VAQP4, 16VBNP4, 16VBQP4, 16VBUP4, 16VBZP4
16VBUP4	8HR	16VBNP4, 16VBTP4, 16VBZP4
16VBWP4	8HR	16VBXP4, 16VBYP4, 16VCXP4
16VBXP4	8HR	16VBWP4, 16VBYP4, 16VCXP4
16VBYP4	8HR	16VBWP4, 16VBXP4, 16VCXP4
16VBZP4	8HR	16VBQP4
16VCAP4	7GR	
16VCBP4	7GR	
16VCDP4	8HR	
16VCEP4	8HR	
16VCFP4	8HR	
16VCGP4	8HR	
16VCHP4	8HR	
16VCJP4	8HR	
16VCKP4	8HR	16VCLP4 ¹
16VCLP4	8HR	16VCKP4 ¹
16VCNP4	8HR	
16VCQP4	8HR	
16VCRP4	8HR	
16VCSP4	8HR	
16VCWP4	8HR	
16VCXP4	8HR	16VBWP4, 16VBXP4, 16VBYP4
16VCYP4	8HR	

Tube Type	Basing	Replacement
16VCZP4	8HR	
16VP4	12D	16WP4 ⁹ , 16YP4 ⁷
16WP4	12D	16WP4A, B ⁷ , 16SP4 ⁷ , A ⁷ , 16VP4 ⁹
16WP4A	12N	16WP4B, 16SP4, A, 16WP4 ⁷ , 16YP4 ⁹
16WP4B	12N	16WP4A, 16SP4, A, 16WP4 ⁷ , 16YP4 ⁹
16XP4	12D	16QP4, 16UP4 ⁹
16YP4	12N	16WP4A ⁹ , B ⁹ , 16SP4 ⁹ , A ⁹ , 16VP4 ⁶
16ZP4	12N	16LP4, A, 16CP4 ⁶
17AP4	12N	17BP4B*
17ASP4	12N	
17ATP4	12L	17ATP4A, 17AVP4, 17AVP4A, 17BUP4, 17CBP4, 17CLP4, 17BJP4*, 17BKP4 ¹ , 17BKP4A ¹ , 17BSP4* ¹ , 17CUP4* ¹ , 17DCP4* ¹ , 17DJP4 ¹
17ATP4A	12L	17ATP4, 17AVP4, A, 17BUP4, 17CBP4, 17CLP4, 17BJP4*, 17BKP4 ¹ , A ¹ , 17BSP4* ¹ , 17CUP4* ¹ , 17DCP4* ¹ , 17DJP4 ¹
17AVP4	12L	17AVP4A, 17ATP4, A, 17BUP4, 17CBP4, 17CLP4, 17BJP4*, 17BKP4 ¹ , A ¹ , 17BSP4* ¹ , 17CUP4* ¹ , 17DCP4* ¹ , 17DJP4 ¹
17AVP4A	12L	17AVP4, 17ATP4, A, 17BUP4, 17CBP4, 17CLP4, 17BJP4*, 17BKP4 ¹ , A ¹ , 17BSP4* ¹ , 17CUP4* ¹ , 17DCP4* ¹ , 17DJP4 ¹
17BJP4	12L	17BSP4 ¹ , 17CUP4 ¹ , 17DCP4 ¹
17BKP4	12L	17BKP4A, 17ATP4 ¹ , A ¹ , 17AVP4 ¹ , A ¹ , 17BJP4* ¹ , 17BSP4* ¹ , 17BUP4 ¹ , 17CBP4 ¹ , 17CLP4 ¹ , 17CUP4* ¹ , 17DCP4* ¹ , 17DJP4 ¹

Tube Type	Basing	Replacement	Tube Type	Basing	Replacement
17BKP4A	12L	17BKP4, 17ATP4 ¹ , A ¹ , 17AVP4 ¹ , A ¹ , 17BJP4* ¹ , 17BSP4*, 17BUP4 ¹ , 17CBP4 ¹ , 17CLP4 ¹ , 17CUP4* ¹ , 17DCP4* ¹ , 17DJP4 ¹			17CUP4* ¹ , 17DCP4* ¹ , 17DJP4 ¹
17BMP4	12L	17BNP4*	17CDP4	8HR	
17BNP4	12L		17CEP4	12L	17CFP4 ¹
17BP4	12D	17BP4A ⁷ , 17BP4B ⁷ , 17BP4C ⁷ , 17BP4D ⁷ , 17AP4 ⁷ , 17JP4 ⁷	17CFP4	12L	17CEP4 ¹
17BP4A	12N	17BP4 ⁶ , B, C, D*, 17AP4, 17JP4	17CGP4	12L	
17BP4B	12N	17BP4 ⁶ , 17BP4A, 17BP4C, 17BP4D*, 17AP4, 17JP4	17CKP4	8HR	17CAP4, 17BRP4**, 17BZP4 ¹ , 17CTP4 ¹ , 17CVP4 ¹ , 17DTP4 ¹ , 17BZP4 ¹ , 17DSP4 ¹
17BP4C	12N	17BP4 ⁶ , 17BP4A, 17BP4B, 17BP4D*, 17AP4, 17JP4	17CLP4	12L	17ATP4, A, 17AVP4, A, 17BUP4, 17CBP4, 17BJP4*, 17BKP4 ¹ , A ¹ , 17BSP4* ¹ , 17CUP4* ¹ , 17DCP4* ¹ , 17DJP4 ¹
17BP4D	12N	17BP4** ⁶ , 17BP4A**, 17BP4B**, 17BP4C**, 17AP4**, 17JP4**	17CMP4	12L	17CNP4, 17CRP4 ¹ , 17CXP4 ¹
17BRP4	8HR	17BZP4* ¹ , 17CAP4*, 17CKP4*, 17CTP4* ¹ , 17CVP4* ¹ , 17DTP4* ¹ , 17DZP4* ¹	17CNP4	12L	17CNP4, 17CRP4 ¹ , 17CXP4 ¹
17BSP4	12L	17BJP4 ¹ , 17CUP4 ¹ , 17DCP4 ¹	17CP4	12D	17CP4A
17BTP4	12AJ		17CP4A	12D	17CP4
17BUP4	12L	17ATP4, A, 17AVP4, A, 17CBP4, 17CLP4, 17BJP4*, 17BKP4 ¹ , 17BKP4A ¹ , 17BSP4* ¹ , 17CUP4* ¹ , 17DCP4* ¹ , 17DJP4 ¹	17CRP4	12L	17CXP4, 17CMP4 ¹ , 17CNP4 ¹
17BVP4	7FA	17BWP4*, 17BYP4* ¹ , 17CSP4*	17CSP4	7FA	17BWP4, 17BYP4 ¹
17BWP4	7FA	17CSP4, 17BYP4 ¹	17CTP4	8HR	17BZP4 ¹ , 17CAP4 ¹ , 17CKP4 ¹ , 17CVP4 ¹ , 17DTP4 ¹ , 17DZP4 ¹
17BYP4	7FA	17BWP4 ¹ , 17CSP4 ¹	17CUP4	12L	17DCP4, 17BJP4, 17BSP4, 17DJP4**
17BZP4	8HR	17DSP4	17CVP4	8HR	17BZP4 ¹ , 17CAP4 ¹ , 17CKP4 ¹ , 17CTP4 ¹ , 17DTP4 ¹ , 17DZP4 ¹
17CAP4	8HR	17BZP4, 17CKP4, 17DTP4, 17BRP4**, 17CTP4 ¹ , 17CVP4 ¹ , 17DZP4 ¹	17CWP4	8HR	17DSP4, 17EFP4 ¹
17CBP4	12L	17ATP4, A, 17AVP4, A, 17BUP4, 17CLP4, 17BJP4*, 17BKP4 ¹ , A ¹ , 17BSP4* ¹ , 17BUP4 ¹ , 17CBP4 ¹ ,	17CXP4	12L	17CRP4, 17CMP4 ¹ , 17CNP4 ¹
			17CYP4	12L	17BJP4, 17CZP4
			17CZP4	12L	17BJP4, 17CYP4
			17DAP4	8JK	17DRP4
			17DBP4	12L	17DWP4* ¹ , 17HP4 ¹ , 17HP4A ¹ , 17HP4B ¹ , 17HP4C* ¹ , 17KP4 ¹ , A ¹ , 17RP4 ¹ , C ¹
			17DCP4	12L	17CUP4, 17BJP4 ¹ , 17BSP4 ¹
			17DEP4	8JN	
			17DHP4	8HR	17EBP4
			17DJP4	12L	17ATP4 ¹ , A ¹ , 17AVP4 ¹ , A ¹ , 17BJP4* ¹ , 17BKP4 ¹ , A ¹ , 17BSP4* ¹ , 17BUP4 ¹ , 17CBP4 ¹ ,

Tube Type	Basing	Replacement
		17CLP4 ¹ , 17CUP4*, 17DCP4*
17DKP4	8JR	17DSP4
17DLP4	8JS	17DSP4, 17EBP4 ¹
17DQP4	7FA	
17DRP4	8JK	17DAP4
17DSP4	8HR	17EBP4 ¹ , 17EFP4 ¹
17DTP4	8HR	17DKP4, 17DSP4
17DWP4	12L	17DWP4A
17DWP4A	12L	
17DXP4	8JR	17DHP4, 17EBP4, 17DKP4 ¹
17DZP4	8HR	17DTP4 ¹
17EAP4	12AT	
17EBP4	8HR	
17EFP4	12L	17DXP4
17EHP4	8HR	
17EJP22	14AU	17ENP22
17EKP4	12L	
17ELP4	8HR	
17ELP4A	8HR	
17EMP4	8HR	16VABP4, 16VAQP4, 17EWP4
17ENP22	14AU	17EJP22
17EQP4	8HR	17FCP4
17ESP4	8HR	16VBCP4, A
17ETP22	14BE	
17EVP22	14BH	16VAFP22
17EWP4	8HR	16VABP4, 17EMP4
17EXP22	14BK	17FJP22
17EZP22	14BH	16VABP22, 16VACP22
17FAP22	14BE	
17FBP22	14BH	16VAKP22
17FCP4	8HR	17EQP4
17FDP4	8HR	16VAQP4
17FEP22	14BH	16VACP22
17FGP22	14BH	16VACP22
17FHP22	14BH	
17FJP22	14BK	17EXP22
17FP4	12L	17FP4A, 17HP4C*
17FP4A	12L	17FP4, 17HP4C*
17GP4	12M	
17HP4	12L	17HP4A, B, C*, 17KP4, A, 17RP4, C, 17DBP4 ¹ , 17DWP4*
17HP4A	12L	17HP4, B, C*, 17KP4, A, 17RP4, C, 17DBP4 ¹ , 17DWP4*
17HP4B	12L	17HP4, A, C*, 17KP4, A, 17RP4, C, 17DBP4 ¹ , 17DWP4*

Tube Type	Basing	Replacement
17HP4C	12L	17HP4**, A**, B**, 17DWP4, 17KP4**, A**
17JP4	12N	17AP4, 17BP4 ⁶ , A, B, C, D*
17KP4	12P	17KP4A
17KP4A	12P	17KP4
17LP4	12L	17LP4A, 17VP4, B
17LP4A	12L	17LP4, B*, 17VP4, B
17LP4B	12L	17LP4**, A**, 17VP4**, B**
17QCP4	12N	
17QP4	12N	17QP4A, B*, 17YP4
17QP4A	12N	17QP4, B*, 17YP4
17QP4B	12N	17QP4**, A**, 17YP4**
17RP4	12L	17RP4C, 17HP4, A, B, C*, 17KP4, A, 17DBP4 ¹ , 17DWP4*
17RP4C	12L	17RP4, 17HP4, A, B, C*, 17KP4, A, 17DBP4 ¹ , 17DWP4*
17SP4	12N	
17TP4	12M	
17UP4	12N	17QP4, 17QP4A, B*, 17YP4
17VACP22	14BH	17VADP22
17VADP22	14BE	
17VAKP22	14BE	
17VANP22	13D	17VAYP22
17VAQP22	14BP	17VAXP22
17VARP22	14BE	
17VASP22	14BE	
17VATP22	13D	17VAZP22
17VAUP22	14BE	17VARP22
17VAWP22	14BH	
17VAXP22	14BP	
17VAYP22	13D	17VANP22
17VAZP22	13D	17VATP22
17VBDP22	13E	
17VBLP22	13M	
17VBMP22	13L	
17VBNP22	13K	
17VBTP22	13L	
18VARP22	14BE	
17VP4	12L	17VP4B, 17LP4, A, B*
17VP4B	12L	17VP4, 17LP4, A, B*
17YP4	12N	17QP4, A, B*
18VABP22	14BE	18VAJP22, 18VASP22, 18VATP22
18VAHP22	14BE	
18VAJP22	14BE	18VAHP22, 18VASP22, 18VATP22,

Tube Type	Basing	Replacement
		18VBHP22, 18VBKP22, 18VBTP22
18VAKP22	14BE	
18VALP22	14BH	18VAHP22, 18VATP22, 18VBGP22, 18VBKP22, 19JSP22
18VAMP22	14BH	18VBDP22
18VANP22	13C	
18VASP22	14BE	18VAJP22, 18VBKP22
18VATP22	14BE	18VAJP22, 18VBTP22
18VAZP22	14BH	
18VBCEP22	14BE	19HFP22
18VBDP22	14BH	18VAMP22, 18VBGP22
18VBEP22	14BE	
18VBFP22	14BE	18VAKP22
18VBGP22	14BH	18VALP22, 19JSP22
18VBHP22	14BE	18VAJP22, 18VASP22, 18VBKP22 ¹ , 19HXP22
18VBJP22	14BE	
18VBKP22	14BE	18VAJP22, 18VASP22
18VBMP22	14BE	
18VBQP4	8HR	
18VBTP22	14BE	18VAJP22, 18VATP22, 19HCP22, 19JZP22
18VBUP22	14BH	
18VBXP22	14BE	
19ABP4	8JK	
19ACP4	8HR	19CHP4, 19CKP4, 19DLP4, 19FVP4 ^{†1}
19AEP4	8HR	
19AFP4	8HR	19AUP4, 19BAP4 ¹ , 19BCP4 ¹
19AHP4	8HR	19ALP4 ¹ , 19AYP4
19AJP4	7FA	19CDP4 ¹ , 19CQP4 ¹ , 19CXP4 ¹
19ALP4	8HR	19AHP4 ¹
19ANP4	8JR	19AYP4, 19YP4 ¹
19AP4	12D	19AP4A, B, C, D
19AP4A	12D	19AP4, B, C, D
19AP4B	12D	19AP4; A, C, D
19AP4C	12D	19AP4, A, B, D
19AP4D	12D	19AP4, A, B, C
19AQP4	8HR	19AXP4 ¹ , 19BLP4 ¹ , 19XP4 ¹
19ARP4	8HR	19ASP4 ¹ , 19CEP4 ¹
19ASP4	8HR	19CEP4, 19ARP4 ¹
19ATP4	8JR	19AFP4, 19AUP4,

Tube Type	Basing	Replacement
		19BAP4 ¹ , 19BCP4 ¹ , 19BMP4 ¹
19AUP4	8HR	19AFP4, 19BAP4 ¹ , 19BCP4 ¹
19AVP4	8HR	19AYP4 ¹
19AXP4	8HR	19AYP4, 19AVP4 ¹ , 19XP4 ¹
19AYP4	8HR	19AVP4 ¹
19BAP4	8HR	19BCP4, 19AFP4 ¹ , 19AUP4 ¹
19BCP4	8HR	19BAP4, 19AFP4 ¹ , 19AUP4 ¹
19BDP4	12L	
19BEP4	8HR	19CTP4, 19DJP4, 19BSP4 ¹
19BFP4	12L	
19BHP4	8HR	19AVP4
19BLP4	8HR	19AVP4, 19CYP4
19BMP4	8HR	19AFP4, 19AUP4, 19BAP4 ¹ , 19BCP4 ¹
19BNP4	8HR	19BQP4, 19CVP4 ¹ , 19DYP4 ¹ , 19GMP4 ¹
19BQP4	8HR	19BNP4, 19CVP4 ¹ , 19DYP4 ¹ , 19GMP4 ¹
19BRP4	8HR	19DKP4, 19CZP4 ¹ , 19DAP4 ¹ , 19DEP4
19BSP4	8HR	19AVP4, 19BEP4 ¹ , 19CTP4 ¹ , 19DJP4 ¹
19BTP4	8JR	19AVP4, 19CYP4
19BVP4	8HR	19AVP4, 19BWP4 ¹
19BWP4	8HR	19AYP4, 19BVP4 ¹
19CAP4	8JR	19AVP4, 19BTP4
19CDP4	7FA	19CQP4, 19CXP4, 19AJP4 ¹
19CEP4	8HR	19BAP4, 19BCP4, 19AFP4 ¹ , 19AUP4 ¹ , 19BMP4 ¹
19CFP4	8HR	19CHP4, 19CKP4, 19DLP4, 19FVP4 ^{†1}
19CGP4	12L	
19CHP4	8HR	19CKP4, 19DLP4, 19FVP4 ^{†1}
19CJP4	8HR	19AVP4
19CKP4	8HR	19CHP4, 19FVP4 ^{†1}
19CLP4	12L	19BDP4, 19CRP4
19CMP4	8HR	19CMP4A; 19CHP4 ¹
19CMP4A	8HR	19CUP4
19CQP4	7FA	19CDP4, 19CXP4, 19AJP4 ¹
19CUP4	8HR	19DFP4 ¹
19CVP4	8HR	19DYP4, 19GMP4
19CXP4	7FA	19CDP4, 19CQP4, 19AJP4 ¹
19CYP4	8HR	19AVP4

Tube Type	Basing	Replacement
19CZP4	8HR	19DAP4, 19DKP4 ¹
19DAP4	8HR	19CZP4, 19DKP4 ¹
19DBP4	7FA	
19DCP4	8HR	19EDP4, 19EUP4, 19DWP4 ¹ , 19FCP4 ¹ , 19FTP4 ¹ , 19GJP4 ¹ , A ¹
19DEP4	8HR	19AVP4
19DFP4	8HR	19CHP4, 19CUP4 ¹
19DHP4	8HR	19DSP4, 19EFP4, 19ESP4, 19DUP4 ¹ , 19EAP4 ¹ , 19ENP4 ¹ , A ¹ , 19FUP4 ^{†1}
19DJP4	8HR	19BEP4, 19BSP4
19DKP4	8HR	19CZP4 ¹ , 19DAP4 ¹
19DLP4	8HR	19CHP4, 19CKP4, 19EDP4
19DNP4	8HR	19DKP4, 19CZP4 ¹ , 19DAP4 ¹ , 19EDP4
19DP4	12N	19DP4A, 19FP4 ^{6, 9} , 19GP4 ⁶
19DP4A	12N	19DP4, 19FP4 ^{6, 9} , 19GP4 ⁶
19DQP4	8HR	19DRP4 ¹ , 19FLP4 [†] , 19FRP4 ¹
19DRP4	8HR	19DQP4 ¹ , 19FLP4 ^{†1} , 19FRP4 ¹
19DSP4	8HR	19DHP4, 19EFP4, 19ESP4, 19DUP4 ¹ , 19EAP4 ¹ , 19ENP4 ¹ , A ¹ , 19FUP4 ^{†1}
19DUP4	8HR	19ENP4, A, 19GHP4
19DVP4	8HR	19DZP4
19DWP4	8HR	19EVP4, 19FCP4, 19GJP4, A, 19EDP4 ¹
19DYP4	8HR	19CVP4, 19GMP4
19DZP4	8HR	19BVP4, 19DVP4
19EAP4	8HR	19DUP4, 19ENP4, A, 19DHP4 ¹ , 19DSP4 ¹ , 19EFP4 ¹ , 19ESP4 ¹
19EBP4	8HR	19GFP4 ^{†1}
19ECP4	8HR	19FTP4, 19HGP4 [†]
19EDP4	8HR	19DWP4 ¹ , 19FCP4 ¹ , 19GJP4 ¹ , A ¹
19EFP4	8HR	19DHP4, 19DSP4, 19ESP4, 19DUP4 ¹ , 19EAP4 ¹ , 19ENP4 ¹ , A ¹ , 19GHP4 ¹
19EGP4	8HR	19HAP4 ¹
19EHP4	8HR	19EHP4A, 19DCP4, 19FJP4 ¹
19EHP4A	8HR	19EHP4, 19DCP4, 19FJP4 ¹

Tube Type	Basing	Replacement
19EJP4	8HR	19FEP4, A, B
19EKP4	8HR	19EZP4
19ELP4	8HR	19AVP4
19ENP4	8HR	19ENP4A; 19DUP4, 19EAP4, 19DHP4 ¹ , 19DSP4 ¹ , 19EFP4 ¹ , 19ESP4 ¹ , 19GHP4
19ENP4A	8HR	19ENP4, 19DUP4, 19EAP4, 19DHP4 ¹ , 19DSP4 ¹ , 19EFP4 ¹ , 19ESP4 ¹ , 19GHP4
19EP4	12D	19JP4
19ESP4	8HR	19DHP4, 19DSP4, 19EFP4, 19DUP4 ¹ , 19EAP4 ¹ , 19ENP4 ¹ , A ¹ , 19GHP4
19ETP4	8HR	
19EUP4	8HR	19DWP4 ¹ , 19EDP4, 19FCP4 ¹ , 19FTP4 ¹ , 19GJP4 ¹ , A ¹
19EXP22	14BE	18VAHP22, 19GVP22, 19GYP22
19EYP22	14BE	18VAHP22, 19FMP22
19EZP4	7FA	19EKP4
19FAP4	8HR	
19FBP4	8HR	19EGP4, 19HAP4 ¹
19FCP4	8HR	19DWP4, 19GJP4, A, 19EDP4 ¹
19FEP4	8HR	19FEP4A, B, 19EJP4
19FEP4A	8HR	19FEP4B
19FEP4B	8HR	19FEP4A
19FGP4	8JR	19EBP4
19FHP4	8HR	
19FJP4	8HR	19DCP4 ¹ , 19EHP4 ¹ , 19EHP4A ¹
19FJP4A	8HR	19DWP4, 19EDP4 ¹ , 19FCP4, 19GJP4, A, 19GRP4
19FLP4	8HR	19DQP4 [†] , 19DRP4 ^{†1} , 19FRP4 ^{†1} , 19FTP4
19FNP4	8HR	19GEP4 ¹ , 19GKP4 ¹
19FP4	12D	19GP4
19FQP4	8HR	
19FRP4	8HR	19DQP4 ¹ , 19DRP4 ¹ , 19FLP4 ^{†1}
19FSP4	8HR	
19FTP4	8HR	18VBQP4, 19DWP4, 19FCP4, 19GJP4, A, 19DCP4 ¹ , 19EDP4 ¹ , 19EUP4 ¹ , 19FTP4A
19FTP4A	8HR	18VBQP4, 19DCP4 ¹ , 19DWP4, 19EDP4,

Tube Type	Basing	Replacement
		19EUP4, 19FCP4, 19GJP4, A
19FWP4	8HR	
19FXP22	14BE	18VAHP22, 19GWP22
19FZP4	8HR	
19GAP4	8HR	
19GBP4	8HR	19CZP4, 19DAP4, 19DKP4 ¹
19GDP22	14BE	19GZP22
19GEP4	8HR	19FNP4 ¹ , 19GEP4A
19GEP4A	8HR	19FNP4 ¹ , 19GEP4
19GFP4	8HR	19EBP4† ¹
19GHP4	8HR	19DHP4 ¹ , 19DSP4 ¹ , 19DUP4, 19EAP4, 19EFP4 ¹ , 19ENP4, A, 19ESP4 ¹
19GJP4	8HR	19GJP4A, 19DWP4, 19EDP4 ¹ , 19FCP4
19GJP4A	8HR	19GJP4, 19DWP4, 19EDP4 ¹ , 19FCP4
19GKP4	8HR	19FNP4 ¹ , 19GEP4 ¹
19GLP22	14BE	18VAHP22 ¹
19GMP4	8HR	19CVP4, 19DYP4
19GQP4	8HR	
19GP4	12D	19FP4 ²
19GSP22	14BE	18VAHP22 ¹ , 19EYP22
19GTP4	8HR	
19GYP22	14BE	18VAHP22 ² , 19GYP22
19GWP22	14BE	18VAHP22, 19HBP22, 19HRP22, 19JYP22
19GYP22	14BE	19EXP22, 19GVP22, 19HQP22
19GZP22	14BE	19GDP22
19HAP4	8HR	19EGP4 ¹
19HBP22	14BE	18VAHP22, 19GWP22, 19HRP22, 19JYP22
19HCP22	14BE	18VAJP22, 18VASP22, 18VATP22, 18VBTP22, 19JZP22
19HFP22	14BE	18VBCP22
19HGP4	8HR	19ECP4†
19HJP22	14BE	18VABP22
19HMP22	14BE	18VBMP22
19HNP22	14BH	18VAZP22
19HRP22	14BE	18VAHP22, 19GWP22, 19HBP22, 19JYP22
19HQP22	14BE	18VAHP22, 19GYP22
19HSP22	14BH	

Tube Type	Basing	Replacement
19HTP22	14BH	18VBJP22
19HXP22	14BE	18VAJP22, 18VASP22, 18VBHP22
19HYP22	14BH	18VAMP22, 18VBDP22
19JAP22	14BH	
19JBP22	14BE	
19JCP22	14BH	
19JLP22	14BE	
19JNP22	14BE	18VABP22, 18VAJP22, 18VAMP22
19JVP22	14BH	
19JP4	12D	19EP4
19JSP22	14BH	18VALP22, 18VBGP22
19JWP22	14BH	
19JYP22	14BE	18VAHP22
19JZP22	14BE	18VAJP22, 18VATP22, 18VBTP22
19KAP22	14BE	
19KLP22	14BE	18VAKP22
19QP4	12L	
19TP22	20A	
19VADP22	13C	
19VAFP22	14BE	19VEDP22
19VAGP22	14BE	19VAFP22
19VAHP4	8HR	19VBXP4, 19VCJP4, 19VCLP4, 19VCMP4, 19VGXP4, 19VHGP4
19VAJP4	8HR	
19VAKP22	14BE	
19VALP4	8HR	
19VAMP22	14BE	
19VANP22	14BH	19VBQP22
19VAQP22	14BE	19VBS22, 19VCBP22, 19VCSP22, 19VDMP22, 19VDUP22, 19VEFP22, 19VEGP22
19VARP4	8HR	19VDHP4, 19VENP4
19VASP4	8HR	
19VATP22	14BE	19VBRP22, 19VBWP22, 19VCFP22, 19VCTP22, 19VCYP22, 19VDQP22, 19VDTP22, 19VDXP22, 19VEAP22, 19VEDP22,

Tube Type	Basing	Replacement
		19VEUP22, 19VHJP22
19VAUP22	14BE	19VCFP22
19VAWP22	14BE	
19VAXP22	14BE	19VBJP22
19VAYP22	14BH	
19VAZP22	14BH	
19VBAP22	14BE	
19VBCP22	14BH	
19VBDP22	14BE	
19VBFP22	14BE	
19VBGP22	14BE	
19VBHP22	14BH	
19VBJP22	14BE	19VAXP22
19VBLP22	13C	
19VBNP4	8HR	19VEMP4, 20AHP4
19VBNP4A	8HR	19VEMP4, 20AHP4
19VBQP22	14BH	
19VBRP22	14BE	19VCFP22, 19VCNP22, 19VCTP22, 19VCXP22, 19VDFP22, 19VDQP22, 19VDYP22, 19VEAP22, 19VEDP22, 19VHJP22
19VBS P22	14BE	19VAQP22, 19VCBP22, 19VCSP22, 19VDM P22, 19VDUP22, 19VEFP22, 19VEGP22
19VBWP22	14BE	19VATP22 ¹ , 19VBRP22 ¹ , 19VCRP22, 19VCTP22 ¹ , 19VDFP22 ¹ , 19VDQP22 ¹ , 19VEAP22 ¹ , 19VEBP22 ¹
19VBXP4	8HR	19VAHP4, 19VCGP4, 19VCJP4, 19VCLP4, 19VCM P4
19VBYP4	8HR	
19VBZP4	8HR	19VCM P4, 19VDGP4
19VCAP22	14BH	19VANP22
19VCBP22	14BE	19VCSP22, 19VDMP22, 19VEFP22, 19VEGP22
19VCFP22	14BE	19VATP22,

Tube Type	Basing	Replacement
		19VAUP22, 19VBRP22, 19VCNP22, 19VCTP22, 19VCXP22, 19VCYP22, 19VDSP22, 19VDWP22, 19VDYP22
19VCGP4	8HR	19VAHP4, 19VBXP4, 19VCJP4, 19VCLP4, 19VCM P4
19VCHP4	8HR	
19VCJP4	8HR	19VAHP4, 19VBXP4, 19VCJP4, 19VCLP4, 19VCM P4
19VCKP4	8HR	19VEDP4, 20XP4
19VCLP4	8HR	19VBXP4, 19VCGP4, 19VCJP4, 19VCM P4, 20YP4, 20ZP4
19VCM P4	8HR	19VBXP4, 19VCGP4, 19VCJP4, 19VCLP4, 20ABP4, 20YP4, 20ZP4
19VCNP22	14BE	19VBRP22, 19VCFP22, 19VDYP22
19VCQP22A	14BE	19VAFP22, 19VDZP22
19VCRP22	14BE	19VDQP22 ¹ , 19VEAP22 ¹ , 19VEDP22 ¹
19VCSP22	14BE	19VAQP22, 19VCBP22, 19VDM P22, 19VDUP22, 19VEFP22, 19VEGP22
19VCTP22	14BE	19VBRP22, 19VCFP22, 19VDFP22, 19VDQP22, 19VDSP22, 19VEAP22, 19VEDP22, 19VHBP22, 19VHJP22
19VCUP4	8HR	19VARP4
19VCWP22	13C	
19VCXP22	14BE	19VBRP22, 19VCFP22
19VCYP22	14BE	19VATP22, 19VBRP22, 19VCTP22, 19VDT P22, 19VDXP22

Tube Type	Basing	Replacement
19VDAP4	8HR	
19VDCP22	14BP	19VFXP22
19VDEP4	8HR	19VCKP4
19VDFP22	14BE	19VBRP22, 19VCTP22, 19VDQP22, 19VEAP22, 19VEDP22, 19VEHP22
19VDGP4	8HR	19VBZP4
19VDHP4	8HR	19VARP4
19VDKP22	13D	
19VDMP22	14BE	19VAQP22, 19VCSP22, 19VDUP22, 19VEFP22, 19VEGP22, 19VEWP22
19VDNP22	14BE	19VAQP22
19VDQP22	14BE	19VBWP22 ¹ , 19VEAP22, 19VEBP22
19VDRP22	13D	19VEMP22, 19VGMP22
19VDSP22	14BE	19VCFP22, 19VCTP22, 19VEDP22, 19VEHP22, 19VHJP22
19VDTP22	14BE	19VBRP22, 19VCTP22, 19VDFP22, 19VDQP22, 19VDSP22, 19VEDP22, 19VHJP22, 19VSP22
19VDUP22	14BE	19VCSP22, 19VDMP22, 19VEFP22, 19VEGP22, 19VEWP22
19VDWP22	14BE	19VATP22, 19VCFP22, 19VCTP22, 19VDFP22, 19VEAP22, 19VEDP22, 19VHBP22, 19VHJP22
19VDXP22	14BE	19VATP22, 19VBRP22, 19VCRP22, 19VDFP22, 19VDQP22, 19VSP22
19VDYP22	14BE	19VBRP22, 19VCFP22, 19VCNP22
19VDZP22	14BE	

Tube Type	Basing	Replacement
19VEAP22	14BE	19VATP22, 19VBRP22, 19VBWP22 ¹ , 19VCRP22 ¹ , 19VCTP22, 19VDFP22, 19VEBP22
19VEBP22	14BE	19VBWP22 ¹ , 19VDQP22, 19VEAP22
19VEDP22	14BE	19VEHP22, 19VEKP22, 19VHBP22, 19VHJP22
19VEFP22	14BE	19VCBP22, 19VCSP22, 19VDMP22, 19VDUP22, 19VEGP22
19VEGP22	14BE	19VEWP22
19VEHP22	14BE	19VETP22, 19VHBP22
19VEJP22	13D	
19VEKP22	14BE	19VGD ² P22 19VELP22 19VFAP22, 19VHBP22, 19VHJP22
19VELP22	14BE	19VEDP22, 19VEKP22, 19VHBP22, 19VHJP22
19VEMP4	8HR	19VBNP4, A
19VENP4	8HR	19VARP4, 19VDHP4, 19VERP4
19VEQP22	13D	19VDRP22, 19VGMP22
19VERP4	8HR	19VARP4, 19VDHP4, 19VENP4
19VETP22	14BE	19VEHP22, 19VHBP22
19VEUP22	14BE	19VEDP22, 19VEHP22, 19VEKP22, 19VHBP22, 19VHJP22
19VEWP22	14BE	19VEGP22
19VEXP22	14BE	
19VEZP22	14BE	19VEDP22, 19VEKP22, 19VELP22, 19VHBP22, 19VHJP22
19VFAP22	14BE	19VEDP22, 19VEKP22, 19VELP22, 19VHBP22, 19VHJP22
19VFBP22	14BP	19VFJP22
19VFD ³ P4	8HR	
19VFEP4	8HR	

Tube Type	Basing	Replacement
19VFGP4	8HR	
19VFJP22	14BP	19VFBP22
19VFKP22	13L	
19VFQP22	14BE	
19VFTP4	8HR	
19VFWP4	8HR	
19VFXP22	14BP	19VDCP22
19VFYP4	8HR	
19VFZP4	8HR	
19VGAP4	8HR	
19VGCP4	8HR	19VGFP4 ¹
19VGDP4	8HR	
19VGEP4	8HR	
19VGFP4	8HR	19VGCP4 ¹
19VGKP22	13L	
19VGLP22	14BP	
19VGMP22	13D	
19VGGP22	13G	19VHFP22
19VGGP4	8HR	
19VGUP4	8HR	
19VGXP4	8HR	19VAHP4
19VGYP4	8HR	19VEHP4
19VGZP22	13K	
19VHBP22	14BE	19VEHP22, 19VEKP22, 19VETP22, 19VEUP22, 19VHJP22
19VHCP22	14BE	
19VHEP4	8HR	19VGYP4
19VHFP22	13G	19VGGP22
19VHGP4	8HR	19VAHP4, 19VGXP4
19VHJP22	14BE	19VEDP22, 19VEKP22, 19VHBP22
19VHKP22	13G	
19VHSP22	13K	
19VHTP22	13K	
19VHUP4	8HR	
19VHWP22	13B	
19VHXP22	14BP	
19VHYP22	13L	
19VJAP4	8HR	
19VJBP22	13M	19VJQP22
19VJDP22	13P	
19VJFP22	13N	
19VJGP4	8HR	
19VJMP22	13N	19VJTP22
19VJNP22	13K	
19VJQP22	13M	19VJBP22
19VJSP22	14BE	
19VJTP22	13N	19VJMP22
19VJUP22	13N	
19VJWP22	13L	
19VJYP22	13M	

Tube Type	Basing	Replacement
19VKDP22	13N	
19VKEP22	13N	
19VKNP22	14BE	
19VKRP22	14BE	19VKTP22
19VKSP22	13N	
19VKTP22	14BE	19VKRP22
19VKWP22	13B	
19VLAP22	14BE	
19VLBP22	13B	
19VP22	14W	
19VSP22	14BE	
19VUP4	8HR	
19XP4	8HR	19AVP4, 19AXP4 ¹ , 19AYP4 ¹
19YP4	8JR	19ANP4 ¹ , 19AVP4
19ZP4	8JS	19AQP4 ¹ , 19AVP4, 19BHP4
20ABP4	8HR	19VCJP4, 19VCLP4, 19VCMP4, 20RP4, 20YP4, 20ZP4
20ADP4	8HR	19VERP4
20AEP4	8HR	19VCMP4, 20SP4†
20AFP4	8HR	20AFP4A
20AFP4A	8HR	
20AGP4	8HR	
20AHP4	8HR	19VBUP4, 19VBNP4A, 19VEMP4
20AKP4	8HR	
20BP4	12D	
20CP4	12D	20CP4B, C, 20DP4, B, 20CP4A ⁷ , D ⁷ , 20DP4A ⁷ , C ⁷ , D ^{*7}
20CP4A	12N	20CP4D, 20DP4A, C, 20CP4 ⁶ , B ⁶ , C ⁶ , 20DP4 ⁶ , B ⁶ , D [*]
20CP4B	12D	20CP4, C, 20DP4, B, 20CP4A ⁷ , D ⁷ , 20DP4A ⁷ , C ⁷ , D ^{*7}
20CP4C	12D	20CP4, B, 20DP4, B, 20CP4A ⁷ , D ⁷ , 20DP4A ⁷ , C ⁷ , D ^{*7}
20CP4D	12N	20CP4A, 20DP4A, C, 20CP4 ⁶ , B ⁶ , C ⁶ , 20DP4 ⁶ , B ⁶ , D [*]
20DP4	12D	20DP4B, 20CP4, B, C, 20DP4A ⁷ , C ⁷ , D ^{*7} , 20CP4A ⁷ , D ⁷
20DP4A	12N	20DP4C, 20CP4A, D, 20DP4 ⁶ , B ⁶ , D [*] , 20CP4 ⁶ , B ⁶ , C ⁶
20DP4B	12D	20DP4, 20CP4, B, C, 20DP4A ⁷ , C ⁷ , D ^{*7} , 20CP4A ⁷ , D ⁷
20DP4C	12N	20DP4A, 20CP4A, D,

Tube Type	Basing	Replacement	Tube Type	Basing	Replacement
		20DP4 ⁶ , B ⁶ , D*, 20CP4 ⁶ , B ⁶ , C ⁶	20XP4	8HR	19VCKP4
20DP4D	12N	20DP4A**, C**, 20CP4A**, D**	20YP4	8HR	19VCLP4, 19VCMP4, 20ABP4, 20RP4, 20ZP4
20FP4	12M	20GP4 ⁷	20ZP4	8HR	19VCMP4, 20ABP4, 20RP4, 20YP4
20GP4	12L	20FP4 ⁶	21ACP4	12N	21ACP4A, 21AMP4, A, 21BSP4, 21CUP4, 21AMP4B*
20HP4	12M	20HP4B, C, A ⁷ , D ⁷ , E* ⁷ , 20JP4 ⁷ , 20LP4 ⁷ , 20MP4 ⁷	21ACP4A	12N	21ACP4, 21AMP4, A, 21BSP4, 21CUP4, 21AMP4B*
20HP4A	12L	20HP4D, 20JP4, 20LP4, 20MP4, 20HP4 ⁶ , B ⁶ , C ⁶ , E*	21AFP4	12M	21BCP4* ⁷ , 21YP4 ⁷ , A ⁷ , B* ⁷
20HP4B	12M	20HP4, C, A ⁷ , D ⁷ , E* ⁷ , 20JP4 ⁷ , 20LP4 ⁷ , 20MP4 ⁷	21ALP4	12L	21ALP4A, B, 21ATP4, A, B, 21BTP4, 21CMP4, 21CWP4, 21DNP4
20HP4C	12M	20HP4, B, A ⁷ , D ⁷ , E* ⁷ , 20JP4 ⁷ , 20LP4 ⁷ , 20MP4 ⁷	21ALP4A	12L	21ALP4, B, 21ATP4, 21ATP4A, 21ATP4B, 21BTP4, 21CMP4, 21CWP4, 21DNP4
20HP4D	12L	20HP4A, 20JP4, 20LP4, 20MP4, 20HP4 ⁶ , B ⁶ , C ⁶ , E*	21ALP4B	12L	21ALP4, A, 21ATP4, A, B, 21BTP4, 21CMP4, 21CWP4, 21DNP4
20HP4E	12L	20HP4A**, 20JP4**, 20LP4**, 20MP4**	21AMP4	12N	21AMP4A, 21ACP4, A, 21BSP4, 21CUP4, 21AMP4B*
20JP4	12P		21AMP4A	12N	21AMP4, 21ACP4, A, 21BSP4, 21CUP4, 21AMP4B*
20LP4	12L	20HP4A, D, 20JP4, 20MP4, 20HP4 ⁶ , B ⁶ , C ⁶ , E*	21AMP4B	12N	21AMP4** ⁷ , A** ⁷ , 21ACP4** ⁷ , A** ⁷ , 21BSP4** ⁷ , 21CUP4** ⁷
20MP4	12L	20HP4A, D, 20JP4, 20LP4, 20HP4 ⁶ , B ⁶ , C ⁶ , E*	21ANP4	12M	21ANP4A
20RP4	8HR	19VCJP4, 19VCLP4, 19VCMP4, 19VEMP4, 20AB4, 20YP4, 20ZP4	21ANP4A	12M	21ANP4
20SP4	8HR	19VCJP4, 19VCLP4, 19VCMP4, 20AEP4†	21AP4	12D	
20TP4	8HR	20XP4	21AQP4	12D	21AQP4A, 21ACP4 ⁷ , A ⁷ , 21AMP4 ⁷ , A ⁷ , B* ⁷ , 21BSP4 ⁷ , 21CUP4 ⁷
20UP4	8HR	19VALP4	21AQP4A	12D	21AQP4, 21ACP4 ⁷ , A ⁷ , 21AMP4 ⁷ , A ⁷ , B* ⁷ , 21BSP4 ⁷ , 21CUP4 ⁷
20VADP22	14BE	20VAGP22	21ARP4	12N	21ARP4A
20VAEP22	14BE		21ARP4A	12N	21ARP4
20VAFP22	14BE		21ASP4	12M	21AYP4 ⁷ , 21XP4 ⁷ , 21XP4A ⁷ , 21XP4B* ⁷
20VAGP22	14BE	20VADP22	21ATP4	12L	21ATP4A, B, 21ALP4,
20VAHP22	14BH	22ALP22			
20VAJP22	14BE	20VASP22, 22ALP22			
20VAKP22	14BE	20VALP22			
20VALP22	14BE	20VAKP22			
20VAMP22	14BE	20VANP22			
20VANP22	14BE	20VAMP22			
20VASP22	14BE	20VAFP22			
20VATP4	8HR				
20VAQP4	8HR				
20WP4	8HR				
20WP4A	8HR	20WP4			

Tube Type	Basing	Replacement	Tube Type	Basing	Replacement
		A, B, 21BTP4, 21CMP4, 21CWP4, 21DNP4, 21BAP4*, 21BNP4*, 21CVP4*			B, 21CVP4, 21DRP4, 21FLP4
21ATP4A	12L	21ATP4, B, 21ALP4B, 21BTP4, 21CMP4, 21CWP4, 21DNP4, 21BAP4*, 21BNP4*, 21CVP4*	21BCP4	12L	21YP4B, 21YP4**, 21YP4A**
21ATP4B	12L	21ATP4, A, 21ALP4, A, B, 21BTP4, 21CMP4, 21CWP4, 21DNP4, 21BAP4*, 21BNP4*, 21CVP4*	21BDP4	12L	21AUP4C, 21AVP4C, 21AUP4B**, 21AVP4B**
21AUP4	12L	21AUP4A, B, C*, 21AVP4, 21AVP4A, 21AVP4B, 21AVP4C*, 21BDP4*	21BRP4	8GM	
21AUP4A	12L	21AUP4, B, C*, 21AVP4, 21AVP4A, 21AVP4B, 21AVP4C*, 21BDP4*	21BSP4	12N	21ACP4, A, 21AMP4, A, 21CUP4, 21AMP4B*
21AUP4B	12L	21AUP4, A, C*, 21AVP4, 21AVP4A, 21AVP4B, 21AVP4C*, 21BDP4*	21BTP4	12L	21ALP4B ¹ , 21ATP4A ¹ , 21BAP4 ¹ , 21BNP4* ¹ , 21CMP4 ¹ , 21CVP4* ¹ , 21CWP4 ¹ , 21DNP4 ¹
21AUP4C	12L	21AVP4C, 21BDP4, 21AUP4**, A**, B**, 21AVP4**, A**, B**	21CBP4	12L	21CBP4A, B, 21DLP4, 21DQP4, 21DRP4, 21FLP4, 21CKP4 ¹
21AVP4	12L	21AVP4A, B, C*, 21AUP4, A, B, C*, 21BDP4*	21CBP4A	12L	21CBP4B, 21DLP4, 21DQP4, 21DRP4, 21FLP4, 21CKP4 ¹
21AVP4A	12L	21AVP4, B, C*, 21AUP4, A, B, C*, 21BDP4*	21CBP4B	12L	12CBP4A, 21DLP4, 21DQP4, 21DRP4, 21FLP4, 21CKP4 ¹
21AVP4B	12L	21AVP4, A, C*, 21AUP4, A, B, C*, 21BDP4*	21CDP4	12L	21CDP4A, 21CKP4* ¹
21AVP4C	12L	21AUP4C, 21BDP4, 21AVP4**, A**, B**, 21AUP4**, A**, B**	21CDP4A	12L	21CDP4, 21CKP4* ¹
21AWP4	12N	21AWP4A*	21CEP4	8HR	21EMP4
21AWP4A	12N	21AWP4**	21CEP4A	8HR	21DWP4 ¹
21AXP22	14W		21CGP4	12L	21CHP4*
21AXP22A	14W		21CHP4	12L	21CGP4**
21AYP4	12L	21XP4, A, B*, 21ASP4 ⁶	21CKP4	12L	21CBP4A ¹ , 21DLP4 ¹ , 21DRP4 ¹ , 21FLP4 ¹
21BAP4	12L	21BNP4, 21CBP4A,	21CLP4	12AJ	
			21CMP4	12L	21DNP4, 21CBP4A*, 21CKP4 ¹ , 21DRP4*, 21FLP4*
			21CQP4	7FA	21CSP4 ¹
			21CSP4	7FA	21CQP4 ¹
			21CUP4	12N	21ACP4, A, 21AMP4, 21AMP4A, 21BSP4, 21AMP4B*
			21CVP4	12L	21BAP4, 21BNP4, 21CMP4, 21DNP4
			21CWP4	12L	21ALP4B, 21ATP4A, 21BTP4, 21CMP4, 21DNP4
			21CXP4	12L	21DSP4 ¹

Tube Type	Basing	Replacement
21CYP22	14AL	
21CYP22A	14AL	
21CZP4	8HR	21DEP4*, A*, 21DHP4 ¹ *, 21DKP4 ¹ *, A ¹ *
21DAP4	8HR	21DMP4 ¹
21DEP4	8HR	21DEP4A, 21CZP4**, 21DHP4 ¹ , 21DKP4 ¹ , 21DKP4A ¹
21DEP4A	8HR	21DEP4
21DFP4	8HR	21CZP4* ¹ , 21DEP4 ¹ , A ¹ , 21DWP4 ¹ , 21EMP4
21DHP4	8HR	21CEP4, A, 21DMP4, 21DKP4 ¹ , A ¹
21DJP4	12L	21CBP4A ¹ , 21CKP4 ¹ , 21DLP4 ¹ , 21DRP4 ¹ , 21FLP4 ¹
21DKP4	8HR	21DKP4A, 21DEP4 ¹ , A ¹ , 21DHP4 ¹
21DKP4A	8HR	21DKP4, 21DEP4 ¹ , A ¹ , 21DHP4 ¹
21DLP4	12L	21DQP4
21DMP4	8HR	
21DNP4	12L	21CBP4A* ¹ , 21CKP4* ¹ , 21CMP4 ¹ , 21DRP4* ¹ , 21FLP4* ¹
21DP4	12M	
21DQP4	12L	21CBP4 ¹ , A ¹ , B ¹ , 21CKP4 ¹ , 21DLP4 ¹ , 21FLP4 ¹
21DRP4	12L	21CBP4A, 21DLP4, 21FLP4, 21CKP4 ¹
21DSP4	12L	21CXP4
21DVP4	12L	21ENP4, 21CKP4* ¹ , 21DJP4* ¹
21DWP4	8HR	21CEP4A ¹ , 21DFP4 ¹
21EAP4	8JK	
21ELP4	12L	
21EMP4	8HR	
21ENP4	12L	21CBP4A* ¹ , 21CKP4* ¹ , 21CMP4 ¹ , 21DJP4* ¹ , 21DNP4 ¹ , 21DRP4* ¹ , 21FLP4* ¹
21EP4	12D	21EP4A ⁷ , B ⁷ , C ⁷ *, 21ZP4C
21EP4A	12N	21EP4B, C*, 21ZP4C
21EP4B	12N	21EP4A, C*, 21ZP4C

Tube Type	Basing	Replacement
21EP4C	12N	21EP4A**, B**, 21ZP4C
21EQP4	8JR	
21ERP4	8JR	
21ESP4	8JS	21FAP4
21EVP4	8JK	
21EXP4	8JR	21EQP4 ¹
21EZP4	8JR	
21FAP4	8JR	
21FBP22	14AU	
21FBP22A	14AU	21GUP22
21FCP4	8HR	
21FDP4	8KW	
21FJP22	14AU	21FKP22
21FJP22A	14AU	
21FKP22	14AU	21FJP22
21FLP4	12L	21CBP4A, 21DLP4, 21DRP4, 21CKP4 ¹
21FMP4	8HR	
21FP4	12M	21FP4A ⁷ , D* ⁷
21FP4A	12L	21FP4 ⁶ , D*
21FP4C	12L	21FP4 ⁶ , 21FP4A, D*
21FP4D	12L	21FP4A**, C**
21FUP4	8HR	21GTP4 ¹
21FVP4	8HR	21FWP4
21FWP4	8HR	21FVP4
21FXP4	8HR	
21FYP4	8HR	
21FZP4	8HR	
21GAP4	8HR	21GAP4A
21GAP4A	8HR	21GAP4
21GBP4	8HR	
21GCP4	8HR	
21GEP4	8HR	
21GFP22	14BE	20VAGP22
21GHP4	8HR	
21GJP4	8HR	
21GKP4	8HR	
21GSP4	8HR	
21GTP4	8HR	21FUP4 ¹
21GUP22	14AU	21FBP22
21GVP22	14AU	21GYP22
21GWP22	14BE	20VAGP22, 21HBP22
21GYP22	14AU	21GVP22
21HBP22	14BE	21GWP22
21JP4	12N	21JP4A
21JP4A	12N	21JP4
21KP4	12D	21KP4A ⁷
21KP4A	12P	21FP4D, 21KP4 ⁶
21MP4	12M	
21VABP22	14BE	21VAKP22, 22AMP22
21VACP22	14BE	21VAJP22, 21VAKP22,

Tube Type	Basing	Replacement
		21VAQP22, 21VAUP22, 21VAZP22, 21VBEP22
21VADP22	14BE	21VARP22, 21VBEP22
21VAGP4	8HR	
21VAKP22	14BE	
21VALP22	14BE	21VAXP22, 21VBCP22
21VAQP22	14BE	21VAUP22, 21VAZP22, 21VBEP22, 21VBHP22
21VARP22	14BE	21VBEP22
21VASP4	8HR	22ZP4
21VATP4	8HR	22AFP4
21VAUP22	14BE	21VAKP22, 21VAQP22, 21VAZP22, 21VBEP22, 21VBHP22
21VAXP22	14BE	21VBCP22
21VAZP22	14BE	21VAQP22, 21VAUP22, 21VBEP22, 21VBHP22
21VBCP22	14BE	21VAXP22
21VBEP22	14BE	21VBHP22
21VBHP22	14BE	21VBEP22
21VBJP22	14BE	
21VBLP22	14BP	
21WP4	12N	21WP4A, B*
21WP4A	12N	21WP4, B*
21WP4B	12N	21WP4**, A**
21XP4	12L	21XP4A, B*
21XP4A	12L	21XP4, B*
21XP4B	12L	21XP4**, A**
21YP4	12L	21YP4A, B*, 21BCP4*
21YP4A	12L	21YP4, B*, 21BCP4*
21YP4B	12L	21BCP4, 21YP4**, A**
21ZP4	12D	21ZP4A ⁷ , 21ZP4B ⁷ , 21ZP4C ⁷
21ZP4A	12N	21ZP4B, C*
21ZP4B	12N	21ZP4A, C*
21ZP4C	12N	21ZP4A**, B**
22ADP22	14BE	
22AEP22	14BE	
22AFP4	12D	21VATP4
22AHP22	14BE	20VAKP22, 20VALP22, 22ASP22, 22UP22
22ALP22	14BE	20VAJP22, 20VASP22
22AMP22	14BE	21VABP22, 21VAKP22
22ANP22	14BH	20VAHP22

Tube Type	Basing	Replacement
22AP4	12D	22AP4A
22AP4A	12D	22AP4
22AQP22	14BE	
22ARP22	14BE	20VAGP22
22ASP22	14BE	22UP22
22ATP22	14BE	
22JP22	14BE	20VAGP22, 22ARP22
22KP22	14BE	
22QP22	14BE	20VAGP22, 22ARP22, 22JP22
22RP22	14BE	22KP22, 22UP22
22SP22	14BE	20VAGP22, 20VAMP22, 20VANP22
22TP4	8HR	
22UP22	14BE	22ASP22
22VABP4	8HR	22VAHP4 ¹
22VACP4	8HR	
22VADP4	12L	
22VAEP4	8HR	
22VAGP4	8HR	
22VAHP4	8HR	
22VAMP4	8HR	22VANP4, A, 23GBP4, 23HFP4
22VANP4	8HR	22VAMP4
22VANP4A	8HR	22VAMP4
22VARP4	8HR	23GJP4, 23GWP4
22VASP4	8HR	23FCP4, 23FDP4, 23FHP4
22VATP4	8HR	23HGP4, 23JEP4
22VAUP4	8HR	
22VAXP4	8HR	22VABP4, 22VAZP4, 22VBDP4
22VAYP4	8HR	23JQP4
22VAZP4	8HR	22VABP4, 22VAXP4, 22VBDP4
22VBAP4	8HR	22VAXP4, 22VAZP4, 22VBDP4
22VBCP4	8HR	
22VBDP4	8HR	22VAXP4, 22VAZP4
22WP22	14BE	
22YP22	14BE	
22ZP4	8HR	21VASP4
23ACP4	12L	23TP4
23AFP4	12L	23BMP4, 23BTP4, 23YP4, 23CDP4 ¹
23AHP4	12L	23ASP4, 23AUP4, 23CZP4, 23AZP4 ¹
23AKP4	8JR	23CVP4 ¹
23ALP4	8HR	23AMP4 ¹ , 23CQP4 ¹ , 23MP4 ¹ , 23MP4A ¹ , 23VP4 ¹
23AMP4	8HR	23ALP4 ¹ , 23CQP4 ¹ ,

Tube Type	Basing	Replacement	Tube Type	Basing	Replacement
		23MP4 ¹ , 23MP4A ¹ , 23VP4 ¹			23CP4 ¹ , A ¹ , 23DXP4 ¹ , 23GP4 ¹ , 23HP4 ¹ , 23SP4 ¹
23ANP4	12L	23ATP4, 23BKP4, 23BLP4	23BTP4	12L	23AFP4, 23BMP4, 23XP4, 23YP4, 23CDP4 ¹
23AQP4	8HR	23AMP4, 23VP4, 23ALP4 ¹ , 23AMP4 ¹ , 23CQP4 ¹ , 23FP4 ¹ , A ¹ , 23MP4 ¹ , 23MP4A ¹	23BVP4	12L	23CTP4 ¹ , 23EAP4 ¹
23ARP4	8HR	23AXP4 ¹	23BXP4	12L	23EDP4
23ASP4	12L		23BYP4	8JR	23BRP4, 23CSP4, 23RP4, 23CUP4 ¹ , 23DP4 ¹
23ATP4	12L	23ANP4, 23BKP4, 23BLP4	23BZP4	12L	
23AUP4	12L	23AHP4, 23ASP4, 23CZP4, 23AZP4 ¹	23CAP4	12L	
23AVP4	8HR	23CP4, A, 23DXP4, 23AYP4 ¹ , 23BSP4 ¹ , 23HP4 ¹ , 23SP4 ¹	23CBP4	8HR	23BQP4, 23UP4
23AWP4	12L	23BJP4	23CDP4	12L	
23AXP4	8HR	23EJP4	23CEP4	8HR	23ARP4 ¹ , 23CMP4 ¹
23AYP4	8HR	23BSP4, 23SP4, 23AVP4 ¹ , 23CP4 ¹ , A ¹ , 23DXP4 ¹ , 23HP4 ¹	23CGP4	12L	23ASP4 ¹
23AZP4	12L	23ASP4 ¹	23CMP4	8HR	23BCP4 ¹
23BAP4	8HR	23BP4	23CP4	8HR	23CP4A, 23AVP4, 23DXP4, 23AYP4 ¹ , 23BSP4 ¹ , 23HP4 ¹ , 23SP4 ¹
23BCP4	8HR	23CEP4 ¹ , 23CMP4 ¹	23CP4A	8HR	23CP4, 23AVP4, 23DXP4, 23AYP4 ¹ , 23BSP4 ¹ , 23HP4 ¹ , 23SP4 ¹
23BDP4	12L	23BTP4	23CQP4	8HR	23FP4 ¹ , A ¹ , 23VP4 ¹
23BEP4	8HR	23BEP4A	23CSP4	8JR	23BRP4, 23BYP4, 23RP4, 23CUP4 ¹ , 23DP4 ¹
23BEP4A	8HR	23BEP4	23CTP4	12L	23BVP4 ¹ , 23EAP4 ¹
23BGP4	8HR	23BHP4	23CUP4	8JR	23DP4, 23BRP4 ¹ , 23BYP4 ¹ , 23CSP4 ¹ , 23RP4 ¹
23BHP4	8HR	23BGP4	23CVP4	8JR	23AKP4 ¹
23BJP4	12L	23AWP4	23CWP4	8JR	23CXP4 ¹
23BKP4	12L	23BLP4, 23ANP4 ¹ , 23ATP4 ¹	23CXP4	8JR	23CWP4 ¹
23BLP4	12L	23BKP4, 23ANP4 ¹ , 23ATP4 ¹	23CZP4	12L	23ASP4
23BMP4	12L	23AFP4, 23BTP4, 23XP4, 23YP4, 23CDP4 ¹	23DAP4	8HR	23DCP4 ¹
23BNP4	8HR	23ADP4, 23AVP4, 23CP4, A, 23DXP4, 23GP4, 23AYP4 ¹ , 23BEP4 ¹ , A ¹ , 23BQP4 ¹ , 23BSP4 ¹ , 23CBP4 ¹ , 23SP4 ¹ , 23UP4 ¹	23DBP4	8HR	23NP4
23BP4	8HR	23BAP4, 23CP4A	23DCP4	8HR	23DAP4 ¹
23BQP4	8HR	23CBP4, 23UP4, 23DGP4 ¹	23DEP4	8HR	
23BRP4	8JR	23BYP4, 23CSP4, 23RP4, 23CUP4 ¹ , 23DP4 ¹	23DFP4	8HR	
23BSP4	8HR	23AVP4 ¹ , 23AYP4 ¹	23DHP4	8HR	23DJP4, 23UP4 ¹
			23DJP4	8HR	23DHP4, 23UP4 ¹
			23DKP4	12L	23DTP4, 23FLP4 ¹
			23DLP4	12L	23DLP4A, 23ENP4, 23FBP4, 23FWP4 ¹ , 23FWP4A ¹
			23DLP4A	12L	23DLP4, 23ENP4, 23FBP4, 23FWP4 ¹ , A ¹
			23DNP4	12L	
			23DP4	8JR	23CUP4, 23RBP4 ¹ ,

Tube Type	Basing	Replacement
		23BYP4 ¹ , 23CSP4 ¹ , 23RP4 ¹
23DQP4	8HR	
23DSP4	8HR	23DSP4A
23DSP4A	8HR	23DSP4
23DTP4	12L	23DKP4, 23FLP4 ¹
23DVP4	8HR	23DVP4A, 23DZP4 ¹ , 23EWP4 ¹ , A ¹
23DVP4A	8HR	23DVP4, 23DZP4 ¹ , 23EWP4 ¹ , A ¹
23DWP4	8HR	23GHP4 ¹
23DYP4	8HR	22VANP4, A, 23ESP4 ¹ , 23FVP4 ¹
23DZP4	8HR	23EWP4, A, 23DVP4 ¹ , A ¹
23EAP4	12L	23BVP4 ¹ , 23CTP4 ¹
23ECP4	12L	
23EDP4	12L	
23EFP4	8HR	23FCP4 ¹ , 23FDP4 ¹ , 23FHP4 ¹ , 23GJP4 ¹ , A ¹ , 23GWP4 ¹
23EGP22	14BE	
23EKP4	12L	23FLP4
23ELP4	12L	
23ENP4	12L	23DLP4, A, 23FBP4, 23FWP4 ¹ , A ¹
23EP4	8KP	
23EQP4	8HR	23ERP4 ¹ , 23EWP4A
23ERP4	8HR	23EQP4 ¹
23ESP4	8HR	22VANP4, A, 23DYP4 ¹ , 23ETP4 ¹ , 23FVP4, A, 23GTP4
23ETP4	8HR	22VANP4 ¹ , A ¹ , 23FVP4B ¹ , 23GTP4, 23FMP4 ¹ , 23HMP4 ¹ , 23HXP4 ¹
23EWP4	8HR	23EWP4A, 23DZP4, 23DVP4 ¹ , A ¹
23EWP4A	8HR	23EWP4, 23DZP4, 23DVP4 ¹ , A ¹
23EYP4	12L	
23EZP4	8HR	
23FAP4	8HR	23HLP4
23FBP4	12L	23DLP4, A, 23ENP4, 23FWP4 ¹ , A ¹
23FCP4	8HR	22VASP4, 23FDP4, 23FHP4, 23GJP4, A, 23GWP4, 23EFP4 ¹
23FDP4	8HR	22VASP4, 23FCP4, 23FHP4, 23GJP4, A, 23GWP4, 23EFP4 ¹

Tube Type	Basing	Replacement
23FEP4	12L	
23FHP4	8HR	22VASP4, 23FCP4, 23FDP4, 23GJP4, A, 23GWP4, 23EFP4 ¹
23FKP4	8HR	
23FLP4	12L	23DKP4 ¹ , 23GTP4 ¹
23FMP4	8HR	22VANP4, A, 23ETP4 ¹ , 23FVP4B, 23GTP4 ¹ , 23HMP4 ¹ , 23HXP4
23FNP4	12L	
23FP4	8HR	23FP4A, 23VP4 ¹
23FP4A	8HR	23FP4, 23VP4 ¹
23FRP4	8HR	22VAHP4 ¹ , 23JFP4 ¹
23FSP4	8HR	23JBP4
23FVP4	8HR	22VANP4, A, 23FVP4A, 23DYP4 ¹ , 23ESP4, 23ETP4 ¹ , 23FMP4, 23HMP4
23FVP4A	8HR	22VANP4, A, 23FVP4, 23DYP4 ¹ , 23ESP4, 23ETP4 ¹ , 23FMP4, 23HMP4
23FVP4B	8HR	22VAMP4
23FWP4	12L	23FWP4A, 23DLP4 ¹ , A ¹ , 23ENP4 ¹ , 23FBP4 ¹
23FWP4A	12L	23FWP4, 23DLP4 ¹ , A ¹ , 23ENP4 ¹ , 23FBP4 ¹
23GBP4	8HR	22VAMP4, 23HFP4, A
23GDP4	8HR	23DVP4, A, 23DZP4 ¹ , 23EWP4 ¹ , A ¹
23GFP4	8HR	
23GHP4	8HR	23DWP4 ¹
23GJP4	8HR	22VAHP4 ¹ , 22VARP4, 23GJP4A, 23GWP4
23GJP4A	8HR	22VAHP4 ¹ , 22VARP4, 23GJP4, 23GWP4
23GKP4	12L	23GRP4 ¹
23GP4	8HR	23AVP4, 23CP4, A, 23HP4, 23ADP4 ¹ , 23AYP4 ¹ , 23BSP4 ¹ , 23SP4 ¹
23GRP4	12L	23GKP4 ¹
23GSP4	8HR	23HZP4 ¹
23GTP4	8HR	23ETP4, 23FMP4 ¹ , 23HMP4 ¹ , 23HXP4 ¹
23GUP4	8HR	
23GVP4	8HR	22VABP4
23GWP4	8HR	22VAHP4, 22VARP4, 23GJP4, A

Tube Type	Basing	Replacement
23GXP4	8HR	23HQP4 ¹
23GYP4	12L	
23HAP4	12L	
23HBP4	8HR	
23HCP4	8HR	
23HFP4	8HR	22VAMP4, 23HFP4A, 23GBP4
23HFP4A	8HR	22VAMP4, 23HFP4, 23GBP4
23HGP4	8HR	22VATP4, 23JEP4
23HKP4	8HR	
23HLP4	8HR	
23HMP4	8HR	23DYP4 ¹ , 23ESP4 ¹ , 23ETP4 ¹ , 23FMP4 ¹ , 23FVP4 ¹ , A ¹ , 23GTP4 ¹ , 23HXP4 ¹
23HP4	8HR	22VANP4 ¹ , A ¹ , 23AVP4, 23CP4, A, 23DXP4, 23AYP4 ¹ , 23BSP4 ¹ , 23FVP4B ¹ , 23SP4 ¹
23HQP4	8HR	23GXP4 ¹
23HQP4A	8HR	23GXP4 ¹
23HRP4	8HR	23HWP4
23HTP4	8HR	
23HUP4	8HR	23HUP4A, 23JLP4
23HUP4A	8HR	23HUP4, 23JLP4
23HWP4	8HR	23HWP4A
23HWP4A	8HR	23HWP4
23HXP4	8HR	23ETP4 ¹ , 23FMP4, 23GTP4 ¹ , 23HMP4 ¹
23HZP4	8HR	23GSP4 ¹ , 23HGP4 ¹
23JBP4	8HR	
23JEP4	8HR	22VATP4, 23HGP4, 23HZP4 ¹
23JEP4A	8HR	22VATP4, 23HGP4, 23HZP4 ¹
23JFP4	8HR	22VAHP4 ¹ , 23FRP4 ¹
23JGP4	8HR	23FRP4
23JHP4	8HR	
23JLP4	8HR	22VAHP4 ¹ , 23HUP4, A
23JP4	7FA	
23JQP4	8HR	22VAYP4
23JRP4	8HR	23FP4A
23KP4	8JS	23KP4A
23KP4A	8JS	23KP4
23MP4	8HR	23MP4A, 23ALP4 ¹ , 23AMP4 ¹ , 23CQP4 ¹ , 23VP4 ¹
23MP4A	8HR	23MP4, 23ALP4 ¹ , 23AMP4 ¹ , 23CQP4 ¹ , 23VP4 ¹
23NP4	8HR	

Tube Type	Basing	Replacement
23RP4	8JR	22VAHP4 ¹ , 23BRP4, 23BYP4, 23CSP4, 23CUP4 ¹ , 23DP4 ¹
23SP4	8HR	23AYP4, 23BSP4, 23AVP4 ¹ , 23CP4 ¹ , A ¹ , 23DXP4 ¹ , 23UP4 ¹
23TP4	12L	23ACP4, 23BTP4
23UP4	8HR	23BQP4, 23CBP4
23VABP22	14BE	23VALP22, 23VANP22, 23VAXP22, 23VBSP22
23VACP22	14BE	23VADP22, 23VALP22, 23VANP22, 23VAQP22, 23VARP22, 23VBRP22, 23VBTP22
23VADP22	14BE	23VACP22, 23VAMP22, 23VAYP22, 23VBYP22, 23VCFP22
23VAEP22	14BE	23VAJP22
23VAHP22	14BE	23VATP22, 23VBRP22, 23VBYP22
23VAJP22	14BE	23VAEP22
23VALP22	14BE	23VAHP22, 23VANP22, 23VARP22
23VAMP22	14BE	23VADP22, 23VAQP22, 23VBWP22, 23VBYP22, 23VCFP22
23VANP22	14BE	23VAHP22, 23VALP22, 23VARP22, 23VATP22
23VAQP22	14BE	23VAMP22, 23VDBP22, 23VBRP22, 23VBWP22, 23VCFP22
23VARP22	14BE	23VAHP22, 23VALP22, 23VANP22
23VASP22	14BE	
23VATP22	14BE	23VAHP22, 23VALP22, 23VANP22

Tube Type	Basing	Replacement
23VAXP22	14BE	23VABP22, 23VALP22, 23VANP22, 23VATP22, 23VBS P22
23VAYP22		23VACP22, 23VADP22, 23VAQP22, 23VBAP22, 23VCFP22
23VAZP22	14BE	23VATP22
23VBAP22	14BE	23VACP22, 23VALP22, 23VAMP22, 23VAQP22, 23VBWP22, 23VBYP22, 23VCFP22
23VBCP22	14BE	23VAQP22, 23VBDP22
23VBDP22	14BE	23VAQP22, 23VBAP22, 23VBWP22, 23VBYP22, 23VCFP22
23VBF P22	14BE	23VBUP22
23VBGP22	14BE	
23VBHP22	14BE	25SP22
23VBJP22	14BE	
23VBKP22	14BE	23VBMP22
23VBMP22	14BE	
23VBNP22	14BE	23VAQP22, 23VAYP22, 23VBCP22, 23VBKP22, 25BKP22
23VBRP22	14BE	23VAHP22, 23VAMP22, 23VAQP22, 23BCFP22
23VBSP22	14BE	23VABP22, 23VALP22, 23VAXP22
23VBTP22	14BE	23VACP22, 23VANP22, 23VAQP22
23VBUP22	14BE	
23VBWP22	14BE	23VALP22, 23VAMP22, 23VAQP22, 23VBAP22, 23VCEP22
23VBYP22	14BE	23VADP22,

Tube Type	Basing	Replacement
		23VAHP22, 23VAMP22, 23VBAP22, 23VBDP22, 23VCFP22
23VCEP22	14BE	
23VCFP22	14BE	
23VCMP22	14BE	
23VP4	8HR	23ALP4 ¹ , 23AMP4 ¹ , 23CQP4 ¹ , 23MP4 ¹ , A ¹
23WP4	8HR	23FP4A
23XP4	12L	23AFP4, 23BMP4, 23BTP4, 23YP4, 23CDP4 ¹
23YP4	12L	23AFP4, 23BMP4, 23BTP4, 23XP4, 23CDP4 ¹
23ZP4	12L	23BKP4
24ADP4	12N	24CP4 ¹ , A ¹ , B* ¹ , 24TP4 ¹ , 24VP4 ¹ , A ¹
24AEP4	12L	
24AHP4	8HR	24ALP4, 24AQP4 ¹ , 24AWP4 ¹ , 24AXP4 ¹
24AJP4	12L	24ATP4
24ALP4	8HR	24AHP4, 24AQP4 ¹ , 24AWP4 ¹ , 24AXP4 ¹
24AMP4	7FA	
24ANP4	12L	24DP4, A, 24AEP4*, 24ASP4* ¹ , 24AUP4*, 24YP4 ¹ , 24ZP4* ¹
24AP4	12D	24AP4A
24AP4A	12D	24AP4
24AP4B	12D	24AP4
24AQP4	8HR	24AHP4 ¹ , 24ALP4 ¹ , 24AWP4 ¹ , 24AXP4 ¹
24ASP4	12L	24AEP4 ¹ , 24AUP4 ¹
24ATP4	12L	24AJP4 ¹
24AUP4	12L	24AEP4
24AVP4	8JK	
24AWP4	8HR	
24AXP4	8HR	24AHP4 ¹ , 24ALP4 ¹ , 24AQP4 ¹ , 24AWP4 ¹
24BAP4	8HR	
24BCP4	12L	
24BEP4	8KW	
24BP4	12M	
24CP4	12N	24CP4A, 24ADP4, 24QP4, 24TP4, 24VP4, A, 24CP4B*

Tube Type	Basing	Replacement	Tube Type	Basing	Replacement
24CP4A	12N	24CP4, 24ADP4, 24QP4, 24TP4, 24VP4, A, 24CP4B*			23VALP22, 23VANP22, 23VAQP22, 23VARP22, 23VBJP22, 23VBRP22, 23VBYP22, 25BHP22
24CP4B	12N	24CP4**, A**, 24DP4**, 24QP4**, 24TP4**, 24VP4**, A**			
24DP4	12L	24DP4A, 24ANP4, 24AEP4*, 24ASP4* ¹ , 24AUP4*, 24YP4 ¹ , 24ZP4* ¹	25AKP22	14BE	
24DP4A	12L	24DP4, 24ANP4, 24AEP4*, 24ASP4* ¹ , 24AUP4*, 24YP4 ¹ , 24ZP4* ¹	25ALP22	14BE	23VBMP22, 25ALP22A
24QP4	12N	24ADP4, 24CP4, A, 24TP4, 24VP4, 24VP4A, 24CP4B*	25ALP22A	14BE	23VBMP22, 25ALP22
24TP4	12N	24ADP4, 24CP4, 24CP4A, 24QP4, 24VP4, 24VP4A, 24CP4B*	25AMP22	14BE	23VAEP22, 23VAJP22
24VABP22	14BQ	A66-501X	25ANP22	14BE	23VABP22, 23VALP22, 23VANP22, 23VARP22, 25BAP22
24VP4	12N	24VP4A, 24ADP4, 24CP4, A, 24QP4, 24TP4, 24CP4B*	25AP22	14BE	23VALP22, 23VANP22, 23VARP22, 25ABP22, 25XP22
24VP4A	12N	24VP4, 24ADP4, 24CP4, 24CP4A, 24QP4, 24TP4, 24CP4B*	25AP22A	14BE	23VALP22, 23VANP22, 23VARP22, 25ABP22, 25XP22
24XP4	12D		25AQP22	14BE	23VABP22, 23VAXP22
24YP4	12L	24ANP4, 24AUP4, 24DP4, A, 24ZP4, 24AEP4*, 24ASP4 ¹	25ASP22	14BE	
24ZP4	12L	24AEP4, 24ANP4, 24AUP4, 24DP4, 24DP4A, 24YP4, 24ASP4 ¹	25ATP22	14BE	
25ABP22	14BE	23VALP22, 23VANP22, 23VARP22, 23VATP22, 25XP22	25AWP22	14BE	23VACP22, 23VALP22, 23VANP22, 23VAQP22, 23VARP22, 23VBNP22, 23VBTP22, 25BKP22
25ADP22	14BE		25AYP22	14BE	25ALP22, 25CAP22
25AEP22	14BE	23VANP22, 23VATP22 25YP22	25AZP22	14BE	23VACP22, 23VALP22, 23VANP22, 23VAQP22, 23VARP22, 23VBPR22, 23VBTP22
25AFP22	14BE	23VALP22, 23VANP22, 23VARP22, 23VATP22, 25BMP22	25BAP22	14BE	23VABP22, 23VALP22, 23VAXP22, 25ANP22, 25GP22A
25AJP22	14BE	23VADP22,	25BCP22	14BE	23VALP22, 23VANP22
			25BDP22	14BE	23VAQP22, 23VBAP22, 23VBYP22

Tube Type	Basing	Replacement
25BFP22	14BE	23VACP22, 23VALP22, 23VANP22, 23VAQP22, 23VARP22, 23VBT22
25BGP22	14BE	23VALP22, 23VANP22, 23VARP22
25BHP22	14BE	23VALP22, 23VANP22, 23VAQP22, 23VARP22, 23VBRP22, 23VBYP22
25BKP22	14BE	23VAQP22, 23VBAP22
25BLP22	14BE	
25BMP22	14BE	23VALP22, 23VANP22, 23VARP22
25BP22	14BE	23VANP22, 23VATP22, 25YP22
25BP22A	14BE	23VANP22, 23VATP22, 25YP22
25CAP22	14BE	25ALP22, 25AYP22
25CBP22	14BE	
25CP22	14BE	23VALP22, 23VARP22, 25ABP22, 25AP22, 25XP22
25DP4	8HR	
25FP22	14BE	23VANP22, 25FP22A
25FP22A	14BE	23VANP22, 25FP22
25GP22A	14BE	23VABP22, 23VALP22, 23VANP22, 23VARP22, 25ABP22, 25ANP22, 25BAP22, 25GP22
25HP4	8HR	
25JP4	8HR	
25KP4	8HR	25LP4 ¹
25LP4	8HR	25KP4 ¹
25SP22	14BE	23VBHP22
25TP4	8HR	
25VABP22	14BE	25VADP22, 25VAJP22, 25VALP22 ¹ , 25VAMP22, 25VATP22, 25VBMP22, 25VBXP22, 25VCGP22,

Tube Type	Basing	Replacement
		25VDAP22, 25VDEP22, 25VDJP22, 25VDXP22
25VACP22	14BE	25VAFP22, 25VAQP22, 25VBQP22, 25VBWP22, 25VBZP22, 25VCBP22, 25VCEP22, 25VCKP22, 25VCUP22, 25VCWP22, 25VCZP22, 25VDAP22, 25VDRP22, 25VDSP22, 25VDXP22, 25VEHP22, 25VEXP22
25VADP22	14BE	25VABP22, 25VALP22 ¹ , 25VATP22, 25VBMP22, 25VBXP22, 25VCGP22, 25VCKP22, 25VDAP22, 25VDEP22, 25VDJP22,
25VAEP22	14BE	25VABP22, 25VADP22, 25VALP22 ¹ , 25VBXP22, 25VCGP22, 25VCKP22, 25VDAP22, 25VDEP22, 25VDJP22, 25VDXP22
25VAFP22	14BE	25VABP22, 25VACP22, 25VAEP22, 25VAWP22, 25VBUP22, 25VBWP22, 25VCBP22, 25VCEP22, 25VCKP22, 25VCUP22, 25VCZP22, 25VDAP22,

Tube Type	Basing	Replacement	Tube Type	Basing	Replacement
		25VDRP22, 25VDXP22, 25VEHP22, 25VEXP22			25VDAP22, 25VDEP22, 25VDJP22, 25VDXP22
25VAGP22	14BE	25VBEP22, 25VBYP22, 25VCBP22, 25VCXP22, 25VDFP22, 26HP22	25VAUP22	14BE	25VBAP22
			25VAWP22	14BE	25VACP22, 25VAFP22, 25VAQP22, 25VBQP22, 25VBZP22, 25VCBP22, 25VCUP22, 25VCWP22, 25VDSP22, 25VEDP22, 25VEHP22
25VAJP22	14BE	25VABP22, 25VALP22, 25VCGP22, 25VCKP22	25VAXP22	14BE	25VBCP22, 25VSCP22, 25VDGP22, 25VDHP22, 26EP22
25VAKP22	14BE	25VALP22, 25VBLP22, 25VCGP22, 25VCKP22 ¹			25VZP22
25VALP22	14BE	25VABP22 ¹ , 25VADP22 ¹ , 25VBMP22 ¹ , 25VCGP22 ¹ , 25VCKP22 ¹	25VAZP22	14BE	25VBGP22, 25VBRP22, 25VCBP22 ¹ , 25VCHP22 ¹ , 25VCRP22 ¹
25VAMP22	14BE	25VABP22, 25VALP22 ¹ , 25VATP22, 25VBXP22, 25VCKP22, 25VDAP22, 25VDEP22, 25VDJP22, 25VDXP22	25VBAP22	14BE	25VAUP22
			25VBCP22	14BE	25VAXP22, 25VSCP22, 25VDGP22, 25VDHP22
25VAQP22	14BE	25VABP22, 25VACP22, 25VAEP22, 25VAWP22, 25VBUP22, 25VCBP22, 25VCEP22, 25VCKP22, 25VCUP22, 25VCZP22, 25VDAP22, 25VDRP22, 25VEDP22, 25VEHP22, 25VEXP22	25VBDP22	14BE	
			25VBEP22	14BE	25VAGP22, 25VBTP22, 25VBYP22, 25VCDP22, 25VCTP22, 25VCXP22, 25VDFP22
25VARP22	14BE	25VASP22	25VBGP22	14BE	25VAZP22, 25VBRP22, 25VCBP22 ¹ , 25VCFP22, 25VCHP22 ¹ , 25VCRP22 ¹ , 25VCWP22 ¹
25VASP22	14BE	25VARP22	25VBJP22	14BE	25VAXP22, 25VBEP22, 25VDHP22
25VATP22	14BE	25VADP22, 25VAJP22, 25VAMP22, 25VBXP22, 25VCGP22, 25VCKP22	25VBKP22	14BE	25VAGP22, 25VBEP22, 25VBYP22 ¹ , 25VCDP22, 25VCTP22 ¹ , 25VCXP22, 25VDHP22

Tube Type	Basing	Replacement	Tube Type	Basing	Replacement
25VBLP22	14BE	25VAEP22, 25VAKP22, 25VALP22, 25VCKP22 ¹ , 25VEXP22			25VCNP22, 25VCUP22, 25VCWP22, 25VDCP22, 25VDRP22, 25VEBP22, 25VEDP22, 25VEHP22, 25VEXP22, 26DP22
25VBMP22	14BE	25VABP22, 25VADP22, 25VALP22 ¹ , 25VCKP22, 25VDAP22, 25VDEP22, 25VDXP22	25VCBP22	14BE	25VAWP22, 25VAZP22 ¹ , 25VBGP22, 25VBNP22, 25VBRP22, 25VBWP22, 25VCEP22, 25VCFP22, 25VCRP22, 25VCUP22, 25VCYP22, 25VEXP22
25VBNP22	14BE	25VCNP22, 25VEBP22			
25VBQP22	14BE	25VAWP22, 25VBWP22, 25VCFP22, 25VCNP22, 25VCUP22, 25VCZP22, 25VEBP22, 25VEDP22	25VCDP22	14BE	25BYP22, 25CMP22, 25VCTP22
25VBRP22	14BE	25VCBP22 ¹ , 25VCFP22 ¹ , 25VCHP22 ¹ , 25VCRP22 ¹ , 25VCYP22 ¹	25VCEP22	14BE	25VAFP22, 25VAQP22, 25VBQP22, 25VBZP22, 25VBP22, 25VCP22, 25VCUP22, 25VCWP22, 25VCZP22, 25VDRP22, 25VDSP22, 25VEDP22, 25VEHP22, 25VEXP22
25VBSP22	14BE				
25VBTP22	14BE	25VBYP22, 25VCDP22, 25VDFP22	25VCFP22	14BE	25VBNP22, 25VCBP22, 25VCUP22, 25VCWP22, 25VCZP22, 25VDRP22, 25VESP22, 25VEDP22, 25VEHP22, 25VEXP22
25VBUP22	14BE	25VEXP22			
25VBWP22	14BE	25VACP22, 25VAFP22, 25VAQP22, 25VBQP22, 25VBZP22, 25VCBP22, 25VCEP22, 25VCUP22, 25VCWP22, 25VCZP22, 25VDRP22, 25VEAP22, 25VEDP22, 25VEXP22	25VCGP22	14BE	25VALP22 ¹ , 25VCKP22
25VBXP22	14BE	25VATP22, 25VDJP22	25VCHP22	14BE	25VAZP22 ¹ , 25VBGP22 ¹ , 25VBNP22, 25VBRP22 ¹ , 25VCBP22, 25VCRP22, 25VCYP22, 25EBP22
25VBYP22	14BE	25VCDP22, 25VCMP22, 25VCTP22	25VCJP22	14BE	
25VBZP22	14BE	25VAWP22, 25VBQP22, 25VBWP22, 285VCBP22, 25VCEP22,	25VCKP22	14BE	25VATP22,

Tube Type	Basing	Replacement	Tube Type	Basing	Replacement
		25VDAP22, 25VDEP22, 25VDKP22, 25VDXP22			25VCZP22, 25VDCP22, 25VDRP22, 25VEBP22, 25VEDP22, 25VEHP22, 25VEXP22, 26DP22, 26KP22
25VCMP22	14BE	25VBYP22, 25VCDP22, 25VCTP22, 25VDFP22	25VCXP22	14BE	25VCTP22, 25VCZP22, 25VDAP22, 25VDXP22
25VCNP22	14BE	25VACP22, 25VCZP22, 25VDAP22, 25VDXP22, 25VEBP22	25VCYP22	14BE	25VBNP22, 25VBRP22 ¹ , 25VCBP22, 25VCFP22, 25VCHP22, 25VCRP22, 25VEBP22
25CQP22	14BE	25VAZP22 ¹ , 25VBGP22 ¹ , 25VBNP22, 25VBRP22 ¹ , 25VCBP22, 25VCFP22, 25VCUP22, 25VEBP22	25VCZP22	14BE	25VACP22, 25VBWP22, 25VCNP22, 25VDCP22, 25VDMP22, 25VDRP22, 25VDXP22, 25VEBP22, 25VEDP22, 25VEHP22, 25VEXP22, 25VFAP22, 25VFGP22
25VCRP22	14BE	25VAZP22 ¹ , 25VBNP22, 25VBRP22 ¹ , 25VCBP22, 25VCFP22 ¹ , 25VCHP22, 25VCYP22, 25VEBP22	25VDAP22	14BE	25VCKP22, 25VDEP22, 25VDKP22, 25VDNP22, 25VDXP22
25VCSP22	14BE	25VAXP22, 25VBCP22, 25VDHP22, 26EP22	25VDBP22	14BE	25VDMP22, 25VDRP22, 25VEHP22, 25VEXP22, 25VFAP22
25VCTP22	14BE	25VXCP22	25VDCP22	14BE	25CZP22, 25VCUP22, 25VEBP22
25VCUP22	14BE	25VCNP22, 25VCZP22, 25VDCP22, 25VEBP22, 25VEDP22	25VDEP22	14BE	25VCKP22, 25VDAP22, 25VDXP22
25VCUP22	14BE	25VAWP22, 25VBWP22, 25VCEP22, 25VCNP22, 25VCZP22, 25VDCP22, 25VDRP22, 25VEBP22, 25VEDP22, 25VEHP22, 25VEXP22, 25VFAP22	25VDFP22	14BE	25VBEP22, 25VCMP22, 25VCTP22, 25VCXP22
25VCWP22	14BE	25VAWP22, 25VBZP22, 25VCEP22,	25VDGP22	14BE	25VBCP22, 26EP22
			25VDHP22	14BE	

Tube Type	Basing	Replacement	Tube Type	Basing	Replacement
25VDJP22	14BE	25VATP22, 25VBXP22	25VEBP22	14BE	25VCZP22, 25VDMP22
25VDKP22	14BE	25VCKP22, 25VDAP22, 25VDXP22	25VECP22	14BE	
25VDMP22	14BE	25VCZP22, 25VDBP22, 25VDNP22, 25VDRP22, 25VDSF22, 25VDWP22, 25VEDP22, 25VEHP22, 25VEXP22, 25VFAP22	25VEDP22	14BE	25VATP22, 25VAWP22, 25VBWP22, 25VCEP22, 25VCUP22, 25VCZP22, 25VDMP22, 25VDRP22, 25VDSF22, 25VEHP22, 25VEXP22, 25VFAP22
25VDNP22	14BE	25VDMP22, 25VDRP22, 25VEXP22, 25VFAP22	25VEHP22	14BE	25VAWP22, 25VBWP22, 25VCEP22, 25VDBP22, 25VDMP22, 25VDRP22, 25VEDP22, 25VEXP22, 25VFAP22
25VDRP22	14BE	25VCZP22, 25VDBP22, 25VDMP22, 25VDNP22, 25VDSF22, 25VDWP22, 25VEDP22, 25VEHP22, 25VEXP22, 25VFAP22	25VEKP22	14BP	
25VDSF22	14BE	25VAWP22, 25VBWP22, 25VCEP22, 25VCNP22, 25VCUP22, 25VCZP22, 25VDCP22, 25VDRP22, 25VEBP22, 25VEDP22, 25VEXP22	25VEMP22	13K	25VEQP22, 25VESP22, 25VETP22, 25VEWP22, 25VFBP22
25VDWP22	14BE	25VDMP22, 25VDRP22, 25VEXP22, 25VFAP22	25VEQP22	13K	25VEMP22, 25VESP22, 25VEWP22, 25VFBP22
25VDXP22	14BE	25VATP22, 25VCKP22, 25VDAP22, 25VDBP22, 25VDEP22, 25VDKP22, 25VDMP22, 25VDNP22, 25VEDP22	25VERP22	14BE	
			25VESP22	13K	25VEMP22, 25VEQP22, 25VETP22, 25VEWP22, 25VFBP22
			25VETP22	13K	25VEMP22, 25VEQP22, 25VESP22, 25VEWP22, 25VFBP22
			25VEUP22	13K	
			25VEWP22	13K	25VEMP22, 25VEQP22, 25VESP22, 25VETP22, 25VFBP22, 25VFKP22
			25VEXP22	14BE	25VCUP22, 25VCZP22,

Tube Type	Basing	Replacement
		25VDBP22, 25VDMP22, 25VDNP22, 25VDRP22, 25VDSP22, 25VDWP22, 25VEDP22, 25VEHP22, 25VFAP22
25VEYP22	13L	
25VEZP22	14BE	
25VFAP22	14BE	25VCUP22, 25VCZP22, 25VDBP22, 25VDMP22, 25VDNP22, 25VDRP22, 25VDSP22, 25VDWP22, 25VEDP22, 25VEHP22, 25VEXP22
25VFBP22	13K	25VEMP22, 25VEQP22, 25VESP22, 25VETP22, 25VEWP22
25VFEP22	13L	
25VFGP22	14BE	25VBWP22, 25VCNP22, 25VCZP22, 25VDCP22, 25VDRP22, 25VEBP22, 25VEDP22, 25VEHP22, 25VEXP22
25VFJP22	13L	
25VFKP22	13K	25VEMP22, 25VESP22, 25VETP22, 25VEWP22, 25VFBP22
25VFMP22	13K	
25VFNP22	13L	
25VFSP22	13L	
25VFZP22	13L	
25VFTP22	13K	
25VGAP22	13L	
25WP22	14BE	23VABP22, 23VALP22, 23VANP22, 23VARP22, 25ABP22, 25ANP22

Tube Type	Basing	Replacement
25XP22	14BE	23VAHP22, 23VALP22, 23VANP22, 23VARP22, 25ABP22, 25BGP22, 25GP22A
25YP22	14BE	25BP22, A
25ZP22	14BE	23VALP22, 23VANP22, 23VARP22
26AP22	14BE	25VABP22, 25VCKP22, 25VDXP22
26DP22	14BE	25VBZP22, 25VCUP22, 25VCWP22, 25VCZP22, 25VDCP22
26EP22	14BE	25VAXP22, 25VCS22, 25VDGP22, 25VDHP22
26FP22	14BE	25VABP22, 25VAEP22, 25VBZP22, 25VCDP22, 25VCUP22, 25VCZP22, 25VDXP22, 26DP22
26GP22	14BE	25VBZP22, 25VCUP22, 25VCWP22, 25VDCP22, 26DP22
26HP22	14BE	25VAGP22, 25VBEP22, 25VBKP22, 25VBYP22, 25VCTP22, 25VXP22, 25VDFP22
26KP22	14BE	25VBZP22, 25VCUP22, 25VCWP22, 25VCZP22, 26DP22
27ABP4	8HR	27ADP4, 27AGP4, 27AFP4 ¹
27ACP4	12L	27YP4
27ADP4	8HR	27AFP4 ¹
27AEP4	8HR	27ZP4 ¹
27AFP4	8HR	27ADP4 ¹
27AGP4	8HR	27ABP4, 27ADP4, 27AFP4 ¹
27AP4	12M	

Tube Type	Basing	Replacement
27EP4	12D	27GP4
27GP4	12D	27EP4
27LP4	12N	
27MP4	12D	
27NP4	12N	27RP4
27RP4	12N	27NP4, 27RP4*
27RP4A	12N	27NP4, 27RP4*
27SP4	12L	27UP4*, 27VP4*, 27XP4*
27UP4	12L	27SP4, 27VP4*, 27XP4*
27VP4	12L	27XP4
27WP4	12AJ	
27XP4	12L	
27YP4	12L	27ACP4
27ZP4	8HR	27AEP4 ¹
30BP4	12D	
230ACB4	7GR	9AGP4, 9YP4
230RB4	7GR	9WP4
230TB4	7GR	9WP4
230ZB4	7GR	9YP4
310AVB4	7GR	12CNP4
320GB22	14BH	12DCP22
370AB22	14BH	14VADP22, 15NP22
370CB22	14BH	14VAMP22, 15AEP22, 15NP22
370CR22	14BH	15NP22
400AFB4A	8HR	16BG4
400CVB22	14BH	16CYP22
440ACB4	8HR	16VAJP4, 17ESP4
440HB4	8HR	17EMP4, 17ESP4
440VB4	8HR	17EWP4
470AB4	8HR	19AVP4
470ACB4	8HR	19AYP4
470CB4	8HR	19AVP4
470DMB22	14BH	17VAWP22
490AB22	14BE	18VAHP22 ² , 19EXP22 ² , 19GYP22 ²
490ACB22	14BE	18VAHP22 ² , 19EXP22 ² , 19GYP22 ²
490ADB22	14BE	18VAHP22 ² , 19EXP22 ² , 19GYP22 ²
490AEB22	14BE	18VAHP22 ² , 19EYP22 ² , 19GWP22 ²
490AFB22	14BE	18VAHP22 ² , 19EYP22 ² , 19GWP22 ²
490AGB22	14BE	18VAHP22 ² , 19EYP22 ² , 19GWP22 ²

Tube Type	Basing	Replacement
490AHB22	14BE	18VAHP22, 19EXP22, 19GYP22 ²
490AHB22A	14BE	18VAHP22, 19EXP22 ² , 19GVP22 ²
490AJB22	14BE	18VAHP22, 19EYP22, 19GWP22
490AJB22A	14BE	18VAHP22, 19EYP22, 19GWP22
490AKB22	14BE	18VAHP22 ² , 19EYP22 ² , 19GVP22 ²
490ALB22	14BE	18VAHP22 ² , 19EYP22 ² , 19GVP22 ²
490AMB22	14BE	18VAHP22 ² , 18VAMP22, 19EXP22 ² , 19GVP22 ²
490ANB22	14BE	18VAHP22 ² , 19EXP22 ² , 19GVP22 ²
490ARB22	14BE	18VAHP22 ² , 19EYP22 ² , 19GWP22 ²
490ASB22	14BE	18VAHP22, 19EYP22 ² , 19GWP22
490BAB22	14BE	18VAHP22, 19GVP22, 19GXP22
490BCB22	14BE	18VAHP22, 19GWP22, 19EYP22
490BDB22	14BE	18VAHP22, 19GWP22 ² , 19GYP22 ²
490BGB22	14BE	18VAHP22, 19GVP22, 19EP22
490BHB22	14BE	18VAHP22, 19EXP22, 19GVP22
490BKB22	14BE	18VAKP22
490BNB22	14BH	19JWP22
490BRB22	14BE	18VAHP22, 19EYP22, 19GWP22
490BUB22	14BE	18VAKP22
490BVB22	14BH	19JWP22
490BXB22	14BH	19JWP22
490CB22	14BE	19EXP22 ² , 19GVP22 ²
490CHB22	14BE	18VAHP22
490CUB22	14BE	18VAHP22
490DB22	14BE	18VAHP22, 19EXP22 ² , 19GVP22 ²
490EB22	14BE	18VAHP22 ² , 19EXP22 ² , 19GVP22 ²
490EB22A	14BE	18VAHP22 ² ,

Tube Type	Basing	Replacement	Tube Type	Basing	Replacement
		19EXP22 ² , 19GVP22 ²	490TB22	14BE	18VAHP22, 19EYP22 ² , 19GWP22 ²
490FB22	14BE	18VAHP22 ² , 19EXP22 ² , 19GVP22 ²	490UB22	14BE	18VAHP22 ² , 19EXP22 ² , 19GVP22 ²
490GB22	14BE	18VAHP22 ² , 19EXP22 ² , 19GVP22 ²	490VB22	14BE	18VAHP22 ² , 19EXP22 ² , 19GVP22 ²
490HB22	14BE	18VAHP22 ² , 19EXP22, 19GVP22	490WB22	14BE	18VAHP22 ² , 19EYP22 ² , 19GWP22 ²
490JB22	14BE	18VAHP22 ² , 19EXP22, 19GVP22	490XB22	14BE	18VAHP22 ² , 19EYP22 ² , 19GWP22 ²
490JB22A	14BE	18VAHP22 ² , 19EXP22, 19GVP22	490YB22	14BE	18VAHP22 ² , 19EYP22 ² , 19GWP22 ²
490KB22	14BE	18VAHP22 ² , 19EXP22 ² , 19GVP22	490ZB22	14BE	18VAHP22 ² , 19EYP22 ² , 19GWP22 ²
490KB22A	14BE	18VAHP22 ² , 19EXP22 ² , 19GVP22 ²	500KB4	8HR	20TP4
490LB22	14BE	18VAHP22 ² , 19EXP22 ² , 19GVP22 ²	510ELB22	14BE	19VBRP22
490MB22	14BE	18VAHP22 ² , 19EXP22 ² , 19GVP22 ²	510ERB22	14BE	19VBRP22
490NB22	14BE	18VAHP22, 19EYP22 ² , 19GWP22 ²	A31-265W	7GR	12VAMP4
490RB22	14BE	18VAHP22, 19EYP22 ² , 19GWP22 ²	A44-18W	8HR	19VCUP4
490SB22	14BE	18VAHP22, 19EYP22 ² , 19GWP22 ²	A49-12X	14BE	18VAHP22, 19GWP22
			A55-13X	14BE	20VAGP22, 22JP22
			A66-501X	14BQ	24VABP22
			AW43-80	12AJ	17BTP4
			AW43-88	8HR	17CVP4
			AW53-80	12AJ	21CLP4
			AW53-88	8HR	21DKP4

LOW E_{g2}

Type	Voltage	Type	Voltage	Type	Voltage	Type	Voltage
8DP4	150V	12CNP4	200V	15VANP4	170V	17CXP4	50V
9ACP4	100V	12CQP4	40V	16ATP4	50V	17DQP4	50V
9AGP4	100V	12CSP4	100V	16AVP4	35V	17EHP4	50V
9AMP4	130V	12CTP4	100V	16AWP4	150V	17ELP4	50V
9QP4, A	200V	12CUP4	50V	16AZP4	150V	17EMP4	50V
9TP4	50V	12CVP4	100V	16BAP4	50V	17EWP4	30V
9UP4	100V	12CWP4	140V	16BCP4	35V	18VALP22	100V
9VADP4	100V	12CXP4	100V	16BEP4	50V	18VBGP22	100V
9VAHP4	130V	12CZP4	100V	16BNP4	50V	19ACP4	50V
9VAJP4	90V	12DEP4	100V	16BSP4	50V	19AEP4	100V
9VAKP4	130V	12DFP4	200V	16BUP4	100V	19AJP4	50V
9VALP4	130V	12DGP4	50V	16BXP4	35V	19BDP4	50V
9VARP4	90V	12DHP4	50V	16BYP4	100V	19BNP4	50V
9VASP4	120V	12DKP4	140V	16CFP4	140V	19BQP4	50V
9VATP4	90V	12DQP4	50V	16CHP4	30V	19CDP4	50V
9VAUP4	120V	12VABP4	50V	16CNP4	100V	19CFP4	50V
9VAWP4	90V	12VAEP4	100V	16CQP4	140V	19CHP4	50V
9VAZP4	100V	12VAFP4	130V	16CWP4	100V	19CKP4	50V
9VP4	100V	12VAMP4	130V	16CWP4A	140V	19CLP4	35V
9WP4	100V	12VAWP4	130V	16CXP4	100V	19CMP4	30V
9YP4	100V	12VAXP4	150V	16DCP4A	140V	19CQP4	50V
10ARP4	140V	12VAZP4	100V	16VABP4	50V	19CUP4	65V
10ASP4	100V	12VBCP4	140V	16VADP4	130V	19CVP4	50V
10AVP4	90V	12VBEP4	140V	16VAKP22	100V	19CXP4	45V
10VACP4	100V	12VBF4	130V	16VAQP4	50V	19DBP4	40V
10VAEP4	100V	12VBGP4	130V	16VARP4	50V	19DFP4	65V
11AP4	150V	12VBHP4	130V	16VBJP4	130V	19DHP4	50V
11BP4	150V	12VBLP4	120V	16VBKP4	130V	19DLP4	50V
11DP4	50V	12VBM4	110V	16VBNP4	130V	19DSP4	50V
11GP4	135V	12VBNP4	90V	16VBQP4	135V	19DUP4	50V
11JP4	50V	12VBQP4	130V	16VBRP4	130V	19DVP4	150V
11KP4	50V	12VBRP4	130V	16VBTP4	130V	19DYP4	50V
11HP4	150V	12VBWP4	140V	16VBWP4	130V	19DZP4	150V
11MP4	135V	12VBXP4	140V	16VBXP4	130V	19EAP4	50V
11QP4	100V	12VCAP4	130V	16VBYP4	130V	19ECP4	150V
11RP4	140V	12VCBP4	120V	16VBZP4	150V	19EFP4	50V
11UP4	140V	12CGP4	120V	16VCAP4	130V	19EGP4	50V
12BEP4	30V	12VCJP4	130V	16VCBP4	130V	19EJP4	30V
12BFP4	200V	12VCKP4	120V	16VCDP4	130V	19EK4	45V
12BGP4	50V	12VCLP4	120V	16VCEP4	130V	19ENP4	50V
12BKP4	50V	13AP4	50V	16VCFP4	130V	19ESP4	50V
12BLP4	30V	13DP4	50V	16VCGP4	50V	19ETP4	50V
12BMP4	140V	13VARP4	110V	16VCHP4	50V	19EZP4	45V
12BNP4	250V	13VASP4	100V	16VCJP4	130V	19FBP4	50V
12BQP4	50V	13VAZP4	130V	16VCRP4	130V	19FDP4	130V
12BRP4	30V	14ACP4	125V	16VCSP4	135V	19FEP4	30V
12BTP4	50V	14AEP4	110V	16VCWP4	130V	19FQP4	50V
12BUP4	50V	14AJP4	250V	16VCXP4	130V	19GHP4	50V
12BVP4	50V	14ARP4	50V	16VCYP4	150V	19GMP4	50V
12BWP4	35V	14AUP4	50V	16VCZP4	150V	19GQP4	50V
12BZP4	100V	14AWP4	50V	17BMP4	110V	19GTP4	50V
12CBP4	30V	14VARP4	130V	17BNP4	110V	19HAP4	50V
12CDP4	140V	15ADP4	50V	17CMP4	50V	19HGP4	150V
12CEP4	100V	15JP4	50V	17CNP4	50V	19VAHP4	130V
12CFP4	200V	15VAJP4	140V	17CRP4	50V	19VCLP4	50V

LOW E_{g2}

Type	Voltage	Type	Voltage	Type	Voltage	Type	Voltage
19VCMF4	50V	20RP4	50V	23AWP4	50V	23FWP4	50V
19VCAP22	100V	20SP4	30V	23BGP4	50V	23GHP4	200V
19VEMP4	150V	20YP4	50V	23BHP4	50V	23GJP4	50V
19VERP4	135V	20ZP4	50V	23BJP4	50V	23GRP4	30V
19VFDP4	130V	21CGP4	110V	23BKP4	50V	23GUP4	30V
19VFEP4	130V	21CHP4	110V	23BLP4	50V	23GVP4	45V
19VFGP4	150V	21CXP4	50V	23DAP4	50V	23GWP4	50V
19VFYP4	50V	21DSP4	50V	23DBP4	50V	23GYP4	50V
19VFZP4	50V	21FMP4	50V	23DCP4	50V	23HAP4	50V
19VFTP4	130V	21FUP4	50V	23DLP4	50V	23HKP4	150V
19VGAP4	50V	21FYP4	50V	23DNP4	35V	23HRP4	30V
19VGSF4	135V	21GAP4	30V	23DSP4	65V	23HUP4, A	30V
19VGUP4	130V	21GBP4	50V	23DWP4	200V	23JLP4	30V
19VGXP4	130V	21GEP4	50V	23ECP4	35V	23JRP4	30V
19VGYF4	130V	21GHP4	30V	23EFP4	50V	23JFP4	50V
19VHEP4	130V	21GKP4	50V	23ENP4	50V	23JGP4	30V
19VHGFP4	130V	21GSP4	50V	23EP4	50V	23JP4	50V
19VHUP4	150V	21GTP4	50V	23EYP4	35V	23NP4	50V
19VJAP4	130V	22VARP4	50V	23EZF4	50V	23ZP4	50V
19VJGP4	150V	22VASF4	50V	23FBP4	50V	24AJP4	50V
19VUP4	130V	22VBAP4	150V	23FCP4	50V	24ATP4	50V
20ABP4	50V	22VBCP4	140V	23FDP4	50V	24BAP4	50V
20ADP4	35V	22VBDP4	150V	23FEP4	50V	25HP4	50V
20AHP4	150V	23ANP4	50V	23FHP4	50V	25VBZP22	200V
20AZP4	30V	23ATP4	50V	23FRP4	50V		

ODD FILAMENT VOLTAGES

5VACP4	12.0V	10AFP4	11.0V	12VBQP	11.0V	16VCAP4	11.0V
5VADP4	12.0V	10VAGP4	11.0V	12VBRP4	11.0V	16VCBP4	11.0V
9ACP4	12.0V	11NP4	11.0V	12VBSP4	11.0V	16VCDP4	11.0V
9AGP4	12.0V	11QP4	12.6V	12VBWP4	12.0V	16VCHP4	4.2V
9QP4, A	4.7V	11WP22	13.8V	12VCAP4	11.0V	16VCXP4	11.0V
9UP4	12.6V	12AP4	2.5V	12VCBP4	11.0V	17CDP4	8.4V
9VADP4	12.0V	12BFP4	4.2V	12VCFP4	11.0V	17DAP4	2.68V
9VAHP4	12.0V	12BJP4	4.2V	12VCGP4	11.0V	17DEP4	2.35V
9VAJP4	11.0V	12BRP4	12.6V	12VCJP4	11.0V	17DRP4	2.68V
9VAKP4	11.0V	12BTP4	12.6V	12VCKP4	11.0V	19ABP4	2.68V
9VALP4	11.0V	12BVP4	12.6V	12VCLP4	11.0V	19AEP4	12.6V
9VANP4	11.0V	12BZP4	12.0V	13VAJP4	11.0V	19BUP4	2.2V
9VARP4	11.0V	12CEP4	12.6V	13VANP4	11.0V	19FTP4	11.0V
9VASP4	11.0V	12CFP4	4.2V	13VAQP4	12.0V	19FYP4	4.2V
9VATP4	11.0V	12CNP4	4.2V	13VARP4	12.0V	19VDAP4	4.2V
9VAUP4	11.0V	12CP4	2.5V	13VASP4	11.0V	19VGUP4	11.0V
9VAWP4	11.0V	12CUP4	4.2V	13VAZP4	11.0V	19VJAP4	11.0V
9VAZP4	12.0V	12CVP4	12.0V	14ATP4	8.4V	21EAP4	2.35V
9VP4	12.6V	12CXP4	12.6V	15VANP, A	11.0V	21EVP4	2.68V
9WP4	12.0V	12CZP4	12.6V	16CNP4	12.0V	22VBCP4	11.0V
9XP4	12.6V	12VBFP4	12.0V	16CXP4	12.0V	23BZP4	8.4V
9YP4	12.6V	12VBGP4	12.0V	16VADP4	11.0V	23CAP4	8.4V
10ADP4	8.4V	12VBLY4	12.0V	16VBWP4	11.0V	23EHP4	8.4V
10AVP4	12.0V	12VBMP	12.0V	16VBXP4	11.0V	24AVP4	2.35V
10VAEP4	11.0V	12VBNP4	11.0V	16VBYP4	11.0V		

SECTION 3

Industrial Substitutes for Receiving Tubes

In this section are those American receiving tubes that can be replaced by industrial types. The receiving tubes are listed in the left-hand column and their industrial substitutes in the right-hand column. Each tube listed has one or more substitutes. If a tube type does not appear in the listing, an industrial substitute is not recommended.

This substitution list should be used in one direction only—that is, an industrial type to replace a standard type. If the equipment is already designed for an industrial tube, a standard receiving tube will not usually work as efficiently or as long as the original.

For the basing diagram of tubes in this section, refer to Section 1 to obtain the code and then to Section 7 for the basing diagram.

Substitutes marked with an asterisk (*) should be used only when the filament of the original tube is wired in a parallel circuit.

Tube Type	Replacement
0A2	0A2WA, 6073, 6626
0A4G	1267, WTT132
0B2	0B2WA, 6074, 6627
0C3	0C3W, VR105W, WT269
0D3	0D3W, VR150W, WT294
0Z4	1003, WTT114
0Z4A	1003
1F4	2101
1R4	1294
1R5	1R5WA
1T4	1T4WA
1U4	1U4WA, 5910
1U5	1U5WA
2A3	2A3W, 5930
2A6	1659
2X2	2B21, 879
2X2A	2B21
3B4	3B4WA
3B7	1291
3D6	1299
3Q5GT	WT389
3V4	3V4WA
5R4GY	5R4WGA, WGB, WGY, WGYA, 274B
5U4G	5U4WG, WGB, 5931, WTT135
5V4G	274
5Y3GT	5Y3WGT, WGTA, WGTB, 6087, 6106, 6853, WTT202
5Z3	1275, WT270X
5Z4	6087
6AB4	6664
6AB7	1853
6AC7	6AC7W, 6AC7WA, 6AC7Y, 1852, 6134
6AG5	6AG5WA, 6186
6AG7	6AG7W
6AH6	6AH6WA, 6485
6AJ5	7755
6AK5	6AK5W, WA, WB, 403A, 1220, 5654, 5591*, 6096, 6968
6AL5	6AL5W, 5726, 6058, 6097, 6663, 7631, D27
6AM5	6516
6AM6	6064, 7498
6AN5	6AN5WA
6AQ5	6AQ5W, 6005, 6095, 6669
6AR6	6AR6WA, 6098, 6384, 7756
6AS6	6AS6W, 409A, 5725, 6187*, 7752
6AS7G	6AS7GYB, 6080WA, 6080WB, 6520

Tube Type	Replacement
6AT6	6066
6AU6	6AU6WA, 6AU6WB, 6136
6AV6	6066
6BA5	5638
6BA6	6BA6W, 6BA6WA, 5749, 6660, 7496
6BE6	6BE6W, 5750, 7502*
6BH6	6265*, 6661, 7693
6BJ6	6662, 7694
6BL8	7643*
6BQ5	7320
6BR7	6059
6BW6	6061
6C4	6C4W, 6C4WA, 6100, 6135*
6C5	WT390
6C6	1221, 1223, 7700, WTT131
6CB6	6676, 7732
6CH6	6132, 7499
6CL6	2014, 6197, 6297, 6677
6CQ6	6065
6CW4	7895
6CY5	7717, 8113
6DB6	6954
6DJ8	6922*
6DK6	8136
6DS4	7895
6F6	1611, 1621
6G6G	WTT130
6GE8	7734
6H6	6H6WGT, WTT103, WT261
6J4	6J4W, WA, 8532
6J5	6J5WGT, WTT129
6J6	6J6W, 6J6WA, 5964, 6030, 6045*, 6099, 6101, 6927*
6J7	1223, 1620, 7000
6K5	6K5WGT
6K7	5732
6K8	WTT128
6L6	6L6W, WA, WGA, WGB, WGT, 1622, 5932, WT6
6L7	1612, 1620
6N7	5694
6N7GT	WTT125
6Q5G	884, WT245
6Q7	6118
6SA7	6SA7WGT, 5961
6SC7	1655
6SG7	6006
6SJ7	6SJ7W, 6SJ7WGT, 6SJ7WGTY, 5693, WTT122
6SK7	6SK7W, 6SK7WA, 6SK7WGT, 6137
6SL7	6SL7W, 6SL7WGT, 5691*, 6113

Tube Type	Replacement
6SN7	6SN7W, 6SN7WGT, 6SN7WGTA, 5692
6SQ7	6SQ7W
6SU7	6SU7WGT, 6188
6U6	6U6WGT
6U8	1252, 6678, 7731
6V6	5871, 7184, WTT123
6X4	6X4W, WA, 6063, 6202, WTT100
6X5	6X5W, WGT, 5852*, WT308
6Y7G	1635
6Z4	WT263
7A6	5679
7AB7	1204
7AJ7	1273
7C4	1203, 1203A
7E5	1201
7F8	7F8W
7G7	1232
7G8	1206
7K7	WTT124
7Y4	1274*
12A6	12A6GTY, 5659
12AT7	12AT7WA, 12AT7WB, 6060, 6201, 6671, 6679, 7492, 7728, A2900
12AU7	12AU7W, WA, 5814*, A, 5814WA*, 5963, 6067, 6189, 6680, 7316, 7489, 7730

Tube Type	Replacement
12AX7	12AX7WA, 5751*, 5751WA*, 6057, 6681, 7494, 7729
12AY7	6072*
12BH7	6913
12BR7	8447
12BY7	7733, 8448
12C8	1664, 5660
12J5	12J5WGT
12L6GT	1632*
12L8GT	1644
12SC7	1634
12SK7	5661
12SL7GT	2C52*
12Z3	H250
14C7	1280
14GT8	7724
25B6G	5824
25L6GT	6046
25W6GT	6046
25Z6	25Z6WGT
26E6G	26E6WG, 26E6WGB
26Z5	26Z5W
28D7	28D7W, 1238
50B5	WTT126
80	213B, RE1, WT270
81	RE2
83	WT301
117N7GT	WTT115
117Z6GT	WT377
807	807W, 5933, WA, 8018

SECTION 4

Communications and Special-Purpose Tubes

This section lists communications and special-purpose tubes. The tubes to be replaced are listed in the left-hand column and the recommended substitutes in the right-hand column.

The listing of a certain tube type as a substitute for another one does not necessarily mean the reverse is true. Always refer to the left-hand column for the original tube number. Then find the substitute in the right-hand column.

Where the basing code is available, it is given in the second column. Use this number and refer to Section 7 for the pin connections.

Substitutes marked with an asterisk (*) should be used only when the filament of the original tube is wired in a parallel circuit.



Tube Type	Basing	Replacement	Tube Type	Basing	Replacement
RE1	4C	80	6C4WA	6BG	6100, 6135*
2-15A/15R		4B30, 15R, 8022	6J6W	7BF	6J6WA, 6099, 6101
2A3W	4D	5930	6J6WA	7BF	6099, 6101
2B21	4AB	2X2A	6L6W	7AC	6L6WA, 6L6WGA, 6L6WGB, 5932
2C21	7BH	1642	6L6WA	7AC	6L6WGA, 6L6WGB, 5932
2C22	4AM	7193	6L6WGA	7AC	6L6WGB, 5932
2C51	8CJ	2C51W*, 396A, 1219, 5670*, 5670WA*, 6185, 6385*	6L6WGB	7AC	6L6WGB, 5932
2C51W	8CJ	1219, 5670, 5670WA, 6185	6L6WGT	7AC	5932
2D21	7BN	2D21W, 5727	6Q5G	6Q	884, 884W
2D21W	7BN	5727	6SJ7W	8N	6SJ7WGT, 6SJ7WGTY
2RA3		213, 213A	6SJ7WGT	8N	6SJ7W, 6SJ7WGTY
2RA5		205	6SJ7WGTY	8N	6SJ7W, 6SJ7WGT
2RA6		206, 619	6SK7W	8N	6SK7WA, 6SK7WGT
2RA15		203, 215	6SK7WA	8N	6SK7W, 6SK7WGT
RE2		81	6SK7WGT	8N	6SK7W, 6SK7WA
EL3B	4CQ	6013	6SL7W	8BD	6SL7WGT, 6113
EL3C		4B24, 6484	6SL7WGT	8BD	6SL7W, 6113
4-125A	5BK	4D21, 4D21A, 6155	6SN7W	8BD	6SN7WGT, 6SN7WGTA
4-250A		4-250/5D22, 5D22, 6156	6SN7WGT	8BD	6SN7W, 6SN7WGTA
SN4		1D21, 631P1	6SN7WGTA	8BD	6SN7W, 6SN7WGT
5R4WGA	5T	5R4WGB, 5R4WGY, 5R4WGYA	6SU7WGT	8BD	6188
5R4WGB	5T	5R4WGYA	6X4W	5BS	6X4WA
5R4WGY	5T	5R4WGA, 5R4WGB, 5R4WGYA	6X5W	6S	6X5WGT
5R4WGYA	5T	5R4WGB	6X5WGT	6S	6X5W
5U4WG	5T	5U4WGB, 5931	EL6B		618, 618P, 5892
5U4WGB	5T	5931	WT6	7AC	6L6
5Y3WGT	5T	5Y3WGTA, 5Y3WGTB, 6087, 6106, 6853	12AT7WA	9A	6201
5Y3WGTA	5T	5Y3WGTB, 6087, 6106, 6853	12AT7WB	9A	6201
5Y3WGTB	5T	5Y3WGTA, 6087, 6106, 6853	12AU7WA	9A	6189
ELC5F14		6278	12AX7WA	9A	5721, 6057, 7494, 7729
6AC7W	8N	6AC7WA, 6134	D27	6BT	6AL5
6AC7WA	8N	6AC7W, 6134	RK28		803
6AG5WA	7BD	6186	31Z		1231Z
6AK5W	7BD	6AK5WB, 5654	RK31		830B
6AL5W	6BT	5726, 6097	TE36		6754
6AQ5W	7BZ	6005, 6095	RK39	5AW	807
6AR6WA	6BQ	6098	TE40	8N	6888
6AS6W	7CM	5725, 6187	HZ50	6G	12Z3
6AS7GYB	8BD	6080, 6080WA, 6080WB	RK57		805
6AU6WA	7BK	6AU6WB, 6136	RK58		838
6AU6WB	7BK	6136	T60		8005
6BA6W	7BK	5749	HY61	5AW	807
6BE6W	7CH	5750	WTT100	5BS	6X4
6C4W	6BG	6C4WA, 6100, 6135*	WTT102	5T	5Y3GT
			WTT103	7Q	6H6
			CK108	6F	77
			HY113		HY123
			WTT114	4R	024
			HY115		HY145

Tube Type	Basing	Replacement	Tube Type	Basing	Replacement
WTT115	8AV	117N7GT	WT210-0091	4V	0A4G
WTT117		5557	213B	4C	80
WTT118		105	UV216	4B	81
WTT119		172	UX216B	4B	81
WTT122	8N	6SJ7	WT245	6Q	884
HY123		HY113	WT246	6BS	2050
WTT123	7AC	6V6	H250	6F	6C6
WTT124	8BF	7K7	259A		259B
HF125		203H	259B		259A
HY125		HY155	WT261	7Q	6H6
WTT125	8B	6N7GT	WT263	5D	6Z4
WTT126	7BZ	50B5	264		864
WTT127		833A	WT269	4AJ	0C3
WTT128	8K	6K8	WT270	4C	80
WTT129	6Q	6J5GT	WT270X	5T	5Z3
WTT130	7S	6G6G	274	5L	5V4G
WTT131	6F	6C6	274B	5T	5R4GY
WTT132	4V	0A4G	WT294	4AJ	0D3
WTT135	5T	5U4G	WT301	4C	83
HY145		HY115	WT308	6S	6X5GT
WTT149		172	310A	6F	310B
VR150W	4AJ	0D3W	310B	6F	310A
HY155		HY125	5340	3Z	5960
WT210-0001	7BN	2D21	WT377	7Q	117Z6GT
WT210-0003	6Q	884	WT389	7AP	3Q5GT
WT210-0004	6BS	2050	WT390	6Q	6C5
WT210-0006	7Q	6H6	396A	8CJ	2C51, 2C51W*, 1219*, 5670*, 5670WA*, 6185, 6385*
WT210-0009	5D	6Z4			
WT210-0011	4AJ	0C3			
WT210-0012	4C	80			
WT210-0013	4C	5Z3	398A		5603
WT210-0018	4AJ	0D3	401A		5590
WT210-0019	4C	83	403A	7BD	6AK5
WT210-0021	6S	6X5	403B		5591
WT210-0025	7Q	117Z6GT	404A	9X	5847
WT210-0028	7AP	3Q5GT	408A	7BD	6028
WT210-0029	6Q	6C5	409A	7CM	6A56
WT210-0037	8AO	117L7/M7GT	412A		6754
WT210-0040	5BS	6X4	417A	9V	417B, 5842
WT210-0042	5T	5Y3GT	420A		5755
WT210-0048	5T	5U4G	421A	8BD	5998
WT210-0060	4R	0Z4	423A	9BY	6140
WT210-0062		5557	WT606	7BN	2D21
WT210-0069		5557	WL630	6BS	2050
WT210-0081	8N	6SJ7	WL630A	6BS	2050
WT210-0082	7AC	6V6	731A	7BD	6AK5
WT210-0083	8BF	7K7	807	5AW	807W, 807WA, RK39, HY61, 5933, 5933WA, 8018
WT210-0084	8B	6N7			
WT210-0085	7BZ	50B5			
WT210-0087	8K	6K8	807W	5AW	807WA, 5933, 5933WA
WT210-0088	6Q	6J5			
WT210-0089	7S	6G6G	807WA	5AW	807W, 5933, 5933WA
WT210-0090	6F	6C6	879	4AB	2X2


* Parallel-filament circuits.

Tube Type	Basing	Replacement	Tube Type	Basing	Replacement
884	6Q	884W, 6Q5G	1662	7BB	3A4
885	5A	2B4	1664	8E	12C8
932	4K	1229	1665	6BS	2050, 2050A, 2050W
CK1003	4R	0Z4A	1852	8N	6AC7
CK1009		CK1009A, BA	1853	8N	6AB7
C1106		6AZ6	2013	9A	6211
NU1106		6AZ6	2014	9BY	6CL6, 6197
1201	8BN	7E5, 1201A	2050	6BS	1657, 1665, 2050A, 2050W
1201A	8BN	7E5, 1201	2050A	6BS	1657, 1665, 2050, 2050W
1203	4AH	7C4, 1203A	2935A	4B	81
1203A	4AH	7C4, 1203	3841	4C	80
1204	8B0	7AB7	3871	4D	50
1206	8BV	7G8	3872	4D	30
1216	7BF	5844	3873	4K	32
1217	7CH	6BE6, 5915, 5915A, 7036	3921	4D	45
1219	8CJ	2C51W, 5670, 5670WA, 6185, 6385*	3924	5E	24A
1221	6F	6C6	4465	5E	35
1223	7R	6J7, 1620, 7000	4610	5E	36
1225	7T	6L7	4611	5A	37
1229	4K	932	4612	5F	38
1231	8V	7V7	5517		1B48, CK1013
1231Z		31Z	5556		PJ8
1232	8V	7G7	5588		6161
1273	8V	7AJ7	5590	7BD	401A
1274	6S	7Y4*	5591	7BD	403B
1275	4C	5Z3	5603	6BD	398A
1280	8V	14C7	5654	7BD	6AK5W, 6AK5WB, 1220, 6096
1282	8BJ	7W7	5659	7S	12A6
1288	7BE	3B7, 1291, 1292	5660	8E	12C8
1291	7BE	3B7, 1288, 1292	5661	8N	12SK7
1292	7BE	3B7, 1288, 1291	5667		889RA
1294	4AH	1R4	5670	8CJ	2C51W, 1219, 5670WA, 6185, 6385*
1299	6BA	3D6	5687	9H	5687WA
1381HQ	7BD	6AK5	5721	9A	6057, 7494, 7729
1603	6F	6C6, 7700	5725	7CM	6AS6W, 6187
1611	7S	6F6	5726	6BT	6AL5W, 6097
1612	7T	6L7	5727	7BN	2D21W
1613	7S	6F6	5731	5BC	955
1614	7AC	6L6	5742		PJ7
1620	7R	6J7, 1223, 7000	5743		PJ21
1621	7S	6F6	5749	7BK	6BA6W
1622	7AC	6L6	5750	7CH	6BE6W
1632	7S	12L6	5751	9A	5751WA
1634	8R	12SC7	5755	9J	420A
1642	7BH	2C21	5759		501R
1644	8BU	12L8GT	5762		7C24, 5762A
1649	8N	6AC7	5763	9K	6062
1650	5BC	955	5767		6481
1655	8S	6SC7	5771		356
1657	6BS	2050, 2050A, 2050W			
1659	6G	2A6			

Tube Type	Basing	Replacement	Tube Type	Basing	Replacement
5794		5794A, 6562	6134	8N	6AC7W, 6AC7WA
5794A		6562	6135	68G	6C4WA*, 6100*
5814	9A	5814A, 5814WA	6136	7BK	6AU6WA, 6AU6WB
5814A	9A	5814WA	6146B		8298A
5824	7AC	25B6G	6155		4-125A, 4D21
5842	9V	417A, 417B	6161		5588
5844	7BF	1216	6166A		7007
5847	9X	404A	6185		2C51W, 1219, 5670, WA
5871	7AC	6V6GT	6186	7BD	6AG5WA
5881	7AC	6L6WGB, 7581, 7581A	6187	7CM	6AS6W, 5725*
5894		9903	6188	8BD	6SU7WGT
5910	6AR	1U4, 1U4WA	6189	9A	12AU7WA
5915	7CH	6BE6, 1217, 5915A, 7036	6197	9BV	2014
5915A	7CH	6BE6, 1217, 5915, 7036	6201	9A	12AT7WA, 12AT7WB
5923		9904	6211	9A	2013
5930	4D	2A3W	6252		9910
5931	5T	5U4WGB	6485	7BK	6AH6WA
5932	7S	6L6WGA, 6L6WGB	6582	9EJ	TE35
5933	5AW	807, 807W, 807WA, 5933WA	6626	5BO	0A2WA, 6073
5933WA	5AW	807, 807W, 807WA, 5933	6627	5BO	0B2WA, 6074
5992	7AC	6V6GT*	6660	7CC	6BA6, 6BA6W, 5749
6005	7BZ	6AQ5W, 6095	6661	7CM	6BH6
6028	7BD	408A	6662	7CM	6BJ6
6058	6BT	6AL5W, 5726, 6097	6663	6BT	6AL5, 6AL5W, 5726, 6058, 6097
6063	5BS	6X4, 6X4W, 6X4WA	6664	5CE	6AB4
6073	5BO	0A2WA, 6626	6669	7BZ	6AQ5A, 6AQ5W, 6005, 6095
6074	5BO	0B2WA, 6627	6676	7CM	6CB6
6075		9907	6677	9BY	6CL6
6076		9907R	6678	9AE	6U8A
6077		9906	6679	9A	12AT7, 12AT7WA, 12AT7WB, 6201
6078		9906R	6680	9A	12AU7A, 12AU7WA, 6189, 7730
6079		9908	6681	9A	12AX7, 12AX7WA, 5721, 6057, 7494, 7729
6080	8BD	6080WA, 6080WB	6754	9ET	TE36, 412A
6080WA	8BD	6080WB	6853	5T	5Y3WGT, 5Y3WGTA, 5Y3WGTB, 6087, 6106
6080WB	8BD	6080WA	6888	8N	TE40
6083		9909	6939	9HL	7645
6087	5L	5Y3WGTB, 6106, 6853	6968	7ED	6AK5
6095	7BZ	6AQ5W, 6005	6979		4X250B
6096	7BD	6AK5W, 5654	7000	7R	6J7, 1223, 1620
6097	6BT	6AL5W, 5726	7007		6166A
6098	6BQ	6AR6WA	7025	9A	12AX7, 7025A
6099	7BF	6J6WA, 6101	7025A	9A	12AX7, 7025
6100	6BG	6C4WA, 6135*	7027	8HY	7027A
6101	7BF	6J6WA, 6099	7034		4X150A
6106	5T	5Y3WGT, 5Y3WGTA, 5Y3WGTB, 6853			
6113	8BD	6SL7W, 6SL7WGT			

* Parallel-filament circuits.

Tube Type	Basing	Replacement	Tube Type	Basing	Replacement
7035		4X150D, 7609	7645	9HL	6939
7036	7CH	6BE6, 1217, 5915, 5915A	7700	6F	6C6, 1603
7054	9GK	8077	7729	9A	12AX7WA, 5721, 6057, 7494
7184	9CV	6V6	7730	9A	12AU7WA, 6189
7189	9CV	7189A	7752	7CM	6AS6
7247	9A	12DW7	7755	7BD	6AJ5
7408	7AC	6V6GT	7756	6BQ	6AR6
7494	9A	12AX7WA, 5721, 6057, 7729	7867	5BT	6EX6*
7543	7BK	6AU6, 6AU6WA, 6AU6WB, 6136	8016	3C	1B3GT
7581	7AC	7581A	8018	5AW	807
			8077	9GK	7054



SECTION 5

Foreign Substitutes for American Types

This section lists foreign substitutes for American tubes. Refer to this section only after checking for an American substitute in Sections 1, 3, and 4.

American tubes are shown in the left-hand column; foreign equivalents are in the right-hand column. Only those American types which can be replaced with foreign brands have been included. For a list of foreign types with American equivalents, refer to Section 6.

For the basing diagram of the American tubes in this section, refer to Section 1 or 4 to obtain the basing code and then to Section 7 for the basing diagram.

Substitutes marked with an asterisk (*) should be used only when the filament of the original tube is wired in a parallel circuit. Those tubes marked with a section symbol (§) may not work in all circuits.

Tube Type	Replacement
0A2	150C2, 150C4, M8223, STV 150/30
0A3	KD21
0A4G	PL1267, Z300T
0B2	108C1, M8224, STV108/30
0C3	KD24
0D3	150C3, KD25
0E3	85A1
0G3	85A2
1A3	1D13, DA90
1A5G	DL31
1A7GT	DK32, X14
1AB6	1C3, 1H35, DK96, X25
1AC6	1C2, DK92, X18, X20
1AD4	DF62
1AF4	1F1, DF96, W25
1AF5	1FD1, DAF96, ZD25
1AH5	1FD1, DAF96, ZD25
1AJ4	1F1, DF96, W25
1AM4	1F1, DF96, W25
1AN5	DF97
1AQ5	1H33
1AR5	1FD1, DAF96, ZD25
1AS5	DAF92*
1B3GT	DY30, U41
1BG2	DY51
1C5GT	DL35, DL36, N14
1DN5	DAF92
1E3	DC80
1F5G	KL35*
1G3GT	DY30, U41
1H5GT	DAC32, HD14
1J3	DY30, U41
1K3	DY30, U41
1L4	1F2, DF92
1M3	DM70, DM71, Y25
1N3	DM71, DM70, Y25
1N5GT	DF33, Z14
1Q5GT	DL35, DL36, N14
1R5	1C1, DK91, X17, 1H33*
1R5SF	1H33
1S2	1RK23, DY86, DY87
1S2A	DY87
1S4	DL91
1S5	1FD9, DAF91, ZD17
1T2	R16, U37
1T4	1F3, DF91, W17
1T4SF	1F1, DF96, W25
1T5GT	DL31
1U4	DF904
1U5	DAF92
1V	AD
1V6	DCF60
1X2	DY80, R19

Tube Type	Replacement
1X2A	DY80, R19
2B35	6D1, EA50, T6D
2D21	20A3, E91N, EN91, M8204, PL21
2ER5	XC95, XC97
2FY5	XC95, XC97
2HA5	XC900
2J2	R20, U26, U49
3A4	DL93
3A5	DCC90
3AJ8	XCH81
3AL5	XAA91
3AU6	XF94
3B4	DL98, HD30
3B5GT	DL33, N15, N16
3BH2	GY501
3BX6	XF80, XF85
3BY7	XF80, XF85
3BZ6	3M-V7
3C4	1P1, DL96, N25
3C5GT	DL33, N15, N16
3D6	DL29
3DK6	3M-R24
3E5	1P1, DL96, N25
3EH7	XF183, XF184
3EJ7	XF183, XF184
3ER5	YC95
3FX7	3D-HH13
3FY5	YC97
3HA5	LC900
3Q4	DL95, N18
3Q5GT	DL33, N15, N16
3S4	1P10, DL92, N17
3V4	1P11, DL94, N19
4BC8	4R-HH2
4BL8	5R-HP1, XCF80
4BS8	4R-HH2
4CM4	PC86
4EH7	LF183, YF183
4EJ7	LF184, YF184
4ES8	4R-HH8, XCC189
4GJ7	XCF801
4GK5	PC95
4HA5	PC900
4KN8	4R-HH8
5AR4	52KU, 53KU, 54KU, GZ30, GZ32, GZ33, GZ34, GZ37, R52, U54, U77
5AW4	U54
5AX4GT	U54
5BK7A	4R-HH2
5CG4	OSW3107
5EA8	XCF80
5GJ7	LCF801

Tube Type	Replacement
5HG8	LCF86
5J6	5M-HH3
5T4	GZ31, U52
5U4G	5Z10, GZ32, U52
5U8	XCF80
5U9	LCF201
5V4G	52KU, 53KU, 54KU, GZ30, GZ32, GZ33, GZ34, OSW3107, R52, U54
5V9	LCH200
5W4	U50, U51
5X9	LCF200
5Y3GT	U50, U52
5Z4	52KU, 53KU, 54KU, GZ30, GZ32, GZ33, GZ34, OSW3107, R52, U54, U77
5Z4G	52KU, GZ30, R52, U77
6A6	B63
6A8	PH4, X63
6AB4	EC92
6AB7	6F10, OSW2190, OSW2600
6AB8	63TP, ECL80, LN152
6AC7	6F10, OSW2190, OSW2600
6AD8	6FD12, EBF80, EBF81, EBF89, WD709, ZD152
6AF3	EY88*
6AF4	EC94
6AF7G	64ME*, EM34*
6AG5	EF96
6AG7	6L10, OSW2192, OSW2601
6AH6	6F36
6AJ4	EC84
6AJ5	6F35
6AJ7	6F10, OSW2190, OSW2600
6AJ8	6C12, 20D4, ECH81, X719
6AK5	6F32, DP61, E95F, EF95§, EF905, M8100§, PM05§
6AK7	6L10, OSW2192, OSW2601
6AK8	6LD12, DH719, EABC80
6AL3	EY88
6AL5	6B32, 6D2, D2M9, D77, D152, D717, DD6, EAA91, EB91, EAA901, EAA901S
6AM5	6P17, 7D9, 16A, DD7, DDR7, EL91, M8082*
6AM6	6F12, 8D3, EF91, HP6, M8083, PM07, QA2403, QZ77, R144, S6F12, SP6, Z77
6AN7	ECH80
6AQ4	6L34, EC91, M8099
6AQ5	6L31, BPM04, EL90, M8245, N727

Tube Type	Replacement
6AQ8	6L12, B719, ECC85
6AS6	6F33, M8196
6AS7G	A1834, ECC230
6AT6	6BC32, DH77, EBC90, EBC91
6AU4GT	6G-K17
6AU6	EF94
6AV4	6FX4*, EZ91
6AV6	6BC32, DH77, EBC90, EBC91
6AW6	EF190
6B8	EBF32*
6BA6	6F31, EF93, M8101, PM04, W727
6BC5	EF96
6BD7	EBC80, EBC81, 6LD13*
6BE6	6H31, EK90, HM04, X77, X727
6BE7	EQ80
6BH5	EF81
6BH6	E90F
6BJ6	N78
6BJ6	E99F
6BK6	6BC32, DH77, EBC90, EBC91
6BK8	EF83
6BL8	6C16, ECF80, E80CF*
6BM5	6L31, 6P9, EL90, N727
6BM8	6PL12, ECL82
6BN5	EL85, N155
6BQ5	6P15, EL84, E84L, N709
6BQ6GT	6G-B6
6BQ7A	ECC180
6BR3	EY88*
6BR5	65ME, EM80, EM81
6BR7	8D5
6BS7	8D7
6BS8	6R-HH2
6BT4	66KU, EZ40, U150, U718*, UU9*, V61
6BT6	6BC32, DH77, EBC90, EBC91
6BW7	6F23, 8D6, EF80
6BX4	EZ91*
6BX6	8D6, 64SPT, EF80, Z152, Z719
6BX8	6R-HH2, ECC180
6BY6	6H31, EH90, EK90
6BY7	6F19, 6F26, EF85, W719
6C4	EC90, L77, M8080, QA2401, QL77
6C5	L63, OSW3112
6CA4	EZ81, U709, UU12
6CA7	7D11, 12E13, EL34, KT77, KT88
6CB6	EF190
6CD7	64ME, EM34
6CE5	EF96

§ May not work in all circuits.

* Parallel-filament circuits.

Tube Type	Replacement
6CF6	EF190
6CH6	7D10, EF82, EL821, EL822
6CJ5	6C15, 6F16, 7F16, 6ZVP, EF41, HF61, W150
6CJ6	EL81, EL820
6CK5	67PT, BF61, EL41, N150
6CK6	EL83, EL820, EL803§
6CL6	6L43
6CM4	EC86, E86C*, EC806S*
6CM5	6G-B7, EL36, EL360
6CN6	5P29, EL38
6CQ6	6F21, 9D6, EF92, M8161, QA2400, QW77, V177, V884, VP6, W77
6CS6	6H31, EH90, EK90
6CT7	D61§, EAF42, WD150
6CU6	6G-B9
6CU7	62TH, ECH42, ECH43, ECH113, 6C9*, 6C10*, X150*
6CV7	6LD3, 62DDT, DH150, DH718, EBC41
6CW5	EL86
6CW7	6L16, ECC84
6D4	EN93
6D8	X73*, X73M*
6DA5	65ME, EM80, EM81
6DA6	EF89
6DC6	EF190
6DC8	6FD12, EBF85, EBF89
6DG7	EF89F
6DJ8	ECC88, ECC189, E88CC*
6DL4	EC88
6DL5	EL95
6DQ6A	6G-B9
6DR6	EL81, EL820
6DR8	EBF83
6DS8	ECH83
6DT8	6AT7N
6DX8	ECL84
6DY5	EL82
6E5	6S5G, OSW3110
6E8G	X61M, X147, ECH35*, TH62*
6EB5	6B32, 6D2, D2M9, D77, D152, D717, DD6, EAA91, EB91, EAA901, EAA901S
6EC4	EY500
6EC7	6F18, W739
6EH7	6F25, 6F29, EF183, EF811
6EJ7	6F24, 6F30, EF184, EF814
6EL7	6F23, EF812, Z749
6ER5	EC95, EC97*
6ES6	EF97, EF98
6ES8	ECC88, ECC189

Tube Type	Replacement
6ET6	EF97, EF98
6F5GT	H63
6F6G	KT63
6FC7	ECC89
6FD6	EF97, EF98
6FG6	EM84, EM840
6FW8	6R-HH8, ECC88*, ECC189*
6FY5	EC95*, EC97
6GA8	6/30L2, B729, ECC804
6GB5	EL500
6GJ7	ECC801
6GM8	ECC86
6GV7	6C18, ECF805
6GV8	ECL85
6GW8	ECL86
6GX8	EAM86
6H5G	6M1
6H6	D63, EB34*, OSW3109
6HA5	EC900
6HC8	ECL82*
6HG5	6L31, 6P9, EL90, N727
6HG8	ECF86
6HL8	6C16, ECF80
6HM5	EC900
6HQ5	EC900
6HQ6	EF190
6HU6	EM87
6HU8	ELL80
6J4	6M-H1, M8232, TM12
6J5	L63, L63B, OSW3112
6J6	6CC31, 6M-HH3, ECC91, M8081, T2M05
6J7	A863, EF37*, Z63
6J7GT	A863, KTW63, KTZ63, KTZ63M, Z63, EF37*
6JW8	ECF802
6JX8	ECH84
6K7	PF9, W61, W63, EF39*, OM6*, W147*
6KH8	ECLL8001
6KN8	6R-HH8, ECC88*, ECC189*
6L6	EL37
6L6GC	KT66
6L7	X64
6LN8	LCF80
6LX8	LCF802
6M5	EL80
6M6G	EL33*, KT61*, N147*, PP6BG§
6N3	EY80, EY82
6N8	EBF80, EBF81, WD709, ZD152
6Q4	EC80
6Q7	DH63

Tube Type	Replacement
6R3	63VP*, EY81, EY83*, EY88*
6R4	EC81
6R8	6LD12, DH719, EABC80
6S2	EY86, EY87
6S2A	EY87
6S7	OF1, OM5*
6SA7	OSW3104
6SK7	OSW3111
6SL7	ECC35*
6SN7GT	13D2, B65, ECC32*, QA2408, QB65
6SQ7	OSW3105
6T8	6LD12, DH719, EABC80
6U3	EY80
6U8	ECF80, ECF82
6U9	ECF201
6V3	EY81F
6V4	EZ80
6V6GT	OSW3106*
6V9	ECH200
6W7G	8D4*
6X2	EY51, R12, SU61, U43, U45, U151
6X4	6Z31, E90Z, EZ90, EZ900, U707, V2M70, QA2407*, U78*
6X5G	EZ35, U147, U70*
6X9	ECF200
6Y9	EFL200
6Z3	AD
7A7	W81, W148, EF22*, W143*
7AN7	30L1, 30L15, B319, PCC84
7AU7	PCC186, XCC82
7B5	EL22, KT81, N148
7B6	DH81, DL82
7B7	W149
7C5	EL22, KT81, N148
7C6	DH149
7DJ8	PCC88, PCC189
7ED7	30F5, Z329
7EK7	30L15, B349, PCC805
7ES8	PCC88, PCC189
7FC7	PCC84, PCC89
7GV7	30C18, PCF805
7H7	EF22*, W143*, W148
7S7	X81, X148
7Y4	U82*, U149
8A8	30C1, LZ319, LZ329, PCF80, PCF82
8B8	8R-HP1, XCL82
8BQ5	XL84
8CW5	XL86
8GJ7	PCF801, PCF806

Tube Type	Replacement
8HG8	PCF86
8U9	PCF201
8X9	PCF200
9A8	30C1, LZ319, LZ329, PCF80
9AK8	PABC80
9AQ8	PCC85
9BM5	9P9
9EA8	30C1, LZ319, LZ329, PCF80, PCF82
9EN7	30C15, LZ339, PCF800
9GB8	30FL1, PCE800
9GV8	XCL85
9JW8	PCF802
9U8	30C1, LZ319, LZ329, PCF80, PCF82
9V9	PCH200
10CW5	LL86
10DE7	9R-AL1
10DX8	LCL84
10GV8	LCL85
11BM8	LCL82
11R3	LY81
11Y9	LFL200
12A8	OH4
12AC5	10F9, 121VP, HF121, UF41, W118, W142, W145
12AD7	6L13*
12AF3	12R-K19
12AH8	20D3
12AJ7	HCH81
12AL5	10D2, HAA91, UB91
12AT6	12BC32, HBC90, HBC91
12AT7	B152, B309, B739, ECC81, ECC801, ECC801S, E81CC, M8162, QA2406, QB309
12AU6	12F31, HF93, HF94
12AU7	B329, B749, E82CC, ECC82, ECC186, ECC802, ECC802S, M8136
12AV6	12BC32, HBC90, HBC91
12AV7	12R-LL3§
12AX7	6L13, B339, B759, E83CC, ECC83, ECC803, M8137
12BA6	12F31, HF93, HF94
12BE6	12H31, HK90
12BK6	12BC32, HBC90, HBC91
12BQ6GT	12G-B6
12BR3	12R-K19
12BT6	12BC32, HBC90, HBC91
12BX6	10F18*, W119*
12BY7	EL180
12C8	VP12D
12CS6	12H31, HK90

§ May not work in all circuits.

* Parallel-filament circuits.

Tube Type	Replacement
12DF7	6L13, B339, B759, ECC83, ECC803
12DT7	6L13, B339, B759, ECC83, ECC803
12FB5	30P12
12FG6	UM84
12HU8	PLL80
12K7	W76
12K7GT	OF5, W76
12K8	X71M, X76M
12Q7GT	DH74, DH76, DL74M
12S7	UAF42§, WD142§
12SN7GT	13D2, B36
12SQ7	OBC3
12SX7GT	B36
12X4	HZ90
12Z3	HZ90
13CM5	12G-B7, XL36
13EC7	10F18, W110, W119
13GB5	12B-B14, XL500
13GC8	30PL1, 30PL10, LN319
14G6	10LD13, DH119, UBC81
14GW8	PCL86
14K7	141TH, UCH42, UCH43, X142
14L7	10LD3, 141DDT, DH118, DH142, UBC41
14Z3	HZ90
15A6	N153, N309, PL83
15CW5	30P18, N379, PL84
15DQ8	PCL84
16A5	30P16, 30P18, 163PEN, N154, N329, N379, PL82, PL84
16A8	30PL12, N369, PCL82
16AQ3	XY88
16GK8	30PL13, 30PL14, PCL88, PCL800
16Y9	PFL200
17C8	17N8, 171DDP, UBF80
17EW8	HCC85
17N8	UBF80
17Z3	A61, PY81, PY83, PY800, PY801, U153, U193, U251, U349
18FW6	19M-R9
18FX6	X107§
18GD6	19M-R9
18GV8	PCL85
19AQ5	HL90
19C8	HABC80
19CS4	U191, U339
19D8	10C14, 19AJ8, UCH81, X119
19KF6	N22LL
19T8	HABC80

Tube Type	Replacement
19X3	19BD, 19U3, 19W3, PY80, U152, U309
19Y3	19SU, PY82, U154, U192, U319
20AQ3	LY88
21A6	213PEN, N152, N339, N359, PL81, PL820
25BQ6GT	25G-B6
25E5	30P4, 30P19, N308, PL36
20GF6	30P4, 30P19, N389, PL302
21KQ6	LL521
25A6	KT33
25L6	KT32
25W6GT	KT32
25Y4	PY31, U31
25Z4GT	U31
27GB5	PL500
27KG6	LL505
28EC4	LY500
28GB5	PL500
30A5	HL94
30AE3	PY88
31A3	311SU, U118, U142, U145, U404, UY41, UY42, V311, V312
35C5	HL94
35W4	HY90
35Z4GT	U74, U76
38A3	U119, U381, UY85
40KG6	PL509
42EC4	PY500
45A5	10P14, 451PT, BF451, N142, UL41, UL46
45B5	10P18, N119, UL84
50BM8	10PL12, 48A8, LN119, UCL82
50C5	HL92
50L6GT	KT71
55N3	UY82
807	4Y25, 5S1, P17A, QE06/50, QV05-25
954	E1F, UN954, ZA2*
955	1650, 4671, E1C, HA2, UN955
956	E2F
957	D1C
958A	D2C
959	D3F
1267	Z300T
2050	EN32, ME1501
5591	DP61, E95F, EF95, EF905, M8180
5608	DP61, E95F, EF95, EF905, M8100, M8180
5624	E82M

Tube Type	Replacement
5634	EN70, ME1500
5636	EF730
5641	EY70
5642	DY70
5643	EN70
5647	EA71
5651	85A2, M8098, OG3, STV85/10
5654	DP61, E95F, EF95, EF905, M8100, M8180, PM05
5660	VP12D
5672	DL69, DL75, DL620, DL652, XFY14
5676	XFR3
5678	DF60, DF654, XFR2
5696	EN92
5718	EC70
5725	M8196
5726	6D2, D2M9, D77, D152, D717, DD6, DD6G, E91AA, EAA91, EAA901S, EB91, M8079, M8212, QA2404, QD77
5727	M8204, E91N, EN91, PL21
5731	E1F, ZA2
5749	EF93, M8101, PM04, W727
5750	EK90, MH04, X77, X727
5751	B759, ECC83, B339, M8137
5757	E91N, EN91, M8204, PL21
5763	QE03/10, QV03-12
5783	85A3, M8190
5802	ME1401
5814	B749, M8136
5823	Z900T
5838	EZ35, U70, U147
5840	EF732
5847	6R-R8, 6R-R8C, E182F
5852	EZ35, U70, U147
5861	EC55
5881	EL37, KT66
5886	DF703
5889	ME1403
5894	QQC04/15, QQE06/40, QQV06-40
5899	EF731
5900	EF71
5901	EF72, EF732, M8121
5902	EL71
5910	DF904
5911	DF67
5913	DL67
5915	E91H, EH900S
5920	E90C, E90CC

Tube Type	Replacement
5931	U52, GZ31
5932	KT66
5993	6Z31, EZ90, M8138, QA2407, QU78, U78, U707, V2M70
6004	U50
6005	M8245
6007	DL67
6008	DF67
6024	6F12, 8D3, EF91, HP6, M8083, PM07, QA2403, QZ77, SP6, Z77
6030	ECC91, M8081, T2M05
6042	13D1
6050	XFR3
6057	B339, B759, ECC83, ECC803, M8137
6058	6D2, D77, D152, D717, D2M9, DD6, DD6G, EAA91, EB91, QA2404, QD77
6059	8D5
6060	ECC801
6062	M8096
6063	6Z31, EZ90, EZ90Z, EZ900, M8138, QA2407, QU78, U78, U707, V2M70
6064	6F12, 8D3, EF91, HP6, M8083, PM07, QA2403, QZ77, SP6, Z77
6065	6F21, 9D6, EF92, M8161, QA2400, QW77, VP6, W77
6067	B749, M8136
6073	150C2, 150C4, HD51, M8223, STV150/30
6074	180C1, HD52, M8224, STV108/30
6080	7D11, 12E13, A1834, ECC230, EL34, KT88
6084	E80F
6085	E80CC
6086	18042, TS53
6087	U50
6096	DP61, E95F, EF95, EF905, M8100, M8180, PM05
6097	D717, M8212
6099	ECC91, M8081, T2M05
6100	EC90, L77, M8080, QA2401, QL77
6101	ECC91, M8081, T2M05
6105	U50
6106	ECC91, M8081, T2M05

§ May not work in all circuits.

* Parallel-filament circuits.

Tube Type	Replacement
6125	EC90, L77, M8080, QA2401, QL77
6132	7D10, EF82, EL821, EL822, M8135
6135	EC90, L77, M8080, QA2401, QL77
6136	EF94
6146	QE05/40, QV06-20
6157	R17
6158	13D3
6159	QE05/40H
6186	EF96
6189	B749, E82CC, ECC802, M8136
6195	DL700
6201	E81CC, ECC801S, M8162
6202	6Z31, EZ90, M8138, QA2407, QU78, U78, U707, V2M70
6203	6Z31, EZ90, M8138, QA2407, QU78, U78, U707, V2M70
6205	EF734
6218	E80T
6227	E80L
6252	QQE03/20, QQV03-20
6267	8D8, 6F22, EF86, EF87, EF806S, M8195, Z729
6281	CK512AX
6351	Z319
6354	150B2, M8163
6360	QQE03/12, QQV03-10
6370	E1T
6373	DL70
6374	EY84
6375	DC70
6391	EF74
6443	EY84, M8091, R18
6463	CC86E, ECC86, ECC813
6487	EF70, M8125
6488	EF73, M8122
6489	EA76, M8123
6516	M8082
6535	ECC91, M8081, T2M05
6550	7D11, 12E13, KT88
6574	EN32, ME1501
6611	DF61
6626	150C2, 150C4, HD51, M8223, STV150/30
6627	108C1, HD52, M8224, STV108/30
6660	EF93, M8101, PM04, W727

Tube Type	Replacement
6679	B739
6680	B749
6681	B339, B759, E83CC, ECC83, M8137
6686	E81L
6687	E91H
6688	E180F
6689	E83F
6778	EC70
6779	Z803U
6922	E88CC
6923	EA52
6939	QQE02/5, QQV02-6
6977	DM160
7001	M8167
7025	B339, B759, ECC83, M8137
7027	KT66
7027A	KT88
7062	E180CC
7118	E181CC
7119	E182CC
7247	B759
7292	JN2-25W
7308	E188CC
7316	ECC186
7320	E84L
7378	QE08/200, QV08-100
7408	OSW3106
7534	E180L
7543	EF94
7581	KT66, KT77
7643	E80CF
7693	E90F
7694	E99F
7709	Z70W
7710	Z70U
7711	Z71U
7713	Z804U
7714	Z805U
7722	E280F
7737	E186F
7788	E810F
8101	EC157
8223	E288CC
8228	ZZ1000
8233	E55L
8254	EC1000
8255	E88C, EC88
8278	EL503, F1EL
8453	Z550M
9905	QQC04/15
9910	QQE03/20, QQV03-20



SECTION 6

American Substitutes for Foreign Types

This section lists American substitutes for foreign tubes. Foreign tubes are shown in the left-hand column; American equivalents are in the right-hand column. Only those foreign types which can be replaced with American brands have been listed. For a list of foreign equivalents for American types, refer to Section 5.

In most cases, there is only one American replacement shown as a direct equivalent to the foreign type. Other equivalents for the American replacement are listed in Sections 1, 3, and 4. For example, the American replacement for the 6F10 is the 6AC7. If a 6AC7 is not available, Section 1 shows that a 6AJ7 can be used as a substitute. Therefore, the 6AJ7 can be used as a substitute for the 6F10.

Substitutes marked with an asterisk (*) should be used only when the filament of the original tube is wired in a parallel circuit. Those tubes marked with a section symbol (§) may not work in all circuits.



Tube Type	Replacement	Tube Type	Replacement	Tube Type	Replacement
1C1	1R5	6D-HH13	6FX7	6T1	6AF4
1C2	1AC6	6F10	6AC7	6V3P	6R3*
1C3	1AB6	6F11	6AM6	6V4	6CA4
1D13	1A3	6F12	6AM6	6Z4	6BX4
1F1	1AJ4	6F15	6CJ5	6Z31	6X4
1F2	1L4	6F16	6CJ5	7D9	6AM5
1F3	1T4	6F18	6EC7	7D10	6CH6
1FD1	1AH5	6F19	6B7	7D11	6550
1FD9	1S5	6F21	6CQ6	7F16	6CJ5
1G50	2050A	6F22	6267	8D3	6AM6
1H2	1S2	6F23	6EL7	8D4	6W7G*
1H33	1AQ5, 1R5SF, 1R5*	6F24	6EJ7	8D5	6BR7
1H35	1AB6	6F25	6EH7	8D6	6BW7
1M1	1N3	6F26	6BY7	8D7	6BS7
1P1	3C4	6F29	6EH7	8D8	6269
1P10	3S4	6F30	6EJ7	8R-HP1	8B8
1P11	3V4	6F31	6BA6	9D6	6CQ6
1RK23	1S2	6F32	6AK5	9P9	9BM5
1S5SF	1AR5	6F33	6AS6	9R-AL1	10DE7
1U5SF	1AS5	6F35	6AJ5	9R-HH2	9GH8A
2B/250A	807	6F36	6AH6	9RHR2	9GH8
3M-R24	3DK6	6FD12	6DC8	10C14	19D8
3M-V7	3BZ6	6FX4	6AV4*	10F9	12AC5
3S4SF	3W4	6G-B3A	6BQ6GT	10F18	13EC7
4G280K	2D21	6G-B6	6DQ6A	10LD3	14L7
4R-HH2	4BS8	6G-B9	6GW6	10LD13	14G6
4R-HH8	4KN8	6G-K17	6AU4GT	10P18	45B5
4Y25	807	6H31	6BE6	10PL12	50BM8
5A/160H	6AM6	6L10	6AG7	12B-B14	13GB5
5B/250A	807	6L12	6AQ8	12BC32	6550
5M-HH3	5J6	6L13	12AX7	12E13	12BA6
5P29	6CN6	6L16	6CW7	12F31	12GW6
5R-HP1	4BL8	6L31	6AQ5	12G-B3	12BQ6GT
5S1	807	6L34	6AQ4	12G-B6	12AV6
5Z10	5U4G	6L43	6CL6	12G-B7	13CM5
6/30L2	6GA8	6LD3	6CV7	12G-K17	12D4A
6AT7N	6DT8	6LD12	6AK8	12H31	12BE6
6B32	6AL5	6LD13	6BD7	12R-K19	12BR3
6BC32	6AV6	6LP12	6BM8	12R-LL3	12AV7
6C9	6CU7*	6M1	6U5G	12R-LL5	12FQ7
6C10	6CU7*	6M2	6CD7	13D2	6SN7GT
6C12	6AJ8	6M-H1	6J4	13D3	6158
6C15	6CJ5	6M-HH3	6J6	16A	6AM5
6C16	6BL8	6P9	6BM5	17N8	17C8
6C18	6GV7	6P15	6BQ5	18AK5	6028
6C31	6K8	6P17	6AM5	19AJ8	19D8
6CC10	5692	6P25	6AG6	19BD	19X3
6CC31	6J6	6PL12	6BM8	19M-R9	18GD6
6CC42	5670	6Q8	6A8	19M-R10	18GD6
6CC43	6AQ8	6R-HH2	6BS8	19SU	19Y3
6CF8	6267	6R-HH8	6KN8	19U3	19X3
6CH40	6AJ8	6R-K19	6AV3	19W3	19X3
6D1	2B35	6R-R8C	5847	20A3	2D21
6D2	6AL5	6S5G	6E5	20D3	12AH8

Tube Type	Replacement	Tube Type	Replacement	Tube Type	Replacement
20D4	6AJ8	A2521	6CR4	DCC90	3A5
25G-B6	25BQ6GT	A2900	12AT7	DCF60	1V6
25R-K19	25BR3	AA91E	5726	DD6	6AL5
30C1	9A8	ABC91	12A6	DD7	6AM5
30C15	9EN7	AD	6Z3	DD77	5726
30C18	7GV7	AG5211	0A2	DDR7	6AM5
30F5	7ED7	ARS25A	807	DF26	1S5
30FL1	9GB8	ASG512	2D21	DF33	1N5GT
30L1	7AN7	ATS225A	807	DF60	5678
30L15	7EK7	B36	12SN7GT	DF62	1AD4
30P4	25GF6	B63	6A6	DF67	5911, 6008
30P12	12FB5	B65	65N7GT	DF91	1T4
30P16	16A5	B139	7AN7	DF92	1L4
30P18	15CW5	B152	12AT7	DF96	1AJ4
30P19	25GF6	B309	12AT7	DF97	1AN5
30PL1	13GC8	B319	7AN7	DF652	1AD4
30PL10	13GC8	B329	12AU7	DF668	1AD4
30PL12	16A8	B339	12AX7	DF904	1U4
30PL13	16GK8	B349	7EK7	DH63	6Q7
30PL14	16GK8	B719	6AQ8	DH74	12Q7GT
40SUA	1D5	B729	6GA8	DH76	12Q7GT
52KU	5Z4G	B739	12AT7	DH77	6AT6
54KU	5AQ4	B749	12AU7	DH81	7B6
62DDT	6CV7	B759	12AX7	DH118	14L7
62TH	6CU7	BA2	2050	DH119	14G6
62VP	6CJ5	BF61	6CK5	DH142	14L7
63TP	6AB8	BF451	45A5	DH149	7C6
64ME	6CD7	BPM04	6AQ5	DH150	6CV7
64SPT	6BX6	BVA264	6AG6G	DH718	6CV7
65ME	6BR5	BVA265	6AG6G	DH719	6AK8
66KU	6BT4	C610	7J7	DH817	6CV7
67PT	6CK5	CC81E	12AT7WA	DK32	1A7GT
85A1	0E3	CC86E	6GM8	DK91	1R5
85A2	0G3	CSF80	48L8	DK92	1AC6
85A3	5783	D1C	957	DK96	1AB6
108C1	0B2	D2C	958A	DK97	1AB6
121VP	12AC5	D2M9	6AL5	DL29	3D6
141DDT	14L7	D3F	959	DL31	1A5G
141TH	14K7	D61	6CT7S	DL33	3Q5GT
150B2	6354	D63	6H6	DL35	1C5GT
150C1	0A2	D77	6AL5	DL36	1Q5GT
150C2	0A2	D152	6AL5	DL37	6L6GC
150C3	0D3	D717	6AL5	DL67	5913, 6007
150C4	0A2	DA90	1A3	DL74M	12Q7
163PEN	16A5	DAC21	155	DL82	7B6
171DDP	17C8	DAC32	1H5GT	DL91	154
213PEN	21A6	DAF90	1A3	DL92	354
311SU	31A3	DAF91	155	DL93	3A4
451PT	45A5	DAF92	1U5	DL94	3V4
A61	17Z3	DAF96	1AH5	DL95	3Q4
A677	6C6	DAF97	1AN5	DL96	3C4
A863	6J7GT	DC70	6375	DL98	3B4
A1834	6AS7G	DC80	1E3	DL620	5672

§ May not work in all circuits.

* Parallel-filament circuits.

Tube Type	Replacement	Tube Type	Replacement	Tube Type	Replacement
DM70	1M3	EA41	6C77	ECC91	6J6
DM71	1N3	EA50	2B35	ECC180	6BQ7A
DM160	6977	EA76	6489	ECC186	12AU7
DP61	6AK5	EA91	6AL5	ECC189	6ES8
DY30	1B3GT	EA901	5726	ECC230	6080
DY51	1B2	EABC80	6AK8	ECC801	6060
DY70	5642	EAF41	6CT7S	ECC802	6189
DY80	1X2A	EAF42	6C77	ECC803	6057
DY86	1S2	EAM86	6GX8	ECC804	6GA8
DY87	1S2A	EB34	6H6*	ECC808	6KX8
DY802	1BQ2	EB91	6AL5	ECC813	6463
E1F	954	EBC3	6BD7A	ECC863	12D7
E2F	956	EBC41	6CV7	ECC900	6HA5
E55L	8233	EBC80	6BD7	ECF80	6BL8
E80CC	6085	EBC81	6BD7	ECF82	6U8
E80CF	7643	EBC90	6AT6	ECF86	6HG8
E80F	6084	EBC91	6AV6	ECF200	6X9
E80L	6227	EBF32	6B8*	ECF201	6U9
E80T	6218	EBF41	6CJ5	ECF202	6AJ9
E81CC	12AT7, 6201	EBF80	6N8	ECF801	6GJ7
E81L	6686	EBF81	6AD8	ECF802	6JW8
E82CC	12AU7	EBF83	6DR8	ECF805	6GV7
E83CC	6681	EBF85	6DC8	ECH35	6E8G*
E83F	6689	EBF89	6DC8	ECH42	6CU7
E84L	7320	EC22	6R4	ECH80	6AN7
E88C	6DL4, 8255	EC55	5861	ECH81	6AJ8
E88CC	6922	EC70	5718	ECH82	6E8
E89F	6DG7	EC71	5718	ECH83	6DS8
E90C	5920	EC80	6Q4	ECH84	6JX8
E90CC	5920	EC81	6R4	ECH113	6CU7
E90F	6BH6	EC84	6AJ4	ECH200	6V9
E90Z	6X4	EC86	6CM4	ECL80	6AB8
E91AA	5726	EC88	6DL4, 8255	ECL82	6BM8
E91H	6687	EC90	6C4	ECL84	6DX8
E91N	5727	EC91	6AQ4	ECL85	6GV8
E95F	6AK5	EC92	6AB4	ECL86	6GW8
E99F	6BJ6	EC93	6BS4	ECL100	6BZ7
E130L	7534	EC94	6AF4	ECL821	6CH6
E180F	6688	EC95	6ER5	ECLL800	6KH8
E180CC	7062	EC97	6FY5	ED2	6AL5
E180L	7534	EC8065	6CM4*	ED500	6ED4
E182CC	7119	EC900	6HA5	EF13	6DA6
E182F	5847	EC1000	8254	EF22	7A7*
E186F	7737	ECC32	6SN7GT	EF36	6J7
E188CC	7308	ECC35	6SL7*	EF37	6J7GT*
E280F	7722	ECC70	6021	EF39	6K7*
E288CC	8223	ECC81	12AT7	EF41	6CJ5
E810F	7788	ECC82	12AU7	EF70	6487
E902	6X4	ECC83	12AX7	EF71	5899
E1485	3A4	ECC84	6CW7	EF72	5840
E2016	6CQ6	ECC85	6AQ8	EF73	6488
E2157	12AT7	ECC86	6GM8	EF74	6391
E2163	12AU7	ECC88	6DJ8	EF80	6BX6
E2164	12AX7	ECC89	6FC7	EF81	6BH5

Tube Type	Replacement	Tube Type	Replacement	Tube Type	Replacement
EF82	6CH6	EL509	6KG6A	GZ34	5AR4
EF83	6BK8	EL802	6LD6	GZ37	5AR4
EF85	6BY7	EL803	6CK6§	H52	5U4GB
EF86	6267	EL820	6CK6	H63	6F5GT
EF87	6267	EL821	6CH6	H2-10	2X2A
EF89	6DA6	EL822	6CH6	HAA91	12AL5
EF89F	6DG7	ELF86	6HG8	HABC80	19T8
EF91	6AM6	ELL80	6HU8	HBC90	12AT6
EF92	6CQ6	EM34	6CD7	HBC91	12AV6
EF93	6BA6	EM35	6U5	HCC85	17EW8
EF94	6AU6	EM80	6BR5	HCH81	12AJ7
EF95	6AK5	EM81	6DA5	HD14	1H5GT
EF96	6AG5	EM84	6FG6	HD30	3B4
EF97	6ES6	EM85	6DG7	HD51	0A2
EF98	6ET6	EM87	6HU6	HD52	0B2
EF183	6EH7	EM840	6FG6	HD93	1X2B
EF184	6EJ7	EN32	2050	HD94	6BQ6GTB
EF190	6CB6	EN91	2D21	H096	25BQ6GTB
EF730	5636	EN93	6D4	HF61	6CJ5
EF731	5899	EQ80	6BE7	HF93	12BA6
EF732	5840, 5901	EY51	6X2	HF94	12AU6
EF734	6205	EY80	6U3	HF121	12AC5
EF811	6EH7	EY81	6R3	HK90	12BE6
EF812	6EL7	EY81F	6V3	HL86	30CW5
EF814	6EJ7	EY82	6N3	HL90	19AQ5
EF905	5654	EY83	6AL3*	HL92	50C5
EFL200	6Y9	EY84	6374	HL94	30A5
EH90	6CS6	EY86	6S2	HM04	6BE6
EK90	6BE6	EY87	6S2A	HP6	6AM6
EL33	6M6G*	EY88	6AL3	HY90	35W4
EL34	6CA7	EY500	6EC4	HY145	1U4
EL36	6CM5	EZ3	6V4	HZ50	14Z3
EL37	6L6	EZ4	6CA4	HZ90	12X4
EL38	6CN6	EZ11	6V4	KD21	0A3
EL41	6CK5	EZ22	7Y4	KD24	0C3
EL71	5902	EZ35	6X5G	KD25	0D3
EL80	6M5	EZ40	6BT4	KL35	1F5G*
EL81	6CJ6	EZ80	6V4	KT32	25W6GT
EL82	6DY5	EZ81	6CA4	KT33	25A6
EL83	6CK6	EZ90	6X4	KT61	6M6G*
EL84	6BQ5	EZ91	6AV4	KT63	6F6G
EL85	6BN5	EZ900	6063	KT66	6L6GC
EL86	6CW5	FA6	5677	KT71	50L6GT
EL90	6AQ5	F1EL	8278	KT77	6CA7
EL91	6AM5	G75/2D	0A3	KT88	6550
EL95	6DL5	G77	6C6	KTW63	6J7GT
EL180	12BY7	G105/1D	0C3	KTZ63	6K7GT
EL300	6FN5	G150/3D	0D3	KTZ63M	6J7GT
EL500	6GB5	G/50/4K	0A2	KY80	5J2
EL503	8278	GY501	3B2H	L63	6J5
EL504	6GB5	GZ30	5Z4G	L63B	6J5
EL505	6KG6	GZ31	5U4G	L77	6C4
EL508	6KW6	GZ32	5V4GA	LC97	3FY5

§ May not work in all circuits.

* Parallel-filament circuits.

Tube Type	Replacement	Tube Type	Replacement	Tube Type	Replacement
LC900	3HA5	N18	3Q4	PC89	7F7
LCC189	5E58	N19	3V4	PC93	4BS4
LCF80	6LN8	N22LL	19KF6	PC95	4GK5
LCF86	5HG8	N25	3C4	PC97	4FY5
LCF200	5X9	N30EL	6LF6	PC900	4HA5
LCF201	5U9	N47	6AM5	PCC18	7AU7
LCF801	5GJ7	N63	45A5	PCC85	9AQ8
LCF802	6LX8	N66	6K6GT	PCC84	7AN7
LCH200	5V9	N77	6L6GT	PCC88	7DJ8
LCL82	11BM8	N78	6AM5	PCC89	7FC7
LCL84	10DX8	N119	6BJ5	PCC186	7AU7
LCL85	10GV8	N142	45B5	PCC189	7E58
LCL200	10DX8	N144	6AM5	PCC805	7EK7
LF183	4EH7	N147	6M6G*	PCE800	9GB8
LF184	4EJ7	N148	7C5	PCF80	9A8
LF200	11Y9	N150	6CK5	PCF82	9U8
LL86	10CW5	N152	21A6	PCF86	8HG8
LL500	18GB5	N153	15A6	PCF200	8X9
LL505	27KG66	N154	16A5	PCF201	8U9
LL521	21KQ6	N155	6BN5	PCF800	9EN7
LN119	50BM8	N308	25E5	PCF801	8GJ7
LN152	6AB8	N309	15A6	PCF802	9JW8
LN319	13GC8	N329	16A5	PCF805	7GV7
LY81	11R3	N359	21A6	PCF806	8GJ7
LY88	20AQ3	N369	16A8	PCH200	9V9
LY500	28EC4	N378	15CW5	PCL82	16A8
LZ319	9A8	N379	15CW5	PCL84	15DQ8
LZ329	9A8	N389	25GF6	PCL85	18GV8
LZ339	9EN7	N709	6BQ5	PCL86	14GW8
M8063	6AM6	N727	6AQ5	PCL88	16GK8
M8079	5726	OBC3	12SQ7	PCL800	16GK8
M8080	6C4	OF1	6S7	PCL801	13GC8
M8081	6J6	OF5	12K7GT	PD500	9ED4
M8096	5763	OH4	12A8	PF9	6K7
M8100	5654	OM3	6H6*	PF86	4HR8
M8101	6BA6	OM4	6R7G	PF88	7ED7
M8121	5840	OM5	6S7*	PFL200	16Y9
M8136	6189	OM6	6K7	PH4	6A8
M8137	12AX7A	OSW2190	6AC7	PL21	2D21
M8162	12AT7WA	OSW2192	6AG7	PL36	25E5
M8196	5725	OSW2600	6AC7	PL81	21A6
M8204	5727	OSW2601	6AG7	PL82	16A5
M8212	5726	OSW3104	6SA7	PL83	15A6
M8223	0A2WA	OSW3105	6SQ7	PL84	15CW5
M8224	0B2WA	OSW3106	6V6GT*	PL300	35FN5
M8232	6J4WA	OSW3107	5CG4, 5Z4G	PL302	25GF6
M8245	6AQ5, 6005	OSW3109	6H6	PL500	27GB5
MU14	6BT4	OSW3110	6E5	PL505	40KG6
MV6-5	6SA7GT	OSW3111	6SK7	PL508	17KW6
N2ED	6HT5	OSW3112	6J5	PL509	40KG6
N14	1C5GT	P17A	807	PL521	29KQ6
N15	3Q5GT	PABC80	9AK8	PL801	12FB5
N16	3Q5GT	PC86	4CM4	PL820	21A6
N17	3S4	PC88	4DL4	PL1267	0A4G

Tube Type	Replacement	Tube Type	Replacement	Tube Type	Replacement
PLL80	12HU8	QW77	6CQ6	U82	7Y4*
PM04	6BA6	QZ77	6AM6	U118	31A3
PM05	6AK5§	R3	1W4	U119	38A3
PM07	6AM6	R10	6305	U142	31A3
PM95	6AK6	R12	6X2	U145	31A3
PP6BG	6M6G§	R16	1T2	U147	6X5G
PY80	19X3	R19	1X2A	U149	7Y4
PY81	17Z3	R20	2J2	U150	6BT4
PY82	19Y3	R52	5Z4G	U151	6X2
PY83	17Z3	R144	6AM6	U152	19X3
PY88	30AE3	RJ2	5Y2	U153	17Z3
PY301	19CS4	RL21	2D21	U154	19Y3
PY500	42EC4	RL1267	0A4G	U191	19CS4
PY800	17Z3	RS2	5Z4	U192	19Y3
PY801	17Z3	RS1029	6360	U193	17Z3
QA2401	6135	S6F12	6AM6	U251	17Z3
QA2404	5726	S856	0A2	U309	19X3
QA2406	12AT7WB	S860	0B2	U319	19Y3
QA2407	6201	SM150-30	0A2	U329	25BR3
QA2408	5692	SP6	6AM6	U339	19CS4
QB65	6SN7GT	SR2	0G3	U349	17Z3
QB309	12AT7	SR3	0B2	U381	38A3
QB5/1750	6079	SR55	0B2	U707	6X4
QE03/10	5763	SR56	0A2	U709	6CA4
QE05/40	6146	STR85/10	0G3	U718	6BT4*
QE05/40H	6159	STR108/30	0A2	UAF42	12S7
QE06/50	807	STR150/30	0A2	UBC41	14L7
QL77	6C4	STV85/10	0G3	UBC80	14G6
QM556	6X4W	STV108/30	0B2	UBC81	14G6
QM557	5654	STV150/30	0A2	UBF80	17C8
QM558	5725	SU61	6X2	UBF89	19FL8
QM559	5726	T6D	2B35	UC92	9AB4
QN77	6AM5*	T2M05	6J6	UCC85	26AQ8
QQE02/5	6939	T77	6C6	UCH42	14K7
QQE03/12	6360	TH62	6E8C*	UCH80	14Y7
QQE03/20	6252	TTZ63	6J7	UCH81	19D8
QQE06/40	5894	TM12	6J4	UCL82	50BM8
QQV02-6	6939	U26	2J2	UF41	12AC5
QQV03-10	6360	U31	25Z4GT	UF80	19BX6
QQV03-20	6252	U37	1T2	UF85	19BY5
QS150/40	0D3	U41	1B3GT	UF89	12DA6
QS1205	0A3	U43	6X2	UL41	45A5
QS1206	0C3	U45	6X2*	UL84	45B5
QS1207	0A2	U49	2J2	UM80	19BR5
QS1208	0B2	U50	5Y3GT	UM84	12FG6
QS1209	5651A	U51	5W4GT	UN954	954
QS1210	0A2WA	U52	5U4G	UN955	955
QS1211	0B2WA	U54	5AR4	UQ80	12BE7
QS2404	5726	U70	6X5G*	UU5	6BT4
QS2406	12AT7WA	U74	35Z4GT	UU9	6BT4*
QV03-12	5763	U76	35Z4GT	UU12	6CA4
QV05-25	807	U77	5AR4	UY41	31A3
QV06-20	6146	U78	6X4*	UY42	31A3

§ May not work in all circuits.

* Parallel-filament circuits.


Tube Type	Replacement	Tube Type	Replacement	Tube Type	Replacement
UY82	55N3	X17	1R5	XF183	3EH7
UY85	38A3	X18	1AC6	XF184	3EJ7
UY89	38A3	X20	1AC6	XL36	13CM5
V2M70	6X4	X25	1AB6	XI84	8EQ5
V61	6BT4	X61M	6E8G	XL86	8CW5
V153	17Z3	X63	6A8	XL500	13GB5
V177	6CQ6	X64	6I7	XXA91	3AL5
V311	31A3	X65	6E8	XXB	3C6
V312	31A3	X71M	12K8	XXD	14F7
V741	6C4	X73	6D8*	XXFM	7X7
V884	6CQ6	X73M	6D8*	XY88	16AQ3
V886	6AM5	X76M	12K8GT	Y25	1M3
VP6	6CQ6	X77	6BE6	Y61	6U5
VP12D	12C8	X79	6AE8	Y64	6U5
VR150	0D3	X81	7S7	YC95	3ER5
VSM70	6X4	X107	18FX6§	YC97	3FY5
VT83	83	X119	19D8	YCC189	5E58
W17	1T4	X142	14K7	YCF86	5HG8
W25	1AJ4	X147	6E8G	YCL84	10DX8
W61	6K7	X148	7S7	YCL180	5BQ7A
W63	6K7	X150	6C10	YF183	4EH7
W76	12K7*	X155	6BZ8	YF184	4EJ7
W77	6CQ6	X319	6351	YL84	10BQ5
W81	7A7	X719	6AJ8	YL86	10CW5
W110	13EC7	X727	6BE6	Z14	1N5GT
W118	12AC5	XAA91	3AL5	Z63	6J7
W119	13EC7	XB91	3AL5	Z77	6AM6
W142	12AC5	XC95	2ER5	Z150	6CU7
W143	7A7*	XC97	2FY5	Z152	6BX6
W145	12AC5	XC900	2HA5	Z300T	0A4G
W147	6K7*	XCC82	7AU7	Z329	7ED7
W148	7A7	XCC189	4ES8	Z550M	8453
W149	7B7	XCF80	4BL8	Z719	6BX6
W150	6CJ5	XCF82	5U8	Z729	6267
W719	6BY7	XCF86	2HR8	Z749	6EL7
W727	6BA6	XCF801	4GJ7	Z900T	5823
W739	6EC7	XCH81	3AJ8	ZA2	954*
WD142	12S7	XCL82	8B8	ZD17	1S5
WD150	6CT7	XCL85	9GV8	ZD25	1AH5
WD709	6N8	XF80	3BX6	ZD152	6N8
WT301	83	XF85	3BY7	ZZ1000	8228
X14	1A7GT	XF94	3AU6		

SECTION 7




































Tube Basing Diagrams


This section gives the basing diagrams for American receiving and picture tubes. Receiving-tube basings are listed first in numerical order. Then the picture-tube basings are given. Obtain the basing code listed in Sections 1, 2, or 4 and then refer to the applicable diagram in this section for the pin connections.

This information will serve as a valuable guide to make quick checks when a schematic is not available.

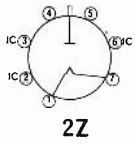


2Z

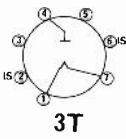





5B




5C




5D




5E




5F




5K




5L




5M




5Q




5R




5S




5T




5U



5Y




5Z




5AA




5AB




5AC




5AD



5AF




5AG




5AK



5AL




5AM




5AP




5AW




5BF




5BO




5BQ




5BS




5BT




5BZ




5CE




5CF




5DA




5DE




6A




6B




6C




6D




6E




6F




6G




6H




6J




6K




6L



6M




7Q



7R



7S




7T




7U




7V




7W




7Z



7AA




7AB




7AC



7AD



7AF



7AG




7AH



7AJ




7AK




7AM



7AO




7AP




7AT




7AU




7AV




7AX




7AZ




7BA



7BB




7BC



7BD




7BE



7BF




7BH




7BJ



7BK




7BN




7BP




7BQ




7BR



7BS



7BT




7BW




7BZ




7CA



7CB




7CH




7CJ



7CM



7CV




7CY




7DB




7DC




7DE




7DF




7DH




7DJ



7DK




7DP




7DQ




7DR



7DT




7DW




7DX




7EA




7EG




7EN




7ES




7ET




7EW




7FB




7FD




7FL




7FN / 7FP




7FQ




7FT




7FW




7FZ




7GA




7GK




7GM




8A




8B




8C




8E




8F




8G




8H




8K




8L




8N




8O




8Q




8R




8S




8T




8U




8V




8W



8X




8Y




8Z




8AA



8AB




8AC



8AD




8AE




8AF




8AG



8AJ




8AL



8AN



8AO




8AR




8AS



8AU




8AV




8AX




8AY



8BD




8BE




8BF




8BJ




8BK




8BL



8BN




8BO




8BS



8BU




8BV




8BW




8BZ




8CB



8CH



8CJ




8CK




8CQ




8CT




8DU




8EL




8EM




8EP




8EV




8EW




8EZ




8FP




9L




9M



9N




9Q




9R




9S




9T




9U




9Y



9Z




9AA




9AC




9AD




9AE




9AG




9AH



9AJ




9AK




9AM




9AQ




9AR




9AS



9AT




9AU




9AX




9AZ




9BA



9BB




9BC




9BD




9BF




9BG




9BJ



9BK



9BL




9BM



9BN



9BP



9BQ



9BS



9BU




9BV



9BX



9CA



9CB




9CF




9CK




9CQ



9CR



9CV




9CY



9CZ




9DA




9DB




9DC



9DD




9DE




9DJ



9DP




9DR




9DS



9DT




9DW



9DX



9DZ




9EC




9ED




9EE




9EG




9EN




9ER



9ES




9EU




9EX



9FA




9FC




9FE




9FG




9FH




9FJ



9FK




9FN




9FT




9FU



9FX




9FZ



9GA



9GC



9GD



9GE




9GF



9GJ



9GK



9GM




9GR




9GS




9GT



9HC



9HE



9HF




9HG




9HK




9HL




9HN




9HP




9HR




9HV



9HX




9HZ




9JC




9JD




9JE




9JF



9JG




9JL




9JT




9JU




9JX




9JY




9KA




9KG




9KN




9KP



9KR




9KT



9KU



9KV



9KZ




9LC



9LE



9LM



9LP




9LQ



9LS



9LT



9LW




9LX



9LY



9LZ



9MB




9ME




9MJ



9MP




9MQ




12BQ




12BR




12BT



12BU




12BW




12BY




12CA



12DA




12DG




12DM



12DP




12DR




12DZ




12EA




12EB




12EJ




12EL




12EN



12EO




12ER



12ES




12EU



12EW




12EY




12EZ



12FA



12FB




12FC




12FE




12FJ




12FK




12FL




12FM




12FN




12FP




12FQ



12FR




12FS




12FU




12FV




12FX




12FY



12GA



12GC




12GD




12GF




12GH




12GK

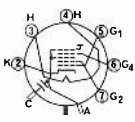


7FA

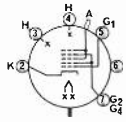


7FG

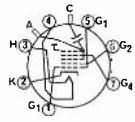


7GR

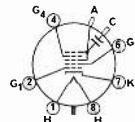


8GM

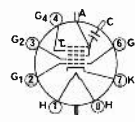


8HR

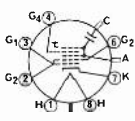


8JK

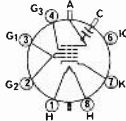


8JN

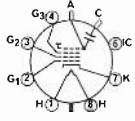


8JR

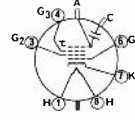


8JS

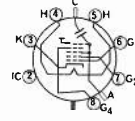


8KP

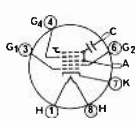


8KW

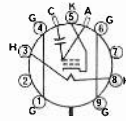


9CH

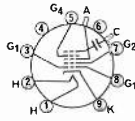


9RS

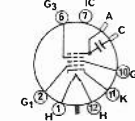


12C

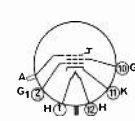


12D

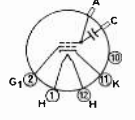


12G

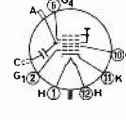


12L

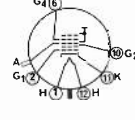


12M

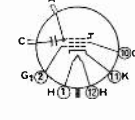


12N

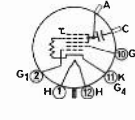


12P

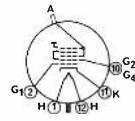


12S

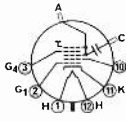


12AB

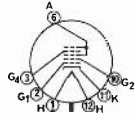


12AD

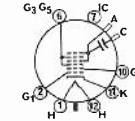


12AJ

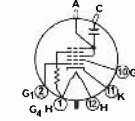


12AT

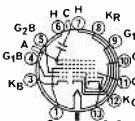


13C

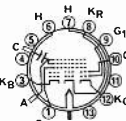


13D

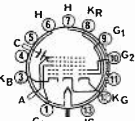


13G

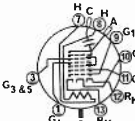


13K

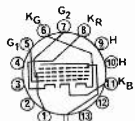


13L

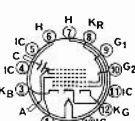


13M

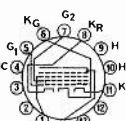

13N

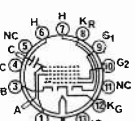


13R

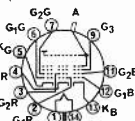


14W




14AH

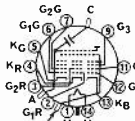


14AL

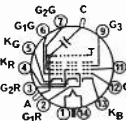


14AU

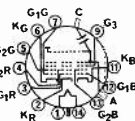


14BE

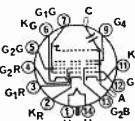


14BH

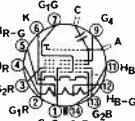


14BJ

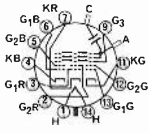


14BK

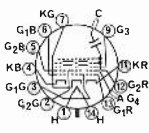


14BM

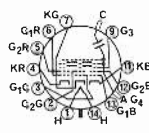

14BP

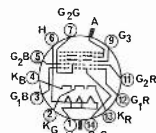

14BQ

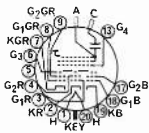

20A



Radio Shack®
A TANDY CORPORATION COMPANY