

CS-1060
CS-1040
(TRIPLE TRACE OSCILLOSCOPE)



TRIO

SPECIFICATIONS

	CS-1060	CS-1040
CRT	150HTM31 Rectangular, with internal graticule	150JTM31 Rectangular, with internal graticule
Acceleration Voltage	16 kV	12 kV
Display Area	8 x 10 div (1 div = 10 mm)	
VERTICAL AXIS		CH1 and CH2
Sensitivity	1 mV/div to 5 V/div, ± 3%	
Attenuator	12 steps, 1 mV/div to 5 V/div in 1-2-5 sequence. Vernier control for fully adjustable sensitivity between steps.	
Input Impedance	1 MΩ ± 2%, approx 20 pF	
Frequency Response		
5mV/div to 5V/div	DC; DC to 60 MHz, -3 dB AC; 5 Hz to 60 MHz, -3 dB	DC; DC to 40 MHz, -3 dB AC; 5 Hz, to 40 MHz, -3 dB
1 mV/div, 2 mV/div	DC; DC to 20 MHz, -3 dB AC; 5 Hz to 20 MHz, -3 dB	DC; DC to 15 MHz, -3 dB AC; 5 Hz to 15 MHz, -3 dB
Rise Time	5.8 nsec or less (60 MHz) 17.5 nsec or less (20 MHz)	8.8 nsec or less (40 MHz) 23.4 nsec or less (15 MHz)
Signal Delay Time	Approx. 20 nsec on the CRT screen	
Crosstalk	-40 dB minimum	
Operating Modes	CH1; single trace CH2; single trace ADD; CH1 + CH2 added as a single trace DUAL; CH1 and CH2, dual trace TRIPLE; CH1, CH2 and CH3 triple trace ALT; dual trace or triple trace, alternating CHOP; dual or triple trace, chopped	
Chop Frequency	Approx. 250 kHz	
Channel Polarity	Normal or inverted, channel 2 only inverted	
⚠ Maximum Input voltage	500 Vp-p or 250 V (DC + AC peak)	
Non-Distorted Maximum Amplitude	More than 8 div (DC to 60 MHz)	More than 8 div (DC to 40 MHz)
VERTICAL AXIS		CH3
Sensitivity	0.1 V/div and 1 V/div ± 3%	
Input Resistance	1 MΩ ± 2%	
Input Capacitance	Approx 27pF	
Frequency Response	DC: DC to 60 MHz, -3 dB AC: 5 Hz to 60 MHz, -3 dB	DC: DC to 40 MHz, -3 dB AC: 5 Hz to 40 MHz, -3 dB
Rise Time	5.8 nsec or less	8.8 nsec or less
Signal Delay Time	Same as CH1 and CH2	
⚠ Maximum Input Voltage	50 V (DC + AC peak)	
HORIZONTAL AXIS		Input thru CH2, × 10 MAG not included
Operating Modes	With HORIZ DISPLAY switch, X-Y operation is selectable CH1; Y axis CH2; X axis	
Sensitivity	Same as vertical axis (CH2)	

SPECIFICATIONS

	CS-1060			CS-1040				
Input Impedance	Same as vertical axis (CH2)							
Frequency Response	DC; DC to 1 MHz, -3 dB AC; 5 Hz to 1 MHz, -3 dB							
X-Y Phase Difference	3° or less at 100 kHz							
⚠ Maximum Input Voltage	Same as vertical axis (CH2)							
SWEEP								
Type	A; A sweep ALT; A sweep (intensified for duration of B sweep) and B sweep (delayed sweep) alternating INT; Duration of B sweep is displayed as an intensified portion of A sweep. B; Delayed sweep X-Y; X-Y oscilloscope							
Sweep Time	A	0.05 μ s/div to 0.5 s/div, ±3% in 22 ranges, in 1-2-5 sequence. Vernier control provides fully adjustable sweep time between steps.		0.1 μ s/div to 0.5 s/div, ±3% in 21 ranges, in 1-2-5 sequence. Vernier control provides fully adjustable sweep time between steps.				
	B	0.05 μ s/div to 50 ms/div in 19 ranges, in 1-2-5 sequence.		0.1 μ s/div to 50 ms/div in 18 ranges, in 1-2-5 sequence.				
Sweep Magnification	$\times 10$ (ten times) ±5%							
Linearity	±3% all ranges, ±5% on 0.05 μ s/div to 0.1 μ s/div range at $\times 10$ MAG.							
Holdoff	Continuously variable from NORM to more than ten times (MAX)							
Trace Separation	B sweep can be separated from A sweep up to 4 divisions, continuously adjustable.							
Delay Method	Continuous delay (STARTS AFTER DELAY), Trigger delay (TRIG), Zero delay (DELAY TIME ZERO)							
Delay Time	From 500 nsec to 0.5sec. Available delay time is 0.2 to 10 times the A sweep time setting, continuously adjustable.							
Time difference measurement accuracy	±2%							
Delay Jitter	1/20000 of ten times of A sweep time setting							
TRIGGERING								
Trigger mode	AUTO, NORM, FIX, SINGLE							
Trigger source	V.MODE; Trigger selected by vertical MODE switch. CH1; Triggered by CH1 signal CH2; Triggered by CH2 signal CH3/EXT; Triggered by CH3 signal LINE; Triggered by line voltage							
Coupling	AC, HF rej, DC, VIDEO FRAME, VIDEO LINE							
Trigger sensitivity	FREQ.RANGE		INT	EXT	FREQ.RANGE	INT		
	DC		DC - 60 MHz	1 div	0.1 Vp-p	DC - 40 MHz		
	AC		Same as for DC but increased minimum level below 10 Hz					
	AC, HF rej		Increased minimum level below 10 Hz and above 20 kHz					
	VIDEO		FRAME, LINE	1 div	0.1 Vp-p	FRAME, LINE		
	1 div			0.1 Vp-p		0.1 Vp-p		
	AUTO: Same as above specifications for above 50 Hz. FIX: Same as above specifications for above 50 Hz.							

SPECIFICATIONS

	CS-1060	CS-1040
PROBE ADJ. VOLTAGE	0.5 V, $\pm 6\%$, square wave, positive polarity, approx 1 kHz	
INTENSITY MODULATION		
Sensitivity	TTL compatible positive voltage increases brightness, negative voltage decreases brightness.	
Input Impedance	Approx. 10 k Ω	
Usable Frequency Range	DC to 5 MHz	DC to 3.5 MHz
⚠ Maximum Input Voltage	50 V (DC + AC peak)	
VERTICAL AXIS SIGNAL OUTPUT	CH1 OUTPUT	
Output Voltage	Approx. 50 mV/div into 50 Ω	
Output Impedance	Approx. 50 Ω	
Frequency Response		
5 mV/div to 5 V/div	100 Hz to 60 MHz, -3 dB into 50 Ω	100 Hz to 40 MHz, -3 dB into 50 Ω
1 mV/div, 2 mV/div	100 Hz to 20 MHz, -3 dB into 50 Ω	100 Hz to 15 MHz, -3 dB into 50 Ω
GATE OUTPUT		
Output Voltage	TTL compatible	
Output Impedance	Approx. 220 Ω	
SWEEP OUTPUT		
Output Voltage	1 Vp-p	
Output Impedance	Approx. 1 k Ω	
POWER REQUIREMENT		
Power Supply	100 V/120 V/220 V/240 V $\pm 10\%$	
Line Frequency	50/60 Hz	
Power Consumption	Approx. 65 W	
DIMENSIONS (W × H × D)	304(346) × 160(173) × 401(461) mm () dimensions include protrusion from basic outline dimensions	
WEIGHT	Approx. 11 kg	
ENVIRONMENTAL		
Within Specifications	10°C to 35°C, 85% max. relative humidity	
Full Operation	0°C to 50°C, 90% max. relative humidity	
ACCESSORIES SUPPLIED		
Probe	PC-29....2	PC-20....2
Spare Fuse	2 A....2 1 A....2	
Operators Manual	1	

* Circuit and rating are subject to change without notice due to developments in technology.

STANDARD ACCESSORIES INCLUDED

Probe (PC-20)	Y87-1840-00
Attenuation.....	1/10, 1/1
Input Impedance	
1/10	10 M Ω , 18pF or less
1/1	1 M Ω , 100pF or less
Probe (PC-29)	Y87-1250-00
Attenuation	1/10
Input Impedance.....	10 M Ω , 18pF or less

Instruction Manual.....	B50-7510-00
Replacement Fuse	
2 A	F05-2023-05
1 A	F05-1023-05

OPTIONAL ACCESSORIES

Probe Pouch (MC-78).....	Y87-1600-00
Service Manual	B51-1034-00

SPECIFICATIONS

CRT 150HTM 31 SPECIFICATIONS

(150JTM31 for CS-1040)


Screen and Shape

Dimensions:

Overall length;	310 ± 7 mm (300 ± 7 mm)
Face plate dimensions;	149 ± 3 mm
Screen shape;	Rectangular flat face, internal graticule, metal back
Deflection and focusing system;	Electrostatic deflection, electrostatic focusing and post-deflection acceleration
Color;	Green
Persistence;	Medium short
Useful display area	Y axis.....80 mm X axis.....100 mm

Heating

Heater voltage	6.3 V
Heater current	95 mA

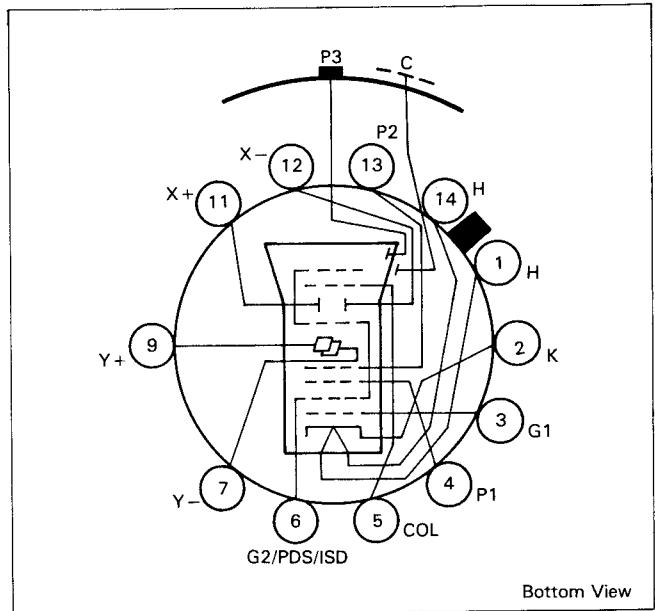

Bottom View

Fig. 2 150HTM31 Basing


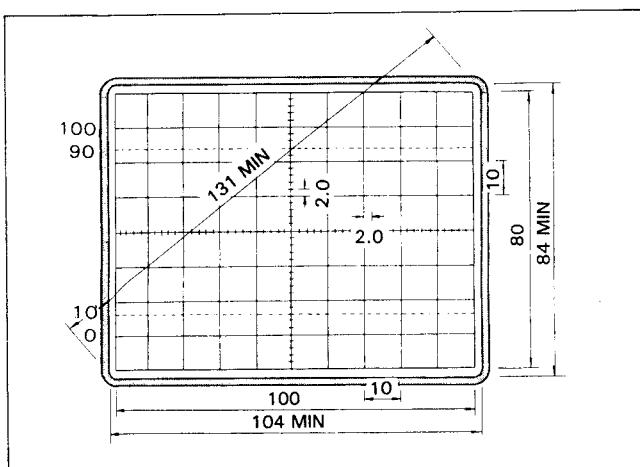


Fig. 1 Graticule

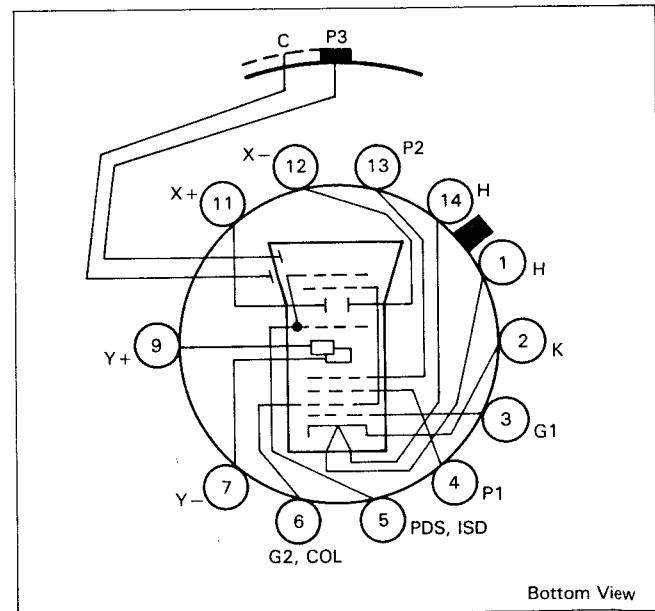

Bottom View

Fig. 3 150JTM31 Basing

SAFETY

SAFETY

Before connecting the instrument to a power source, carefully read the following information, then verify that the proper power cord is used and the proper line fuse is installed for power source. The specified voltage is shown at the left side of the power cord on the rear panel. If the power cord is not applied for specified voltage, there is always a certain amount of danger from electric shock.

Line voltage

This instrument operates using ac-power input voltages that 100/120/220/240 V at frequencies from 50 Hz to 60 Hz.

Power cord

The ground wire of the 3-wire ac power plug places the chassis and housing of the oscilloscope at earth ground. Do not attempt to defeat the ground wire connection or float the oscilloscope; to do so may pose a great safety hazard. The appropriate power cord is supplied by an option that is specified when the instrument is ordered.

The optional power cords are shown as follows in Fig. 4.

Line fuse

The fuse holder is located on the rear panel and contains the line fuse. Verify that the proper fuse is installed by replacing the line fuse.

Voltage conversion

This oscilloscope may be operated from either a 100 V to 240 V, 50/60 Hz power source. Use the following procedure to change from 100- to 240 volt operation or vice versa.

1. Remove the top section of case.
2. Unplug the leadwire of the voltage selector P37 located on the connection unit (X77-1300).
3. Reinsert it for appropriate voltage range.
4. Replace fuse F 1 with a fuse of appropriate value, 2 amp for 100 VAC to 120 VAC operation, 1 amp for 220 VAC to 240 VAC operation.
5. When performing the reinsertion of leadwire for the voltage conversion the appropriate power cord should be used. (See Fig. 4.)

Plug configuration	Power cord and plug type	Factory installed instrument fuse	Line cord plug fuse	Parts No. for power cord and plate
	North American 120 volt/60 Hz Rated 15 amp (12 amp max; NEC)	2 A, 250 V Fast blow AGC/3AG	None	Cord: E30-1854-05 Plate: J21-2985-04
	Universal Europe 220 volt/50 Hz Rated 16 amp	1 A, 250 V Fast blow 5x20 mm	None	Cord: E30-1852-05 Plate: J21-2984-04
	U.K. 240 volt/50 Hz Rated 13 amp	1 A, 250 V Fast blow 5x20 mm	1 A Type C	—
	Australian 240 volt/50 Hz Rated 10 amp	1 A, 250 V Fast blow 5x20 mm	None	Cord: E30-1853-05 Plate: J21-2983-04
	North American 240 volt/60 Hz Rated 15 amp (12 amp max; NEC)	1 A, 250 V Fast blow AGC/3AG	None	—
	Switzerland 240 volt/50 Hz Rated 10 amp	1 A, 250 V Fast blow AGC/3AG 5x20 mm	None	—

Fig. 4 Power Input Voltage Configuration

CIRCUIT DESCRIPTION

VERTICAL ATTENUATOR UNIT

The CS-1060/1040's attenuator unit includes attenuators, $\times 5$ amplifier, and preamplifier. First attenuator immediately comes after the AC-GND-DC selector switch and second attenuator follows impedance conversion. First attenuator provides attenuations of 1/1, 1/10, and 1/100, and the second of 1/1, 1/2, and 1/5. In impedance conversion, the input signal is separated into high- and low-frequency components and the high-frequency components are converted by Q3 and the low-frequency are converted by U1.

The $\times 5$ amplifier comprises U2c/d and Q7, 8, operating only when the 1 mV/div and 2 mV/div ranges are selected. The preamplifier comprises U2a/b and Q9, 10 and amplifies the output signal of the attenuator. supplying the resulting signal to the preamplifier unit. In this stage, VARIABLE ATT (VR5, 6) permits to vary gain continuously.

VERTICAL PREAMPLIFIER UNIT

The vertical preamplifier unit comprises three preamplifiers which amplify signals channel 1 and channel 2 coming from the attenuator unit and signal channel 3 coming from the sweep unit; vertical mode selector which switches the signals; and the output amplifier which delivers the selected signal to the vertical final amp unit.

The preamplifier of channel 1 comprises Q1, 2 of the POSITION circuit and Q3-5, Q12 and Q13 of the cascode amplifier. The signals developing at the emitters of Q3 and Q4 pass through emitter followers Q6 and Q7 before getting output as signal channel 1 trigger signal via Q8 and as channel 1 output signal via the channel 1 output circuit of Q9-11 and D3.

Similarly, the preamplifier of channel 2 comprises Q21, 22 of the POSITION circuit and Q23-25 and Q30-32 of the cascode amplifier which is provided with the capability of CH2 INV. The signals developing at the emitters of Q23 and Q24 pass through Q26-29 before getting output as X-Y and channel 2 trigger signals.

The vertical mode selector switches channels by driving Q47-49 according to the Enable signal supplied from the vertical mode logic of the trigger unit. The selected signal passes emitter followers Q61, 62 and go out through the output amplifier of Q64-67. The output amplifier includes U2 and Q63 which keep the operating level of Q61, 62 fixed and the vertical mode trigger output circuit comprising Q68, 69 and D31, 32.

Preamplifier of channel 3 comprises Q41-46 of cascode amplifier.

VERTICAL FINAL AMPLIFIER

The vertical signal comes from the vertical preamplifier to the final amplifier via a delay line. The final amplifier comprises grounded-base Q1, 2 and two stages of cascode amplifiers, Q3-6 and Q7-10. The output of the amplifier is connected to the Y-deflection plate of the CRT. The final

amplifier also includes U1 and D1, 2 which keep the operating level fixed, eliminating adjustment.

VERTICAL MODE LOGIC

The vertical-MODE switch signal and the horizontal display signal both enter the vertical mode logic, one from the vertical preamplifier unit and the other from the sweep unit. The logic comprises U8c/d, U5a, and D18 of the chop signal generator; U3b and U5b of the divider during horizontal display ALT mode; and U4, U6, U7a/b/d, and U8b generating the Enable signal, and controls vertical mode.

TRIGGER SIGNAL GENERATOR

Output trigger singals of channel 1, channel 2 and vertical mode coming from the vertical preamplifier unit and channel 3 and line coming from the sweep unit, one is selected by the trigger source selection circuit comprising S1, Q1-3, and D1-6 and again by the trigger coupling selection circuit comprising S2a/b and Q4-6. For ordinary signal, the trigger amplifier of Q16-19 amplifies the selected trigger signal, the Schmitt circuit of U11a/b shapes its waveform, and U11c selects SLOPE. the trigger level is controlled by varying the base leve of Q17, with U9b and Q7 driven by the signal supplied from VR7a. At FIX, the outputs of Q9 and D12, 13 determine the level.

For video signal, on the other hand, the video synchronization circuit comprising Q10-15, Q59, U9a, D7, 8, D11, and D14 separates the sync signals which are output as trigger signals after U12b has shaped the waveform. The trigger signal, selected by U12a/c/d, is delivered to the sweep unit.

BLANKING CIRCUIT

The A-blanking and B-blanking signals coming from the sweep unit enter the blanking control circuit via Q20, 21 and Q58. The blanking control circuit comprises U1a/c, U2a/b/c, U3a, U5c/d, U7c and U8a. The logic singal formed of the HORIZ DISPLAY switch and blanking signals drives Q22-24 to control the collector current of Q26 and generate the output signal to the blanking amplifier.

U1d, U2c, Q29-32, and Q57 form the trace separation circuit which controls the vertical position of B-sweep when selected HORIZ DISPLAY switch to ALT.

The input singal to the blanking amplifier varies also with INTENSITY control and the outputs of Q25 and of the external intensity modulation circuit comprising Q28 and D19, 20. The blanking amplifier consists of Q27 and Q33-40. The amplified signal is, after added with a high dc voltage by the dc regenerating circuit of D31-36, sent to the CRT as the auto-focus and intensity signals. The dc-dc converter is formed of Q51, 52, Q55, 56, and U10b.

CIRCUIT DESCRIPTION

CHANNEL 3 ATTENUATOR CIRCUIT

The channel 3 input terminal is common to the input of external trigger signal. The input signal enters the amplifier of Q1-5, Q34, and U8 via the channel 3 attenuator which selects either 0.1 V/div or 1 V/div. Channel 3 position control varied by detecting the dc signal coming from the trigger unit with U8 and driving the base of Q4. The outputs of differential amplifiers Q4-5 are delivered respectively to the trigger source selecting circuit and the channel 3 preamplifier as the channel 3 trigger signal and the channel 3 signal.

HORIZONTAL SWEEP CIRCUIT

The trigger pulse comes from the trigger control unit to the A sweep logic circuit of U1a, U2a/b, U3a, and U5a/b and to the B sweep logic circuit of U1b, U3c/d, U4, and U6. To the A/B sweep logic circuit, signals come from the holdoff circuit comprising U5c, Q16, 17, Q35, 36, and D10, the delay time generator of Q19, 20 and Q22, and the auto-free-run circuit of U2c/d, U3b, and U5d. These signals, together with the signals of trigger mode and the horizontal display logic, time the generation of the sawtooth waves which are supplied to the A/B sweep sawtooth wave generators.

The A sweep sawtooth wave generator comprises Q6-8, Q37, Q41, D4, sweep rotary switch, and R-C providing time constants out of which the rotary switch selects one. When H (high) comes from the A sweep logic, Q6 turns off and its collector voltage falls. Then Q41 turns off, the gate voltage of Q7 falls, and Q7, 8 turn off. As a result, the capacitor selected with the sweep rotary switch begins to get charged, with a sawtooth wave generated. When the voltage across the capacitor rises to a certain level, the sweep stop circuit of Q9, 10 inverts flip-flop U5a/b to stop sweep.

B sweep is performed similarly. The sawtooth wave generator of Q11-13, Q38, and Q42, the sweep stop circuit of Q14, 15 and flip-flop U6a/b cooperate to generate a sawtooth wave.

U7b/c is a flip-flop working for single sweep (sweep will be performed only once after getting reset). U7a and Q33 drive the READY LED.

A/B-SWEEP AND X-Y SELECTION CIRCUIT

The A/B sweep and X-Y selection circuits, comprising Q18, Q23-28, Q40, and D11, switches the sawtooth waves generated by the A/B sweep sawtooth wave generators and the X signal of the channel 2 preamplifier. During A sweep, D11 turns off according to signal QB and Q23 turns on so that the sawtooth wave of A sweep is output from emitter follower Q26. During B sweep (or X-Y) mode, Q18 and Q40 turns off and signal comes from Q24 and Q25. Q27 controls the emitter currents of Q23 and Q24 to move horizontal position.

HORIZONTAL FINAL AMPLIFIER UNIT

The horizontal signal comes from the A/B sweep and X-Y selection circuits to the horizontal final amplifier comprising Q41-50, which amplifies the signal before applying to the X deflection plate of the CRT. Q43, 44 are FET switches which are on during $\times 10$ MAG mode to raise gain to ten times.

HIGH-VOLTAGE BLOCK

(*applies to the CS-1040.)

The acceleration voltage of the CRT is 16 kV (*12 kV). The converter transformer and the high-voltage rectification circuit are contained in the high-voltage block sealed with resin for safety. The outputs of the high-voltage block are -1.75 kV dc (applied to the cathode), 6.3 V ac (for the CRT's heater), and 14 kV (*10.5 kV) (applied to the anode for acceleration).

PROBE CALIBRATION VOLTAGE GENERATOR

The probe calibration voltage generator is mounted on the connection unit and comprises U1a and D1-3.

The trace rotation circuit, also mounted on the connection unit, drives the rotation coil to vary the declination of the trace according to the outputs of Q1, 2.

POWER SUPPLY

The voltage regulator generates varying voltages with reference to -15 V. D21 provides the reference voltage. Operational amplifier U9a compares voltages. And Q2 regulates the -20 V which D14 provides to generate -15 V.

For +5 V, a voltage divided from -15 V with resistors is applied to U10b, which drives Q4 to regulate the +9 V provided by D15. Similarly, +15 V, +50 V, and +120 V are obtained by regulating the voltages which D14, D17, and D16 have rectified respectively with U9b and Q3; U10a, Q31, and Q5; and U11, Q32, and Q6.

BLOCK DIAGRAM

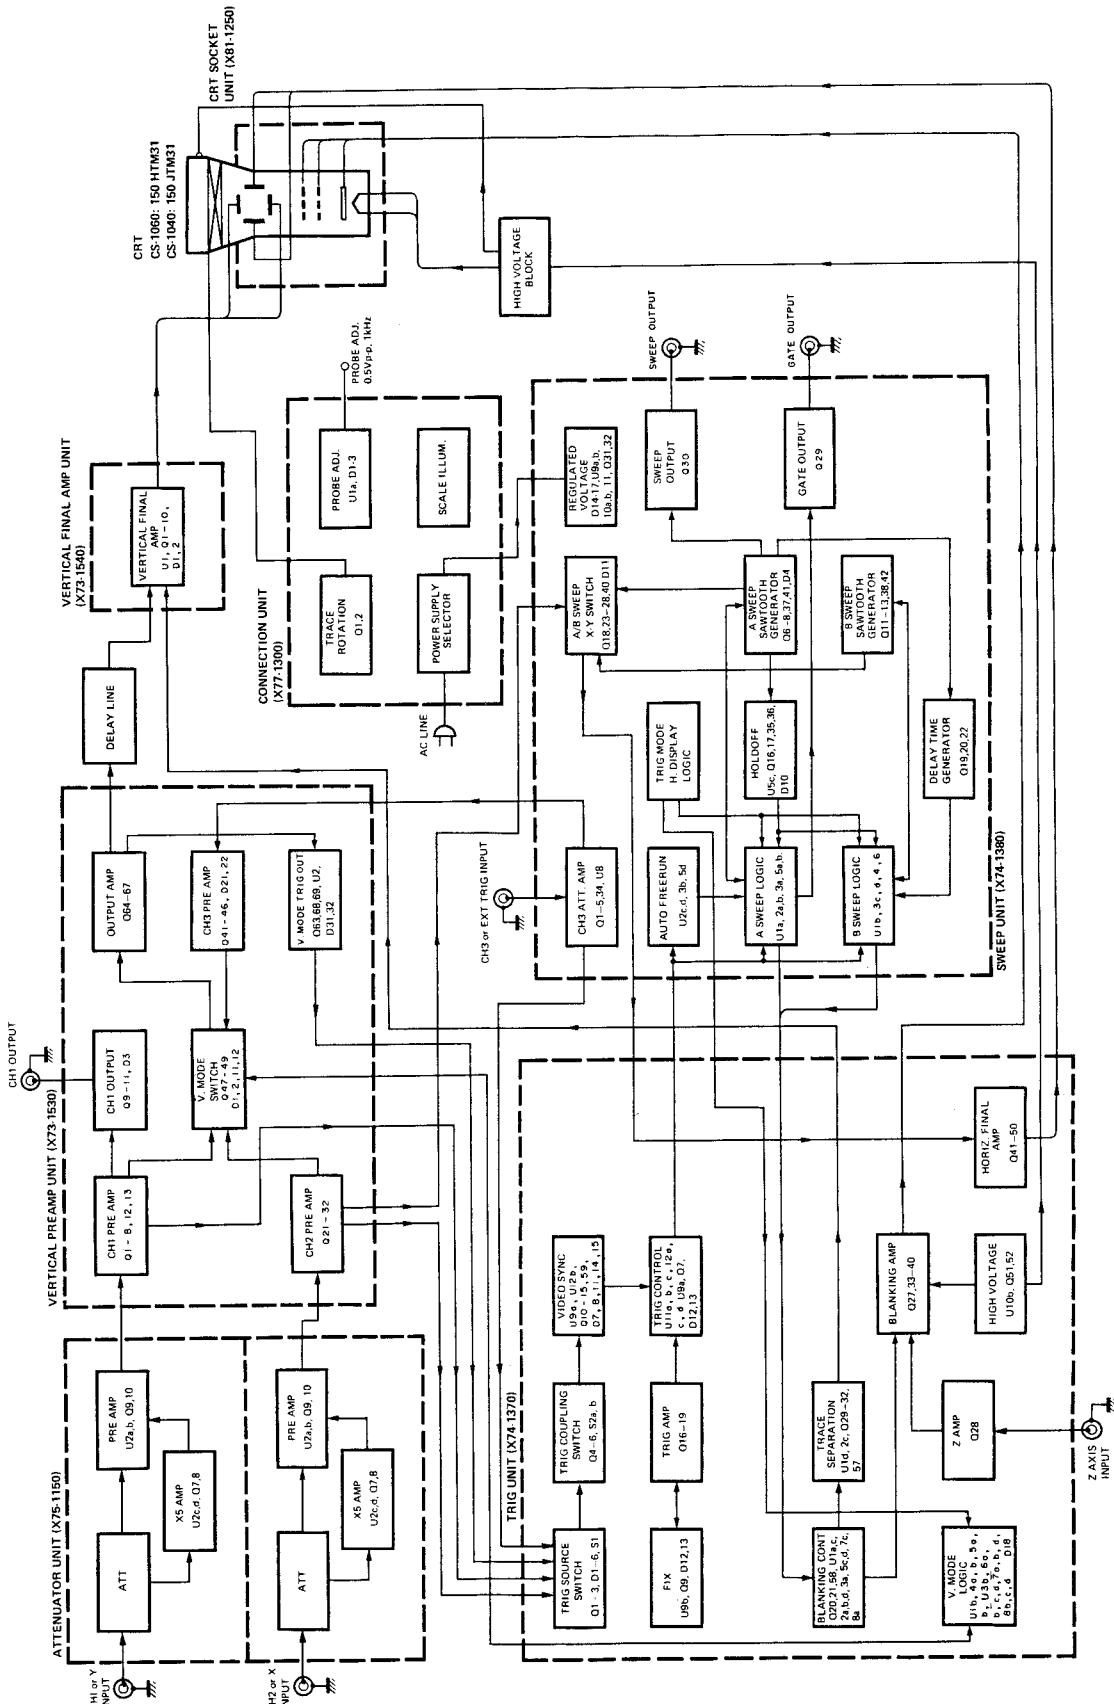


Fig. 5

ADJUSTMENT

To obtain the best performance, periodically calibrate the unit. Sometimes, only one mode need be calibrated, while at other times, all modes should be calibrated. When one mode is calibrated, it must be noted that the other modes may be affected. When calibrating all modes, perform the calibration in the specified sequence.

The following calibration required an accurate measuring instrument and an insulated adjusting flat blade screwdriver. If they are not available, contact your dealer. For optimum adjustment, turn the power on and warm up the scope sufficiently (more than 30 minutes) before starting.

Before calibrating the scope, check the power supply voltage.

TEST EQUIPMENT REQUIRED

The following instrument or their equivalent should be used for making adjustment.

Test Equipment	Model	Minimum Specification
Digital Multi-Meter	DL-706 (TRIO)	Impedance: More than 10 MΩ, Measuring range: 0.01 V to 199 V
Sine-Wave Generator	651 B (YHP)	Frequency: 10 Hz to 10 MHz, constant voltage over tuning range
Sine-Wave Generator	SG-503 (Tektronix)	Frequency: 50 kHz to 100 MHz, Output impedance: 50 Ω, constant voltage over tuning range.
Square-Wave Generator	PG-506 (Tektronix)	Output signal: 1 kHz, Amplitude: 10 mVp-p to 10 Vp-p, Accuracy: within ± 1%, Rise time: 35ns or less 100 kHz, Rise time: 1 ns or less
Q Meter	4343B (YHP)	—
Color Pattern Generator	CG-911A (TRIO)	—
Oscilloscope	CS-2100A (TRIO)	Sensitivity: more than 5 mV Frequency response: More than 100 MHz
Time-Marker Generator	TG-501 (Tektronix)	Time mark: 0.5 s to 0.1 μs repetitive waveform
High-Voltage Probe	—	Input Impedance: 1000 MΩ
Termination	—	Impedance: 50 Ω Accuracy: within 3%
Termination	—	3 watts type impedance: 50 Ω
Attenuator	—	–20 dB attenuation (50 Ω)

Table 1

PREPARATION FOR ADJUSTMENT

Control Setting

The control setting listed below must be used for each adjustment procedure.

Exceptions to these settings will be noted as they occur.

After completing a adjustment, return the controls to the following settings.

NAME OF KNOBS	POSITION
INTENSITY	3 o'clock
FOCUS, ASTIG	Optimum position
CH1, CH2 ▲ POSITION	Mechanical center
◀ ▶ POSITION/PULL × 10MAG	Mechanical center, push
VARIABLE, A VARIABLE (VOLTS/DIV, SWEEP TIME/DIV)	CAL
AC-GND-DC (CH1 and CH2)	DC (GND at no signal)
Vertical MODE	CH1
CH2 POLARITY	NORM
COUPLING	AC
SOURCE	V.MODE
TRIG. LEVEL	Mechanical center, push
TRIG. MODE	AUTO
VOLTS/DIV (CH1 and CH2)	10 mV/DIV
A, B SWEEP TIME/DIV	1 ms/DIV
HOLDOFF	Fully CCW, NORM, Push
B MODE	DELAY TIME ZERO
HORIZ DISPLAY	A
CH3 AC, GND, DC	DC, 0.1 V
DUAL TRI	DUAL (■)
DELAY TIME MULT	Optimum position

Table 2

ADJUSTMENT

POWER AND CRT ADJUSTMENT

Reference voltage (+ 120 V) adjustment

1. Connect a dc voltmeter to measure the voltage at TP12 (X74-1380) with respect to the chassis.
2. Adjust VR7 for + 120 V \pm 1.2 V reading on the meter.

Reference voltage check

1. Connect a dc voltage to measure the voltage at P24 (X74-1380) as shown in table 1.

Pin no.	4	7	8	9
Voltage	50V \pm 2.5V	15V \pm 0.75V	-15V \pm 0.75V	5V \pm 0.25V

Table 3

2. Connect a dc voltmeter to measure the voltage at TP10 (X74-1370) using a high voltage probe and check the voltage for - 1.75 kV \pm 0.08 kV reading on the meter.

ASTIG and FOCUS adjustment

1. Select the HORIZ DISPLAY switch to X-Y position and both channel 1 and channel 2 AC-GND-DC switches to GND positions.
2. Pull the PULL ASTIG control and adjust the FOCUS control for the sharpest, roundest spot when centering the ASTIG and FOCUS controls.

INTENSITY adjustment

1. Select the HORIZ DISPLAY switch to X-Y position and both channel 1 and channel 2 AC-GND-DC switches to GND positions.
2. Adjust VR5 (X74-1370) so that the trace disappears when the INTENSITY control setting is reduced to 9:30 position.
3. Clockwise rotation should increase brightness of the trace and counterclockwise rotation should decrease brightness of the trace. Fully counterclockwise should disappear the spot.

TRACE ROTATION adjustment

1. Set the channel 1 AC-GND-DC switch to GND position.
2. Set the scope controls to display a horizontal trace with no input signal (triggering MODE switch in AUTO position).
3. Use the channel 1 position control as required to position the trace along a horizontal line of the graticule scale.
4. Adjust TRACE ROTATION control so trace is parallel with the reference line on the graticule scale.

Pattern distortion adjustment

1. Select the HORIZ DISPLAY switch to X-Y position.
2. Apply a 50 kHz sine wave signal to channel 1 input and apply a 1 kHz sine wave signal to channel 2 input to display a waveform of 8 div \times 8 div amplitude.
3. Adjust VR6 (X74-1370) so the vertical and horizontal bendings are less than 0.2 division.

CRT centering adjustment

1. Short the test point TP1 to TP2 on the vertical output unit (X73-1540).
2. Select auto triggering mode.
3. Adjust VR1 (X73-1540) to center the trace vertically.

VERTICAL AXIS ADJUSTMENT

Channel 1 and channel 2 dc balance adjustment

1. Set the scope controls for a single horizontal trace on channel 1 with the channel 1 AC-GND-DC switch set to GND position.
2. Rotate the channel 1 VARIABLE control from maximum clockwise to maximum counterclockwise, while observing the trace.
3. If the trace moves vertically, adjust VR4 (X75-1150) for minimum or zero vertical movement when performing step 2.
4. Rotate the channel 1 VOLTS/DIV switch through the 10 mV, 20 mV and 50 mV positions while observing the trace.
5. If the trace moves vertically, adjust VR2 (X75-1150) for minimum or zero vertical movement when performing step 4.
6. Rotate the channel 1 VOLTS/DIV switch through 1 mV and 2 mV positions while observing the trace.
7. If the trace moves vertically, adjust VR3 (X75-1150) for minimum or zero vertical movement when performing step 6.
8. Repeat the entire procedure for channel 2.

Channel 2 invert position adjustment

1. Select CH2 mode and set the channel 2 position control to its mechanical center.
2. Push the channel 2 INV push-button and adjust VR12 (X73-1530) to center the trace vertically.
3. Repeat step 1 and 2 if necessary so trace does not shift when channel 2 INV switch is alternately pushed and pushed.

Channel 2 position adjustment

1. Select CH2 mode and set the channel 2 position control to its mechanical center.
2. Adjust VR31 (X73-1530) to center the trace vertically.

Channel 1 position adjustment

1. Select CH1 mode and set the channel 1 position control to its mechanical center.
2. Adjust VR2 (X73-1530) to center the trace vertically.

Add position adjustment

1. Set the channel 1 and channel 2 position controls to their mechanical center and AC-GND-DC switches to GND positions and select the vertical MODE switch to ADD position (both CH1 and CH2 engaged).
2. Adjust VR32 (X73-1530) to center the trace vertically.

ADJUSTMENT

Vertical position readjustment

1. Set the channel 1 and channel 2 position control to their mechanical positions and AC-GND-DC switches to GND positions.
2. Select the vertical MODE switch to CH1 or CH2 position.
3. Adjust VR31 (X73-1530) to center the trace vertically and repeat the entire procedure for ADD mode adjusting VR32 (X73-1530).

100 Hz square wave compensation

1. Using a square wave generator, apply a 100 Hz square wave signal to oscilloscope input to display a waveform of 6 divisions vertical amplitude.
2. Adjust VR1 (X75-1150) for the best flat-top waveform.
3. Repeat the entire procedure for channel 2.
4. Select the vertical MODE switch to CH3 position.
5. Repeat the entire procedure, adjusting VR14 (X74-1380) for channel 3 square wave compensation.

Channel 1 gain adjustment

1. Apply a 50 mV peak to peak, 1 kHz square wave signal to channel 1 input and set the vertical MODE switch to CH1 position.
Set the scope controls to display a square wave on the CRT screen.
2. Adjust VR34 (X73-1530) for exactly 5 divisions vertical amplitude.

CH1 OUTPUT adjustment

1. Connect the CH1 OUTPUT connector to channel 1 of test oscilloscope through a 50 ohm BNC cable.
2. Set test oscilloscope; channel 1 VOLTS/DIV for 50 mV position.
3. Adjust VR6 (X73-1530) to display a 5 divisions vertical amplitude on the test oscilloscope.

Channel 2 gain and X gain adjustment

1. Apply a 50 mV peak to peak, 1 kHz square wave signal to channel 2 input and set the vertical MODE switch to CH2, set the scope controls to display a square wave on the CRT screen.
2. Adjust VR14 (X73-1530) for exactly 5 divisions vertical amplitude.
3. Select the HORIZ DISPLAY switch to X-Y position.
4. Adjust VR16 (X73-1530) for exactly 5 divisions horizontal deflection on the CRT screen.

Channel 3 gain adjustment

1. Select the vertical MODE switch to both ALT and TRI and set triggering SOURCE switch to CH3 position.
2. Apply a 0.5 V peak to peak, 1 kHz square wave signal to channel 3 input.
3. Adjust VR22 (X73-1530) to display a waveform of 5 divisions vertical amplitude.

TRIGGERING AND CH3 POSITION ADJUSTMENT

Triggering level adjustment

1. Apply a 1 kHz sine wave signal to channel 1 input and set the scope controls to display a waveform of 8 divisions vertical amplitude.
2. Set the triggering MODE switch to FIX position.
3. Adjust VR1 (X74-1370) so the triggering is satisfactory when the amplitude is less than 1 division.

Triggering level center adjustment

1. Apply a 1 kHz sine wave signal to channel 1 input and set the scope controls to display a waveform of 8 divisions vertical amplitude.
2. Set the channel 1 position control to its mechanical center.
3. Adjust VR2 (X74-1370) to start the trace from the center of the graticule scale when rotating the triggering LEVEL control to its mechanical center.

Line triggering adjustment

1. Set the triggering SOURCE switch to LINE position.
2. Apply a line voltage (50/60 Hz) to channel 1 input.
3. Set the triggering LEVEL control to its mechanical center.
4. Adjust VR12 (X74-1380), if necessary so the trace does not shift when switching the COUPLING switch to alternately AC and DC position.

Vertical MODE offset adjustment

1. Apply a 1 kHz sine wave signal to channel 1 input and set the scope controls to start a waveform of 6 divisions vertical amplitude from the center of the graticule scale.
2. Adjust VR36 (X73-1530), if necessary so the start point of the trace does not shift when switching the COUPLING switch to alternately AC and DC positions.

Channel 1 and channel 2 offset adjustment

1. Set the triggering SOURCE switch to CH1 position.
2. Apply a 1 kHz sine wave signal to channel 1 input and set the scope controls to start a waveform of 6 divisions vertical amplitude from the center graticule scale.
3. Adjust VR5 (X73-1530), if the COUPLING switch to alternately AC and DC positions.
4. Repeat the entire procedure for channel 2, adjusting VR15 (X73-1530).

Channel 3 offset and position adjustment

1. Set the channel 2 VOLTS/DIV control to 0.1 V position and vertical MODE and triggering MODE switches to both CH2 positions.
2. Set the channel 3 position control to its mechanical center.
3. Apply a 1 kHz sine wave signal to channel 2 input and set the scope controls to display a waveform of 8 divi-

ADJUSTMENT

- sions vertical amplitude on the center of the CRT screen.
4. Set the start point of the trace to the center with the triggering LEVEL control.
 5. Select the vertical MODE switch to ALT and TRI positions and triggering SOURCE switch to CH3 position.
 6. Apply a 1 kHz sine wave signal to channel 3 input and adjust VR13 (X74-1380), if necessary so the start point of the trace does not shift when switching the COUPLING switch to alternately AC and DC positions.
 7. Set channel 3, AC (0.1 V, 1 V), GND, DC (1 V, 0.1 V) switch to GND position.
 8. Adjust VR23 (X73-1530) to center the trace vertically.
 9. Clockwise rotation should move up to 5 divisions upward and counterclockwise rotation should move up to 5 divisions downward.

VERTICAL AXIS ADJUSTMENT

Channel 1 and channel 2 waveshape compensation

1. Apply a 1 kHz square wave signal to channel 1 input and set the scope controls to display a waveform of 6 divisions vertical amplitude.
2. Adjust TC1 (X75-1150) for the best flat-top waveform when setting the channel 1 VOLTS/DIV control to 0.1 V position and TC3 (X75-1150) when channel 1 VOLTS/DIV control to 1 V position.
3. Repeat the entire procedure for channel 2.

Channel 3 waveshape compensation

1. Select the vertical MODE switch to ALT and TRI positions and triggering SOURCE switch to CH3 position.
2. Apply a 1 kHz square wave signal to channel 3 input to display a waveform of 6 divisions vertical amplitude.
3. Adjust TC2 (X74-1380) for the best flat-top waveform when switching channel 3, AC (0.1 V, 1 V), GND, DC (1 V, 0.1 V) switch from 0.1 V range to 1 V range of DC position.

Channel 1 and channel 2 input capacity adjustment

1. Rotate the channel 1 VOLTS/DIV control to 10 mV position and connect a Q meter to channel 1 input to measure the input capacity for $20\text{pF} \pm 3\text{pF}$.

Adjustment control	VOLTS/DIV setting
TC2 (X75-1150)	0.1 mV/div
TC4 (X75-1150)	1 V/div

Table 4

2. Repeat the entire procedure for channel 1 VOLTS/DIV control to 0.1 V position and 1 V position.
3. Repeat the entire procedure for channel 2 input capacity adjustment.

Channel 3 input capacity adjustment

1. Set the channel 3, AC (0.1 V, 1 V), GND, DC (1 V, 0.1 V) switch to DC (0.1 V) position.

2. Connect a Q meter to channel 3 input and check the input capacity is less than 27pF reading on the meter.
3. Adjust TC1 (X74-1380) for less than 27pF reading on the meter when switching the AC (0.1 V, 1 V), GND, DC (1 V, 0.1 V) switch from DC (0.1 V) to DC (1 V) position.

Channel 1 overshoot adjustment

1. Apply a 1 MHz square wave signal to channel 1 input and set the scope controls to display a waveform of 6 divisions vertical amplitude.
 2. Preset the adjustment controls as follows;
- | | |
|-----------------|----------------------------|
| VR3 (X73-1530) | counter clockwise rotation |
| VR2 (X73-1540) | counter clockwise rotation |
| TC1 (X73-1530) | mechanical center |
| TC31 (X73-1530) | mechanical center |
| VR7 (X75-1150) | mechanical center |
| TC7 (X75-1150) | mechanical center |
| TC5 (X75-1150) | mechanical center |
| VR3 (X73-1540) | mechanical center |
| TC1 (X73-1540) | mechanical center |
| TC2 (X73-1540) | mechanical center |
3. Adjust the following controls listed in table below.

Se-quence	Adj. control	Unit no.	Procedure
1	TC1, VR3	X73-1530	Mid frequency range compensation for the best flat-top waveform.
2	VR2, TC1	X73-1540	Mid and high frequency ranges compensation for the best flat-top waveform. Note; VR3 (X73-1540) to fully C.W.
3	VR3	X73-1540	High frequency range compensation for the best flat-top waveform.
4	VR7, TC7	X75-1150	High frequency range compensation for peak-top waveform.
5	VR3	X73-1540	High frequency range compensation for the best flat-top waveform.
6	VR7, TC7	X75-1150	High frequency range compensation for the best flat-top waveform.
7	TC31	X73-1530	High frequency range compensation for the best flat-top waveform.
8			Repeat the entire procedure for step 4 to 7.

Table 5

ADJUSTMENT

Channel 2 overshoot adjustment

1. Select the vertical MODE switch to CH2 position.
2. Apply a 1 MHz square wave signal to channel 2 input and set the scope controls to display a waveform of 6 divisions vertical amplitude.
3. Adjust the following controls listed in table below;

Se- quence	Adj. control	Unit no.	Procedure
1	VR13, TC11	X73-1530	Mid frequency range compensation for the best flat-top waveform.
2	VR7	X75-1150	High frequency range compensation for the best flat-top waveform.
3	TC7, TC5	X75-1150	High frequency range compensation for the best flat-top waveform.

Table 6

Channel 3 overshoot adjustment

1. Select the vertical MODE switch to ALT and TRI positions and triggering SOURCE switch to CH3 position and SWEEP TIME/DIV control to any position.
2. Apply a 1 MHz square wave signal to channel 3 input and set the scope controls to display a waveform of 6 divisions vertical amplitude.
3. Adjust TC21 and VR21 (X73-1530) to the best flat-top waveform for high frequency range compensation.
4. Adjust TC4 (X74-1370) to compensate the overshoot for minimum.

HORIZONTAL AXIS ADJUSTMENT

1 ms sweep time, A and B sweep start points and MAG gain adjustment

1. Set the A and B SWEEP TIME/DIV controls to both 1 ms positions, channel 1 VOLTS/DIV control to 1 V position, B MODE switch to DELAY TIME ZERO position and HORIZ DISPLAY switch to ALT position.
2. Apply a 1 ms marker signal to channel 1 input.
3. Adjust VR1 (X74-1380) so the first and 11th time marks of A sweep coincide with graticule scale.
4. Adjust VR2 (X74-1380) so the first and 11th time marks of B sweep coincide with graticule scale.
5. Adjust VR9 (X74-1380) to coincide the start point of A sweep with that of B sweep.
6. Push the horizontal position control and check the LED lights.
7. Adjust VR3 (X74-1370) so the each time mark of A sweep coincides with graticule scale.

Mag centering adjustment

1. Set the B MODE switch to DELAY TIME ZERO, HORIZ DISPLAY switch to ALT, A and B SWEEP TIME/DIV controls to both 1 mV and channel 1 VOLTS/DIV to 1 V

positions.

2. Apply a 5 ms marker signal to channel 1 input and set the scope controls to center the center of the A and B time marks (horizontal position to pushed in).
3. Adjust VR4 (X74-1370) to center the center of the A and B time marks when again pushed in horizontal position.
4. Repeat step 2 and 3.
5. The center time mark should not shift when setting the $\times 10$ MAG switch to on.

10 ms sweep time adjustment

1. Set the B MODE switch to DELAY TIME ZERO, HORIZ DISPLAY switch to ALT, A and B SWEEP TIME/DIV controls to both 10 ms and channel 1 VOLTS/DIV control to 1 V positions.
2. Apply a 10 ms time marker signal to channel 1 input and set the scope controls to center the A and B time marks.
3. Adjust VR3 (X74-1380) to center the center of A time mark when again pushed in horizontal position control.
4. Adjust VR4 (X74-1380) to center the center of B time mark when pushed in horizontal position control.

10 μ s sweep time adjustment

1. Set the B MODE switch to DELAY TIME ZERO, HORIZ DISPLAY switch to ALT, A and B SWEEP TIME/DIV controls to both 10 ms and channel 1 VOLTS/DIV control to 1 V positions.
2. Apply a 10 μ s time marker signal to channel 1 input and set the scope controls to center the center of A and B time marks.
3. Adjust TC5 (X74-1380) to center the center of A time mark when pushed in horizontal position control.
4. Adjust TC6 (X74-1380) to center the center of B time mark when again pushed in horizontal position control.

Sweep linearity adjustment

1. Set the B MODE switch to DELAY TIME ZERO, HORIZ DISPLAY switch to ALT, A and B SWEEP TIME/DIV controls to both 0.05 μ s and channel 1 VOLTS/DIV control to 1 V positions.
2. Apply a 0.05 μ s time marker signal to channel 1 input and the scope controls to center the center of A and B time marks.
3. Adjust TC1 (X74-1370) to center the center of A and B time marks when pushed in horizontal position control.

Delay time multiplier adjustment

1. Set the B MODE switch to STARTS AFTER DELAY, HORIZ DISPLAY switch to INT, channel 1 AC-GND-DC switch to GND, A SWEEP TIME/DIV control to 0.1 ms and B SWEEP TIME/DIV control to 1 μ s positions.
2. Rotate the DELAY TIME MULT control to 0.20 position and set the scope controls to coincide A trace with the left end of the graticule scale, using the horizontal posi-

ADJUSTMENT

tion control.

3. Adjust VR6 (X74-1380) to position B trace (intensified portion) to 0.2 div position.
4. Adjust VR5 (X74-1380) to position B trace to 10 div position (right end of the graticule scale) when rotated the DELAY TIME MULT control to 10.00 position.

X position adjustment

1. Select the vertical MODE switch to CH2 position and

channel 2 AC-GND-DC switch to GND position.

2. Set the scope controls to display a trace to the graticule center.
3. Adjust VR8 (X74-1380) to position to trace to horizontal graticule when switching the HORIZ DISPLAY switch to X-Y position.
4. Clockwise rotation of channel 2 position control should move up to 5 divisions upward and counterclockwise rotation should move up to 5 divisions downward.

VERTICAL ATTENUATOR UNIT (X75-1150)

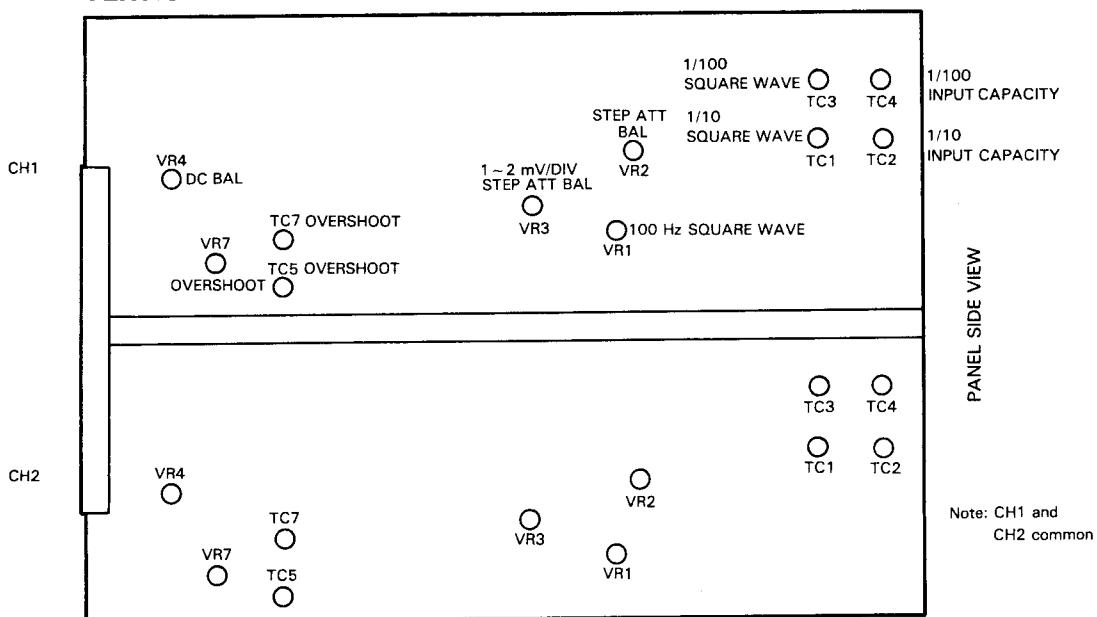


Fig. 6

VERTICAL PREAMP UNIT (X73-1530)

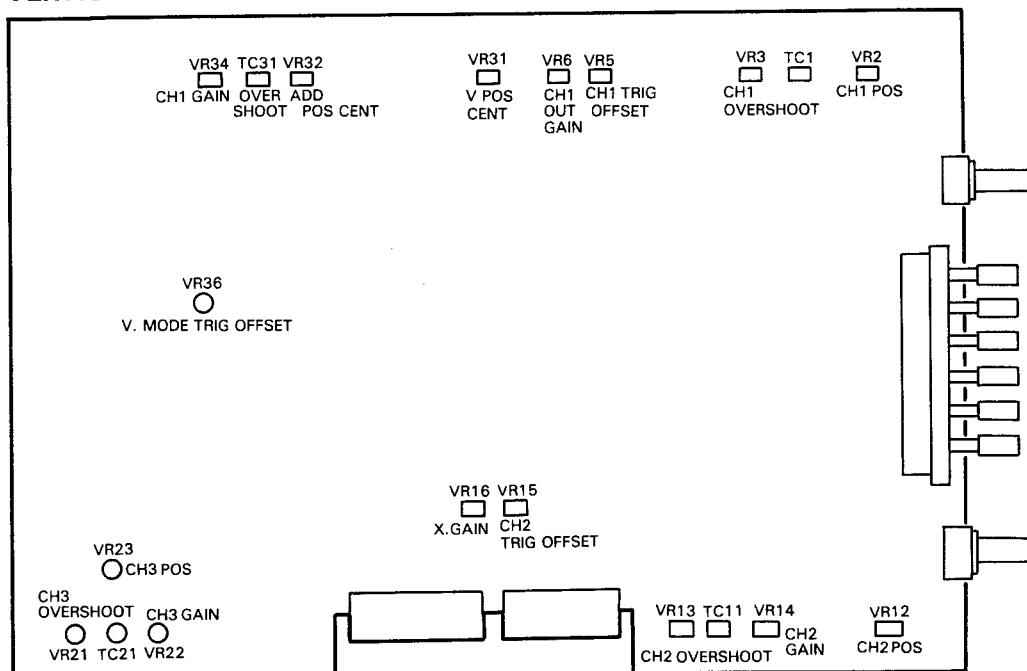


Fig. 7

ADJUSTMENT

VERTICAL FINAL UNIT (X73-1540)

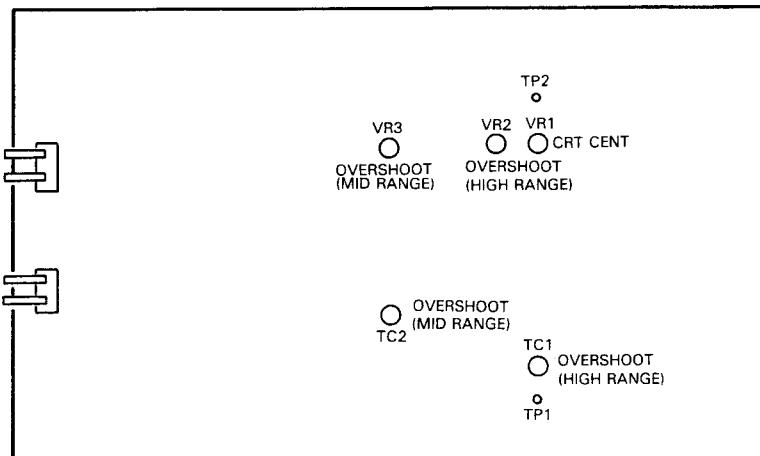


Fig. 8

SWEEP UNIT (X74-1380) TRIG UNIT (X74-1370)

[] = TRIG UNIT (X74-1370)


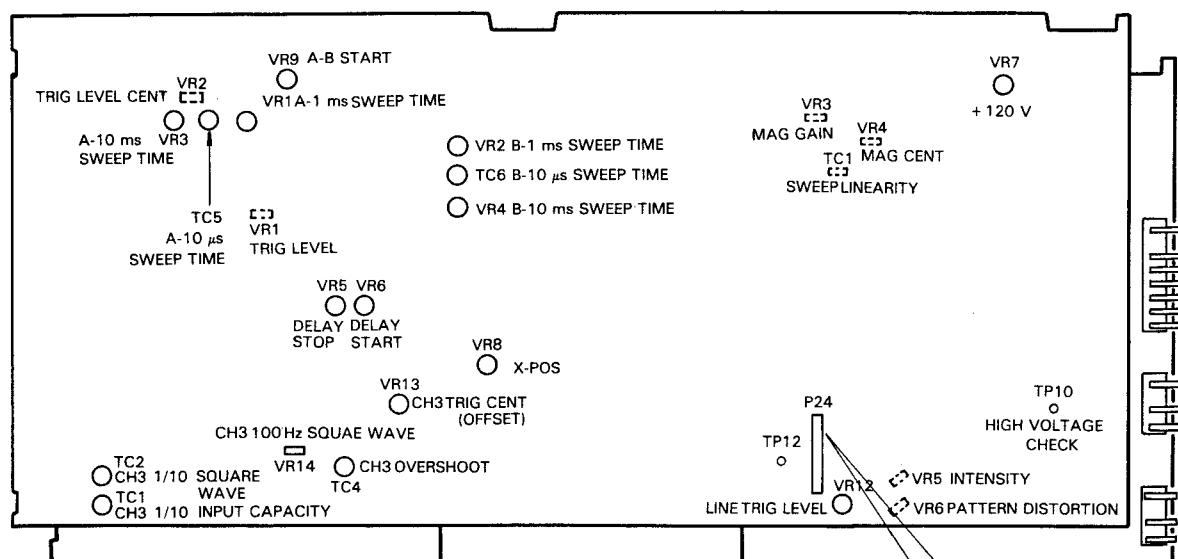


Fig. 9

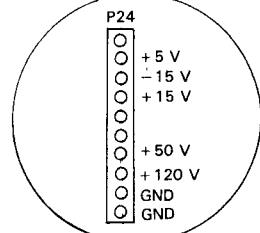

TROUBLESHOOTING

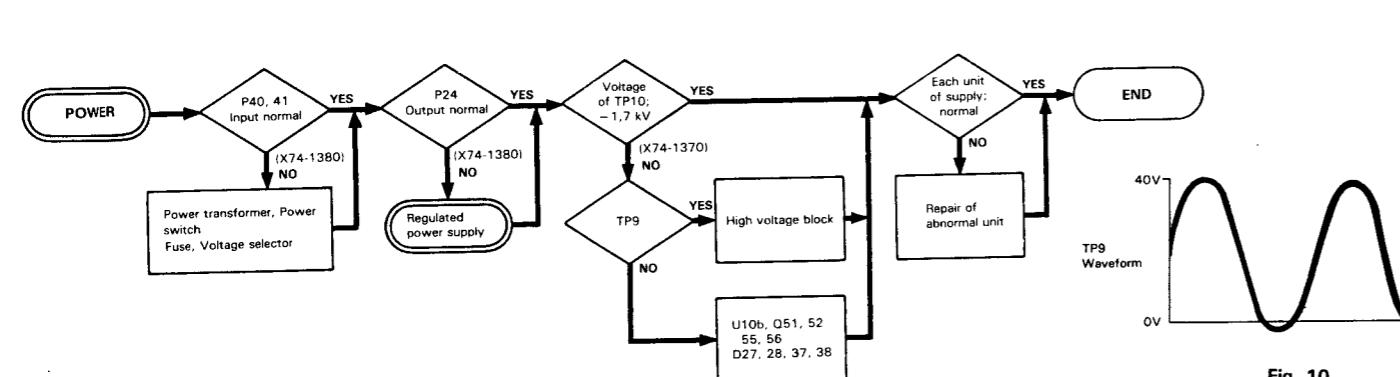
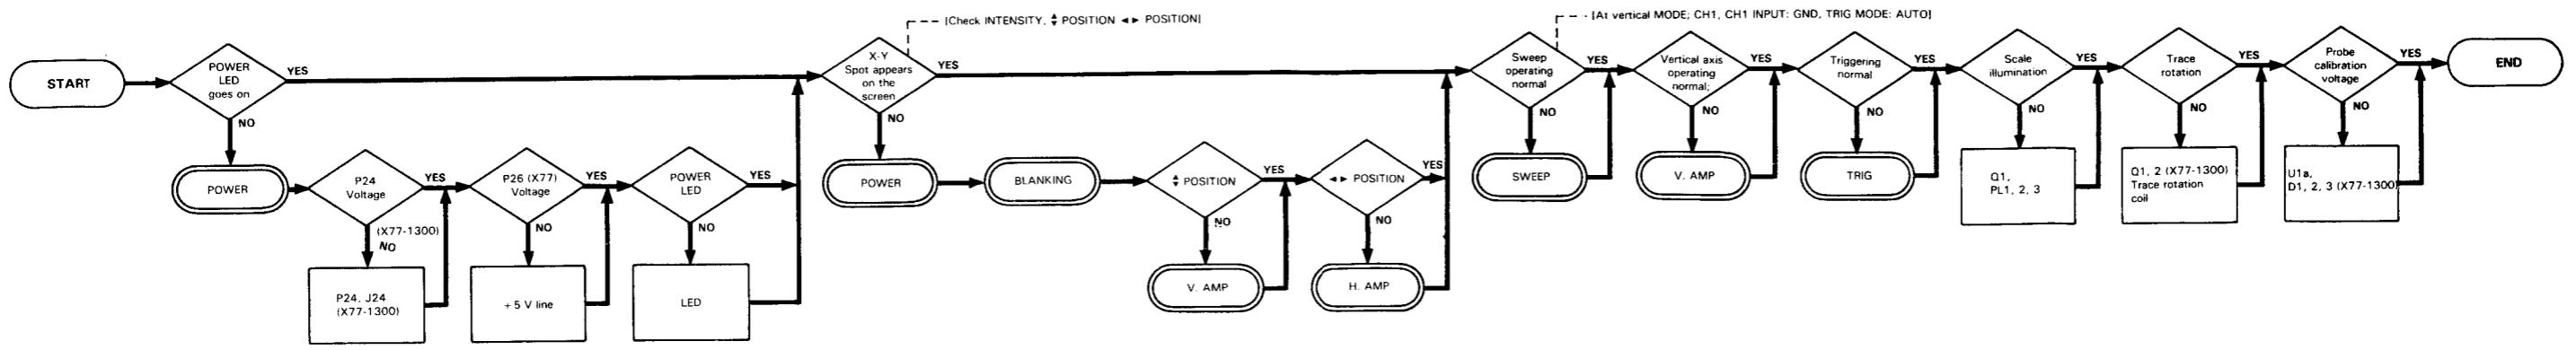


Fig. 10

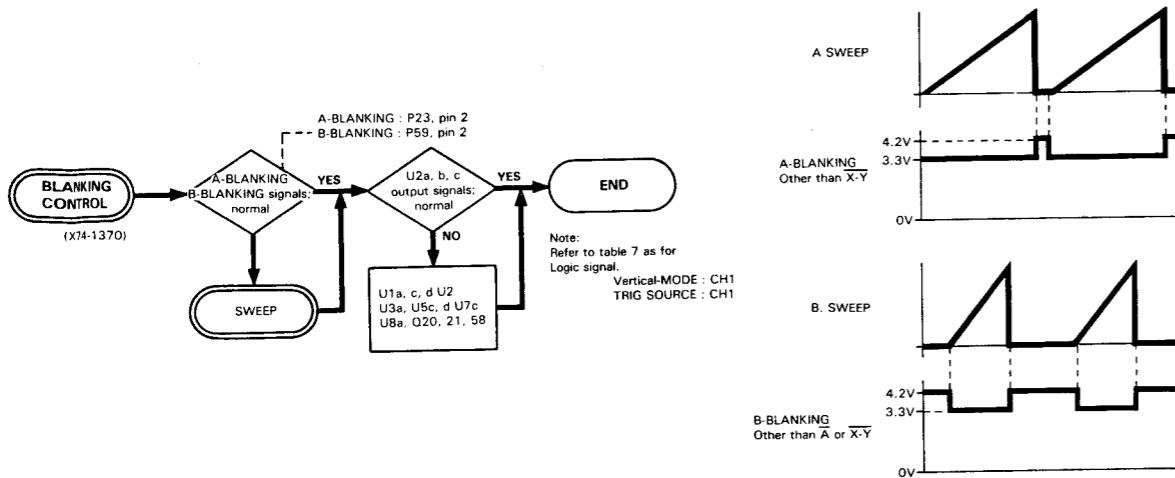
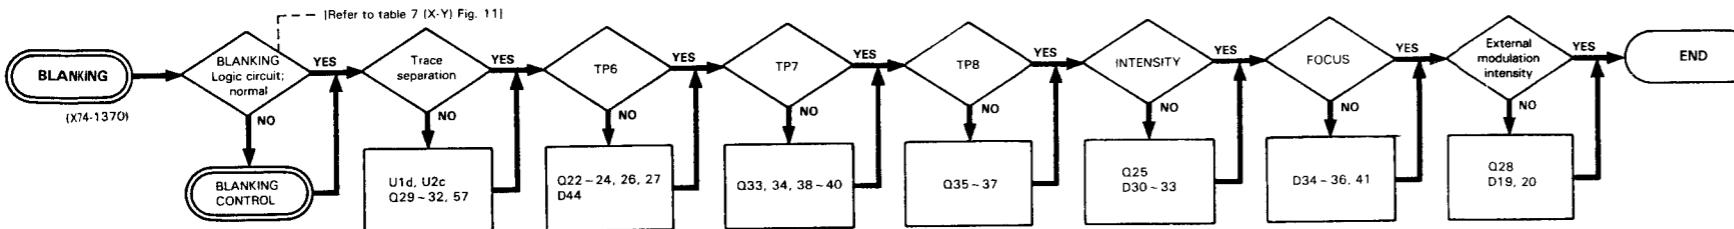


Fig. 12

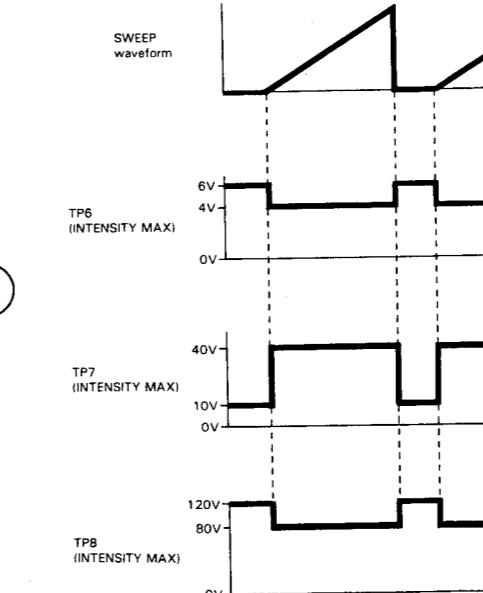
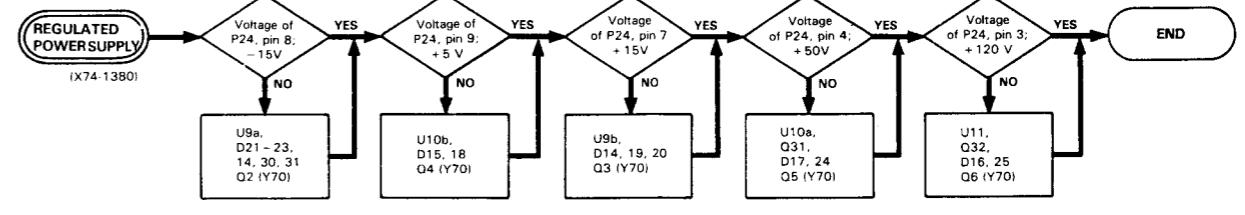



Fig. 11

H. DISPLAY \ SIGNALS	U5			U1			U2							
	Pin 10	Pin 13	Pin 9	Pin 2	Pin 10	Pin 1	Pin 4	Pin 5	Pin 2	Pin 12	Pin 1	Pin 6	Pin 11	Pin 3
A	[A]	L	H	L	H	H	[A]	H	L	L	H	[A][A][A]	H	H
ALT	[A]	[B]	H	H	H	H	[A]	TOGGLE at CK	[B]	TOGGLE at CK	H	[A][A][A]	[B]	[B]
INT	[A]	[B]	H	L	H	H	[A]	H	[B]	L	H	[A][A][A]	H	[B]
B	[A]	[B]	H	H	L	H	[A]	L	[B]	H	L	H	[B][B][B]	H
X-Y	L	L	H	H	H	L	H	H	L	L	L	L	H	H


Table 7

Note: [A]: A sweep → H
[B]: B sweep → H

TROUBLESHOOTING

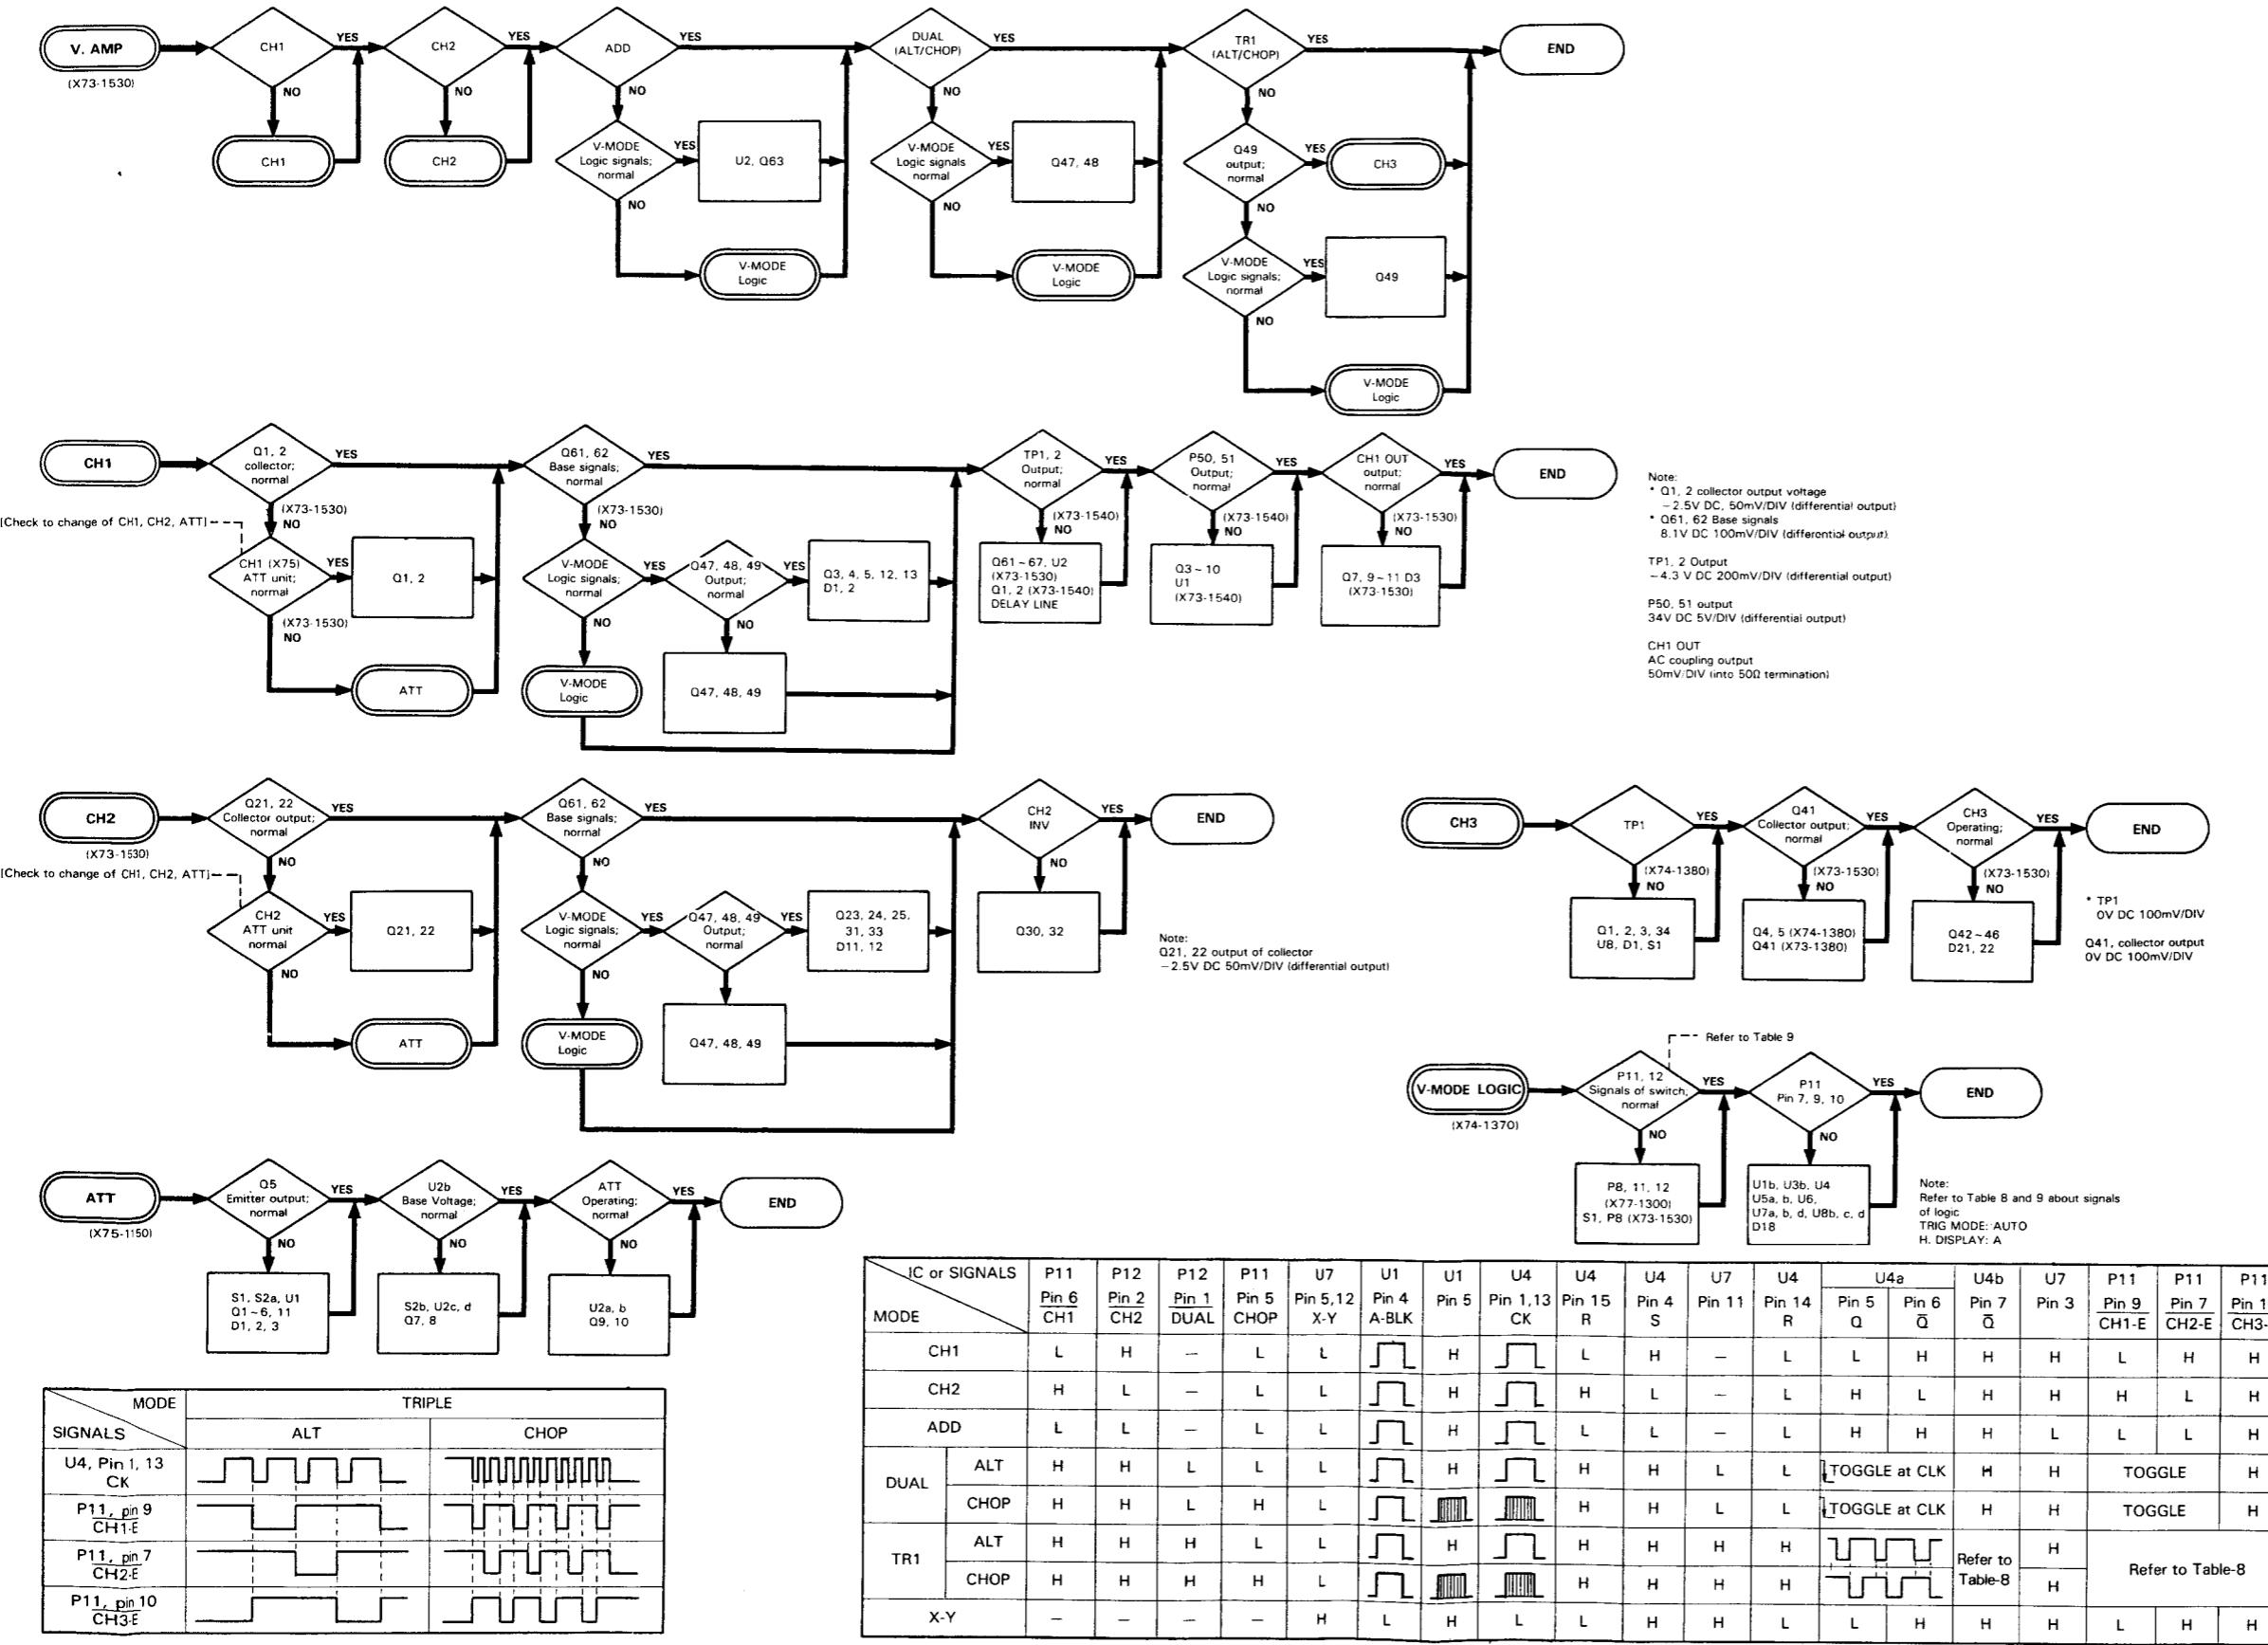

TROUBLESHOOTING

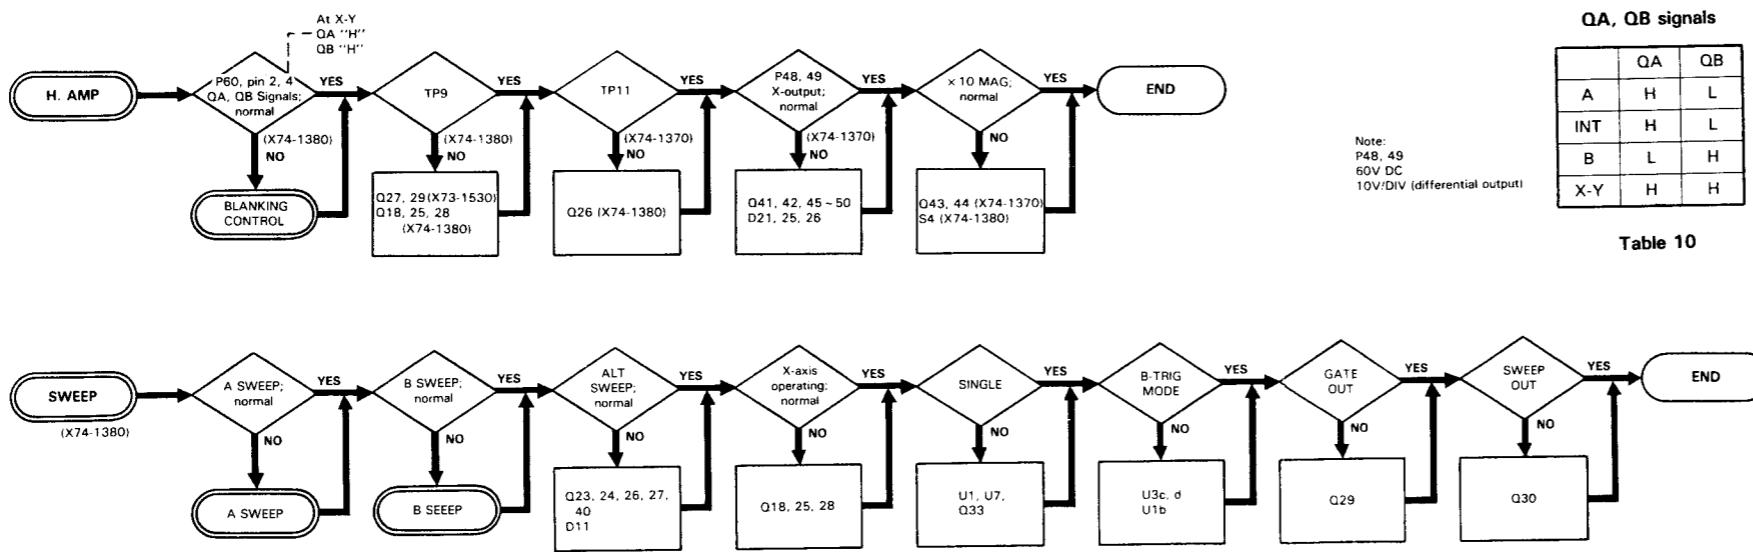

	QA	QB
A	H	L
INT	H	L
B	L	H
X-Y	H	H

Table 10



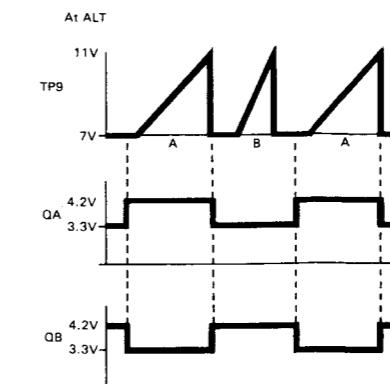


Fig. 13

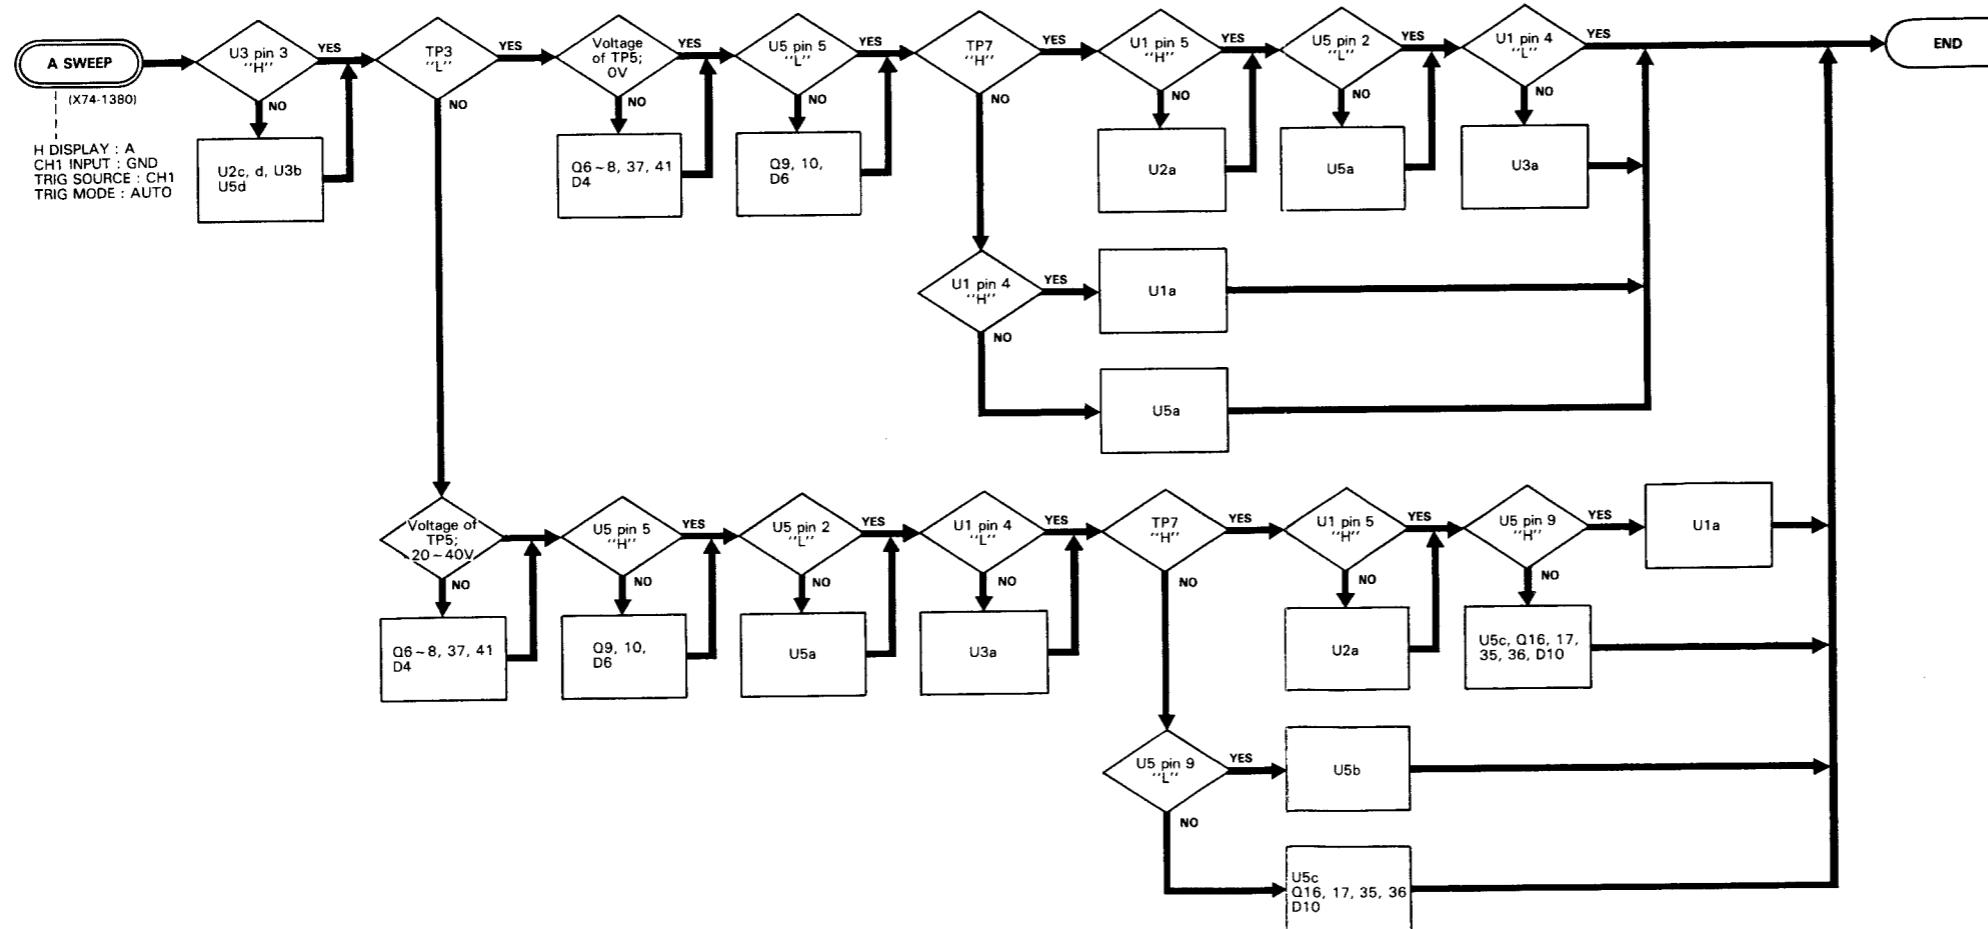

TROUBLESHOOTING

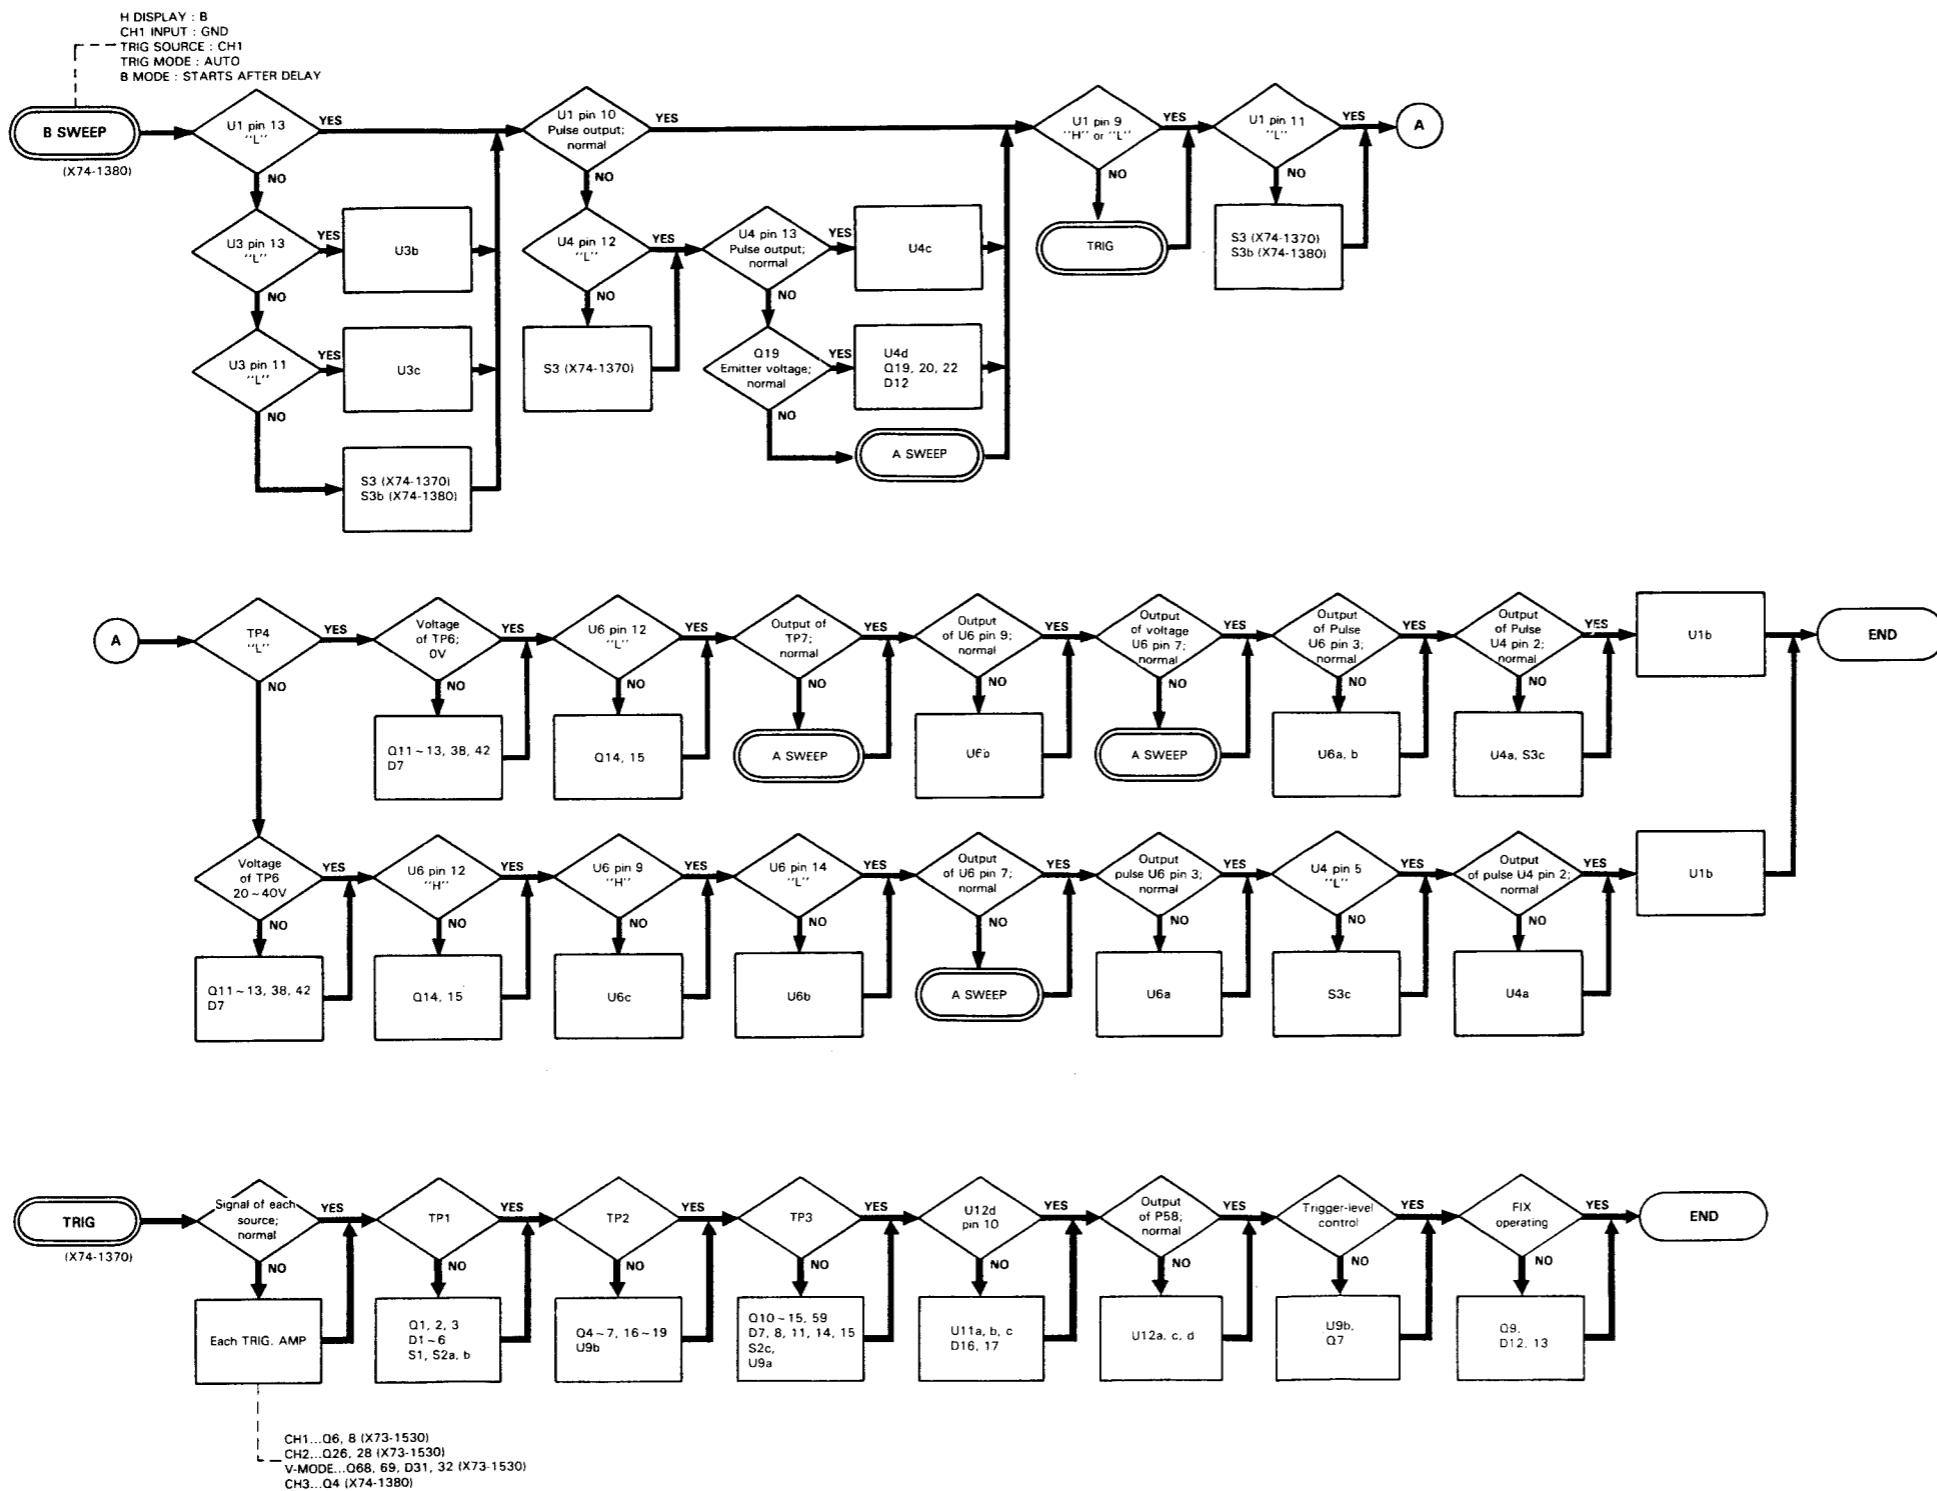

PARTS LIST

MIAN CHASSIS CS-1060

(Y70-1440-21)

REF. NO	PARTS NO	NAME & DESCRIPTION
1	A01-1105-12	CASE
2	A01-1106-02	CASE
3	A10-1436-02	CHASSIS
4	A20-2764-11	PANEL
5	A21-1038-02	DECORATIVE PANEL
6	A22-0827-13	SUB PANEL
7	A22-0831-12	SUB PANEL
8	A23-1644-02	REAR PANEL
9	A33-0502-05	REFLECTOR (FOR LAMP ASS'Y)
10	A33-0503-05	REFLECTOR (FOR LAMP ASS'Y)
11	B07-0712-13	ESCUOTHEON FOR FILTER
12	B19-0726-04	FILTER
13	B20-0924-04	SCALE
14	B30-0903-15	LED LAMP (RED)
—	B30-0940-05	LAMP ASS'Y
15	B30-0941-05	LAMP
16	B40-2765-04	NAME PLATE (SERIAL NO)
—	B41-0710-04	CAUTION LABEL (HIGH VOLTAGE)
—	B41-0758-03	CAUTION LABEL
—	B50-7510-00	INSTRUCTION
17	E04-0251-05	BNC RECEPTACLE
18	E21-0657-04	TERMINAL (GND)
19	E21-0660-04	TERMINAL(CAL)
—	E23-0043-04	EARTH LUG
—	E23-0513-05	EARTH LUG
—	E23-0522-14	EARTH PLATE
—	E23-0524-04	EARTH LUG
20	E30-0545-05	AC POWER CORD
—	E30-1851-05	POWER CORD ASS'Y (JIS)
—	E31-2371-05	LEAD WIRE WITH CONNECTOR
—	E31-2372-05	LEAD WIRE WITH CONNECTOR
—	E31-2391-05	LEAD WIRE WITH CONNECTOR
—	E31-2392-05	LEAD WIRE WITH CONNECTOR
—	E31-2393-05	LEAD WIRE WITH CONNECTOR
—	E31-2394-05	LEAD WIRE WITH CONNECTOR
—	E31-2395-05	LEAD WIRE WITH CONNECTOR
—	E31-2396-15	LEAD WIRE WITH CONNECTOR
—	E31-2397-05	LEAD WIRE WITH CONNECTOR
—	E31-2398-15	LEAD WIRE WITH CONNECTOR
—	E31-2399-05	LEAD WIRE WITH CONNECTOR
—	E31-2400-05	LEAD WIRE WITH CONNECTOR
—	E31-2401-05	LEAD WIRE WITH CONNECTOR
—	E31-2402-15	LEAD WIRE WITH CONNECTOR
—	E31-2403-05	LEAD WIRE WITH CONNECTOR
—	E31-2404-05	LEAD WIRE WITH CONNECTOR
—	E31-2405-05	LEAD WIRE WITH CONNECTOR
—	E31-2406-05	LEAD WIRE WITH CONNECTOR
—	E31-2407-15	LEAD WIRE WITH CONNECTOR
—	E31-2408-05	LEAD WIRE WITH CONNECTOR
—	E31-2409-05	LEAD WIRE WITH CONNECTOR
—	E31-2410-05	LEAD WIRE WITH CONNECTOR
—	E31-2411-05	LEAD WIRE WITH CONNECTOR
—	E31-2412-05	LEAD WIRE WITH CONNECTOR
—	E31-2413-05	LEAD WIRE WITH CONNECTOR
—	E31-2414-05	LEAD WIRE WITH CONNECTOR
—	E31-2415-05	LEAD WIRE WITH CONNECTOR
—	E31-2416-05	LEAD WIRE WITH CONNECTOR
—	E31-2417-05	LEAD WIRE WITH CONNECTOR
—	E31-2418-05	LEAD WIRE WITH CONNECTOR
—	E31-2419-05	LEAD WIRE WITH CONNECTOR
—	E31-2420-05	LEAD WIRE WITH CONNECTOR
—	E31-2478-05	LEAD WIRE WITH CONNECTOR
—	E31-2479-05	LEAD WIRE WITH CONNECTOR
21	F01-0838-03	HEAT SINK
22	F05-1023-05	FUSE 1A
22	F05-2023-05	FUSE 2A
23	F07-0908-14	PROTECTION COVER
24	F10-1567-04	EARTH BAND (FOR H.VOLT BLCKE)
25	F11-0981-13	SHIELD CASE
—	F20-0639-04	INSULATOR
26	G02-0606-14	SPRING FOR HANDLE
27	G02-0607-04	SPRING FOR CRT
28	G16-0602-04	REFLECTOR SHEET(L)
29	G16-0603-04	REFLECTOR SHEET(R)
—	H01-5704-04	CARTON BOX
—	H10-2817-01	FOAMED STYRENE PAD
—	H10-2818-01	FOAMED STYRENE PAD
—	H20-1719-04	VINYL COVER
—	H25-0016-00	BAG
—	H25-0029-04	BAG
30	J02-0089-05	LEG
31	J10-0100-12	BEZEL
32	J13-0033-15	FUSE HOLDER
33	J19-1313-05	LEAD HOLDER
—	J19-1620-05	CORD CLAMP
34	J19-1633-03	HOLDER FOR CRT
35	J19-1634-04	HOLDER FOR LEAD
36	J19-1635-04	HOLDER FOR LED
37	J19-1637-03	HOLDER FOR DELAY LINE
38	J21-2906-05	GEAR FOR HANDLE
39	J21-2907-05	RING FOR HANDLE
40	J21-2970-23	BLACKET FOR CRT

REF. NO	PARTS NO	NAME & DESCRIPTION
41	J21-2979-14	BLACKET FOR SCALE
42	J21-2980-04	BRACKET FOR P.C.BOARD
43	J21-2983-04	AC CORD BRACKET
44	J25-3000-05	P.C.BOARD (FOR LAMP ASS'Y)
45	J31-0603-04	COLLAR
46	J31-0604-04	COLLAR
47	J42-0083-05	BUSHING
—	J42-0524-04	BUSHING
48	J59-0403-05	NYLON RIVET
—	J61-0049-05	WIRE BAND
—	J61-0401-05	WIRE BAND
49	J61-0515-05	SUPPORT (I TYPE)
50	J61-0518-05	SUPPORT (T TYPE)
51	J61-0519-04	SUPPORT (P.C.BOARD)
52	K01-0520-05	HANDLE
53	K21-0855-14	KNOB
54	K21-0858-04	KNOB
55	K21-0860-03	KNOB
56	K21-0862-03	KNOB
57	K21-0863-03	KNOB
58	K21-0864-03	KNOB
59	K21-0866-13	KNOB
60	K27-0530-04	KNOB FOR LEVER
61	L01-9364-05	POWER TRANSFORMER
62	L39-0518-05	ROTATOR COIL
63	L76-0107-05	DELAY LINE
—	N08-0611-04	DRESSED SCREW
—	N09-0705-05	SCREW, HEX SOCKET FLAT HD
—	N09-0710-05	SCREW, SEMS PAN HD
—	N09-0715-04	SCREW, PAN HD M 4X31
—	N09-0717-05	SCREW, TRUSS HD M 3X12
—	N09-0720-05	SCREW, SEMS PAN HD
—	N10-2070-46	NUT, HEX
—	N15-1030-41	WASHER, FLAT FOR M3
—	N15-1110-46	WASHER
—	N19-0704-04	WASHER
—	N19-0710-05	SCREW, PAN HD M 3X4
—	N30-3004-46	SCREW, PAN HD M 3X6
—	N30-3006-41	SCREW, PAN HD M 3X8
—	N30-3008-46	SCREW, PAN HD M 4X6
—	N30-4012-41	SCREW, PAN HD M 4X12
—	N32-3008-41	SCREW, FLAT HD M 3X8
—	N88-3006-46	SCREW, FLAT HD TAP TITE
—	N88-3008-46	SCREW, FLAT HD TAP TITE
—	N89-3006-41	SCREW, BINDING TAP TITE
—	N89-3010-41	SCREW, BINDING TAP TITE
64	R03-3502-15	V.R.
65	R05-3505-05	20K B
66	R05-8001-05	V.R.
67	R10-9502-05	3M B
68	R29-0504-05	10K,200K B
69	SLP5200	1K B
70	W01-0503-04	LED (RED,GREEN)
71	W02-0411-05	CORD WRAP
72	X73-1530-01	HIGH VOLTAGE POWER BLOCK
73	X73-1540-01	VERTICAL PREAMP UNIT
74	X74-1370-01	VERTICAL OUTPUT AMP UNIT
75	X74-1380-01	TRIGGER UNIT
76	X75-1150-00	SWEEP UNIT
77	X77-1300-00	ATTENUATOR UNIT
78	X81-1250-03	CONNECTION UNIT
79	150JT31	CRT SOCKET UNIT
—	212-2014-05	CRT
—	212-3017-05	TUBE (PLASTIC)
—	490-0009-05	TAPE
Q001	ZSD1276(Q)	TR, SI, NPN
Q002	ZSD1276(Q)	TR, SI, NPN
Q003	ZSB950(P,Q)	TR, SI, PNP
Q004	ZSB950(P,Q)	TR, SI, PNP
Q005	ZSB940(P)	TR, SI, PNP
Q006	ZSA1156(K,L)	TR, SI, PNP

VERTICAL ATTENUATOR UNIT

(X75-1150-00)

REF. NO	PARTS NO	NAME & DESCRIPTION
X75-1	A22-0832-13	SUB PANEL
X75-2	E04-0251-05	BNC RECEPTACLE
—	E23-0015-04	EARTH LUG
—	E23-0513-05	EARTH LUG
—	E23-0522-14	EARTH PLATE
—	E31-2170-05	JUMPING WIRE
—	F10-1566-04	SHIELD PLATE
—	G13-0716-04	CUSHION
X75-3	J19-1638-14	HOLDER FOR P.C.B
—	J25-5017-03	P.C.BOARD (UNMOUNTED)
—	M30-3006-46	SCREW, PAN HD M 3X6
—	N89-3006-46	SCREW, BINDING TAP TITE
—	001-0601-05	COATING WIRE

PARTS LIST

REF. NO	PARTS NO	NAME & DESCRIPTION	REF. NO	PARTS NO	NAME & DESCRIPTION
002-0001-05		BRAIDED WIRE	R053	RD14BB2E272J	RES. CARBON 2.7K 5% 1/4W
212-1018-05		TUBE (PLASTIC)	R054	RD14BB2E301J	RES. CARBON 300 5% 1/4W
212-1018-05		TUBE (PLASTIC)	R055	RD14BB2E432J	RES. CARBON 4.3K 5% 1/4W
C001 C91-0501-05	CAP. METAL FILM 0.047 10% 630V	R056	RD14BB2E362J	RES. CARBON 3.6K 5% 1/4W	
C002 C91-0502-05	CAP. METAL FILM 0.01 20% 630V	R057	RD14BB2E334J	RES. CARBON 330K 5% 1/4W	
C003 CK45F1H103Z	CAP. CERAMIC 0.01 50V	R058	RD14BB2C330J	RES. CARBON 33 5% 1/6W	
C004 CK45F1H103Z	CAP. CERAMIC 0.01 50V	S001	S32-4007-05	SLIDE SWITCH	
C005 NO USE			S002	S02-4501-05	ROTARY SWITCH
C006 CC45FCH1H220J	CAP. CERAMIC 22P 5% 50V	TC005	C05-0430-05	CAP. TRIMMER .50P	
C007 CE04FW1E470M	CAP. ELECTRO 47 20% 25V	TC006	NO USE		
C008 CE04FW1E470M	CAP. ELECTRO 47 20% 25V	TC007	C05-0427-05	CAP. TRIMMER 10P	
C009 CK45F1H103Z	CAP. CERAMIC 0.01 50V	U001	LF411CN	IC, DUAL JFET INPUT OP-AMP	
C010 CE04W1E101M	CAP. ELECTRO 100 20% 25V	U002	CA3127E	IC. TR. ARRy N-P-N	
C011 CK45F1H103Z	CAP. CERAMIC 0.01 50V	VR001	R12-0058-05	RES. SEMI FIXED 470 B	
C012 CE04W1E101M	CAP. ELECTRO 100 20% 25V	VR002	R12-3502-05	RES. SEMI FIXED 33K B	
C015 CC45FCH1H040C	CAP. CERAMIC 4P 0.25P 50V	VR003	R12-3502-05	RES. SEMI FIXED 33K B	
C016 CC45SL1H331J	CAP. CERAMIC 330P 5% 50V	VR004	R12-0502-05	RES. SEMI FIXED 100 B	
C017 CC45FCH1H390J	CAP. CERAMIC 39P 5% 50V	VR005	S02-4501-05	ROTARY SWITCH	
C018 NO USE			VR006	S02-4501-05	ROTARY SWITCH
C019 CC45FCH1H070D	CAP. CERAMIC 7P 0.5P 50V	VR007	R12-0502-05	RES. SEMI FIXED 100 B	
C020 NO USE			D001 DS442X	DIODE, SILICON	SWITCHING
C021 CC45FCH1H390J	CAP. CERAMIC 39P 5% 50V	D002 WZ-050	DIODE, ZENER	5V	
C022 CK45F1H103Z	CAP. CERAMIC 0.01 50V	D003 WZ-050	DIODE, ZENER	5V	
C023 CC45FCH1H330J	CAP. CERAMIC 33P 5% 50V	P055 E40-0673-05	PIN CONNECTOR	6 CONTACT	
C024 CC45CH1H121J	CAP. CERAMIC 120P 5% 50V	Q001 2SK117(D)	FET, N-CHANNEL		
Q002 2SK117(D)	FET, N-CHANNEL	Q003 2SK107(3)	FET, N-CHANNEL		
Q004 2SK107(3)	FET, N-CHANNEL	Q005 2SA1005(K)	TR. SI, PNP		
Q006 2SA1005(K)	TR. SI, PNP	Q007 2SA1005(K)	TR. SI, PNP		
Q008 2SA1005(K)	TR. SI, PNP	Q009 2SA1005(K)	TR. SI, PNP		
Q010 2SA1005(K)	TR. SI, PNP	Q011 2SK117(D)	FET, N-CHANNEL		
R001 RD14BB2E220J	RES. CARBON 22 5% 1/4W	X73-1 K27-0528-04	KNOB FOR PUSH		
R002 RD14BB2E105J	RES. CARBON 1M 5% 1/4W	C001 CK45F1H103Z	CAP. CERAMIC 0.01 50V		
R003 RN14BK2E5003F	RES. METAL FILM 500K 1% 1/4W	C002 CK45F1H103Z	CAP. CERAMIC 0.01 50V		
R004 RN14BK2E5003F	RES. METAL FILM 500K 1% 1/4W	C003 CC45FCH1H050C	CAP. CERAMIC 5P 0.25P 50V		
R005 RD14BB2E334J	RES. CARBON 330K 5% 1/4W	C004 CC45FCH1H220J	CAP. CERAMIC 22P 5% 50V		
R006 RD14BB2E102J	RES. CARBON 1K 5% 1/4W	C005 NO USE			
R007 RD14BB2E331J	RES. CARBON 330 5% 1/4W	C006 CE04FW1E220M	CAP. ELECTRO 22 20% 25V		
R008 RD14BB2E391J	RES. CARBON 390 5% 1/4W	C007 CK45F1H103Z	CAP. CERAMIC 0.01 50V		
R009 RD14BB2E681J	RES. CARBON 680 5% 1/4W	C008 CE04BW1E220M	CAP. ELECTRO 22 20% 25V		
R010 RD14BB2E472J	RES. CARBON 4.7K 5% 1/4W	C011 CK45F1H103Z	CAP. CERAMIC 0.01 50V		
R011 RN14BK2E1301F	RES. METAL FILM 1.3K 1% 1/4W	C012 CK45F1H103Z	CAP. CERAMIC 0.01 50V		
R012 RN14BK2E1601F	RES. METAL FILM 1.6K 1% 1/4W	C013 CC45FCH1H050C	CAP. CERAMIC 5P 0.25P 50V		
R013 RD14BB2E105J	RES. CARBON 1M 5% 1/4W	C014 CC45FCH1H100D	CAP. CERAMIC 10P 0.5P 50V		
R014 RD14BB2E182J	RES. CARBON 1.8K 5% 1/4W	C015 CK45F1H103Z	CAP. CERAMIC 0.01 50V		
R015 RD14BB2E241J	RES. CARBON 240 5% 1/4W	C016 CK45F1H103Z	CAP. CERAMIC 0.01 50V		
R016 RD14BB2E302J	RES. CARBON 3K 5% 1/4W	C017 CK45F1H103Z	CAP. CERAMIC 0.01 50V		
R017 RD14BB2E302J	RES. CARBON 3K 5% 1/4W	C018 CE04FW1A470M	CAP. ELECTRO 47 20% 10V		
R018 RD14BB2E302J	RES. CARBON 3K 5% 1/4W	C021 CE04FW1E100M	CAP. ELECTRO 10 20% 25V		
R019 RD14BB2E681J	RES. CARBON 680 5% 1/4W	C022 CK45F1H103Z	CAP. CERAMIC 0.01 50V		
R020 RD14BB2E332J	RES. CARBON 3.3K 5% 1/4W	C023 CC45FCH1H202C	CAP. CERAMIC 2P 0.25P 50V		
R021 RD14BB2E332J	RES. CARBON 3.3K 5% 1/4W	C024 NO USE			
R022 RD14BB2E680J	RES. CARBON 68 5% 1/4W	C025 CK45F1H103Z	CAP. CERAMIC 0.01 50V		
R023 RD14BB2E680J	RES. CARBON 68 5% 1/4W	C026 CK45F1H103Z	CAP. CERAMIC 0.01 50V		
RN14BK2E1201F	RES. METAL FILM 1.2K 1% 1/4W	C031 CK45F1H103Z	CAP. CERAMIC 0.01 50V		
R025 RN14BK2E3000F	RES. METAL FILM 300 1% 1/4W	C032 NO USE			
R026 RD14BB2E684J	RES. CARBON 680K 5% 1/4W	C033 CE04FW1E330M	CAP. ELECTRO 33 20% 25V		
R029 RD14BB2E620J	RES. CARBON 62 5% 1/4W	C034 CC45CH1H470J	CAP. CERAMIC 47P 5% 50V		
R030 RN14BK2E1200F	RES. METAL FILM 120 1% 1/4W	C035 CE04FW1E220M	CAP. ELECTRO 22 20% 25V		
R031 RN14BK2E2400F	RES. METAL FILM 240 1% 1/4W	C036 CC45FCH1H050C	CAP. CERAMIC 5P 0.25P 50V		
R032 RN14BK2E2400F	RES. METAL FILM 240 1% 1/4W	C037 CC45FCH1H100D	CAP. CERAMIC 10P 0.5P 50V		
R033 RN14BK2E2100F	RES. METAL FILM 120 1% 1/4W	C038 CC45FCH1H220J	CAP. CERAMIC 22P 5% 50V		
R034 RN14BK2E2400F	RES. METAL FILM 240 1% 1/4W	C039 CC45FCH1H050C	CAP. CERAMIC 5P 0.25P 50V		
R035 RN14BK2E1200F	RES. METAL FILM 120 1% 1/4W	C044 CE04FW1E470M	CAP. ELECTRO 47 20% 25V		
R036 RN14BK2E30R0F	RES. METAL FILM 30.0 1% 1/4W	C045 CK45F1H103Z	CAP. CERAMIC 0.01 50V		
R037 R92-1045-05	RES. METAL FILM 72 1% 1/4W	C046 CE04FW1E470M	CAP. ELECTRO 47 20% 25V		
R038 RN14BK2E76R8F	RES. METAL FILM 76.8 1% 1/4W	C047 CE04FW1E220M	CAP. ELECTRO 22 20% 25V		
R039 R92-1046-05	RES. METAL FILM 48 1% 1/4W	C048 CK45F1H103Z	CAP. CERAMIC 0.01 50V		
R040 RD14BB2E562J	RES. CARBON 5.6K 5% 1/4W	C049 NO USE			
RD14BB2E511J	RES. CARBON 510 5% 1/4W	C050 CE04FW1E470M	CAP. ELECTRO 47 20% 25V		
RD14BB2E121J	RES. CARBON 120 5% 1/4W	C051 CE04FW1E470M	CAP. ELECTRO 47 20% 25V		
RD14BB2E132J	RES. CARBON 1.3K 5% 1/4W	C052 CE04FW1E470M	CAP. ELECTRO 47 20% 25V		
RD14BB2E132J	RES. CARBON 1.3K 5% 1/4W	C053 NO USE			
RD14BB2E3300F	RES. METAL FILM 330 1% 1/4W	C054 CE04FW1E470M	CAP. ELECTRO 47 20% 25V		
RD14BB2E272J	RES. CARBON 2.7K 5% 1/4W	C055 CE04FW1E220M	CAP. ELECTRO 22 20% 25V		
RD14BB2E272J	RES. CARBON 2.7K 5% 1/4W	C056 CE04FW1E470M	CAP. ELECTRO 47 20% 25V		
RD14BB2E272J	RES. CARBON 2.7K 5% 1/4W	C057 CE04FW1E220M	CAP. ELECTRO 22 20% 25V		
RD14BB2E101J	RES. CARBON 100 5% 1/4W	C058 CE04FW1E470M	CAP. ELECTRO 47 20% 25V		
RD49 NO USE		C059 CK45F1H103Z	CAP. CERAMIC 0.01 50V		
RD50 RD14BB2E132J	RES. CARBON 1.3K 5% 1/4W	C060 NO USE			
RD51 RD14BB2E132J	RES. CARBON 1.3K 5% 1/4W	C061 CK45F1H103Z	CAP. CERAMIC 0.01 50V		
RD52 RN14BK2E3300F	RES. METAL FILM 330 1% 1/4W	C062 CK45F1H103Z	CAP. CERAMIC 0.01 50V		

PARTS LIST

REF. NO	PARTS NO	NAME & DESCRIPTION	REF. NO	PARTS NO	NAME & DESCRIPTION
C092	CK45F1H103Z	CAP. CERAMIC 0.01 50V	NL004	NE-2B	NEON LAMP
C093	C90-0298-05	CAP. CERAMIC 0.1 20% 12V	P002	E40-0673-05	PIN CONNECTOR 6 CONTACT
C094	C90-0298-05	CAP. CERAMIC 0.1 20% 12V	P009	E40-0273-05	PIN CONNECTOR 2 CONTACT
C095	CE04W1A471M	CAP. ELECTRO 470 20% 10V	P010	E40-0916-05	PIN CONNECTOR 9P
C096	CE04FW1A101M	CAP. ELECTRO 100 20% 10V	P011	E40-1016-05	PIN CONNECTOR 10P
C097	C91-0571-05	CAP. CERAMIC 0.01 2KV	P012	E40-1016-05	PIN CONNECTOR 10P
C098	CC45CH1H101J	CAP. CERAMIC 100P 5% 50V	P013	E40-0873-05	PIN CONNECTOR 8 CONTACT
C099	NO USE		P014	E40-0273-05	PIN CONNECTOR 2 CONTACT
C100	CK45B2H102K	CAP. CERAMIC 1000P 10% 500V	P015	E40-0373-05	PIN CONNECTOR 3 CONTACT
C101	CK45B2H102K	CAP. CERAMIC 1000P 10% 500V	P016	E40-0373-05	PIN CONNECTOR 3 CONTACT
C102	NO USE		P017	E40-0373-05	PIN CONNECTOR 3 CONTACT
C103	CK45F1H103Z	CAP. CERAMIC 0.01 50V	P018	E40-0704-05	PIN CONNECTOR 7P
C104	CK45F1H103Z	CAP. CERAMIC 0.01 50V	P019	E40-0335-05	PIN CONNECTOR 3P
C105	CK45F1H103Z	CAP. CERAMIC 0.01 50V	P020	E40-0335-05	PIN CONNECTOR 3P
C106	CK45F1H103Z	CAP. CERAMIC 0.01 50V	P021	E40-0373-05	PIN CONNECTOR 3 CONTACT
C107	CK45F1H103Z	CAP. CERAMIC 0.01 50V	P022	NO USE	
C108	CE04W1E101M	CAP. ELECTRO 100 20% 25V	P023	E40-0273-05	PIN CONNECTOR 2 CONTACT
C109	CE04W1E101M	CAP. ELECTRO 100 20% 25V	P048	E23-0046-04	TERMINAL
C110	CK45F1H103Z	CAP. CERAMIC 0.01 50V	P049	E23-0046-04	TERMINAL
C111	CE04W1E101M	CAP. ELECTRO 100 20% 25V	P057	E40-0273-05	PIN CONNECTOR 2 CONTACT
C112	CC45CH1H470J	CAP. CERAMIC 47P 5% 50V	P058	E40-0273-05	PIN CONNECTOR 2 CONTACT
C113	CC45CH1H680J	CAP. CERAMIC 68P 5% 50V	P059	E40-0273-05	PIN CONNECTOR 2 CONTACT
C114	NO USE		P060	E40-0273-05	PIN CONNECTOR 2 CONTACT
C115	CC45CH1H470J	CAP. CERAMIC 47P 5% 50V	P061	E40-0273-05	PIN CONNECTOR 2 CONTACT
C116	CC45CH1H470J	CAP. CERAMIC 47P 5% 50V	Q001	ZSC2785(F)	TR. SI, NPN
C117	C90-0298-05	CAP. CERAMIC 0.1 20% 12V	Q002	ZSA1005(K)	TR. SI, PNP
C118	C90-0298-05	CAP. CERAMIC 0.1 20% 12V	Q003	ZSC2786(K)	TR. SI, NPN
C119	C90-0298-05	CAP. CERAMIC 0.1 20% 12V	Q004	ZSK117(Y)	FET. N-CHANNEL
C120	C91-0571-05	CAP. CERAMIC 0.01 2KV	Q005	ZSK117(Y)	FET. N-CHANNEL
C121	NO USE		Q006	ZSC2786(K)	TR. SI, NPN
C122	CC45CH1H070D	CAP. CERAMIC 7P 0.5P 50V	Q007	ZSC2786(K)	TR. SI, NPN
D001	DS442X	DIODE, SILICON SWITCHING	Q008	NO USE	
D002	DS442X	DIODE, SILICON SWITCHING	Q009	ZSA1005(K)	TR. SI, PNP
D003	DS442X	DIODE, SILICON SWITCHING	Q010	ZSC2785(F)	TR. SI, NPN
D004	DS442X	DIODE, SILICON SWITCHING	Q011	ZSC2785(F)	TR. SI, NPN
D005	DS442X	DIODE, SILICON SWITCHING	Q012	ZSA1175(F)	TR. SI, PNP
D006	DS442X	DIODE, SILICON SWITCHING	Q013	ZSC2785(F)	TR. SI, NPN
D007	DS442X	DIODE, SILICON SWITCHING	Q014	ZSC2785(F)	TR. SI, NPN
D008	DS442X	DIODE, SILICON SWITCHING	Q015	ZSA1175(F)	TR. SI, PNP
D011	1N60	DIODE GERMA	Q016	ZSC1215(T,S)	TR. SI, NPN
D012	1N60	DIODE GERMA	Q017	ZSC1215(T,S)	TR. SI, NPN
D013	1N60	DIODE GERMA	Q018	ZSA1005(K)	TR. SI, PNP
D014	DS442X	DIODE, SILICON SWITCHING	Q019	ZSA1005(K)	TR. SI, PNP
D015	DS442X	DIODE, SILICON SWITCHING	Q020	ZSA1175(F)	TR. SI, PNP
D016	WZ-150	DIODE, ZENER 15V	Q021	ZSA1175(F)	TR. SI, PNP
D017	DS442X	DIODE, SILICON SWITCHING	Q022	ZSC2785(F)	TR. SI, NPN
D018	DS442X	DIODE, SILICON SWITCHING	Q023	ZSC2785(F)	TR. SI, NPN
D019	DS442X	DIODE, SILICON SWITCHING	Q024	ZSC2785(F)	TR. SI, NPN
D020	DS442X	DIODE, SILICON SWITCHING	Q025	ZSC2785(F)	TR. SI, NPN
D021	DS442X	DIODE, SILICON SWITCHING	Q026	ZSA1175(F)	TR. SI, PNP
D024	1SS83	DIODE SILICON SWITCHING	Q027	ZSA1175(F)	TR. SI, NPN
D025	1SS83	DIODE SILICON SWITCHING	Q028	ZSC2785(F)	TR. SI, NPN
D026	1SS83	DIODE SILICON SWITCHING	Q029	ZSA1175(F)	TR. SI, PNP
D027	DS442X	DIODE, SILICON SWITCHING	Q030	ZSA1175(F)	TR. SI, PNP
D028	DS442X	DIODE, SILICON SWITCHING	Q031	ZSC2785(F)	TR. SI, NPN
D029	DS442X	DIODE, SILICON SWITCHING	Q032	ZSC2785(F)	TR. SI, NPN
D030	1SS83	DIODE SILICON SWITCHING	Q033	ZSA1175(F)	TR. SI, PNP
D031	1SS83	DIODE SILICON SWITCHING	Q034	ZSA1175(F)	TR. SI, PNP
D032	W06C	DIODE SILICON RECTIFIER	Q035	ZSC2785(F)	TR. SI, NPN
D033	W06C	DIODE SILICON RECTIFIER	Q036	ZSC2912(S)	TR. SI, NPN
D034	1SS83	DIODE SILICON SWITCHING	Q037	ZSA1210(S)	TR. SI, PNP
D035	W06C	DIODE SILICON RECTIFIER	Q038	ZSC2785(F)	TR. SI, NPN
D036	W06C	DIODE SILICON RECTIFIER	Q039	ZSC2912(S)	TR. SI, NPN
D037	DS442X	DIODE, SILICON SWITCHING	Q040	ZSA1210(S)	TR. SI, PNP
D038	DS442X	DIODE, SILICON SWITCHING	Q041	ZSA1005(K)	TR. SI, PNP
D041	1SS83	DIODE SILICON SWITCHING	Q042	ZSA1005(K)	TR. SI, PNP
D042	DS442X	DIODE, SILICON SWITCHING	Q043	ZSK336	FET, N-CHANNEL
D043	DS442X	DIODE, SILICON SWITCHING	Q044	ZSK336	FET, N-CHANNEL
D044	GMA-01	DIODE	Q045	ZSC2785(F)	TR. SI, NPN
L005	L40-1011-04	FERRI INDUCTOR 100UH	Q046	ZSC2912(S)	TR. SI, NPN
L006	L40-1011-04	FERRI INDUCTOR 100UH	Q047	ZSA1210(S)	TR. SI, PNP
L007	L40-1011-13	FERRI INDUCTOR 100UH	Q048	ZSC2785(F)	TR. SI, NPN
L008	L40-1011-13	FERRI INDUCTOR 100UH	Q049	ZSC2912(S)	TR. SI, NPN
L009	L40-1011-04	FERRI INDUCTOR 100UH	Q050	ZSA1210(S)	TR. SI, PNP
L010	L40-1011-04	FERRI INDUCTOR 100UH	Q051	ZSA1175(F)	TR. SI, PNP
L011	L40-1011-13	FERRI INDUCTOR 100UH	Q052	ZSD613(E)	TR. SI, NPN
L012	L40-1011-13	FERRI INDUCTOR 100UH	Q053	NO USE	
L013	L40-1011-04	FERRI INDUCTOR 100UH	Q054	ZSA1175(F)	TR. SI, PNP
L014	L40-1011-04	FERRI INDUCTOR 100UH	Q055	ZSD1262A(Q)	TR. SI, NPN
L015	L40-1011-13	FERRI INDUCTOR 100UH	Q056	ZSB939A(Q)	TR. SI, PNP
L016	L40-1011-13	FERRI INDUCTOR 100UH	Q057	ZSC2785(F)	TR. SI, NPN
L017	L40-1011-04	FERRI INDUCTOR 100UH	Q058	ZSC2785(F)	TR. SI, NPN
L018	L40-1011-04	FERRI INDUCTOR 100UH	Q059	ZSA1175(F)	TR. SI, PNP
L019	L40-1011-04	FERRI INDUCTOR 100UH	Q060	ZSC2785(F)	TR. SI, NPN
L020	L40-1011-04	FERRI INDUCTOR 100UH	R001	RD14BB2E470J	RES. CARBON 47 5% 1/4W
L021	L40-4701-03	FERRI INDUCTOR 47UH	R002	RD14BB2E470J	RES. CARBON 47 5% 1/4W
L022	L40-6801-03	FERRI INDUCTOR 68UH	R003	RD14BB2E470J	RES. CARBON 47 5% 1/4W
NL001	NE-2B	NEON LAMP	R004	RD14BB2E470J	RES. CARBON 47 5% 1/4W
NL002	NE-2B	NEON LAMP	R005	RD14BB2E470J	RES. CARBON 47 5% 1/4W
NL003	NE-2B	NEON LAMP	R006	RD14BB2C681J	RES. CARBON 680 5% 1/6W

PARTS LIST

REF. NO	PARTS NO	NAME & DESCRIPTION	REF. NO	PARTS NO	NAME & DESCRIPTION
D001	WZ-085	DIODE, ZENER 8.5V	A33-0502-05		REFLECTOR (FOR LAMP ASS'Y)
D002	DS442X	DIODE, SILICON SWITCHING	A33-0503-05		REFLECTOR (FOR LAMP ASS'Y)
D003	DS442X	DIODE, SILICON SWITCHING	B07-0712-13		ESCUCHEON FOR FILTER
D004	DS442X	DIODE, SILICON SWITCHING	B19-0726-04		FILTER
			B20-0923-04		SCALE
P007	E40-1111-05	PIN CONNECTOR 11P	B30-0903-15		LED LAMP (RED)
P008	E40-1111-05	PIN CONNECTOR 11P	B30-0940-05		LAMP ASS'Y
P009	NO USE		B30-0941-05		LAMP
P010	E40-0911-05	PIN CONNECTOR 9P	B40-2765-04		NAME PLATE (SERIAL NO)
P011	E40-1011-05	PIN CONNECTOR 10P	B41-0710-04		CAUTION LABEL (HIGH VOLTAGE)
P012	E40-1011-05	PIN CONNECTOR 10P	B50-7511-00		CAUTION LABEL
			E04-0251-05		INSTRUCTION MANUAL
P022	E40-0673-05	PIN CONNECTOR 6 CONTACT	E21-0657-04		BNC RECEPTACLE
P023	NO USE		E21-0660-04		TERMINAL (GND)
P024	E40-1073-05	PIN CONNECTOR 10P	E23-0043-04		TERMINAL(CAL)
P025	E40-0673-05	PIN CONNECTOR 6 CONTACT	E23-0513-05		EARTH LUG
P026	E40-0273-05	PIN CONNECTOR 2 CONTACT	E23-0522-14		EARTH LUG
P027	E40-0373-05	PIN CONNECTOR 3 CONTACT	E23-0524-04		EARTH PLATE
P028	E40-0273-05	PIN CONNECTOR 2 CONTACT	E30-0545-05		EARTH LUG
P029	E40-0273-05	PIN CONNECTOR 2 CONTACT	E30-1851-05		AC POWER CORD
P030	E40-0373-05	PIN CONNECTOR 3 CONTACT	E31-2371-05		POWER CORD ASS'Y (JIS)
P031	E40-0373-05	PIN CONNECTOR 3 CONTACT	E31-2372-05		LEAD WIRE WITH CONNECTOR
P032	E40-0273-05	PIN CONNECTOR 2 CONTACT	E31-2391-05		LEAD WIRE WITH CONNECTOR
P033	E40-7203-05	PIN CONNECTOR 3P	E31-2392-05		LEAD WIRE WITH CONNECTOR
P034	E40-0604-05	PIN CONNECTOR 6P	E31-2393-05		LEAD WIRE WITH CONNECTOR
P035	E40-7204-05	PIN CONNECTOR 4P	E31-2394-05		LEAD WIRE WITH CONNECTOR
P036	E40-0804-05	PIN CONNECTOR 8P	E31-2395-05		LEAD WIRE WITH CONNECTOR
P037	E40-0804-05	PIN CONNECTOR 8P	E31-2396-15		LEAD WIRE WITH CONNECTOR
Q001	2SC1384(R)	TR. SI, NPN	E31-2397-05		LEAD WIRE WITH CONNECTOR
Q002	2SA684(R)	TR. SI, PNP	E31-2398-15		LEAD WIRE WITH CONNECTOR
R001	RD14BB2E103J	RES. CARBON 10K 5% 1/4W	E31-2400-05		LEAD WIRE WITH CONNECTOR
R002	RD14BB2E103J	RES. CARBON 10K 5% 1/4W	E31-2401-05		LEAD WIRE WITH CONNECTOR
R003	RD14BB2E103J	RES. CARBON 10K 5% 1/4W	E31-2402-05		LEAD WIRE WITH CONNECTOR
R004	RD14BB2E103J	RES. CARBON 10K 5% 1/4W	E31-2403-05		LEAD WIRE WITH CONNECTOR
R005	RD14BB2E122J	RES. CARBON 1.2K 5% 1/4W	E31-2404-05		LEAD WIRE WITH CONNECTOR
R006	RD14BB2E122J	RES. CARBON 1.2K 5% 1/4W	E31-2405-05		LEAD WIRE WITH CONNECTOR
R007	RD14BB2E122J	RES. CARBON 1.2K 5% 1/4W	E31-2406-05		LEAD WIRE WITH CONNECTOR
R008	RS14GB30820J	RES. METAL FILM 82 5% 2W	E31-2407-15		LEAD WIRE WITH CONNECTOR
R009	RD14BB2E331J	RES. CARBON 330 5% 1/4W	E31-2408-05		LEAD WIRE WITH CONNECTOR
R010	RD14BB2E470J	RES. CARBON 47 5% 1/4W	E31-2409-05		LEAD WIRE WITH CONNECTOR
R011	RN14BK2E1003F	RES. METAL FILM 100K 1% 1/4W	E31-2411-05		LEAD WIRE WITH CONNECTOR
R012	RN14BK2E9102F	RES. METAL FILM 91K 1% 1/4W	E31-2412-05		LEAD WIRE WITH CONNECTOR
R013	RN14BK2E4302F	RES. METAL FILM 43K 1% 1/4W	E31-2413-05		LEAD WIRE WITH CONNECTOR
R014	RN14BK2E3601F	RES. METAL FILM 3.6K 1% 1/4W	E31-2414-05		LEAD WIRE WITH CONNECTOR
R015	RN14BK2E1300F	RES. METAL FILM 130 1% 1/4W	E31-2415-05		LEAD WIRE WITH CONNECTOR
R016	NO USE		E31-2416-05		LEAD WIRE WITH CONNECTOR
R017	RD14BB2E102J	RES. CARBON 1K 5% 1/4W	E31-2417-05		LEAD WIRE WITH CONNECTOR
R018	RD14BB2E101J	RES. CARBON 100 5% 1/4W	E31-2418-05		LEAD WIRE WITH CONNECTOR
R019	RD14BB2E101J	RES. CARBON 100 5% 1/4W	E31-2419-05		LEAD WIRE WITH CONNECTOR
R020	RD14BB2E212J	RES. CARBON 220 5% 1/4W	E31-2420-05		LEAD WIRE WITH CONNECTOR
R021	RD14BB2E471J	RES. CARBON 470 5% 1/4W	E31-2478-05		LEAD WIRE WITH CONNECTOR
R022	RD14BB2E471J	RES. CARBON 470 5% 1/4W	E31-2479-05		LEAD WIRE WITH CONNECTOR
R023	RD14BB2E471J	RES. CARBON 470 5% 1/4W	F01-0838-03		HEAT SINK
R024	RD14BB2C101J	RES. CARBON 100 5% 1/6W	F05-1023-05		FUSE 1A
			F05-2023-05		FUSE 2A
U001	NJM4558D	IC, DUAL OP-AMP	F07-0908-14		PROTECTION COVER
			F10-1567-04		EARTH BAND (FOR H.VOLT BLCK)
			F11-0981-13		SHIELD CASE
			F20-0639-04		INSULATOR
			G02-0606-14		SPRING FOR HANDLE
			G02-0607-04		SPRING FOR CRT
			G16-0602-04		REFLECTOR SHEET(L)
			G16-0603-04		REFLECTOR SHEET(R)
			H01-5702-04		CARTON BOX
			H10-2817-01		FOAMED STYRENE PAD
			H10-2818-01		FOAMED STYRENE PAD
			H20-1719-04		VINYL COVER
			H25-0016-00		BAG
			H25-0029-04		BAG
			J02-0089-05		LEG
			J10-0100-12		BEZEL
			J13-0033-15		FUSE HOLDER
			J19-1313-05		LEAD HOLDER
			J19-1620-05		CORD CLAMP
			J19-1633-03		HOLDER FOR CRT
			J19-1634-04		HOLDER FOR LEAD
			J19-1635-04		HOLDER FOR LED
			J19-1637-03		HOLDER FOR DELAY LINE
			J21-2906-05		GEAR FOR HANDLE
			J21-2907-05		RING FOR HANDLE
			J21-2970-23		BLACKET FOR CRT
			J21-2979-14		BLACKET FOR SCALE
			J21-2980-04		BRACKET FOR P.C.BOARD
			J21-2983-04		AC CORD BRACKET
			J25-3000-05		P.C.BOARD (FOR LAMP ASS'Y)
			J31-0603-04		COLLAR
			J31-0604-04		COLLAR
			J42-0083-05		BUSHING
			J42-0523-04		BUSHING
			J59-0403-05		NYLON RIVET
			J61-0049-05		WIRE BAND
			J61-0401-05		WIRE BAND
			J61-0515-05		SUPPORT (I TYPE)

CRT UNIT

(X81-1250-02)

REF. NO	PARTS NO	NAME & DESCRIPTION
E01-0103-05	CRT SOCKET	
E23-0503-05	TERMINAL	
J25-2996-24	PCB (UNMOUNTED)	
R92-0150-05	JUMPING RES. ZERO OHM	
JO16	E31-2390-05	LEAD WIRE WITH CONNECTOR
JO17	E31-2390-05	LEAD WIRE WITH CONNECTOR
JO18	NO USE	
JO19	E31-2388-05	LEAD WIRE WITH CONNECTOR
JO20	NO USE	
JO21	E31-2387-05	LEAD WIRE WITH CONNECTOR
JO22	NO USE	
JO23	E31-2389-05	LEAD WIRE WITH CONNECTOR
RO03	RD14BB2E473J	RES. CARBON 47K 5% 1/4W

MAIN CHASSIS CS-1040

(Y70-1450-21)

REF. NO	PARTS NO	NAME & DESCRIPTION
A01-1105-12	CASE	
A01-1106-02	CASE	
A10-1436-02	CHASSIS	
A20-2764-11	PANEL	
A21-1036-02	DECORATIVE PANEL	
A22-0827-13	SUB PANEL	
A22-0831-12	SUB PANEL	
A23-1644-02	REAR PANEL	

PARTS LIST

REF. NO	PARTS NO	NAME & DESCRIPTION	REF. NO	PARTS NO	NAME & DESCRIPTION
J61-0518-05	SUPPORT (T TYPE)	C023 CC45FCH1H020C	CAP. CERAMIC	2P 0.25P 50V	
J61-0519-04	SUPPORT (P.C.BORD)	C024 NO USE	CAP. CERAMIC	0.01 50V	
K01-0520-05	HANDLE	C025 CK45F1H103Z	CAP. CERAMIC	0.01 50V	
K21-0855-14	KNOB	C026 CK45F1H103Z	CAP. CERAMIC	0.01 50V	
K21-0858-04	KNOB	C031 CK45F1H103Z	CAP. CERAMIC	0.01 50V	
K21-0860-03	KNOB	C032 CC45FCH1H050C	CAP. CERAMIC	5P 0.25P 50V	
K21-0862-03	KNOB	C033 CE04FW1E330M	CAP. ELECTRO	33 20% 25V	
K21-0863-03	KNOB	C034 CC45CH1H470J	CAP. CERAMIC	47P 5% 50V	
K21-0864-03	KNOB	C035 CE04FW1E220M	CAP. ELECTRO	22 20% 25V	
K21-0866-13	KNOB	C036 CC45FCH1H050C	CAP. CERAMIC	5P 0.25P 50V	
K27-0530-04	KNOB FOR LEVER	C037 CC45FCH1H100D	CAP. CERAMIC	10P 0.5P 50V	
L01-9364-05	POWER TRANSFORMER	C038 CC45FCH1H220J	CAP. CERAMIC	22P 5% 50V	
L39-0518-05	ROTATOR COIL	C039 CC45FCH1H050C	CAP. CERAMIC	5P 0.25P 50V	
L76-0107-05	DELAY LINE	C044 CE04FW1E470M	CAP. ELECTRO	47 20% 25V	
N08-0611-04	DRESSED SCREW	C045 CK45F1H103Z	CAP. CERAMIC	0.01 50V	
N09-0705-05	SCREW, HEX SOCKET FLAT HD	C046 CE04FW1E220M	CAP. ELECTRO	22 20% 25V	
N09-0710-05	SCREW, SEMS PAN HD	C047 CE04FW1E220M	CAP. ELECTRO	22 20% 25V	
N09-0715-04	SCREW, PAN HD M 4X31	C048 CK45F1H103Z	CAP. CERAMIC	0.01 50V	
N09-0717-05	SCREW, TRUSS HD M 3X12	C049 NO USE			
N09-0720-05	SCREW, SEMS PAN HD	C050 CE04FW1E470M	CAP. ELECTRO	47 20% 25V	
N10-2070-46	NUT, HEX	C051 CE04FW1E470M	CAP. ELECTRO	47 20% 25V	
N15-1030-41	WASHER, FLAT FOR M3	C052 CE04FW1E470M	CAP. ELECTRO	47 20% 25V	
N15-1110-46	WASHER	C053 NO USE			
N19-0704-04	WASHER	C054 CE04FW1E470M	CAP. ELECTRO	47 20% 25V	
N19-0710-05	WASHER	C055 CE04FW1E220M	CAP. ELECTRO	22 20% 25V	
N30-3004-46	SCREW, PAN HD M 3X4	C056 CE04FW1E470M	CAP. ELECTRO	47 20% 25V	
N30-3006-41	SCREW, PAN HD M 3X6	C057 CE04FW1E220M	CAP. ELECTRO	22 20% 25V	
N30-3008-46	SCREW, PAN HD M 3X8	C058 CE04FW1E470M	CAP. ELECTRO	47 20% 25V	
N30-4006-41	SCREW, PAN HD M 4X6	C059 CK45F1H103Z	CAP. CERAMIC	0.01 50V	
N30-4012-41	SCREW, PAN HD M 4X12	C060 NO USE			
N32-3008-41	SCREW, FLAT HD M 3X8	C061 CK45F1H103Z	CAP. CERAMIC	0.01 50V	
N88-3006-46	SCREW, FLAT HD TAP TITE	C062 CK45F1H103Z	CAP. CERAMIC	0.01 50V	
N88-3008-46	SCREW, FLAT HD TAP TITE	C063 CK45F1H103Z	CAP. CERAMIC	0.01 50V	
N89-3006-41	SCREW, BINDING TAP TITE	C064 CK45F1H103Z	CAP. CERAMIC	0.01 50V	
N89-3010-41	SCREW, BINDING TAP TITE	C065 CE04FW1E220M	CAP. ELECTRO	22 20% 25V	
R03-3502-15	V.R. 20K B	C066 CK45F1H103Z	CAP. CERAMIC	0.01 50V	
R05-3505-05	V.R. 20K B	C067 NO USE			
R05-8001-05	V.R. 3M B	C068 CK45F1H103Z	CAP. CERAMIC	0.01 50V	
R10-9502-05	V.R. 10K,200K B	C069 NO USE			
R29-0504-05	V.R. 1K B	C070 CK45F1H103Z	CAP. CERAMIC	0.01 50V	
SLP5200	LED (RED, GREEN)	C071 CK45F1H103Z	CAP. CERAMIC	0.01 50V	
W01-0503-04	CORD WRAP	C072 CE04FW1E470M	CAP. ELECTRO	47 20% 25V	
W02-0412-05	HIGH VOLTAGE POWER BLOCK	C073 CE04FW1E470M	CAP. ELECTRO	47 20% 25V	
X73-1530-00	VERTICAL PREAMP UNIT	C074 CE04FW1E220M	CAP. ELECTRO	22 20% 25V	
X73-1540-00	VERTICAL OUTPUT AMP UNIT	C075 CE04FW1E470M	CAP. ELECTRO	47 20% 25V	
X74-1370-00	TRIGGER UNIT	C076 CE04FW1E470M	CAP. ELECTRO	47 20% 25V	
X74-1380-00	SWEEP UNIT	C077 CE04FW1E470M	CAP. ELECTRO	47 20% 25V	
X75-1150-00	ATTENUATOR UNIT	C078 CE04FW1E470M	CAP. ELECTRO	47 20% 25V	
X77-1300-00	CONNECTION UNIT	C079 CE04FW1E220M	CAP. ELECTRO	22 20% 25V	
X81-1250-02	CRT SOCKET UNIT	C080 CE04FW1E470M	CAP. ELECTRO	47 20% 25V	
Y87-1250-00	PROBE(PC-29)	C081 CE04FW1E470M	CAP. ELECTRO	47 20% 25V	
150HTM31	CRT	C082 CE04FW1E220M	CAP. ELECTRO	22 20% 25V	
212-2014-05	TUBE (PLASTIC)	C083 CE04FW1E470M	CAP. ELECTRO	47 20% 25V	
212-3017-05	TUBE (PLASTIC)	C084 CK45F1H103Z	CAP. CERAMIC	0.01 50V	
490-0009-05	TAPE	C085 CK45F1H103Z	CAP. CERAMIC	0.01 50V	
Q001 2SD1276(Q)	TR. SI, NPN	C086 CK45F1H103Z	CAP. CERAMIC	0.01 50V	
Q002 2SD1276(Q)	TR. SI, NPN	C087 CK45F1H103Z	CAP. CERAMIC	0.01 50V	
Q003 2SB950(P,Q)	TR. SI, PNP	C088 CK45F1H103Z	CAP. CERAMIC	0.01 50V	
Q004 2SB950(P,Q)	TR. SI, PNP	C089 CK45F1H103Z	CAP. CERAMIC	0.01 50V	
Q005 2SB940(P)	TR. SI, PNP	C090 CK45F1H103Z	CAP. CERAMIC	0.01 50V	
Q006 2SA1156(K,L)	TR. SI, PNP	C091 CK45F1H103Z	CAP. CERAMIC	0.01 50V	
		C092 CK45F1H103Z	CAP. CERAMIC	0.01 50V	
		C093 CE04W1U330M	CAP. ELECTRO	33 20% 63V	
		C094 CK45B2H222K	CAP. CERAMIC	2200P 10% 500V	

VERTICAL PREAMP UNIT (X73-1530-01)

REF. NO	PARTS NO	NAME & DESCRIPTION			
E23-0526-04	EARTH PLATE	D001 DS442X	DIODE, SILICON	SWITCHING	
E31-2170-05	JUMPING WIRE	D002 DS442X	DIODE, SILICON	SWITCHING	
E33-4042-00	WIRE ASS'Y	D003 MTZ7.5JC	DIODE, ZENER	7.5V	
J25-5021-13	PCB (UNMOUNTED)	D011 DS442X	DIODE, SILICON	SWITCHING	
J31-0604-04	COLLAR	D012 DS442X	DIODE, SILICON	SWITCHING	
K27-0528-04	KNOB FOR PUSH	D021 DS442X	DIODE, SILICON	SWITCHING	
C001 CK45F1H103Z	CAP. CERAMIC 0.01 50V	D022 DS442X	DIODE, SILICON	SWITCHING	
C002 CK45F1H103Z	CAP. CERAMIC 0.01 50V	D031 GMA01	DIODE		
C003 CC45FCH1H050C	CAP. CERAMIC 5P 0.25P 50V	D032 GMA01	DIODE		
C004 CC45FCH1H220J	CAP. CERAMIC 22P 5% 50V	L001 L40-6882-02	FERRI INDUCTOR	68UH	
C005 NO USE		P001 E40-0273-05	PIN CONNECTOR	2 CONTACT	
C006 CE04FW1E220M	CAP. ELECTRO 22 20% 25V	P002 E40-0273-05	PIN CONNECTOR	2 CONTACT	
C007 CK45F1H103Z	CAP. CERAMIC 0.01 50V	P003 E40-0273-05	PIN CONNECTOR	2 CONTACT	
C008 CE04BW1E220M	CAP. ELECTRO 22 20% 25V	P004 E40-0273-05	PIN CONNECTOR	2 CONTACT	
C011 CK45F1H103Z	CAP. CERAMIC 0.01 50V	P005 E40-0273-05	PIN CONNECTOR	2 CONTACT	
C012 CK45F1H103Z	CAP. CERAMIC 0.01 50V	P006 E40-0473-05	PIN CONNECTOR	4 CONTACT	
C013 CC45FCH1H050C	CAP. CERAMIC 5P 0.25P 50V	P007 E40-1116-05	PIN CONNECTOR	11P	
C014 CC45FCH1H100D	CAP. CERAMIC 10P 0.5P 50V	P008 E40-1116-05	PIN CONNECTOR	11P	
C015 CK45F1H103Z	CAP. CERAMIC 0.01 50V	P052 E40-0415-05	PIN CONNECTOR	4 CONTACT	
C016 CK45F1H103Z	CAP. CERAMIC 0.01 50V	P055 E40-0673-05	PIN CONNECTOR	6 CONTACT	
C017 CK45F1H103Z	CAP. CERAMIC 0.01 50V	P056 E40-0673-05	PIN CONNECTOR	6 CONTACT	
C018 CE04FW1A470M	CAP. ELECTRO 47 20% 10V				
C021 CE04FW1E100M	CAP. ELECTRO 10 20% 25V				
C022 CK45F1H103Z	CAP. CERAMIC 0.01 50V				

PARTS LIST

REF. NO	PARTS NO	NAME & DESCRIPTION	REF. NO	PARTS NO	NAME & DESCRIPTION
R166	RD14BB2E331J	RES. CARBON 330 5% 1/4W	C006	CE04FW1E470M	CAP. ELECTRO 47 20% 25V
R167	RD14BB2E331J	RES. CARBON 330 5% 1/4W	C007	CK45F1H103Z	CAP. CERAMIC 0.01 50V
R168	RD14BB2E911J	RES. CARBON 910 5% 1/4W	C008	CE04FW1E220M	CAP. ELECTRO 22 20% 25V
R169	RD14BB2E911J	RES. CARBON 910 5% 1/4W	C009	CC45CH1H680J	CAP. CERAMIC 68P 5% 50V
R170	RD14BB2E100J	RES. CARBON 10 5% 1/4W	C010	CK45F1H103Z	CAP. CERAMIC 0.01 50V
R171	RD14BB2E511J	RES. CARBON 510 5% 1/4W	C011	CK45F1H103Z	CAP. CERAMIC 0.01 50V
R172	RD14BB2E112J	RES. CARBON 1.1K 5% 1/4W	C012	CE04FW1E220M	CAP. ELECTRO 22 20% 25V
R173	RD14BB2E112J	RES. CARBON 1.1K 5% 1/4W			
R174	RD14BB2E392J	RES. CARBON 3.9K 5% 1/4W	C015	CE04FW1E470M	CAP. ELECTRO 47 20% 25V
R175	RD14BB2E331J	RES. CARBON 330 5% 1/4W	C016	CE04FW1E220M	CAP. ELECTRO 22 20% 25V
R176	RD14BB2E331J	RES. CARBON 330 5% 1/4W	C017	CK45F1H103Z	CAP. CERAMIC 0.01 50V
R177	RD14BB2E133J	RES. CARBON 13K 5% 1/4W			
R178	RD14BB2E431J	RES. CARBON 430 5% 1/4W	C020	CE04W1J330M	CAP. ELECTRO 33 20% 63V
R179	RD14BB2E431J	RES. CARBON 430 5% 1/4W	C021	CE04W1J330M	CAP. ELECTRO 33 20% 63V
R180	RD14BB2E331J	RES. CARBON 330 5% 1/4W	C022	CK45B2H472K	CAP. CERAMIC 4700P 10% 500V
R181	RD14BB2E100J	RES. CARBON 10 5% 1/4W	C023	CK45B1H472K	CAP. CERAMIC 4700P 10% 50V
R182	RD14BB2E333J	RES. CARBON 33K 5% 1/4W	C024	CC45CH1H270J	CAP. CERAMIC 27P 5% 50V
R183	RD14BB2E181J	RES. CARBON 180 5% 1/4W			
R186	RD14BB2E331J	RES. CARBON 330 5% 1/4W	D001	WZ-100	DIODE, ZENER 10V
R187	RD14BB2E100J	RES. CARBON 10 5% 1/4W	D002	WZ-100	DIODE, ZENER 10V
R188	RN14BK2E6800F	RES. METAL FILM 680 1% 1/4W	L001	L40-4782-13	FERRI INDUCTOR 0.47UH 20%
R189	RD14BB2E470J	RES. CARBON 47 5% 1/4W	L002	L40-4782-13	FERRI INDUCTOR 0.47UH 20%
R190	RD14BB2E182J	RES. CARBON 1.8K 5% 1/4W	L003	L40-4782-13	FERRI INDUCTOR 0.47UH 20%
R191	RD14BB2E101J	RES. CARBON 100 5% 1/4W	L004	L40-4782-13	FERRI INDUCTOR 0.47UH 20%
R192	RD14BB2E680J	RES. CARBON 68 5% 1/4W	L005	NO USE	
R193	NO USE		P006	E40-0473-05	PIN CONNECTOR 4 CONTACT
R194	RN14BK2E1501F	RES. METAL FILM 1.5K 1% 1/4W	P009	E40-0273-05	PIN CONNECTOR 2 CONTACT
R195	RD14BB2E682J	RES. CARBON 6.8K 5% 1/4W			
R198	RD14BB2C821J	RES. CARBON 620 5% 1/6W	P050	E40-0202-05	PIN CONNECTOR 2P
R201	RD14BB2E621J	RES. CARBON 620 5% 1/4W	P051	E40-0202-05	PIN CONNECTOR 2P
R202	RD14BB2E621J	RES. CARBON 620 5% 1/4W	P052	E40-0444-05	PIN CONNECTOR 4P
R203	RD14BB2E621J	RES. CARBON 620 5% 1/4W	Q001	ZSA1206(K)	TR. SI, PNP
R204	RD14BB2E621J	RES. CARBON 620 5% 1/4W	Q002	ZSA1206(K)	TR. SI, PNP
S001	S42-4510-05	PUSH SWITCH	Q003	ZSC2644	TR. SI, NPN
TC001	C05-0434-05	CAP. TRIMMER 20P	Q004	ZSC2644	TR. SI, NPN
TC011	C05-0434-05	CAP. TRIMMER 20P	Q005	ZSC2644	TR. SI, NPN
TC021	C05-0422-05	CAP. TRIMMER 20P	Q006	ZSC1164(0)	TR. SI, NPN
Q007	ZSC1164(0)		Q008	ZSC1164(0)	TR. SI, NPN
Q009	ZSC1164(0)		Q010	ZSC1164(0)	TR. SI, NPN
TP001	E23-0046-04	TERMINAL	R001	RD14BB2E910J	RES. CARBON 91 5% 1/4W
TP002	E23-0046-04	TERMINAL	R002	RD14BB2E910J	RES. CARBON 91 5% 1/4W
TP003	E23-0046-04	TERMINAL	R003	RD14BB2E101J	RES. CARBON 100 5% 1/4W
TP004	E23-0046-04	TERMINAL	R004	RD14BB2E101J	RES. CARBON 100 5% 1/4W
TP005	E23-0046-04	TERMINAL	R005	RD14BB2E132J	RES. CARBON 1.3K 5% 1/4W
U002	TL082CP	IC, OP-AMP.	R006	RD14BB2E132J	RES. CARBON 1.3K 5% 1/4W
VR001	R05-3506-05	V.R. 10K B	R007	RD14BB2E751J	RES. CARBON 750 5% 1/4W
VR002	R12-3523-05	RES. SEMI FIXED 20K B	R008	RD14BB2E562J	RES. CARBON 5.6K 5% 1/4W
VR003	R12-3522-05	RES. SEMI FIXED 10K B	R009	RD14BB2E562J	RES. CARBON 5.6K 5% 1/4W
VR004	NO USE		R010	RD14BB2E331J	RES. CARBON 330 5% 1/4W
VR005	R12-0543-05	RES. SEMI FIXED 500 B	R011	RD14BB2E331J	RES. CARBON 330 5% 1/4W
VR006	R12-0541-05	RES. SEMI FIXED 100 B	R012	RD14BB2E681J	RES. CARBON 680 5% 1/4W
VR011	R05-3506-05	V.R. 10K B	R013	RD14BB2E5R6J	RES. CARBON 5.6 5% 1/4W
VR012	R12-3523-05	RES. SEMI FIXED 20K B	R014	RD14BB2E681J	RES. CARBON 680 5% 1/4W
VR013	R12-3522-05	RES. SEMI FIXED 10K B	R015	RD14BB2E241J	RES. CARBON 240 5% 1/4W
VR014	R12-0543-05	RES. SEMI FIXED 500 B	R016	RD14BB2E163J	RES. CARBON 16K 5% 1/4W
VR015	R12-0543-05	RES. SEMI FIXED 500 B	R017	NO USE	
VR016	R12-0541-05	RES. SEMI FIXED 100 B	R018	RD14BB2E220J	RES. CARBON 22 5% 1/4W
VR021	R12-3521-05	RES. SEMI FIXED 20K B	R019	RD14BB2E220J	RES. CARBON 22 5% 1/4W
VR022	R12-2512-05	RES. SEMI FIXED 5K B	R020	RD14BB2E102J	RES. CARBON 1K 5% 1/4W
VR023	R12-0421-05	RES. SEMI FIXED 100 B	R021	RD14BB2E102J	RES. CARBON 1K 5% 1/4W
VR031	R12-0541-05	RES. SEMI FIXED 100 B	R022	RD14BY2H621J	RES. CARBON 620 5% 1/2W
VR032	R12-0541-05	RES. SEMI FIXED 100 B	R023	RD14BY2H621J	RES. CARBON 620 5% 1/2W
VR033	NO USE		R024	RD14BB2E751J	RES. CARBON 750 5% 1/4W
VR034	R12-1520-05	RES. SEMI FIXED 2KB	R025	RD14BB2E751J	RES. CARBON 750 5% 1/4W
VR035	NO USE		R026	RD14BB2E220J	RES. CARBON 22 5% 1/4W
VR036	R12-1517-05	RES. SEMI FIXED 1KB	R027	RD14BB2E220J	RES. CARBON 22 5% 1/4W
VERTICAL FINAL UNIT	(X73-1540-01)		R028	RS14GB3D101J	RES. METAL FILM 100 5% 2W
REF. NO	PARTS NO	NAME & DESCRIPTION	R029	RS14GB3D101J	RES. METAL FILM 100 5% 2W
E31-2170-05	JUMPING WIRE		R030	RD14BB2E5R1J	RES. CARBON 5.1 5% 1/4W
F02-0511-05	HEAT SINK		R031	RD14BB2E680J	RES. CARBON 68 5% 1/4W
F02-0512-05	HEAT SINK		R032	RD14BB2E242J	RES. CARBON 2.4K 5% 1/4W
J21-2981-04	BRACKET FOR TR		R033	RD14BB2E100J	RES. CARBON 10 5% 1/4W
J25-5020-13	PCB (UNMOUNTED)		R034	RD14BB2E100J	RES. CARBON 10 5% 1/4W
J30-0605-05	SPACER		R035	RD14BB2E470J	RES. CARBON 47 5% 1/4W
212-1018-05	TUBE (PLASTIC)		R036	RD14BB2E470J	RES. CARBON 47 5% 1/4W
C001	CK45F1H103Z	CAP. CERAMIC 0.01 50V	R037	RN14BK2E6802F	RES. METAL FILM 68K 1% 1/4W
C002	CC45FC1H060D	CAP. CERAMIC 6P 0.5P 50V	R038	RN14BK2E6802F	RES. METAL FILM 68K 1% 1/4W
C003	CK45B1H332K	CAP. CERAMIC 3300P 10% 50V	R039	RD14BB2E361J	RES. CARBON 360 5% 1/4W
C004	NO USE		R040	RD14BB2E361J	RES. CARBON 360 5% 1/4W
C005	CK45F1H103Z	CAP. CERAMIC 0.01 50V	R041	RS14AB3Y361J	RES. METAL FILM 360 5% 7W
			R042	RD14BB2E361J	RES. CARBON 360 5% 1/4W
			R043	RD14BB2E361J	RES. CARBON 360 5% 1/4W
			R044	RS14AB3Y361J	RES. METAL FILM 360 5% 7W
			R045	RN14BK2E1502F	RES. METAL FILM 15K 1% 1/4W
			R046	RD14BB2E102J	RES. CARBON 1K 5% 1/4W
			R047	RD14BB2E103J	RES. CARBON 10K 5% 1/4W
			R048	NO USE	
			R049	RD14BB2C122J	RES. CARBON 1.2K 5% 1/6W
			R050	RD14BB2C621J	RES. CARBON 620 5% 1/6W
			R051	RD14BB2E221J	RES. CARBON 220 5% 1/4W

PARTS LIST

REF. NO	PARTS NO	NAME & DESCRIPTION	REF. NO	PARTS NO	NAME & DESCRIPTION
TC001	C05-0422-05	CAP. TRIMMER 20P	C060	C91-0571-05	CAP. CERAMIC 0.01 2KV
TC002	C05-0422-05	CAP. TRIMMER 20P	C061	C91-0571-05	CAP. CERAMIC 0.01 2KV
TH001	SDT-100	THERMISTOR	C062	C91-0571-05	CAP. CERAMIC 0.01 2KV
TH002	SDT-20	THERMISTOR	C063	C91-0571-05	CAP. CERAMIC 0.01 2KV
TH003	SDT-100	THERMISTOR	C064	CE04W1V221M	CAP. ELECTRO 220 20% 35V
TP001	E23-0046-04	TERMINAL	C065	CE04W1V221M	CAP. ELECTRO 220 20% 35V
TP002	E23-0046-04	TERMINAL	C066	CE04W1V221M	CAP. ELECTRO 220 20% 35V
TP003	E23-0046-04	TERMINAL	C067	CE04W1V221M	CAP. ELECTRO 220 20% 35V
TP004	E23-0046-04	TERMINAL	C068	CE04W2C3R3	CAP. ELECTRO 3.3 160V
U001	NJM4558D	IC, DUAL OP-AMP	C069	CK45B2H472K	CAP. CERAMIC 4700P 10% 500V
VR001	R12-0539-05	RES. SEMI FIXED 200 B	C070	CE04W2C100	CAP. ELECTRO 10 160V
VR002	R12-1517-05	RES. SEMI FIXED 1K B	C071	CK45B2H472K	CAP. CERAMIC 4700P 10% 500V
VR003	R12-0539-05	RES. SEMI FIXED 200 B	C072	CE04W1E331M	CAP. ELECTRO 330 20% 25V

TRIG UNIT

(X74-1370-01)

REF. NO	PARTS NO	NAME & DESCRIPTION	REF. NO	PARTS NO	NAME & DESCRIPTION
E23-0527-04	EARTH PLATE		C086	CK45F1H103Z	CAP. CERAMIC 0.01 50V
E31-2170-05	JUMPING WIRE		C087	CK45F1H103Z	CAP. CERAMIC 0.01 50V
E31-2390-05	LEAD WIRE WITH CONNECTOR		C088	CK45F1H103Z	CAP. CERAMIC 0.01 50V
E33-4040-00	WIRE ASS'Y		C089	CK45F1H103Z	CAP. CERAMIC 0.01 50V
F01-0813-05	HEAT SINK		C090	CK45F1H103Z	CAP. CERAMIC 0.01 50V
F01-0820-04	HEAT SINK		C091	CK45F1H103Z	CAP. CERAMIC 0.01 50V
F15-0727-04	HOLDER (NEON TUBE)		C092	CK45F1H103Z	CAP. CERAMIC 0.01 50V
F20-0622-05	INSULATOR		C093	C90-0298-05	CAP. CERAMIC 0.1 20% 12V
J25-5016-22	PCB (UNMOUNTED)		C094	C90-0298-05	CAP. CERAMIC 0.1 20% 12V
N19-0191-05	WASHER NONMETAL		C095	CE04W1A471M	CAP. ELECTRO 470 20% 10V
N30-3006-46	SCREW, PAN HD M 3X6		C096	CE04FW1A101M	CAP. ELECTRO 100 20% 10V
N30-3008-46	SCREW, PAN HD M 3X8		C097	C91-0571-05	CAP. CERAMIC 0.01 2KV
C001	CK45F1H103Z	CAP. CERAMIC 0.01 50V	C098	CC45CH1H101J	CAP. CERAMIC 100P 5% 50V
C002	CK45F1H103Z	CAP. CERAMIC 0.01 50V	C099	NO USE	
C003	CK45F1H103Z	CAP. CERAMIC 0.01 50V	C100	CK45B2H102K	CAP. CERAMIC 1000P 10% 500V
C004	Q93M1H103K	CAP. MYLAR 0.01 10% 50V	C101	CK45B2H102K	CAP. CERAMIC 1000P 10% 500V
C005	CC45CH1H101J	CAP. CERAMIC 100P 5% 50V	C102	CK45F1H103Z	CAP. CERAMIC 0.01 50V
C006	CE04HW1H010M	CAP. ELECTRO 1 20% 50V	C103	CK45F1H103Z	CAP. CERAMIC 0.01 50V
C007	CE04HW1H010M	CAP. ELECTRO 1 20% 50V	C104	CK45F1H103Z	CAP. CERAMIC 0.01 50V
C008	CE04HW1H010M	CAP. ELECTRO 1 20% 50V	C105	CK45F1H103Z	CAP. CERAMIC 0.01 50V
C009	CK45F1H103Z	CAP. CERAMIC 0.01 50V	C106	CK45F1H103Z	CAP. CERAMIC 0.01 50V
C010	CE04HW1H010M	CAP. ELECTRO 1 20% 50V	C107	CK45F1H103Z	CAP. CERAMIC 0.01 50V
C011	CE04W1E100M	CAP. ELECTRO 10 20% 25V	C108	CE04W1E101M	CAP. ELECTRO 100 20% 25V
C012	CK45F1H103Z	CAP. CERAMIC 0.01 50V	C109	CE04W1E101M	CAP. ELECTRO 100 20% 25V
C013	CK45B1H222K	CAP. CERAMIC 2200P 10% 50V	C110	CK45F1H103Z	CAP. CERAMIC 0.01 50V
C014	CC45SL1H331J	CAP. CERAMIC 330P 5% 50V	C111	CE04W1E101M	CAP. ELECTRO 100 20% 25V
C015	CC45FC1H1270J	CAP. CERAMIC 27P 5% 50V	C112	CC45CH1H470J	CAP. CERAMIC 47P 5% 50V
C016	NO USE		C113	CC45CH1H680J	CAP. CERAMIC 68P 5% 50V
C017	CC45CH1H470J	CAP. CERAMIC 47P 5% 50V	C114	NO USE	
C018	NO USE		C115	CC45CH1H470J	CAP. CERAMIC 47P 5% 50V
C019	CC45FC1H1050C	CAP. CERAMIC 5P 0.25P 50V	C116	CC45CH1H470J	CAP. CERAMIC 47P 5% 50V
C020	CC45FC1H100D	CAP. CERAMIC 10P 0.5P 50V	C117	C90-0298-05	CAP. CERAMIC 0.1 20% 12V
C021	CC45FC1H150J	CAP. CERAMIC 15P 5% 50V	C118	C90-0298-05	CAP. CERAMIC 0.1 20% 12V
C022	CC45FC1H150J	CAP. CERAMIC 15P 5% 50V	C119	C90-0298-05	CAP. CERAMIC 0.1 20% 12V
C023	NO USE		C120	C91-0571-05	CAP. CERAMIC 0.01 2KV
C024	CK45F1H103Z	CAP. CERAMIC 0.01 50V	C121	NO USE	
C025	CK45F1H103Z	CAP. CERAMIC 0.01 50V	C122	CC45CH1H070D	CAP. CERAMIC 7P 0.5P 50V
C026	CK45FB1H102K	CAP. CERAMIC 1000P 10% 50V	D001	DS442X	DIODE, SILICON SWITCHING
C027	CK45CH1H221J	CAP. CERAMIC 220P 5% 50V	D002	DS442X	DIODE, SILICON SWITCHING
C028	NO USE		D003	DS442X	DIODE, SILICON SWITCHING
C029	CC45FC1H120J	CAP. CERAMIC 12P 5% 50V	D004	DS442X	DIODE, SILICON SWITCHING
C030	CK45F1H103Z	CAP. CERAMIC 0.01 50V	D005	DS442X	DIODE, SILICON SWITCHING
C031	CK45B2H472K	CAP. CERAMIC 4700P 10% 500V	D006	DS442X	DIODE, SILICON SWITCHING
C032	CC45CH2H010C	CAP. CERAMIC 1P 0.25P 500V	D007	DS442X	DIODE, SILICON SWITCHING
C033	C90-0298-05	CAP. CERAMIC 0.1 20% 12V	D008	DS442X	DIODE, SILICON SWITCHING
C034	CK45B2H472K	CAP. CERAMIC 4700P 10% 500V	D009	DS442X	DIODE, SILICON SWITCHING
C035	CC45CH2H010C	CAP. CERAMIC 1P 0.25P 500V	D010	DS442X	DIODE, SILICON SWITCHING
C036	C90-0298-05	CAP. CERAMIC 0.1 20% 12V	D011	LN60	DIODE GERMANIUM
C037	CC45CH1H181J	CAP. CERAMIC 180P 5% 50V	D012	LN60	DIODE GERMANIUM
C038	CK45F1H103Z	CAP. CERAMIC 0.01 50V	D013	LN60	DIODE GERMANIUM
C039	CK45F1H103Z	CAP. CERAMIC 0.01 50V	D014	DS442X	DIODE, SILICON SWITCHING
C040	NO USE		D015	DS442X	DIODE, SILICON SWITCHING
C041	CK45B2H472K	CAP. CERAMIC 4700P 10% 500V	D016	MTZ16JA	DIODE, ZENER 15V
C042	CC45CH2H010C	CAP. CERAMIC 1P 0.25P 500V	D017	DS442X	DIODE, SILICON SWITCHING
C043	C90-0298-05	CAP. CERAMIC 0.1 20% 12V	D018	DS442X	DIODE, SILICON SWITCHING
C044	CK45B2H472K	CAP. CERAMIC 4700P 10% 500V	D019	DS442X	DIODE, SILICON SWITCHING
C045	CC45CH2H010C	CAP. CERAMIC 1P 0.25P 500V	D020	DS442X	DIODE, SILICON SWITCHING
C046	C90-0298-05	CAP. CERAMIC 0.1 20% 12V	D021	DS442X	DIODE, SILICON SWITCHING
C047	CE04HW1H010M	CAP. ELECTRO 1 20% 50V	D022	DS442X	DIODE, SILICON SWITCHING
C048	CK45E3D102P	CAP. CERAMIC 1000P 2K	D023	ISS83	DIODE SILICON SWITCHING
C049	C91-0571-05	CAP. CERAMIC 0.01 2KV	D024	ISS83	DIODE SILICON SWITCHING
C050	C91-0571-05	CAP. CERAMIC 0.01 2KV	D025	ISS83	DIODE SILICON SWITCHING
C051	CK45F1H103Z	CAP. CERAMIC 0.01 50V	D026	ISS83	DIODE SILICON SWITCHING
C052	C93M1H154K	CAP. MYLAR 0.15 10% 50V	D027	DS442X	DIODE, SILICON SWITCHING
C053	C93M1H154K	CAP. MYLAR 0.15 10% 50V	D028	DS442X	DIODE, SILICON SWITCHING
C054	CK45B1H472K	CAP. CERAMIC 4700P 10% 500V	D029	DS442X	DIODE, SILICON SWITCHING
C055	CK45B2H472K	CAP. CERAMIC 4700P 10% 500V	D030	ISS83	DIODE SILICON SWITCHING
C056	CK45B2H472K	CAP. CERAMIC 4700P 10% 500V	D031	ISS83	DIODE SILICON SWITCHING
C057	NO USE		D032	W06C	DIODE SILICON RECTIFIER
C058	CK45B2H472K	CAP. CERAMIC 4700P 10% 500V	D033	W06C	DIODE SILICON RECTIFIER
C059	CE04WE010	CAP. ELECTRO 1 250V	D034	ISS83	DIODE SILICON SWITCHING

PARTS LIST

REF. NO	PARTS NO	NAME & DESCRIPTION	REF. NO	PARTS NO	NAME & DESCRIPTION
D035	W06C	DIODE SILICON RECTIFIER	Q037	ZSA1210(S)	TR. SI, PNP
D036	W06C	DIODE SILICON RECTIFIER	Q038	ZSC2785(F)	TR. SI, NPN
D037	DS442X	DIODE, SILICON SWITCHING	Q039	ZSC2912(S)	TR. SI, NPN
D038	DS442X	DIODE, SILICON SWITCHING	Q040	ZSA1210(S)	TR. SI, PNP
D041	1SS83	DIODE SILICON SWITCHING	Q041	ZSA1005(K)	TR. SI, PNP
D042	DS442X	DIODE, SILICON SWITCHING	Q042	ZSA1005(K)	TR. SI, PNP
D043	DS442X	DIODE, SILICON SWITCHING	Q043	ZSK336	FET, N-CHANNEL
D044	GMA-01	DIODE	Q044	ZSK336	FET, N-CHANNEL
L005	L40-1011-04	FERRI INDUCTOR 100UH	Q045	ZSC2785(F)	TR. SI, NPN
L006	L40-1011-04	FERRI INDUCTOR 100UH	Q046	ZSC2912(S)	TR. SI, NPN
L007	L40-1011-13	FERRI INDUCTOR 100UH	Q047	ZSA1210(S)	TR. SI, PNP
L008	L40-1011-13	FERRI INDUCTOR 100UH	Q048	ZSC2785(F)	TR. SI, NPN
L009	L40-1011-04	FERRI INDUCTOR 100UH	Q049	ZSC2912(S)	TR. SI, NPN
L010	L40-1011-04	FERRI INDUCTOR 100UH	Q050	ZSA1210(S)	TR. SI, PNP
L011	L40-1011-13	FERRI INDUCTOR 100UH	Q051	ZSA1175(F)	TR. SI, PNP
L012	L40-1011-13	FERRI INDUCTOR 100UH	Q052	ZSD613(E)	TR. SI, NPN
L013	L40-1011-04	FERRI INDUCTOR 100UH	Q053	ZSC2271(D)	TR. SI, NPN
L014	L40-1011-04	FERRI INDUCTOR 100UH	Q054	ZSA1175(F)	TR. SI, PNP
L015	L40-1011-13	FERRI INDUCTOR 100UH	Q055	ZSD1262A(Q)	TR. SI, NPN
L016	L40-1011-13	FERRI INDUCTOR 100UH	Q056	ZSB939A(Q)	TR. SI, PNP
L017	L40-1011-04	FERRI INDUCTOR 100UH	Q057	ZSC2785(F)	TR. SI, NPN
L018	L40-1011-04	FERRI INDUCTOR 100UH	Q058	ZSC2785(F)	TR. SI, NPN
L019	L40-1011-04	FERRI INDUCTOR 100UH	Q059	ZSA1175(F)	TR. SI, PNP
L020	L40-1011-04	FERRI INDUCTOR 100UH	Q060	ZSC2785(F)	TR. SI, NPN
L021	L40-4701-03	FERRI INDUCTOR 47UH	R001	RD14BB2E470J	RES. CARBON 47 5% 1/4W
L022	L40-6801-03	FERRI INDUCTOR 68UH	R002	RD14BB2E470J	RES. CARBON 47 5% 1/4W
NL001	NE-2B	NEON LAMP	R003	RD14BB2E470J	RES. CARBON 47 5% 1/4W
NL002	NE-2B	NEON LAMP	R004	RD14BB2E470J	RES. CARBON 47 5% 1/4W
NL003	NE-2B	NEON LAMP	R005	RD14BB2E470J	RES. CARBON 47 5% 1/4W
NL004	NE-2B	NEON LAMP	R006	RD14BB2C681J	RES. CARBON 680 5% 1/6W
P002	E40-0673-05	PIN CONNECTOR 6 CONTACT	R007	RD14BB2E332J	RES. CARBON 3.3K 5% 1/4W
P009	E40-0273-05	PIN CONNECTOR 2 CONTACT	R008	RD14BB2E472J	RES. CARBON 4.7K 5% 1/4W
P010	E40-0916-05	PIN CONNECTOR 9P	R009	RN14BK2E4700F	RES. METAL FILM 470 1% 1/4W
P011	E40-1016-05	PIN CONNECTOR 10P	R010	RN14BK2E4701F	RES. METAL FILM 4.7K 1% 1/4W
P012	E40-1016-05	PIN CONNECTOR 10P	R011	RD14BB2E101J	RES. CARBON 100 5% 1/4W
P013	E40-0673-05	PIN CONNECTOR 8 CONTACT	R012	RN14BK2E5601F	RES. METAL FILM 5.6K 1% 1/4W
P014	E40-0273-05	PIN CONNECTOR 2 CONTACT	R013	RD14BB2E222J	RES. CARBON 2.2K 5% 1/4W
P015	E40-0373-05	PIN CONNECTOR 3 CONTACT	R014	RN14BK2E3900F	RES. METAL FILM 390 1% 1/4W
P016	E40-0373-05	PIN CONNECTOR 3 CONTACT	R015	RD14BB2E472J	RES. CARBON 4.7K 5% 1/4W
P017	E40-0373-05	PIN CONNECTOR 3 CONTACT	R016	RD14BB2E104J	RES. CARBON 100K 5% 1/4W
P018	E40-0704-05	PIN CONNECTOR 7P	R017	RN14BK2E1004F	RES. METAL FILM 1M 1% 1/4W
P019	E40-0335-05	PIN CONNECTOR 3P	R018	RD14BB2E330J	RES. CARBON 33 5% 1/4W
P020	E40-0335-05	PIN CONNECTOR 3P	R019	RD14BB2E330J	RES. CARBON 33 5% 1/4W
P021	E40-0373-05	PIN CONNECTOR 3 CONTACT	R020	RD14BB2E472J	RES. CARBON 4.7K 5% 1/4W
P022	NO USE		R021	RD14BB2E472J	RES. CARBON 4.7K 5% 1/4W
P023	E40-0273-05	PIN CONNECTOR 2 CONTACT	R022	RD14BB2E102J	RES. CARBON 1K 5% 1/4W
P027	E23-0046-04	TERMINAL	R023	RD14BB2E102J	RES. CARBON 1K 5% 1/4W
P049	E23-0046-04	TERMINAL	R024	RD14BB2E101J	RES. CARBON 100 5% 1/4W
P026			R025	RD14BB2C102J	RES. CARBON 1K 5% 1/6W
P027			R026	RD14BB2C102J	RES. CARBON 1K 5% 1/6W
P048	E23-0046-04	TERMINAL	R027	RD14BB2E223J	RES. CARBON 22K 5% 1/4W
P049	E23-0046-04	TERMINAL	R028	RD14BB2E223J	RES. CARBON 22K 5% 1/4W
P057	E40-0273-05	PIN CONNECTOR 2 CONTACT	R029	RD14BB2E682J	RES. CARBON 6.8K 5% 1/4W
P058	E40-0273-05	PIN CONNECTOR 2 CONTACT	R030	RD14BB2E471J	RES. CARBON 470 5% 1/4W
P059	E40-0273-05	PIN CONNECTOR 2 CONTACT	R031	NO USE	
P060	E40-0273-05	PIN CONNECTOR 2 CONTACT	R032	RD14BB2E105J	RES. CARBON 1M 5% 1/4W
P061	E40-0273-05	PIN CONNECTOR 2 CONTACT	R033	RD14BB2E105J	RES. CARBON 1M 5% 1/4W
Q001	ZSC2785(F)	TR. SI, NPN	R034	RD14BB2E472J	RES. CARBON 4.7K 5% 1/4W
Q002	ZSA1005(K)	TR. SI, PNP	R035	RD14BB2E100J	RES. CARBON 10 5% 1/4W
Q003	ZSC2786(K)	TR. SI, NPN	R036	RD14BB2E101J	RES. CARBON 100 5% 1/4W
Q004	ZSK117(Y)	FET. N-CHANNEL	R037	RD14BB2E101J	RES. CARBON 100 5% 1/4W
Q005	ZSK117(Y)	FET. N-CHANNEL	R038	RD14BB2E393J	RES. CARBON 39K 5% 1/4W
Q006	ZSC2786(K)	TR. SI, NPN	R039	RD14BB2E223J	RES. CARBON 22K 5% 1/4W
Q007	ZSC2786(K)	TR. SI, NPN	R040	RD14BB2E222J	RES. CARBON 2.2K 5% 1/4W
Q008	NO USE		R041	RD14BB2E222J	RES. CARBON 2.2K 5% 1/4W
Q009	ZSA1005(K)	TR. SI, PNP	R042	RD14BB2E222J	RES. CARBON 2.2K 5% 1/4W
Q010	ZSC2785(F)	TR. SI, NPN	R043	RD14BB2E393J	RES. CARBON 39K 5% 1/4W
Q011	ZSC2785(F)	TR. SI, NPN	R044	RD14BB2E393J	RES. CARBON 39K 5% 1/4W
Q012	ZSA1175(F)	TR. SI, PNP	R045	RD14BB2C393J	RES. CARBON 39K 5% 1/6W
Q013	ZSC2785(F)	TR. SI, NPN	R046	RD14BB2E472J	RES. CARBON 4.7K 5% 1/4W
Q014	ZSC2785(F)	TR. SI, NPN	R047	RD14BB2E102J	RES. CARBON 1K 5% 1/4W
Q015	ZSA1175(F)	TR. SI, PNP	R048	RD14BB2E473J	RES. CARBON 4.7K 5% 1/4W
Q016	ZSC1215(T,S)	TR. SI, NPN	R049	RD14BB2E101J	RES. CARBON 100 5% 1/4W
Q017	ZSC1215(T,S)	TR. SI, NPN	R050	RD14BB2E472J	RES. CARBON 4.7K 5% 1/4W
Q018	ZSA1005(K)	TR. SI, PNP	R051	RD14BB2C103J	RES. CARBON 10K 5% 1/6W
Q019	ZSA1005(K)	TR. SI, PNP	R052	RD14BB2C393J	RES. CARBON 39K 5% 1/6W
Q020	ZSA1175(F)	TR. SI, PNP	R053	RD14BB2E471J	RES. CARBON 470 5% 1/4W
Q021	ZSA1175(F)	TR. SI, PNP	R054	RD14BB2E472J	RES. CARBON 4.7K 5% 1/4W
Q022	ZSC2785(F)	TR. SI, NPN	R055	RD14BB2E472J	RES. CARBON 4.7K 5% 1/4W
Q023	ZSC2785(F)	TR. SI, NPN	R056	RD14BB2E103J	RES. CARBON 10K 5% 1/4W
Q024	ZSC2785(F)	TR. SI, NPN	R057	RD14BB2E470J	RES. CARBON 47 5% 1/4W
Q025	ZSC2785(F)	TR. SI, NPN	R058	RD14BB2E470J	RES. CARBON 47 5% 1/4W
Q026	ZSA1175(F)	TR. SI, PNP	R059	RD14BB2E182J	RES. CARBON 1.0K 5% 1/4W
Q027	ZSA1175(F)	TR. SI, PNP	R060	ND USE	
Q028	ZSC2785(F)	TR. SI, NPN	R061	RD14BB2E104J	RES. CARBON 100K 5% 1/4W
Q029	ZSA1175(F)	TR. SI, PNP	R062	RD14BB2E331J	RES. CARBON 330 5% 1/4W
Q030	ZSA1175(F)	TR. SI, NPN	R063	RD14BB2E331J	RES. CARBON 330 5% 1/4W
Q031	ZSC2785(F)	TR. SI, NPN	R064	RD14BB2E220J	RES. CARBON 22 5% 1/4W
Q032	ZSC2785(F)	TR. SI, NPN	R065	RD14BB2E220J	RES. CARBON 22 5% 1/4W
Q033	ZSA1175(F)	TR. SI, PNP	R066	RD14BB2E332J	RES. CARBON 3.3K 5% 1/4W
Q034	ZSA1175(F)	TR. SI, PNP	R067	RD14BB2E123J	RES. CARBON 12K 5% 1/4W
Q035	ZSC2785(F)	TR. SI, NPN	R068	RD14BB2E102J	RES. CARBON 1K 5% 1/4W
Q036	ZSC2785(F)	TR. SI, NPN	R069	RD14BB2E102J	RES. CARBON 1K 5% 1/4W
	ZSC2912(S)	TR. SI, NPN	R070	RD14BB2E222J	RES. CARBON 2.2K 5% 1/4W
	ZSC2912(S)	TR. SI, NPN	R071	RD14BB2E102J	RES. CARBON 1K 5% 1/4W

PARTS LIST

REF. NO	PARTS NO	NAME & DESCRIPTION				
R162	RN14BK2E1502F	RES. METAL FILM	15K	1%	1/4W	
R163	R014BB2C561J	RES. CARBON	560	5%	1/6W	
R164	R014BB2E103J	RES. CARBON	10K	5%	1/4W	
R165	R014BB2E472J	RES. CARBON	4.7K	5%	1/4W	
R166	R014BB2C102J	RES. CARBON	1K	5%	1/6W	
R167	R014BB2C561J	RES. CARBON	560	5%	1/6W	
R168	RN14BK2E1502F	RES. METAL FILM	15K	1%	1/4W	
R169	RN14BK2E5002F	RES. METAL FILM	50K	1%	1/4W	
R170	R014BB2E123J	RES. CARBON	12K	5%	1/4W	
R171	R014BB2C102J	RES. CARBON	1K	5%	1/6W	
R172	RN14BK2E1203F	RES. METAL FILM	120K	1%	1/4W	
R173	RN14BK2E1502F	RES. METAL FILM	15K	1%	1/4W	
R174	R014BB2E123J	RES. CARBON	12K	5%	1/4W	
R175	R014BB2E102J	RES. CARBON	1K	5%	1/4W	
R176	R014BY2H333J	RES. CARBON	33K	5%	1/2W	
R177	R014BB2E220J	RES. CARBON	22	5%	1/4W	
R178	R014BB2E220J	RES. CARBON	22	5%	1/4W	
R179	R014BB2E101J	RES. CARBON	100	5%	1/4W	
R180	R014BB2E101J	RES. CARBON	100	5%	1/4W	
R181	R014BB2E101J	RES. CARBON	100	5%	1/4W	
R182	R014BB2E473J	RES. CARBON	47K	5%	1/4W	
R183	R014BB2E472J	RES. CARBON	4.7K	5%	1/4W	
R184	R014BB2E472J	RES. CARBON	4.7K	5%	1/4W	
R185	R014BB2E472J	RES. CARBON	4.7K	5%	1/4W	
R186	R014BB2E472J	RES. CARBON	4.7K	5%	1/4W	
R187	R014BY2H103J	RES. CARBON	10K	5%	1/2W	
R188	R014BB2E223J	RES. CARBON	22K	5%	1/4W	
R189	R014BB2E6681	RES. CARBON	680	5%	1/4W	
R190	R014BB2E102J	RES. CARBON	1K	5%	1/4W	
R191	R014BB2C105J	RES. CARBON	1M	5%	1/6W	
R192	R014BB2C105J	RES. CARBON	1M	5%	1/6W	
R193	R014BB2C222J	RES. CARBON	2.2K	5%	1/6W	
R194	R014BB2E222J	RES. CARBON	2.2K	5%	1/4W	
R195	R014BB2C122J	RES. CARBON	1.2K	5%	1/6W	
R196	R014BB2C393J	RES. CARBON	39K	5%	1/6W	
R197	R014BB2C363J	RES. CARBON	36K	5%	1/6W	
R202	R014BB2C472J	RES. CARBON	4.7K	5%	1/6W	
R203	R014BB2C103J	RES. CARBON	10K	5%	1/6W	
R204	R014BB2C103J	RES. CARBON	10K	5%	1/6W	
R205	R014BB2E220J	RES. CARBON	22	5%	1/4W	
R206	ND USE					
R207	R014BB2E661J	RES. CARBON	680	5%	1/4W	
R217	R014BB2E270J	RES. CARBON	27	5%	1/4W	
R218	R014BB2E270J	RES. CARBON	27	5%	1/4W	
R219	R014BB2C153J	RES. CARBON	15K	5%	1/6W	
R220	R014BB2C153J	RES. CARBON	15K	5%	1/6W	
R221	R014BB2C472J	RES. CARBON	4.7K	5%	1/6W	
R222	R014BB2C751J	RES. CARBON	750	5%	1/6W	
R220	R014BB2C153J	RES. CARBON	15K	5%	1/6W	
R221	R014BB2C472J	RES. CARBON	4.7K	5%	1/6W	
R222	R014BB2C751J	RES. CARBON	750	5%	1/6W	
R224	R014BB2E101J	RES. CARBON	100	5%	1/4W	
R225	R014BB2C101J	RES. CARBON	100	5%	1/6W	
R228	R014BB2C332J	RES. CARBON	3.3K	5%	1/6W	
R229	ND USE					
R230	R014BB2C101J	RES. CARBON	100	5%	1/6W	
R231	ND USE					
R232	R014BB2C222J	RES. CARBON	2.2K	5%	1/6W	
R233	ND USE					
R234	R014BB2E471J	RES. CARBON	470	5%	1/4W	
R235	R014BB2C333J	RES. CARBON	33K	5%	1/6W	
S001	S32-4008-05	LEVER SWITCH				
S002	S33-4503-05	LEVER SWITCH				
S003	S32-4008-05	LEVER SWITCH				
S004	ND USE					
S005	S29-5501-05	ROTARY SWITCH				
TC001	C05-0422-05	CAP. TRIMMER	20P			
TC002	C05-0421-05	CAP. TRIMMER	10P			
TC003	C05-0420-05	CAP. TRIMMER	6P			
TC004	C05-0422-05	CAP. TRIMMER	20P			
TC005	C05-0422-05	CAP. TRIMMER	20P			
TC006	C05-0422-05	CAP. TRIMMER	20P			
U001	MC10131L	IC, DUAL D-FFS				
U002	MC10103L	IC, QUAD 2-INPUT OR GATE				
U003	MC10104L	IC, QUAD 2-INPUT AND GATE				
U004	MC10103L	IC, QUAD 2-INPUT OR GATE				
U005	MC10102L	IC, QUAD 2-INPUT NOR GATE				
U006	MC10102L	IC, QUAD 2-INPUT NOR GATE				
U007	MC10105L	IC, DIGITAL				
U008	NJM4558D	IC, DUAL OP-AMP				
U009	NJM4558D	IC, DUAL OP-AMP				
U010	NJM4558D	IC, DUAL OP-AMP				
U011	NJM4558D	IC, DUAL OP-AMP				
VR001	R12-2512-05	RES. SEMI FIXED 5K B				
VR002	R12-2512-05	RES. SEMI FIXED 5K B				
VR003	R12-0540-05	RES. SEMI FIXED 500 B				

REF. NO	PARTS NO	NAME & DESCRIPTION		
VR004	R12-0540-05	RES. SEMI FIXED 500 B		
VR005	R12-2512-05	RES. SEMI FIXED 5K B		
VR006	R12-1518-05	RES. SEMI FIXED 2K B		
VR007	R12-1518-05	RES. SEMI FIXED 2K B		
VR008	R12-1518-05	RES. SEMI FIXED 2K B		
VR009	R12-1518-05	RES. SEMI FIXED 2K B		
VR010	R10-3502-05	V.R. 10KB X2		
VR011	R10-3502-05	V.R. 10KB X2		
VR012	R12-0540-05	RES. SEMI FIXED 500 B		
VR013	R12-3521-05	RES. SEMI FIXED 20K B		
VR014	R12-3520-05	RES. SEMI FIXED 10K B		

CRT UNIT

(X81-1250-03)

REF. NO	PARTS NO	NAME & DESCRIPTION		
E01	E01-0103-05	CRT SOCKET		
E23	E23-0503-05	TERMINAL		
J25	J25-2996-24	PCB (UNMOUNTED)		
R92	R92-0150-05	JUMPING RES. ZERO OHM		
J016	E31-2390-05	LEAD WIRE WITH CONNECTOR		
J017	E31-2390-05	LEAD WIRE WITH CONNECTOR		
J018	ND USE			
J019	E31-2388-05	LEAD WIRE WITH CONNECTOR		
J020	ND USE			
J021	E31-2387-05	LEAD WIRE WITH CONNECTOR		
J022	ND USE			
J023	E31-2389-05	LEAD WIRE WITH CONNECTOR		
R003	R014BB2E473J	RES. CARBON 47K 5% 1/4W		

NOTE:

The following parts are added to PC Board (X73-1530-00, X73-1530-01).


R205 RD14BB2C122J REG. CARBON 1.2 kΩ ± 5%

C95 CC45CH1H030C CAP. CERAMIC 3 pF ± 0.25 pF 50 V


P.C. BOARD

VERTICAL ATTENUATOR UNIT (X75-1150-00)


(Note: CH1, CH2 common)

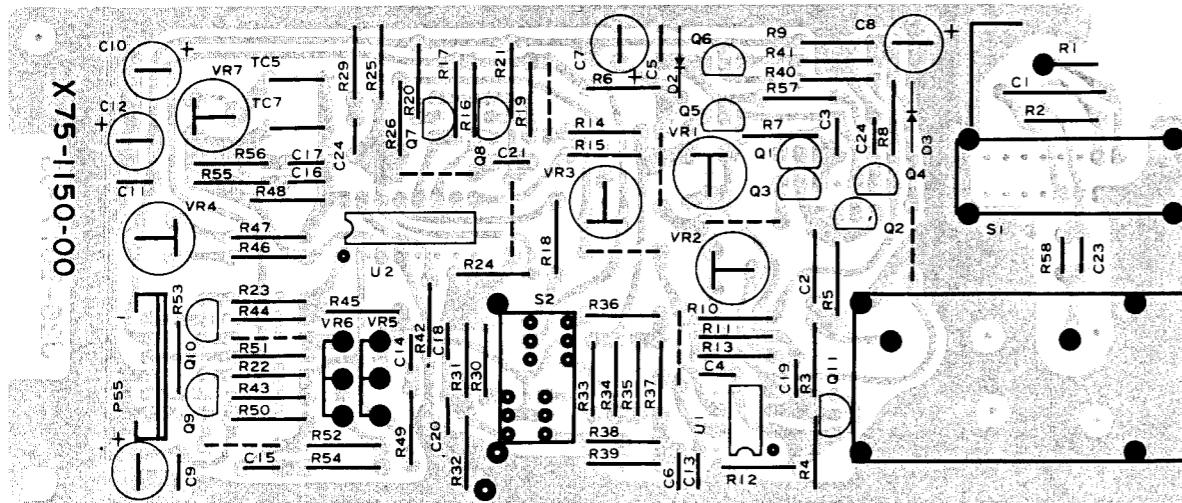


VERTICAL PREAMP UNIT (X73-1530-00), (X73-1530-01)

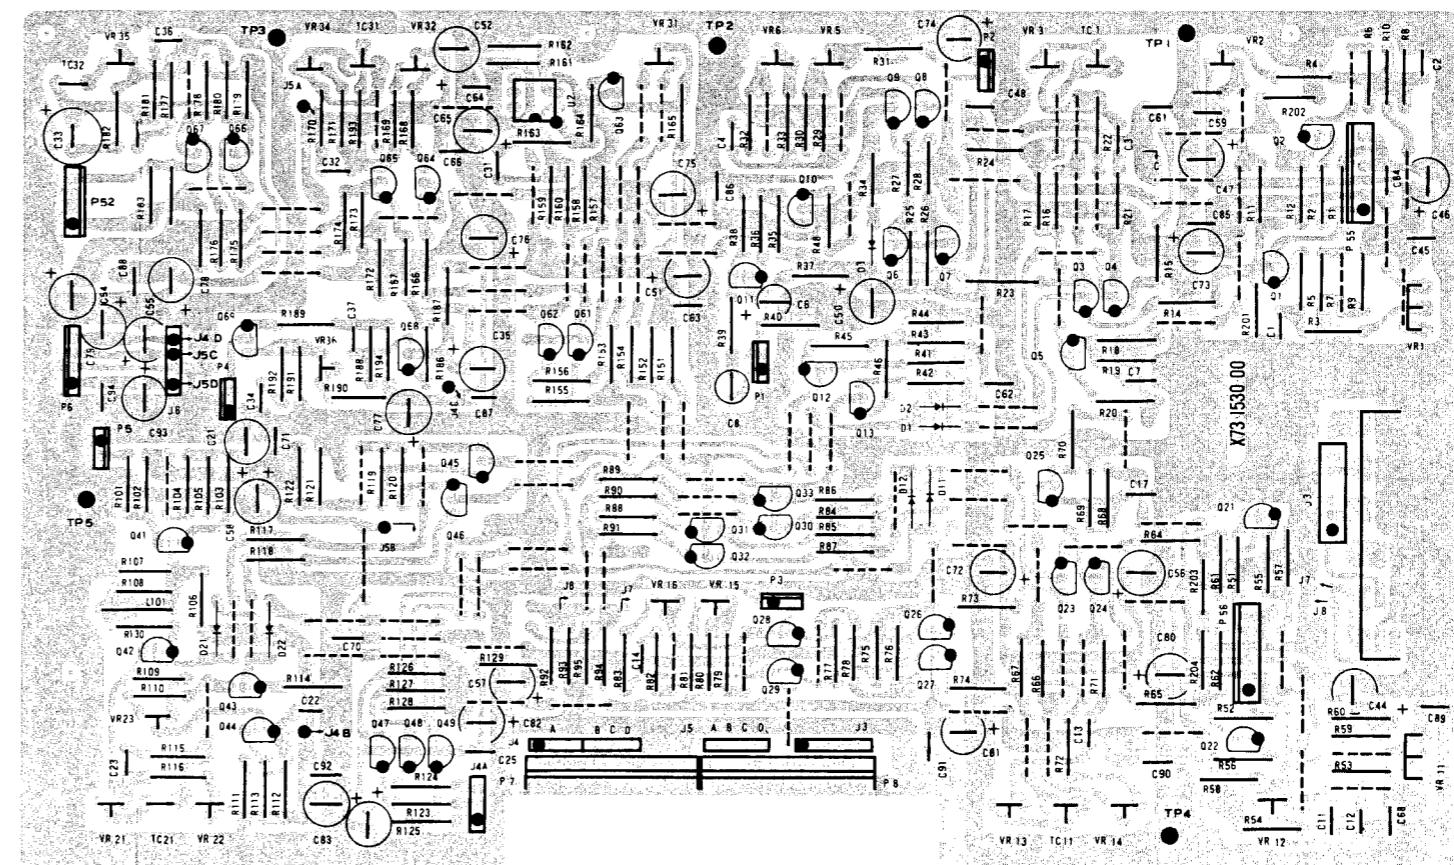

VERTICAL FINAL UNIT (X73-1540-00), (X73-1540-01)

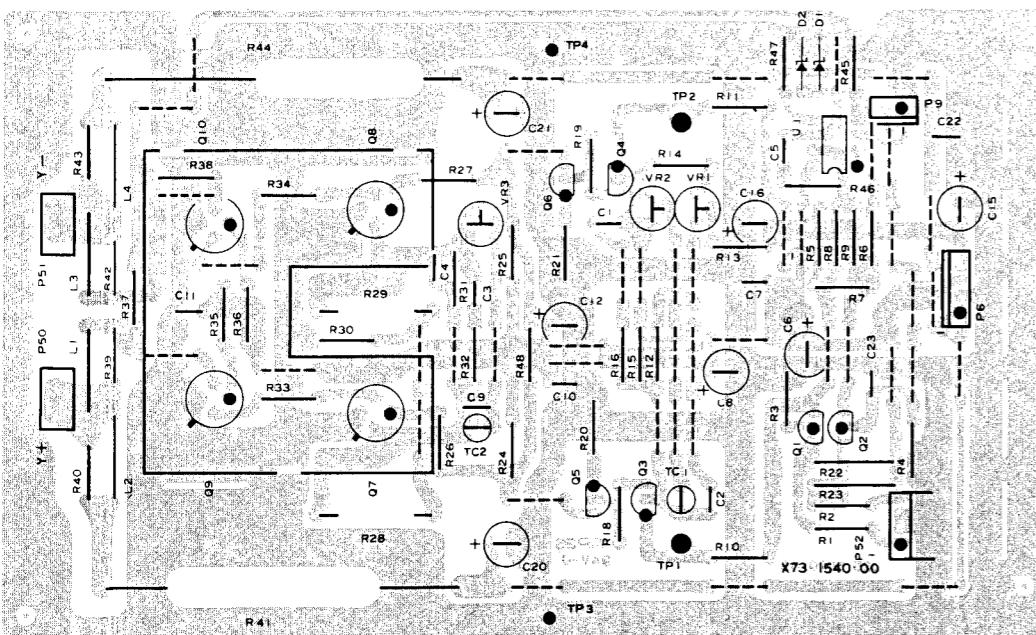


TRIG UNIT (X74-1370-00), (X74-1370-01)

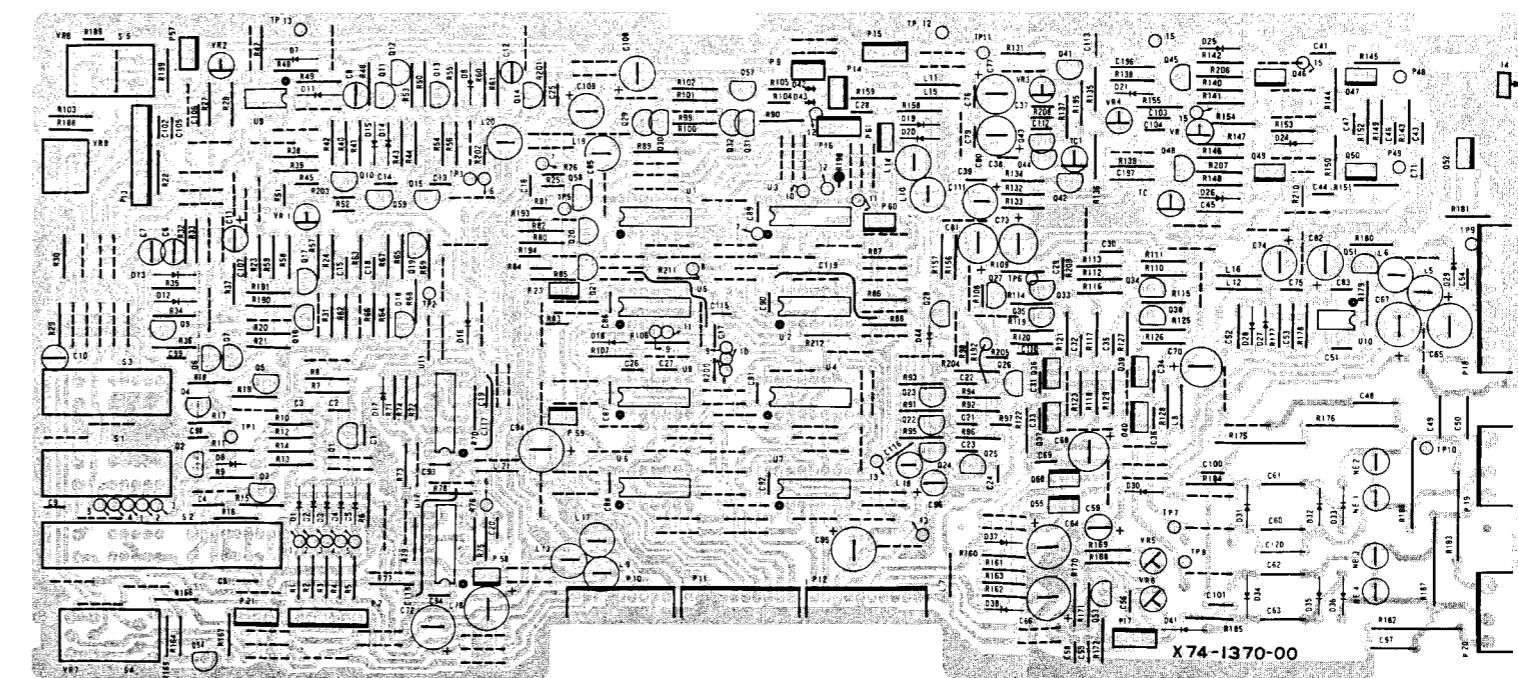


P.C. BOARD


SWEET UNIT (X74-1380-00), (X74-1380-01)

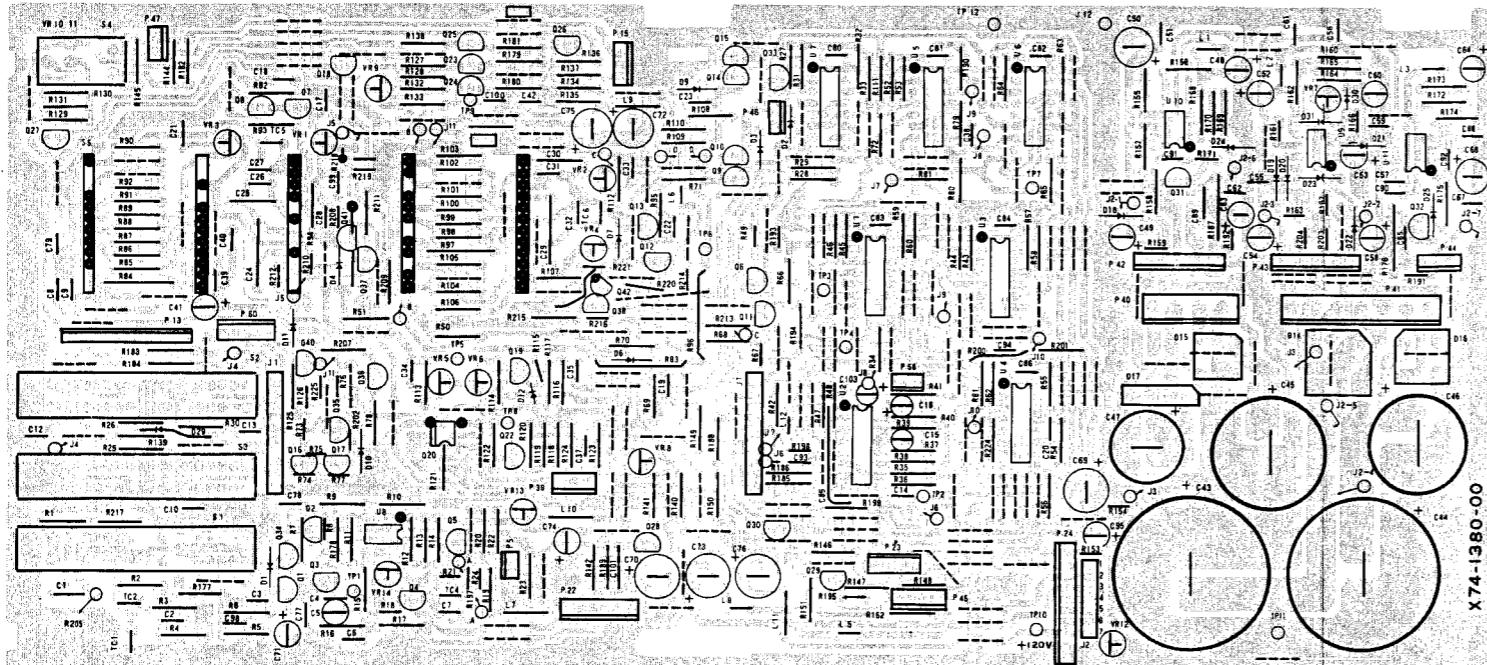


CONNECTION UNIT (X77-1300-00)

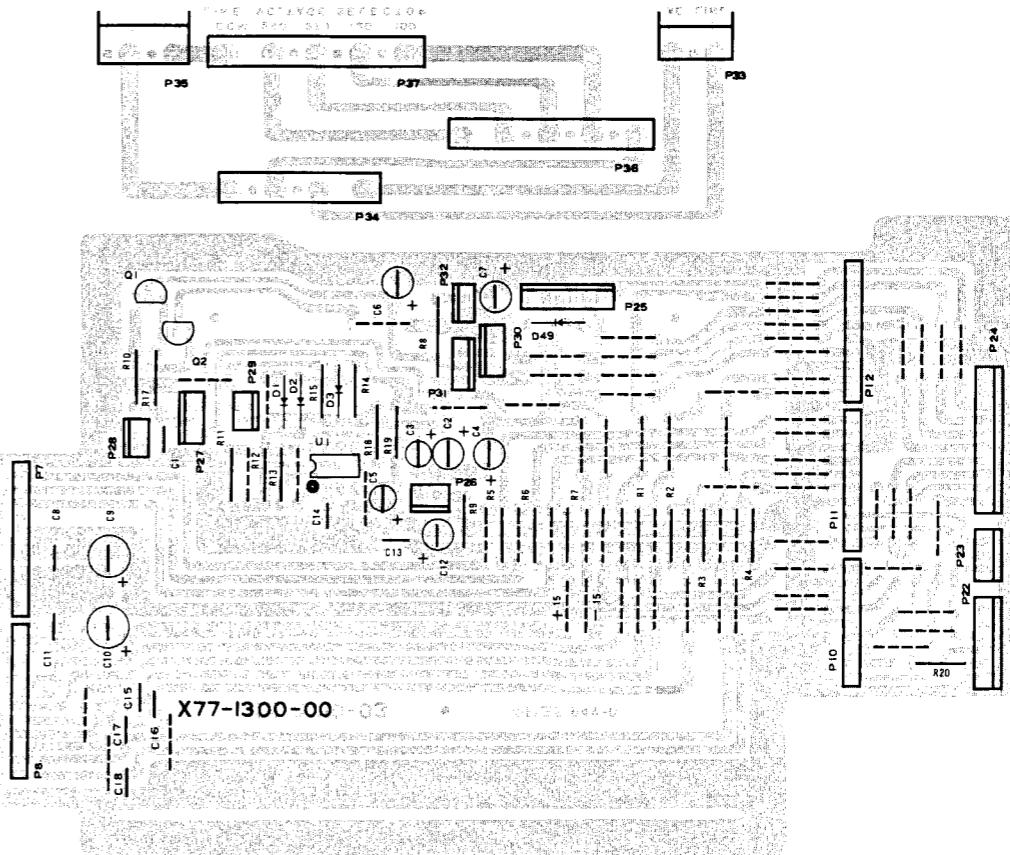


CRT UNIT
(X81-1250-02)
(X81-1250-03)

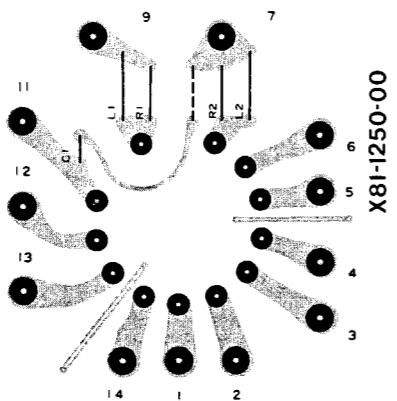


SCHEMATIC DIAGRAM

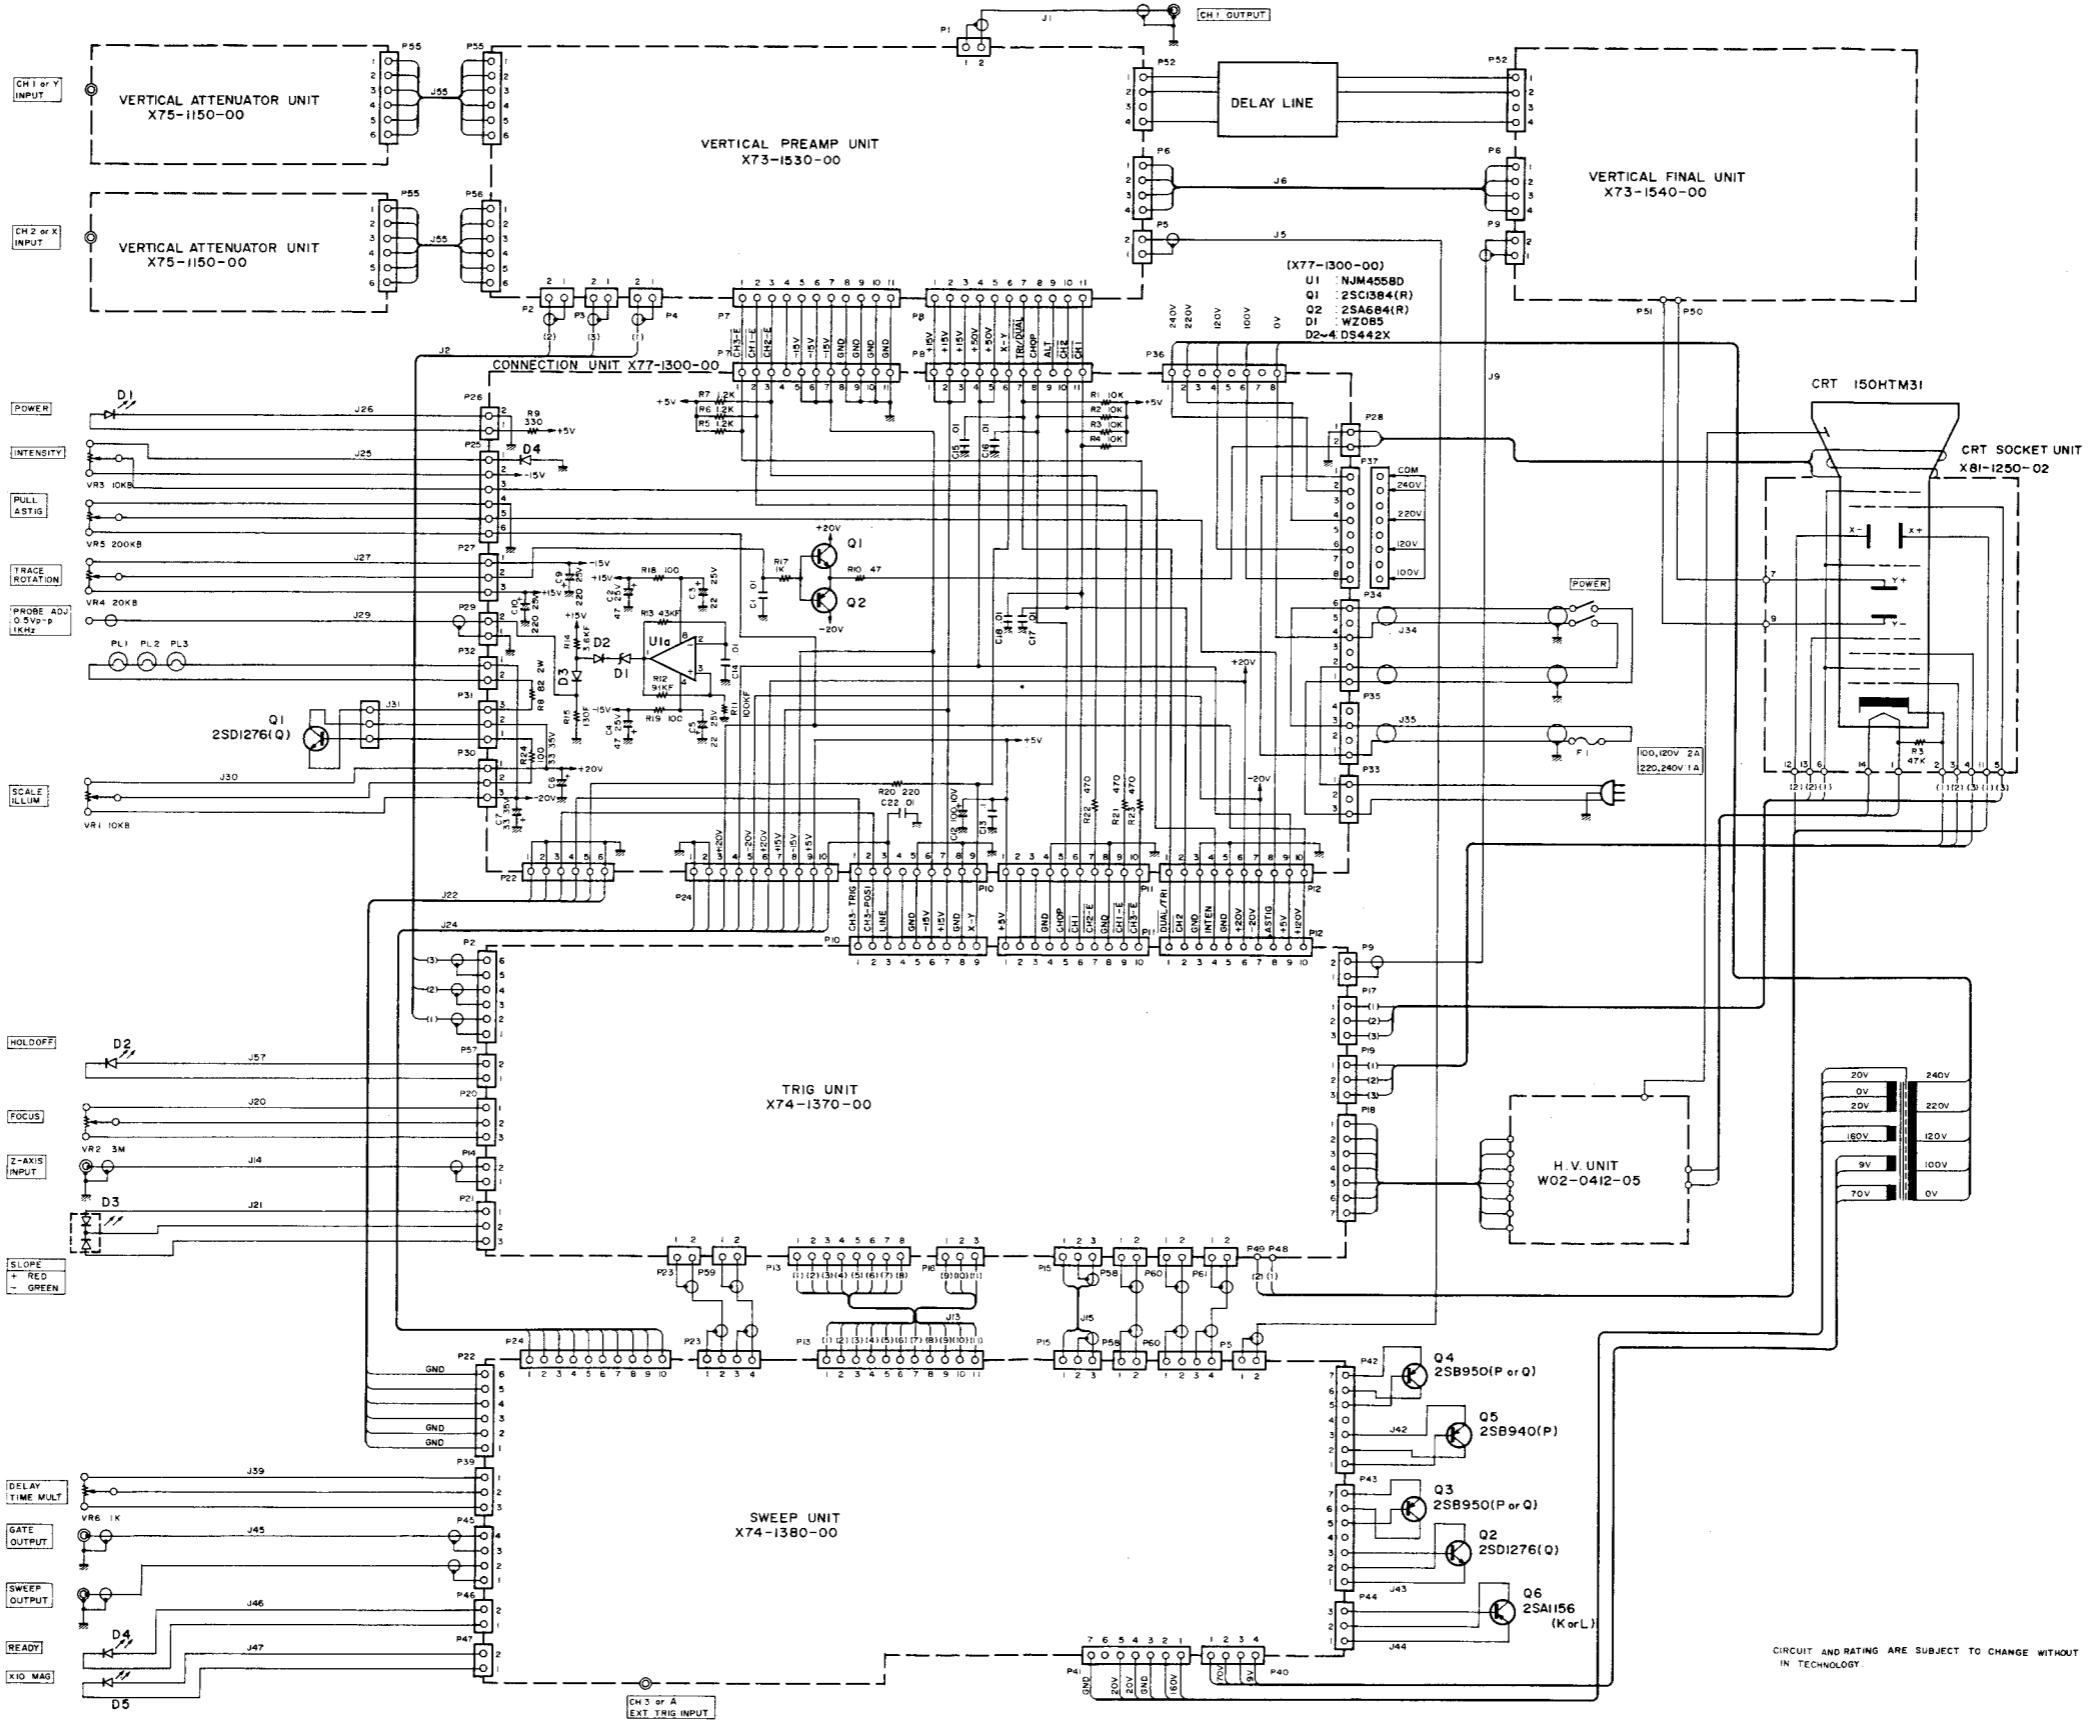


SCHEMATIC DIAGRAM

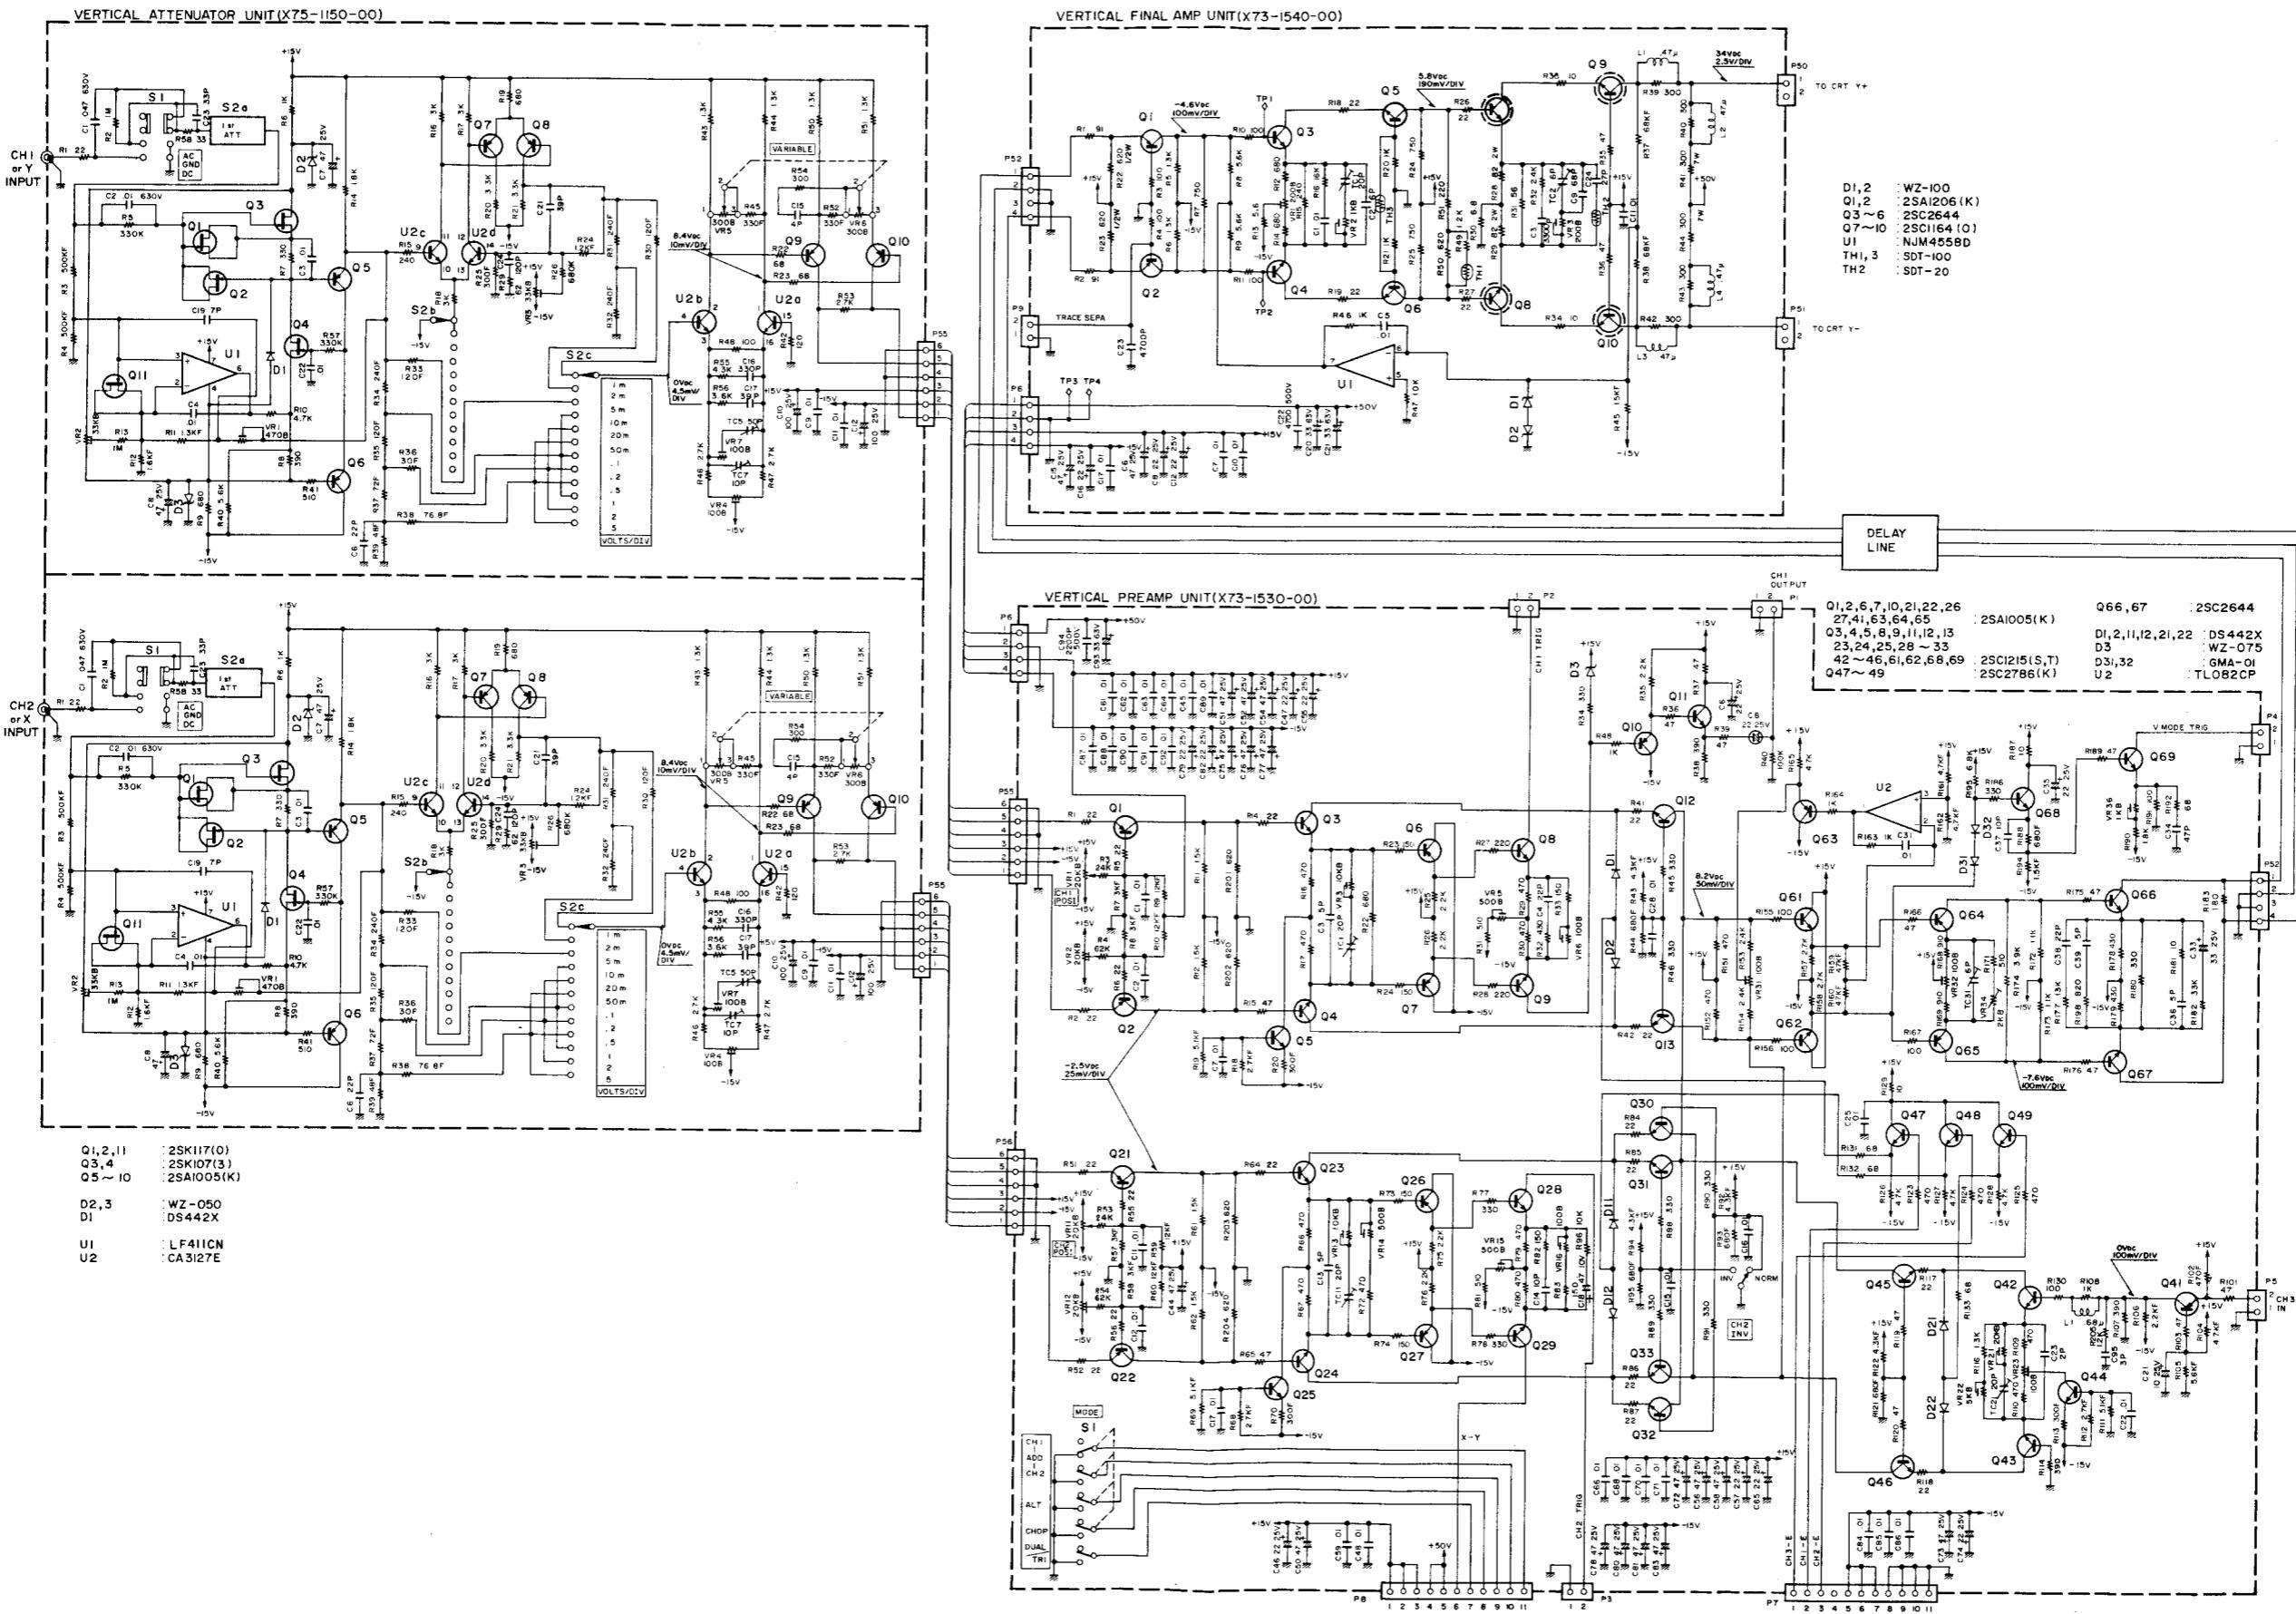


SCHEMATIC DIAGRAM

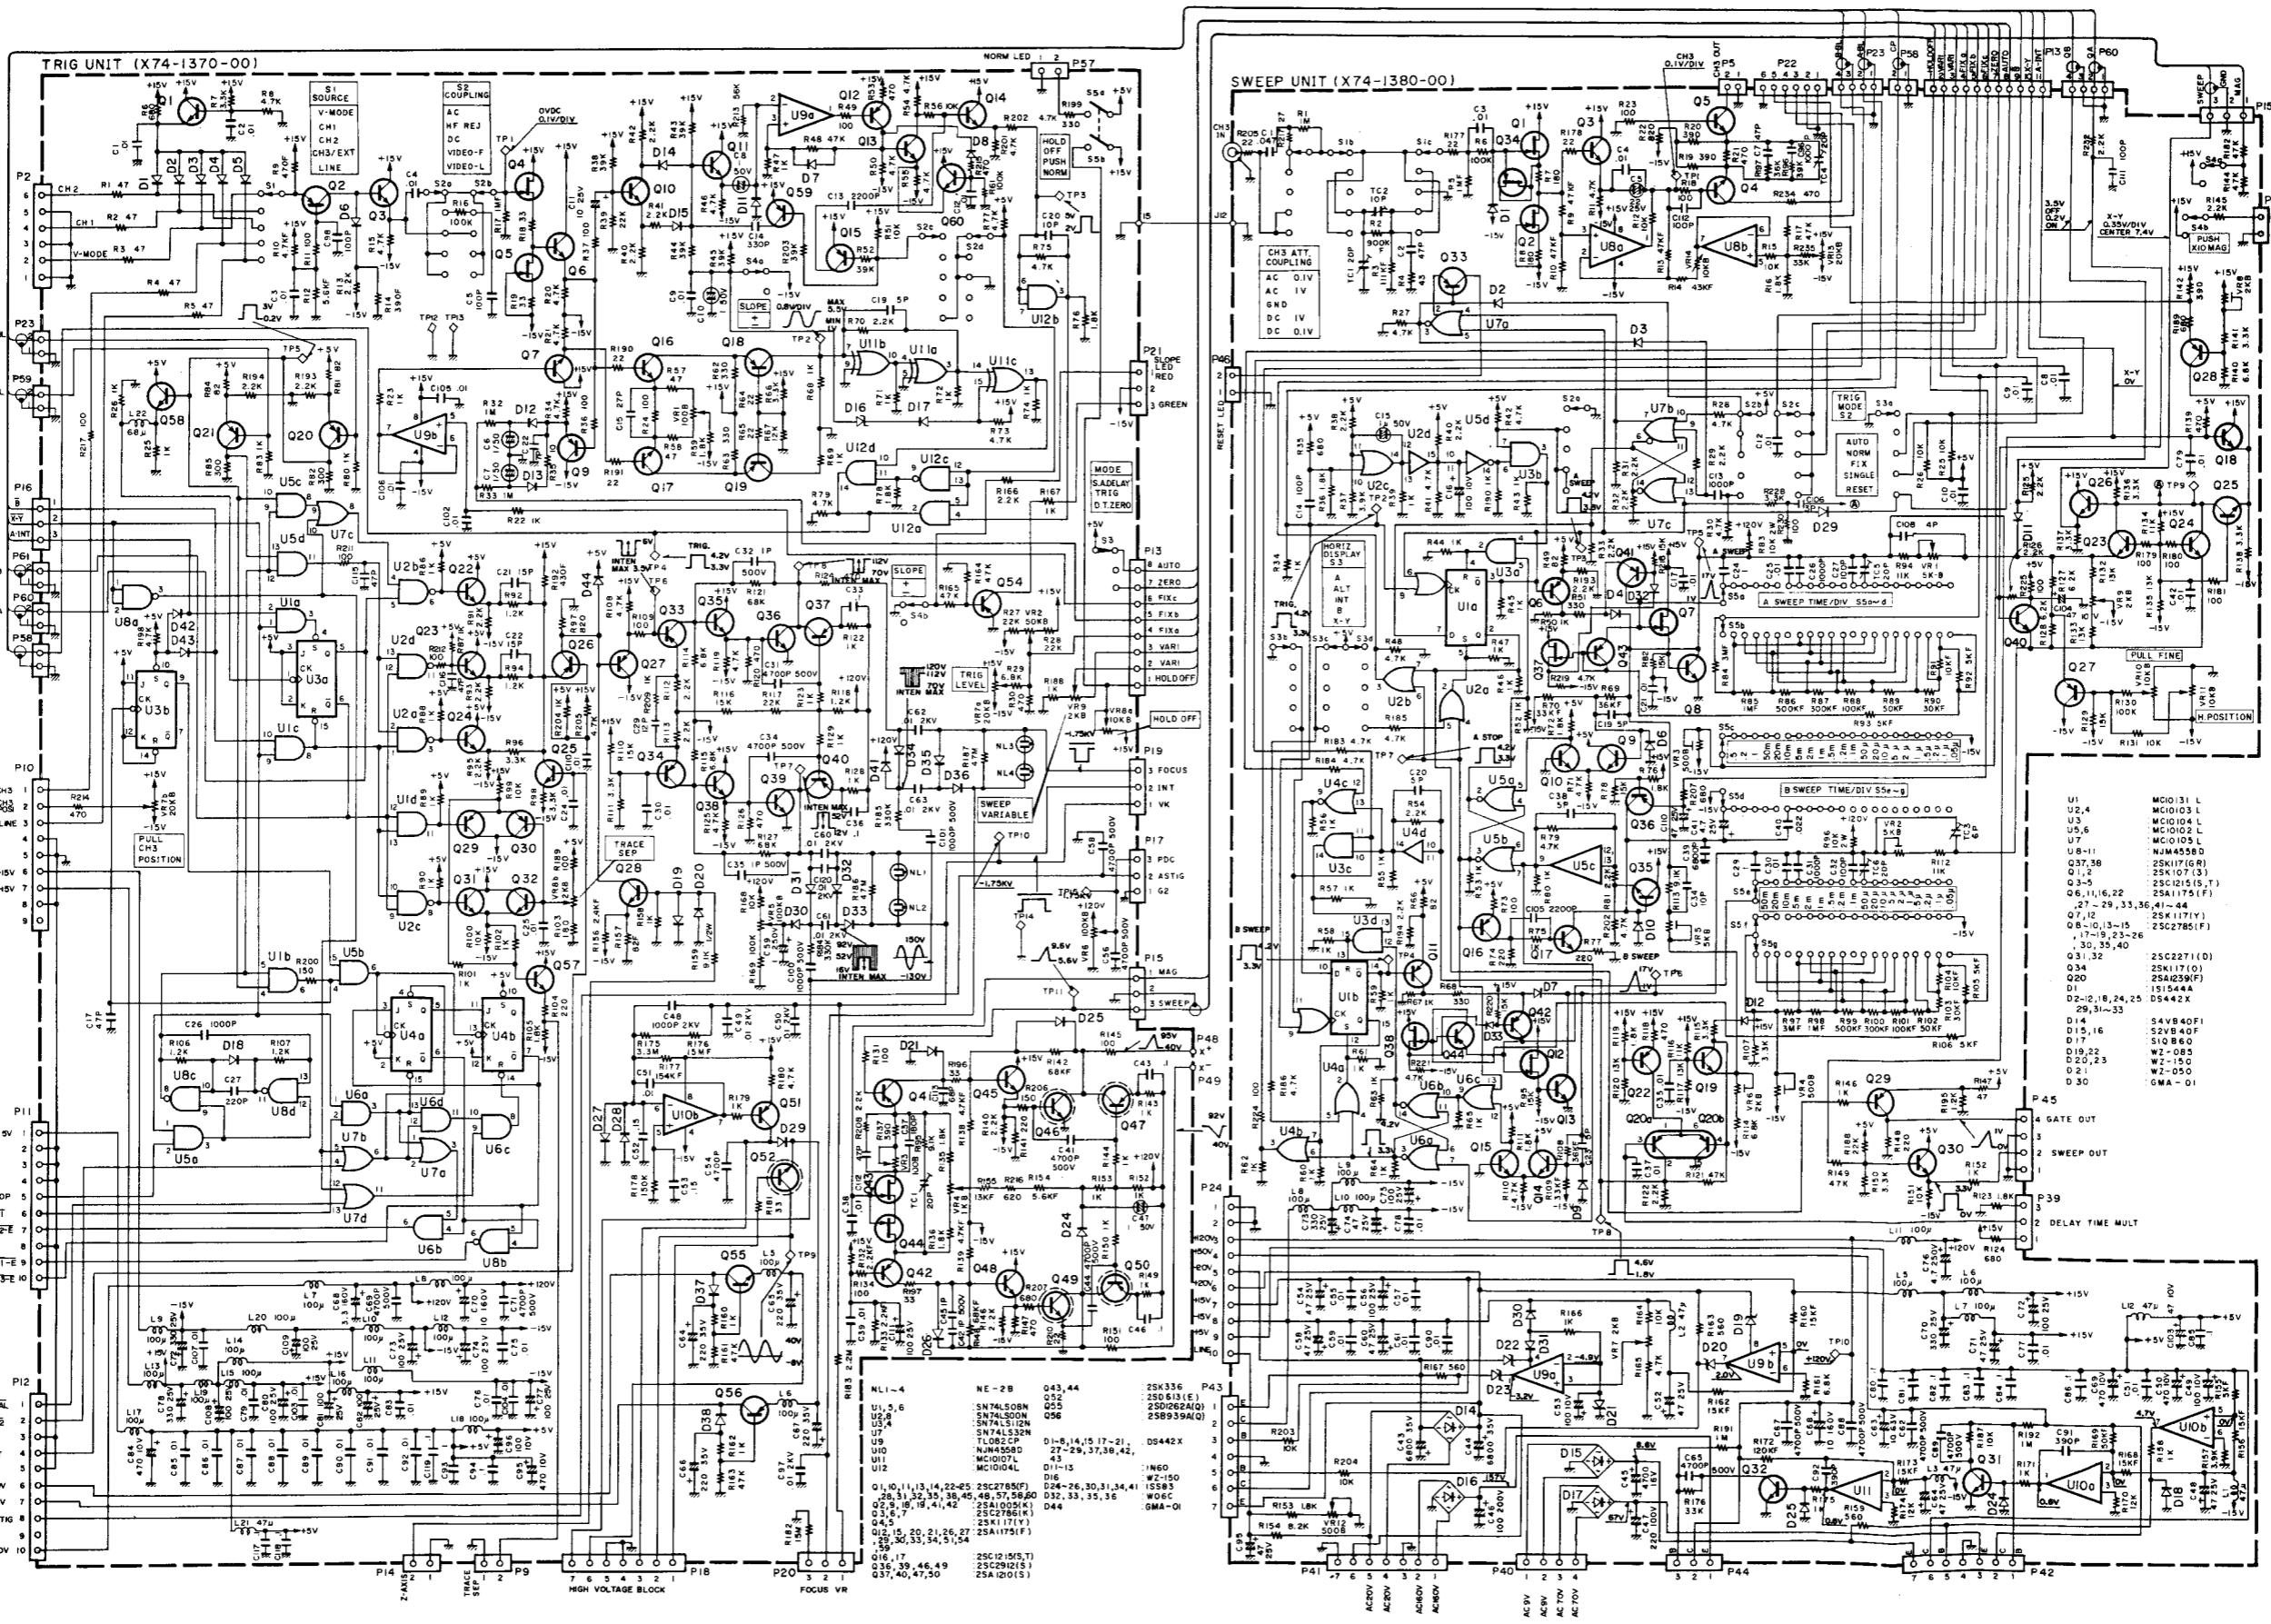


SCHEMATIC DIAGRAM

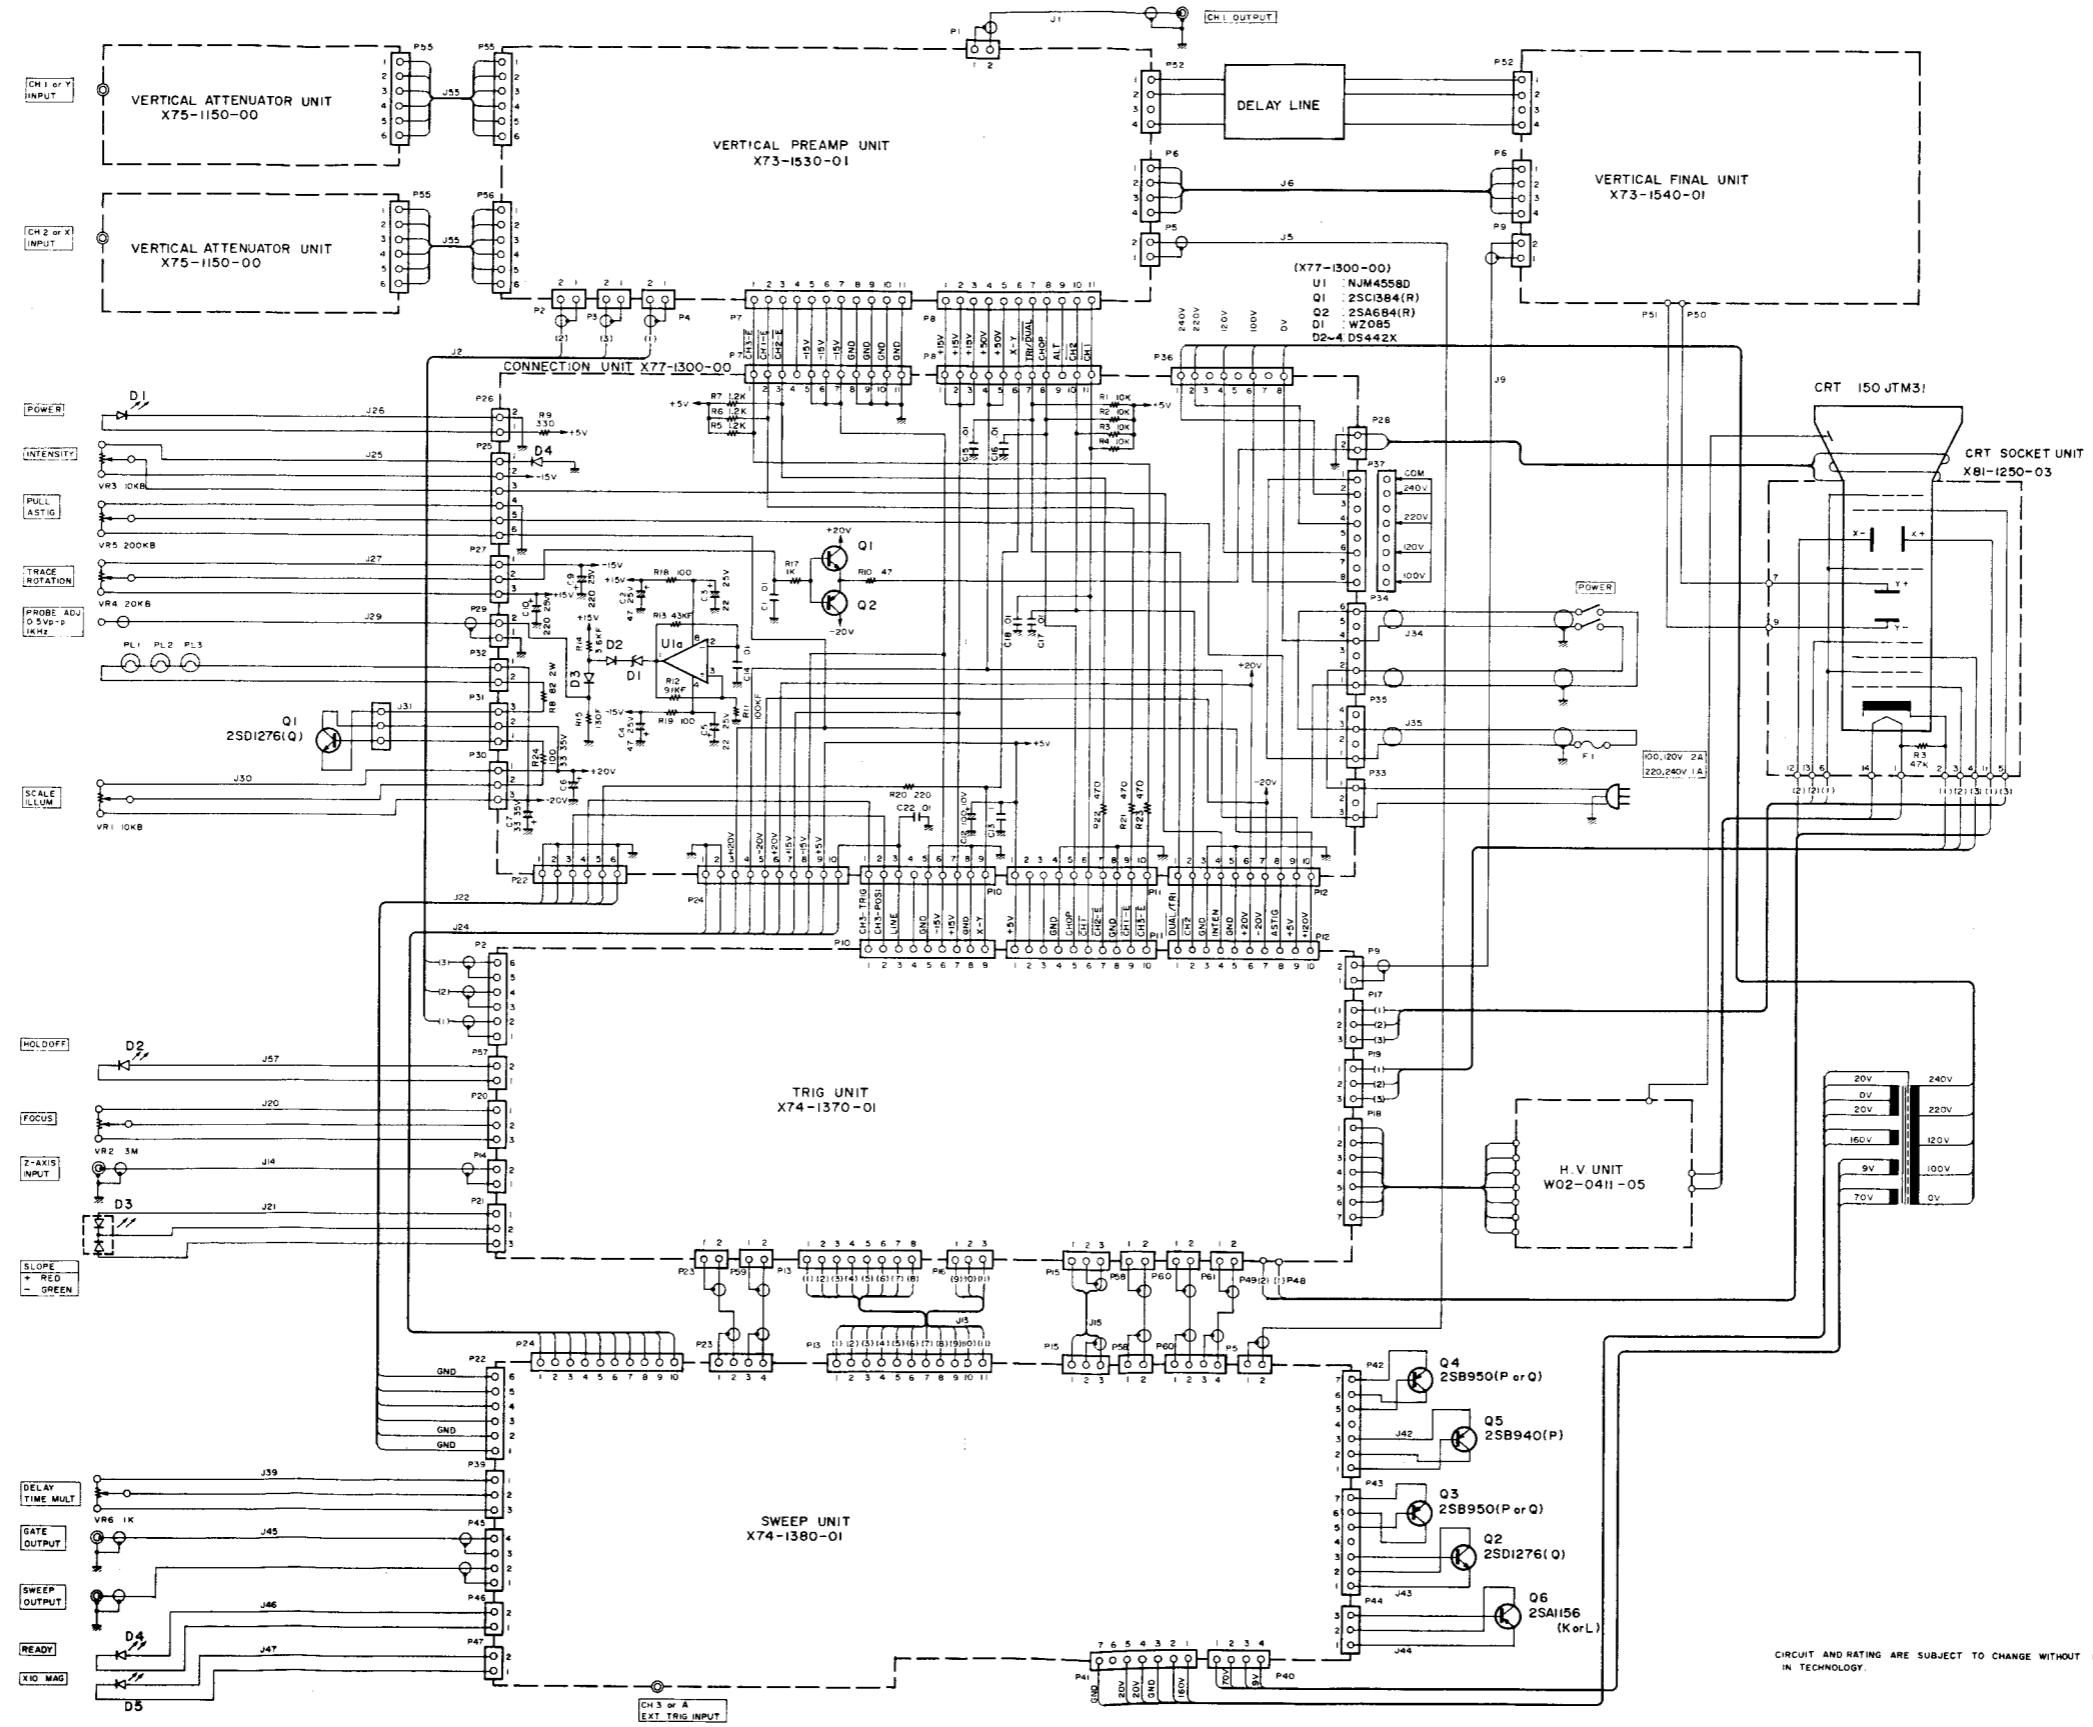


SCHEMATIC DIAGRAM

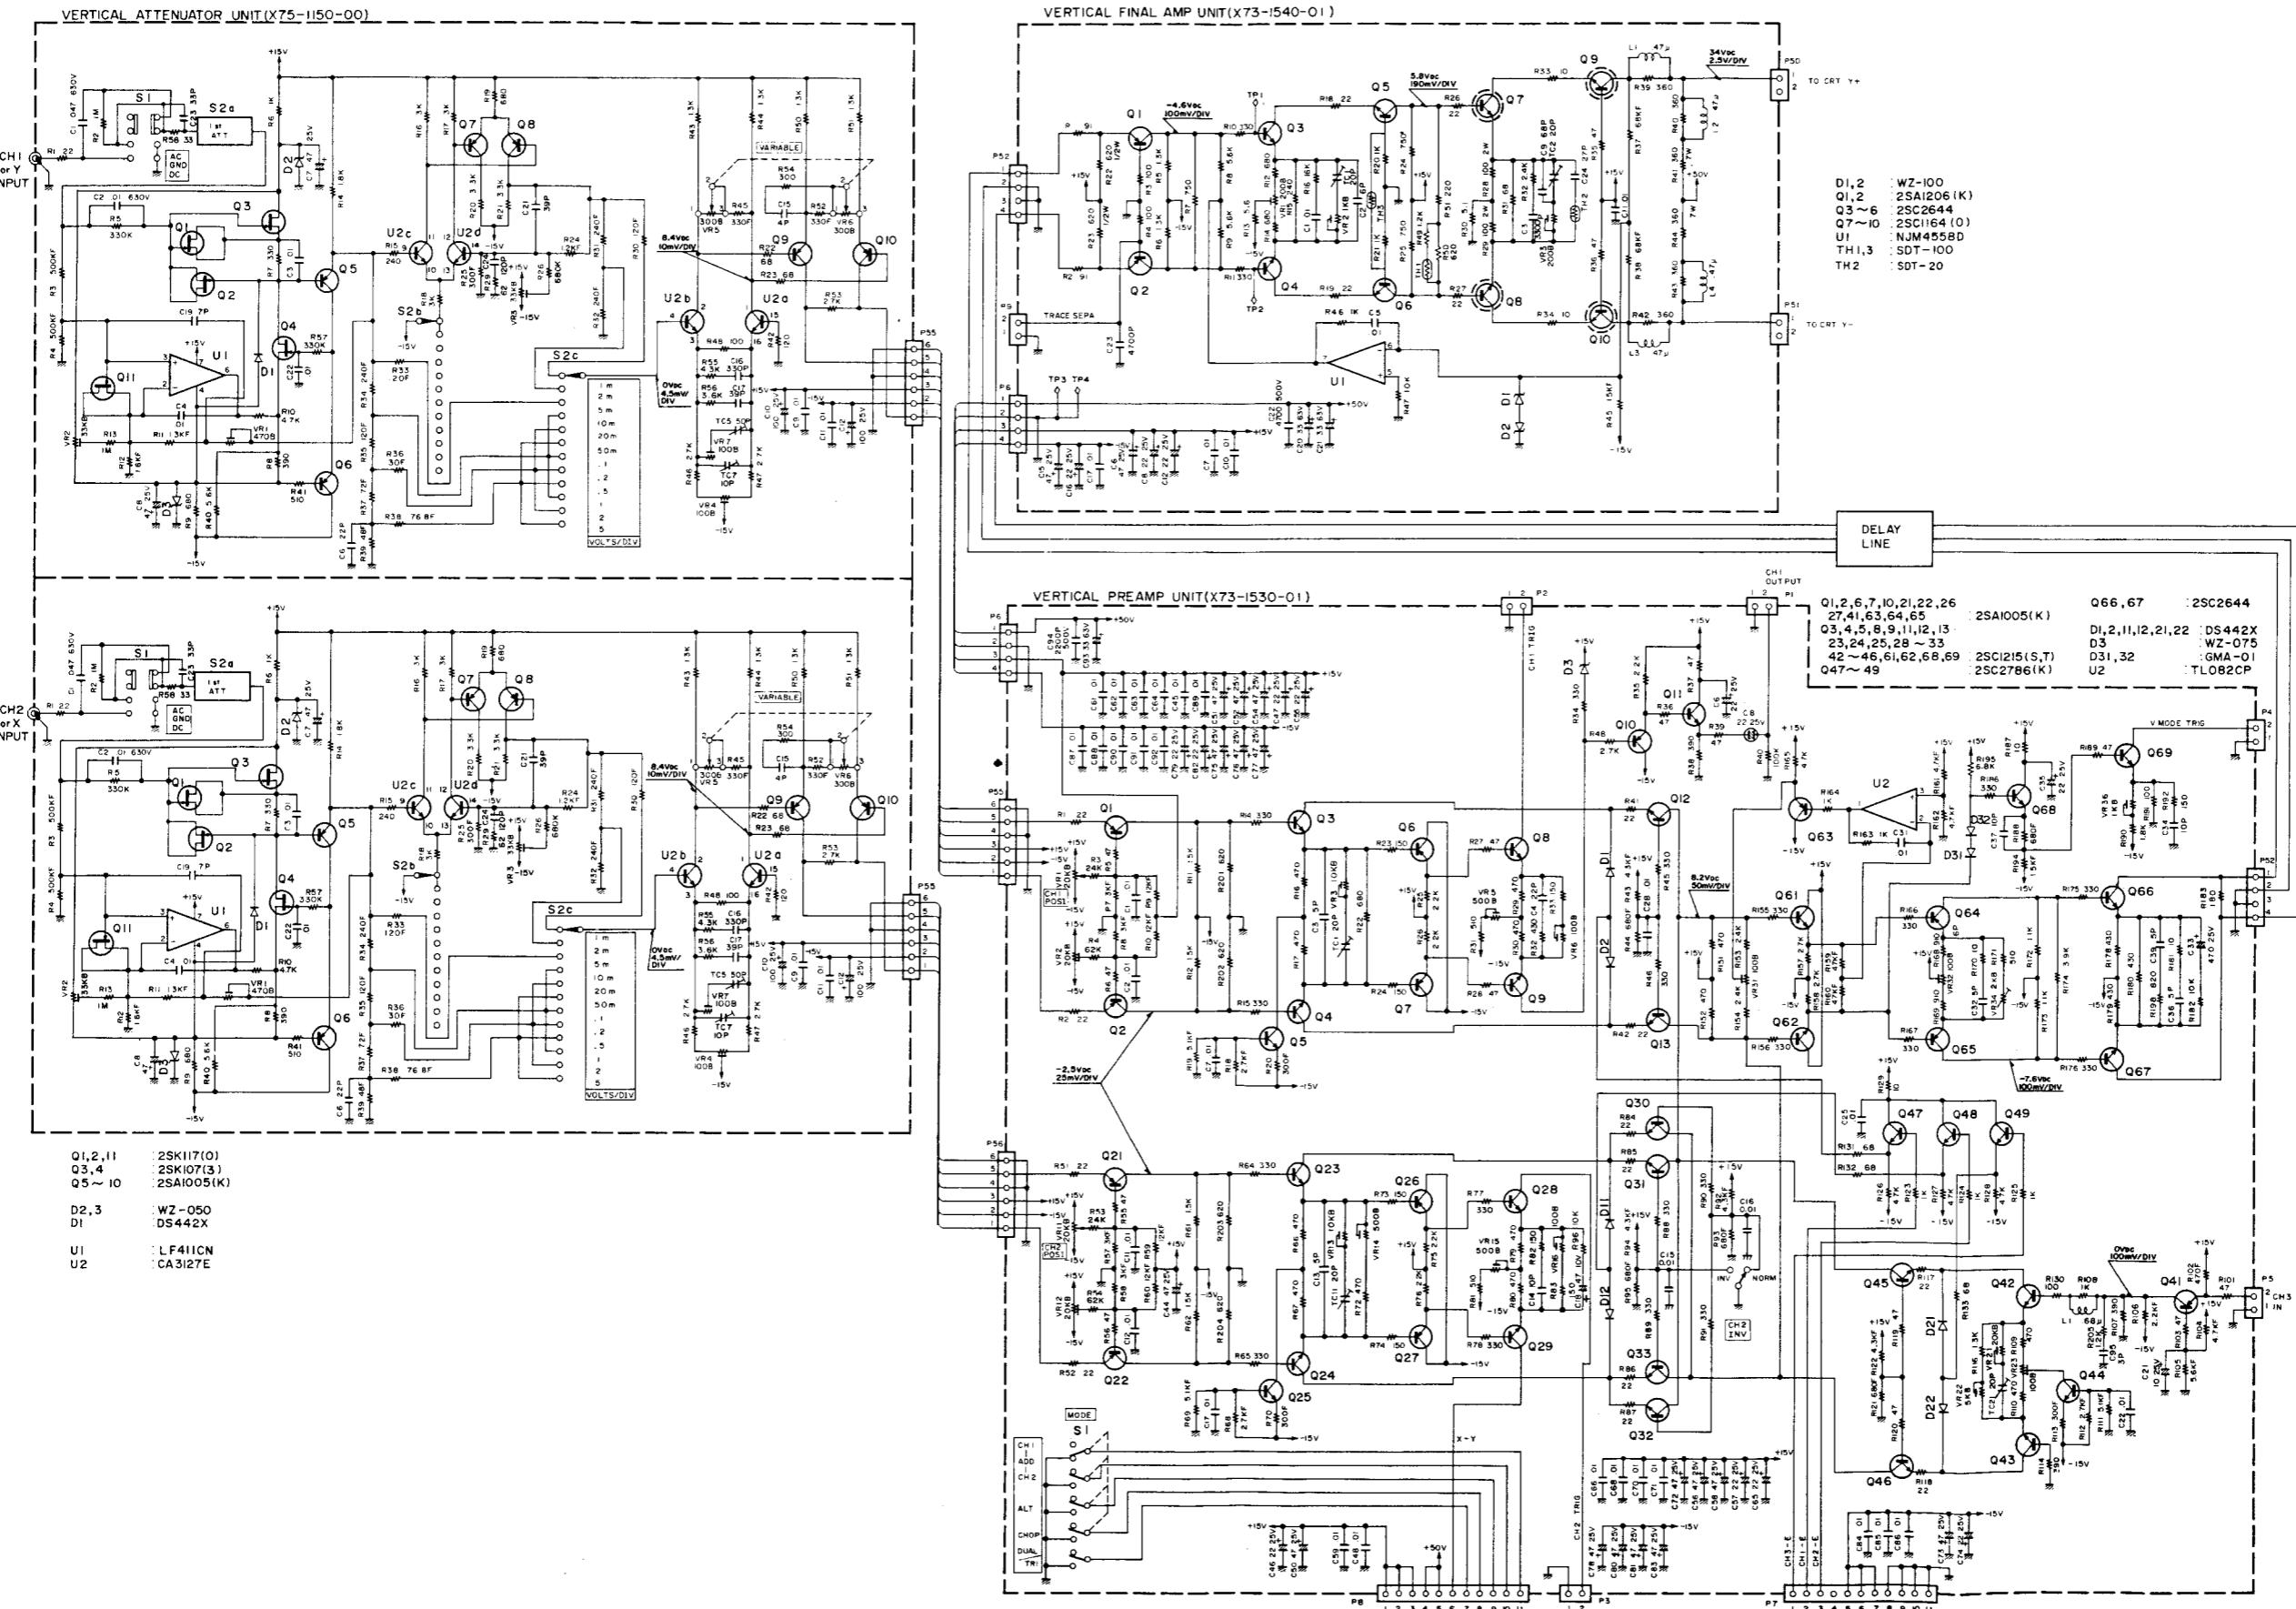















SCHEMATIC DIAGRAM

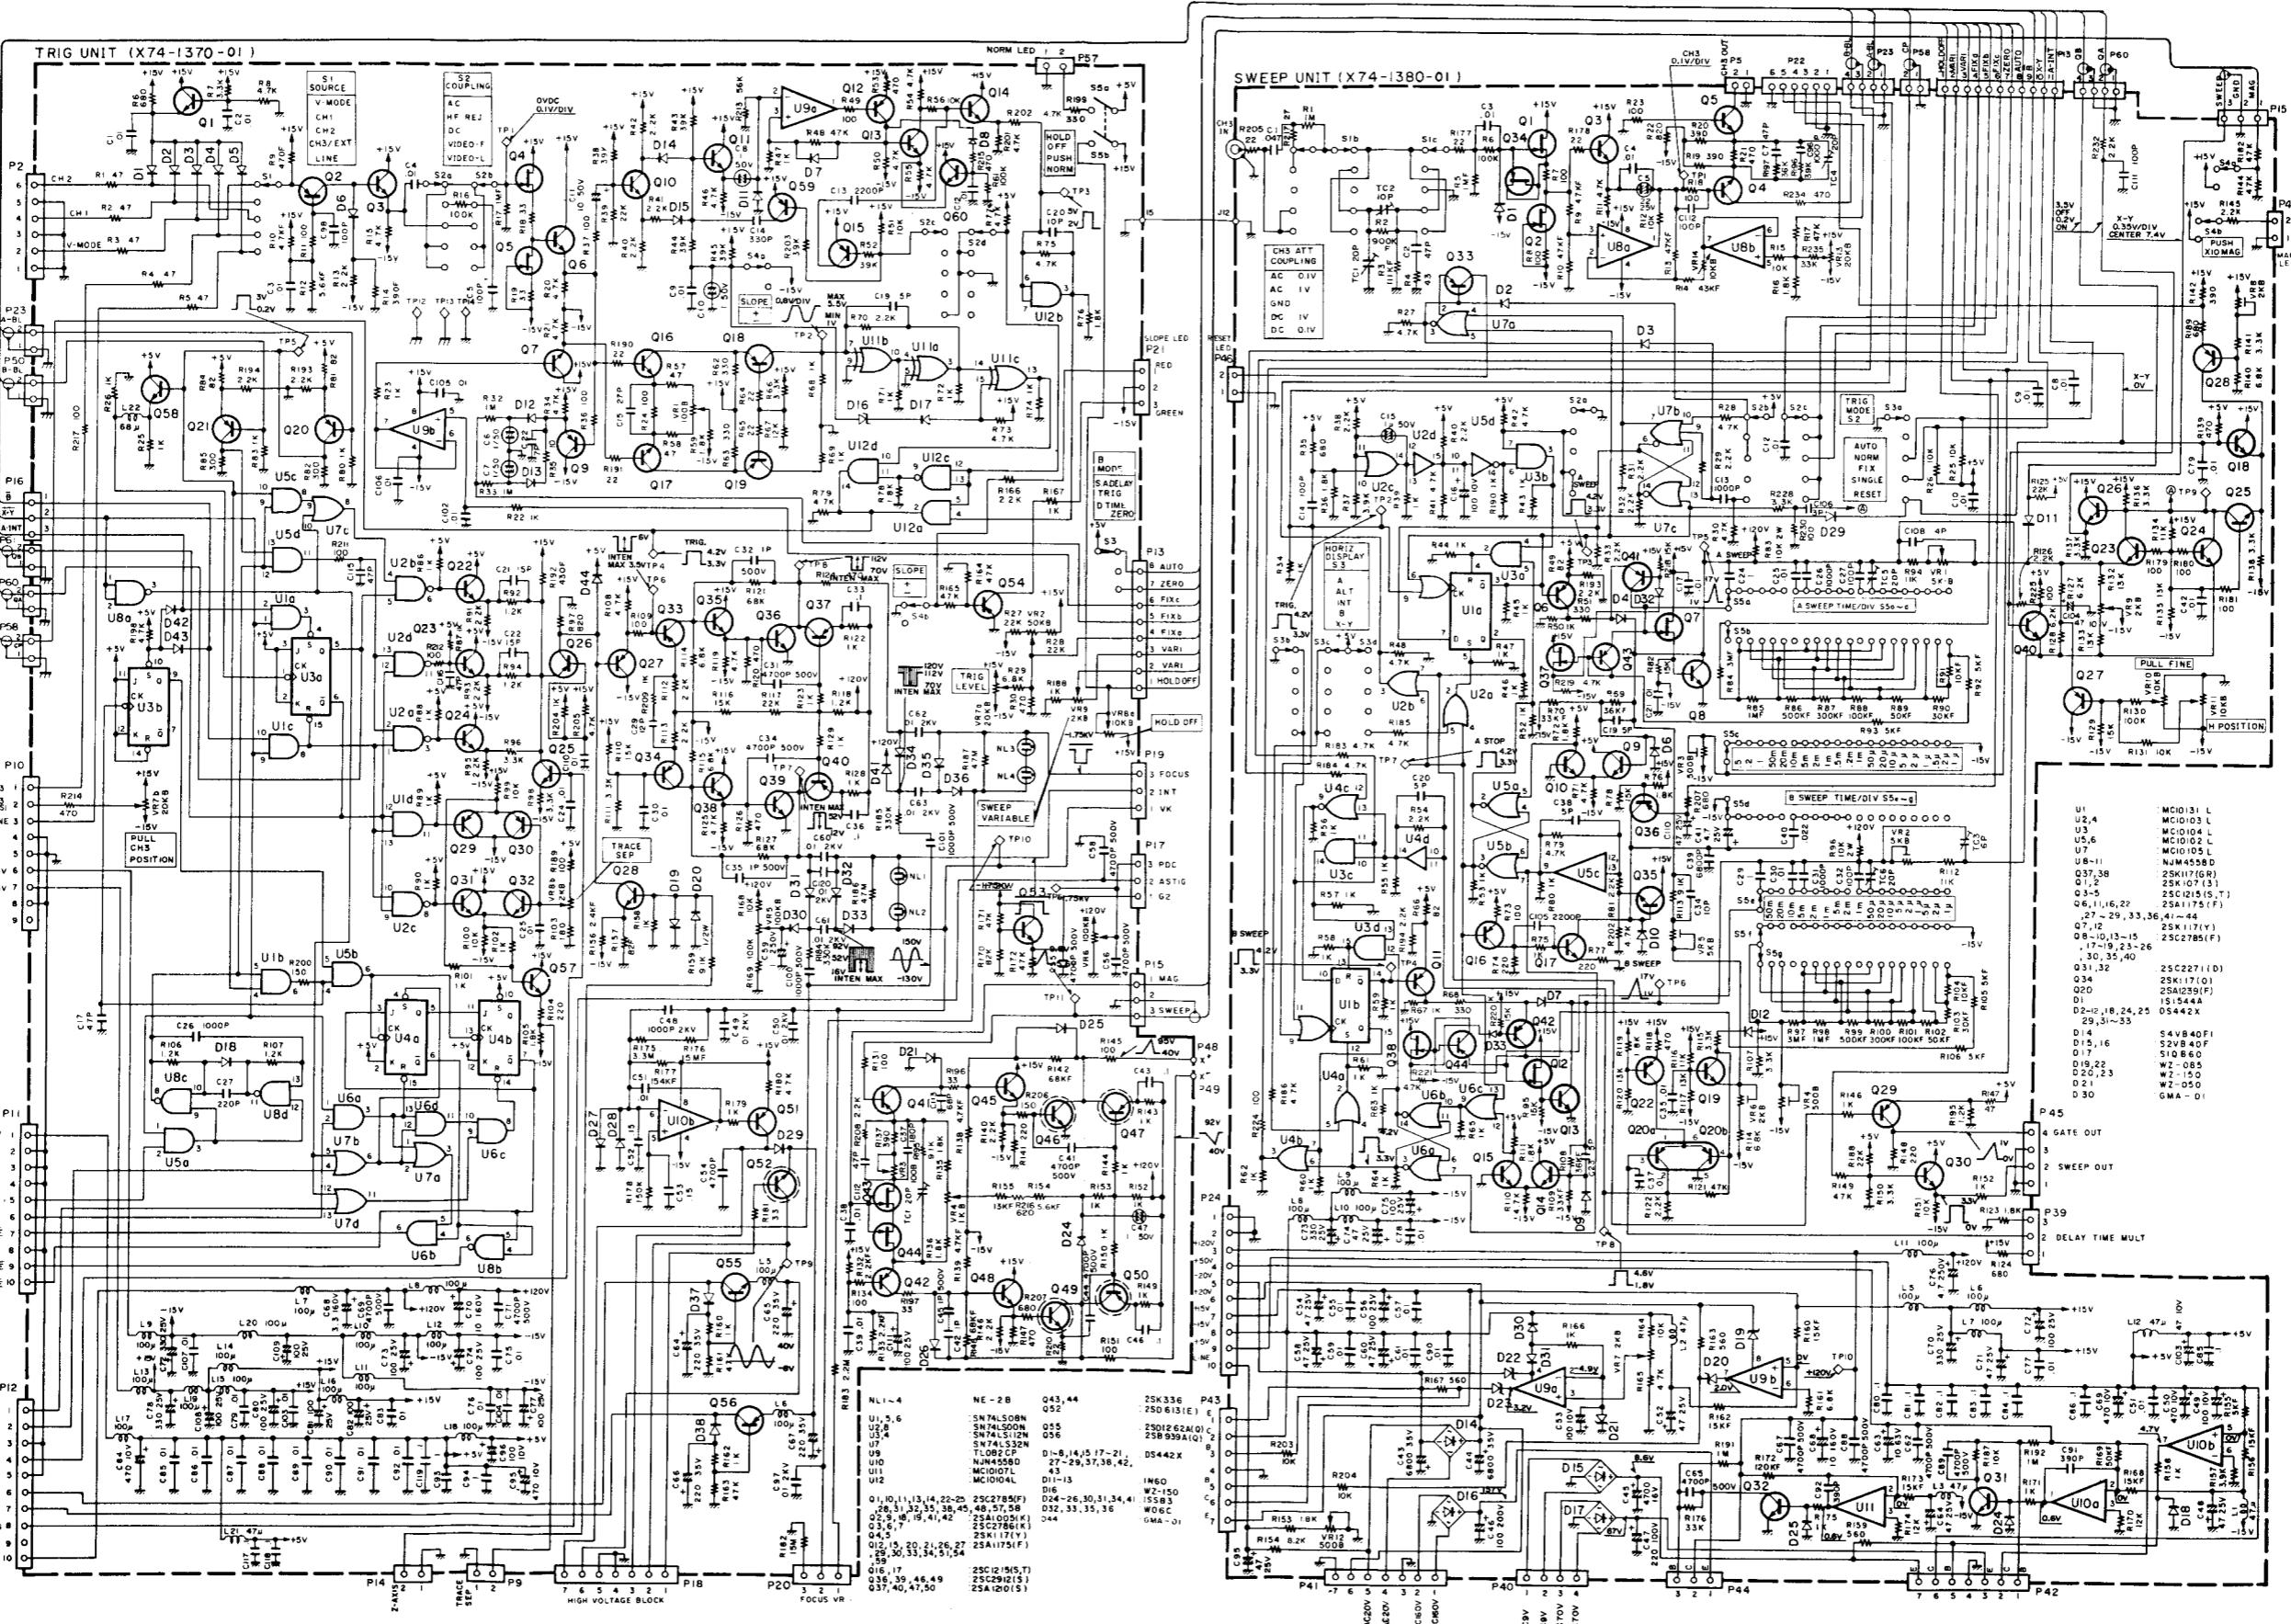


DISASSEMBLY

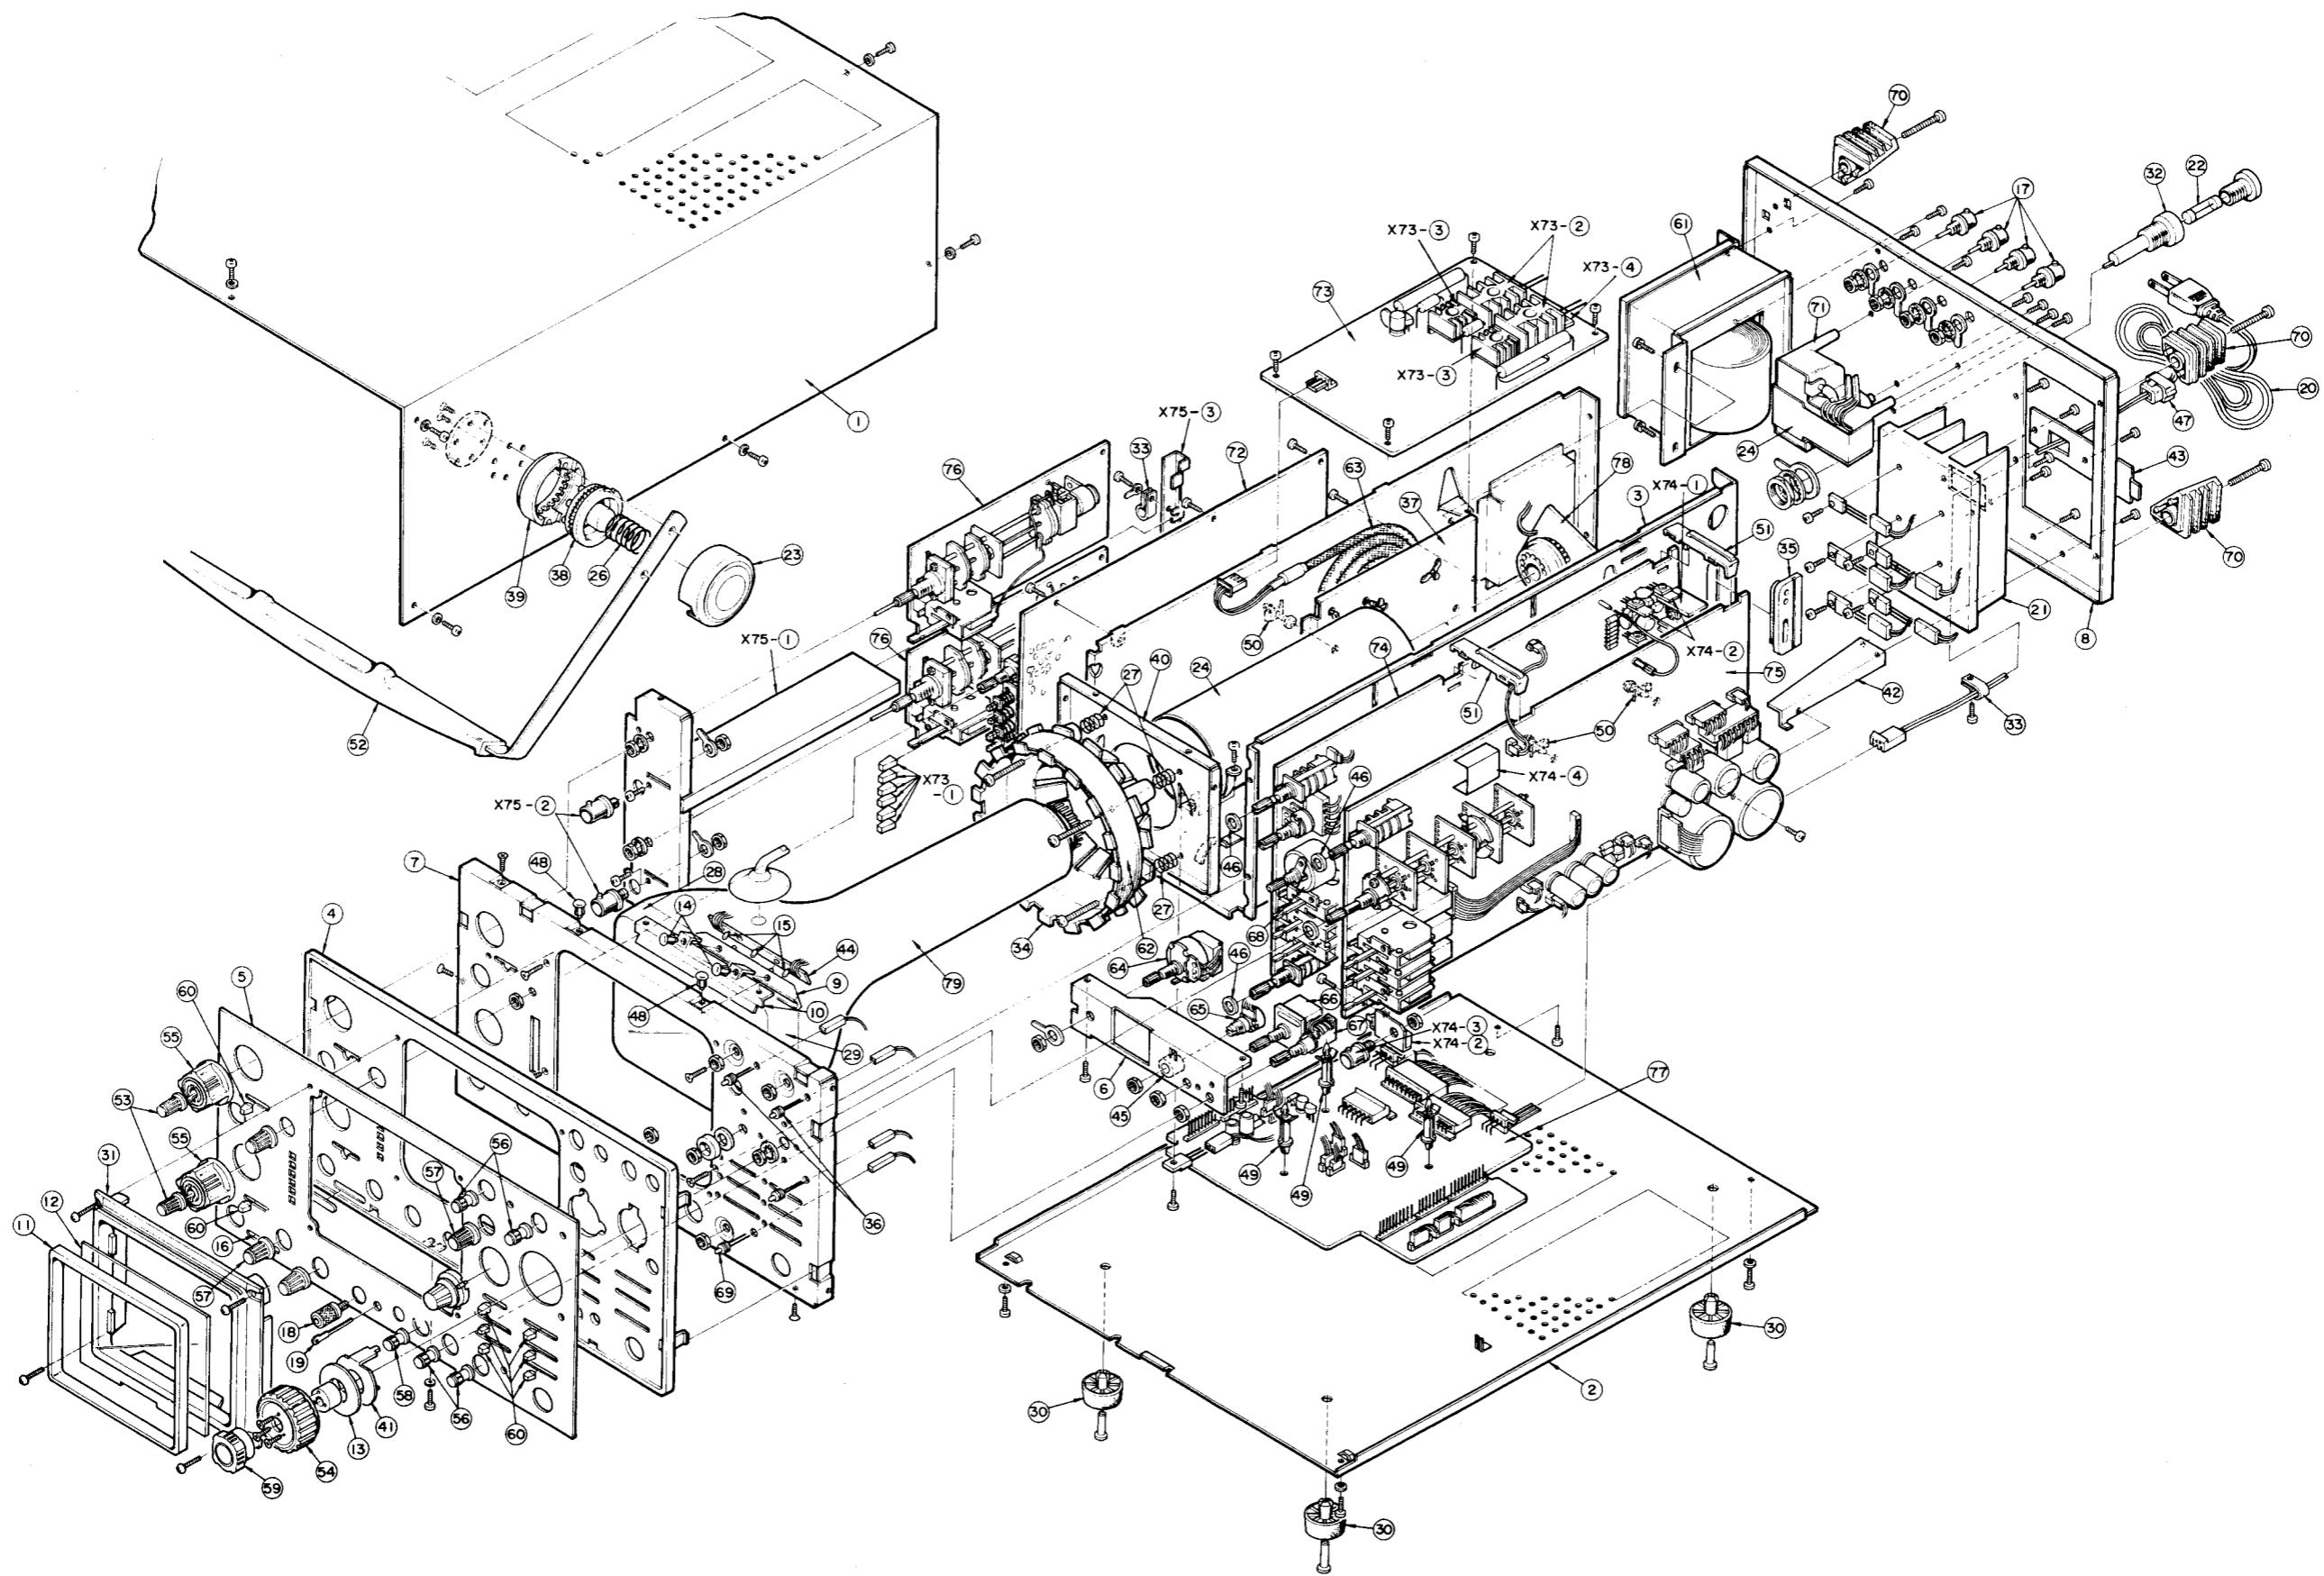


SEMICONDUCTORS

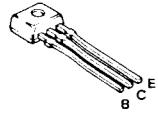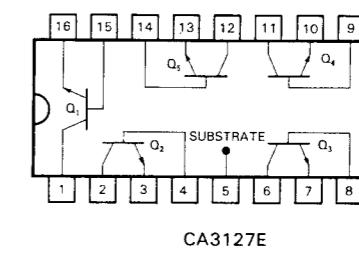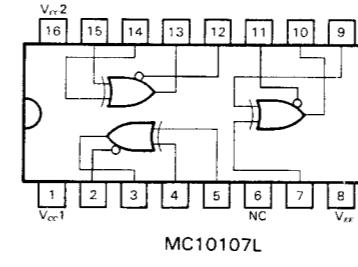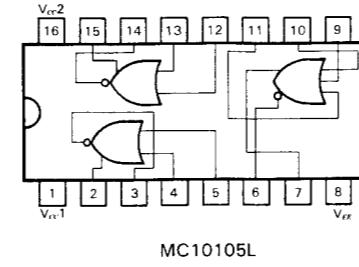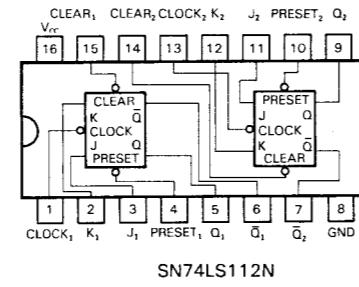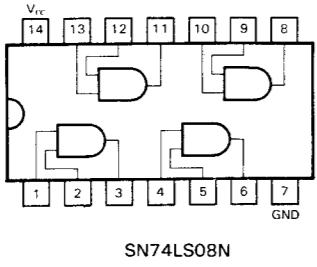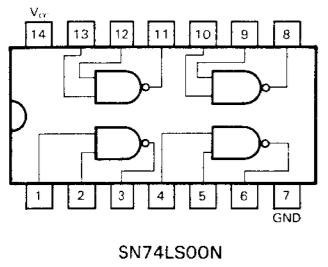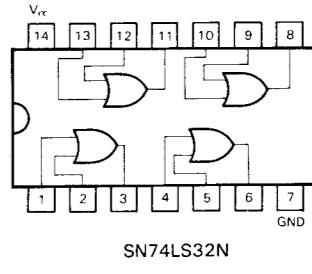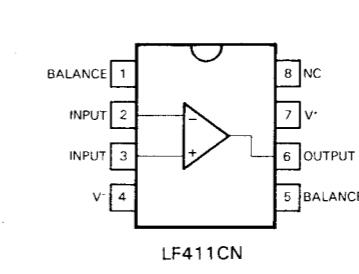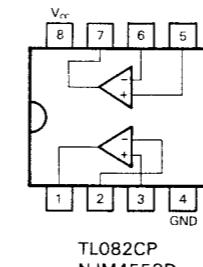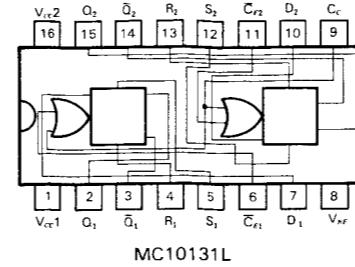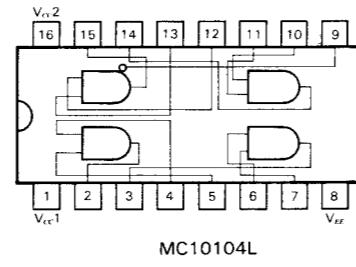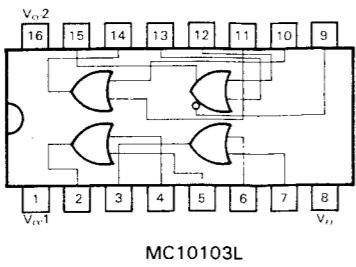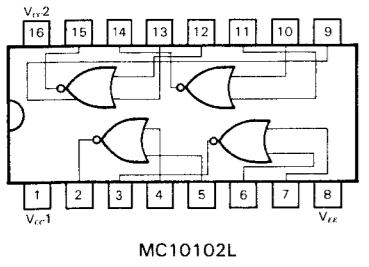


2SA1175 (F)
2SC2785 (F)
2SC2786 (K)

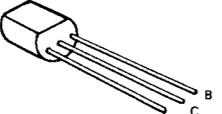


2SA684 (R)
2SA1005 (K)
2SC1215 (S, T)
2SC1384 (R)
2SC2271 (D)

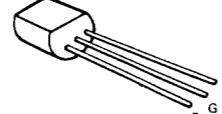


2SK117 (O, Y, GR)

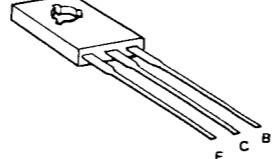


2SC2912 (S)
2SA1210 (S)
2SA1156 (K, L)

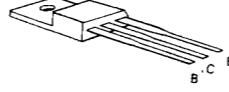


2SB950 (P, Q)
2SB940 (P)
2SD613 (E)
2SD1276 (Q)

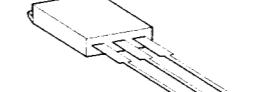


2SB939A (Q)
2SD1262A (Q)

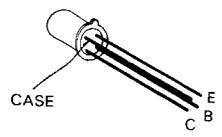


2SC1164 (O)

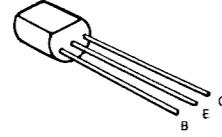


2SC2644

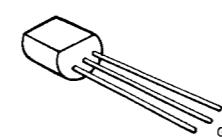


2SK107 (3)

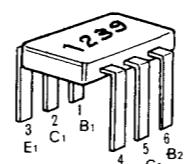

2SA1239 (F)

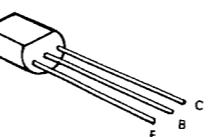

2SA1206 (K)

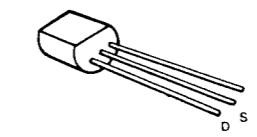

2SK336