


Radioddy

PROFESSIONAL DIGITAL TWO-WAY RADIO

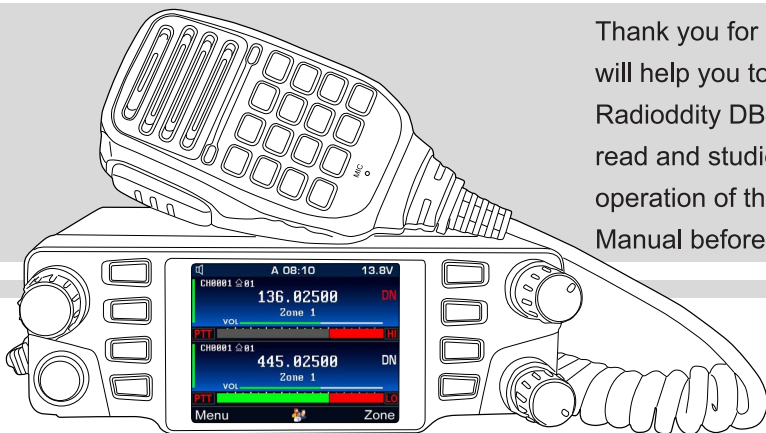

Thank you for your interest in our products. This manual will help you to master the operation and use of the Radioddy DB40D mobile radio. This manual should be read and studied to ensure that the user understands the operation of the Radioddy DB40-D. Please read the Manual before use.

This manual applies to the Radioddy DB40-D mobile radio.

DISCLAIMER

We strive for the accuracy and completeness of this manual, but no warranty is given on its content. All the specifications and designs are subject to change without prior notice due to continuous technology development. No part of this manual may be copied, modified, translated or distributed in any form without our prior written authorization.

The third-party products referred to in this manual are property of those third parties. We do not guarantee their accuracy, validity, timeliness, legality or completeness.

USER NOTICES

SAFETY:

The user should be aware of and understand the general hazards in operating a two-way radio transceiver. We cannot guarantee the safety and operation of our transceiver with aftermarket accessories unless they have been tested and sold by us.

Our transceiver should be maintained and serviced by a qualified two-way radio dealer and their technical staff. Failure to do so may violate our warranty.

WARNING:

No two-way radio transceiver including ours shall be operated including powered on in hazardous areas such as explosive atmospheres including Inflammable gas, dust particles, metallic powders, grain dust, etc. This shall include confined spaces where these hazards exist, in areas where blasting or blasting products are in use or stored, and while fueling at refueling centers. In any of these conditions or where hazards exist, the transceiver shall be powered off.

PRECAUTIONS

Observe the following precautions to prevent fire, personal injury and transceiver damage.

- Do not modify or attempt to adjust this transceiver for any reason.
- Do not expose the transceiver to direct sunlight for long periods, nor place it close to a heat source.
- Do not place the transceiver in a dusty, humid or wet area, nor place on unstable surface.
- If an abnormal odor or smoke is detected coming from the transceiver, switch OFF immediately and remove the battery pack from the transceiver. Contact your dealer.

How to use this user manual

This manual introduces the basic operation of DMR / Analog mobile radio

Your dealer or system administrator may have already preset the features of this radio based on your operational requirements. Please consult with your dealer or system administrator about the details.

The icons below are used for distinguishing between analog and digital features.



This icon indicates the function is only available in Analog mode.



This icon indicates the function is only available in Digital mode.



Notes:

When programming the radio, be sure to read out the original factory data first before changing desired relevant frequency, settings and other parameter values, otherwise it may result in incorrect set parameter values due to unmatched model or frequency band and other reasons.

CONTENTS

Packing list	4
Preparation for operating the radio	5
Radio installation.....	5
Connecting power cable.....	5
Radio operation.....	5
Base station operation.....	6
Antenna connection.....	7
Accessories connection.....	7
Radio Controls	8
Rear panel.....	10
Mic jack on side panel.....	10
Speaker Microphone.....	10
TFT Status Icons.....	12
Programmable Function keys.....	14
Keypads &ENC (Channel Selector) Operation...15	
Main functions description.....	16

CONTENTS

Operations for Speaker microphone keypad ...18	
Transmit / Receive Icons.....	
18Basic operations	18
Power On/Off the radio.....	18
Operating Frequency Band Selection.....	19
Volume Adjustment.....	19
Squelch.....	19
Busy Channel Lockout.....	19
Wide/ Narrow Bandwidth.....	19
CTCSS / DCS.....	19
Channel Selection.....	19
Switch between VFO and Channel Mode.....	19
VFO Frequency Set.....	20
Zone / Channel Selection.....	20
Monitor.....	20
Permanent monitoring.....	20
Repeater / Talk Around.....	20

CONTENTS

Emergency Alarm.....	20
Scan On/Off.....	21
Roaming On / Off.....	21
Main menu contains item index.....	21
Menu accessing and operations.....	22
PTT Call.....	23
High / low power.....	23
Select the transmitting Band.....	23
Receive and Answer to a radio call.....	23
Initiate a call.....	24
Initiate and receive calls in analog mode.....	24
Advanced functions for DMR.....	25
Menu functions operations.....	26
Contacts.....	26
Message.....	29
Call Log.....	31
Scan.....	33

CONTENTS

Zones & Channel.....	37
Local Set.....	38
Parameters.....	41
Tone Set.....	44
Appendix.....	46
Record.....	49
Device Info	50
User_defined Mode.....	50
Function Applications.....	53
General guide for fault handling.....	57
Maintenance and Clean.....	59
Optional accessories.....	60

Packing list

The following items are contained in the gift box. If any item is missing or damaged, please contact your dealer.

Item Name	Quantity (pc)	Item Name	Quantity (pc)
Radioddity DB40-D Radio unit	1	Mounting bracket	1
Speaker Microphone	1	Screw set	1
DC power cable (With 20A fuse)	1	User manual	1
GPS-antenna	1	BT PTT button	1
BT-antenna	1	BT earpiece	1
Programming cable	1		

 **Note:**

After purchase, please check the items and quantity in the box to ensure everything is correct.


Preparation for operating the radio

Radio installation

When you are driving, please find a safe and convenient position in order to prevent the damage for your own and passengers safeties. You can consider installing the radio in front of the front passenger seat below the panel section or the car trunk. This will prevent your knees and legs crashing the radio in emergency brake. You should install it with good ventilation and avoiding the direct sunlight.

1. Install the mounting bracket to the car with using the self-tapping screws and flat washers (4 screws).


- Screws can be put upside down (under the dashboard mounting) or upwards the mounting bracket.
- When installing the mounting bracket, please make sure the 3 screw slots on the bracket side edge are backwards.

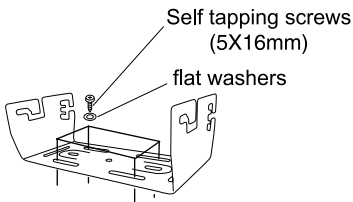


2. Fixed the radio and then insert the equipped with six angle combination screw and flat washers (each equipped with 2 sides and each side of 2 screw sets) and tighten them.

- Please make sure all the screws are tightened to avoid radio

looseness caused by car vibration.

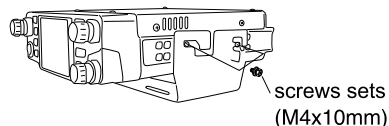

- Please use 3 screw slots of each bracket to tilt the main device to the appropriate angle.



Connecting Cable Power

■ Radio Operation

Make sure to use 12V car batteries. If the radio's power is not enough during transmitting the screen will grow dark and the output power may be significantly decreased. Please do not connect the radio to the 24V power battery.

Note: If the battery is not fully charged or when the engine is switched off but the battery is still not fully charged, the battery may discharge and there will not be enough power to start the car.

In this case, please avoid using the radio in following situation:

1. Use the radio with the DC power cord to directly connect to the car battery and radio within shortest area.

- If you use a noise filter, the metal parts of the car shall be fitted with an insulator to prevent it from touching the car.

- We do not recommend you to use the cigarette lighter socket because some of the cigarette lighter socket will cause big substantial voltage.

- If you have to connect the power cord through a car chassis or a hole on the car (such as a firewall in front of the passenger compartment), please use the rubber ring to prevent the power cord and remove the fuse holder to pass the power cord through the firewall.

- The entire power cord must be wrapped in order to keep the heat insulated and insulation from the engine (high pressure) system.

2. After the power cord is already installed, wrap around the fuse holder to make it moisture-proof, including the whole power cord.

3. Please cut off all wire connections on the negative battery terminal before connecting the radio to prevent the short circuit.


4. To confirm the connection is correct then connect the power cord to the power supply; red connection to the positive (+), black connection to the negative(-)

- To use the whole power line, please do not cut off excessive parts of power line even if it is longer than desired length. Remember, do not remove the fuse holder from the power cord.

5. Reconnect all wiring connections that were previously disconnected on the negative terminal.

6. Connect the DC power supply to radio.

- Connect the plug into the socket until you hear a click sound.

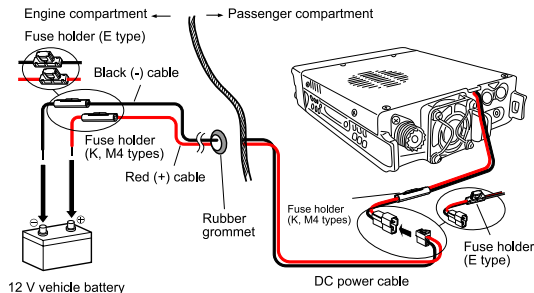

■ Base Station Operation

To use it as a base station, you need a separate 13.8V DC power supply. This power supply is recommended for current capacity above 12A.

Note: Do not connect the DC power to the AC power socket before completing all connections.

1. Make sure that both radios and DC power are off.

2. Connect the DC power supply to the regulated DC power supply and make sure that the polarity is correct.


(Red: positive, black: negative).

- Use the DC power cord to connect the radio to the regulated power supply. Don't connect the radio directly to the AC power socket.

- Do not use the smaller size of the power cord to make a replacement.

3. Connect the DC power cord to the radio.

- Connect and press the socket together until you hear a click sound.

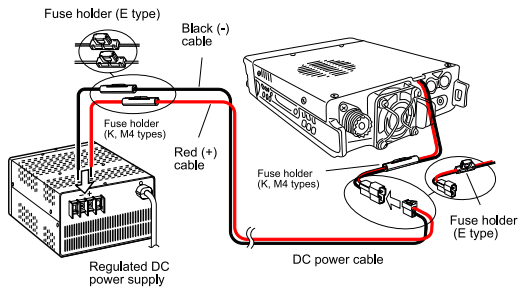

■ Replace fuse

If the fuse is blown, please find out the cause and then solve the problem. After the problem is fixed then replace the fuse. But if after re-installation the fuse is still blown, please disconnect the power cord and contact the local authorized dealer or authorized service center for assistance.

Fuse position	Fuse rated current
Radio (in DC connector)	15A
Equipped with DC power cord	20A

Note: Please use only the specified type and the rated value of the fuse; other wise it might damage the radio.


Antenna connection

Before operation, you must first install and adjust well the antenna. Success installation depends mainly on the antenna type and a correct installation. The radio will have best performance if the appropriate antenna is properly installed. A low loss coaxial feeder line with $50\ \Omega$ impedance is used to match the input impedance of the radio. If the transmission

impedance of the feeder line is less than $50\ \Omega$ the antenna connection will reduce the effectiveness of the antenna system, and will cause interference to the nearby radio and television receivers, radio receivers and other electronic devices, and even damage the radio.

Note:


- If transmitting without an antenna or other matched load line, it could damage the radio. The antenna must connect to the radio before transmitting
- All base stations should be equipped with lightning arrester to reduce fire to prevent the risk of electric shock or radio damage.

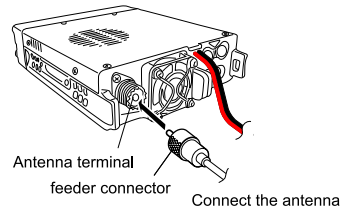


Accessories connection

■ Speaker Microphone

1. Please insert the provided speaker microphone to the Mic jack on left side of the radio to make voice communication. Press the connector until you hear a click sound from the locating plate in place.

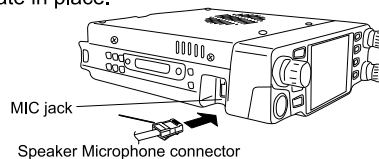

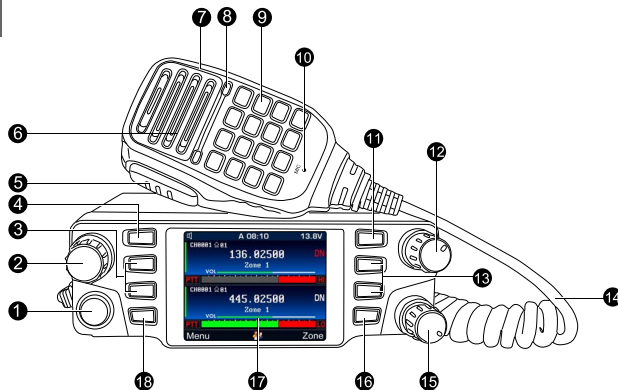

Radio Controls




Parts description & function applications

NO.	Part Name	Function description and applications
①	[⏻] Power Switch	Press and hold it for more than 3s to turn on/off the radio.
②	ENC selection knob	1) Applies to channel, frequency and menu operations of the VFO marked with 'PTT' 2) Short-press for MENU, Select, OK 3) Long press for EditChannel
③	PF1/ PF2	Programmable function key
④	[↶]	Programmable function key
⑤	[PTT] key	Press and then speak in to the microphone to transmit; Release it to receive.
⑥	Speaker	Used to receive audio from others
⑦	Speaker Microphone	It is made of ABS plastic, very study and durable.
⑧	LED indicator	Used for radio transmission status applications only
⑨	Numeric Keypad	Used to input frequency / channel number / DTMF-code, alias, DMR ID and SMS

NO.	Part Name	Function description and applications
⑩	MIC	Speak to the microphone while pressing the PTT key to transmit; (3-5cm away from the mouth)
⑪	[]	Programmable function key
⑫	Band A volume / frequency adjustment knob and Band A selection	Turn the knob clockwise to increase the audio output volume of Band A, and turn the knob counterclockwise to reduce the audio output volume In the standby state, short press to select Band A, and press PTT key to TX or operate the set frequency of that Band. Long press to switch between Channel mode and Band mode for Band A.
⑬	PF3 / PF4	Programmable function key
⑭	Power cord for speaker microphone	It is scalable with flexibility.
⑮	Band B volume / frequency adjustment knob and Band B selection	Turn the knob clockwise to increase the audio output volume of Band B, and turn the knob counterclockwise to reduce the audio output volume In the standby state, short press to select Band B, and press PTT key to TX or operate the set frequency of that Band. Long press to switch between Channel mode and Band mode for Band B.
⑯	Back key Zone key Edit key	<ol style="list-style-type: none"> 1). In menu operation, use as the return key; 2). In standby, short press to enter into Zone list 3). In standby, long press to enter EditChannel of currently selected VFO
⑰	TFT display	Display various working states, and combine with visual icons for easy use and operation;
⑱	Menu key / Select Key / OK Key	<ol style="list-style-type: none"> 1). In standby, short press to access the menu of the current band; 2). In the current menu mode, short press to select the current menu item.

 **Note:** To improve the convenience of operation and use, the radio provides a programmable function keys on the radio body as well as on the Speaker Microphone.

Rear panel

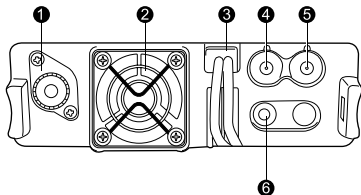

1. ANT

External antenna connected to this terminal. During the transmitting test please connect the load to replace the antenna. Antenna system or the load should be with 50 Ω Impedance

2. Cooling fan

When radio reaches the preset temperature, please start the cooling fan to quickly reduce the temperature to avoid damage to the radio parts.

3. External power plug

When you connect to the external power, you should carefully check the polarity of the power supply. (Red line: + , black line: -) and the power ratings (DC13.8V/ 15%).

4. GPS Antenna

Connect the GPS antenna to this port

5. Bluetooth Antenna


Connect the bluetooth antenna to this port

6. SP

Connect 1 or 2 external speakers for better sound effects (if needed), These jacks can be connected in diameter 3.5mm

(1/8 ") for a two-way plug. Please see instructions to learn how to use the speaker.


Mic jack on side panel

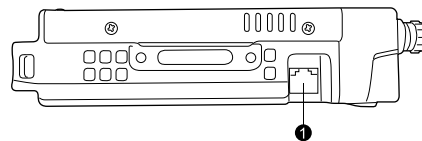

MIC

Connect the configured microphone to this jack and press the [PTT] key to make a call.

Speaker Microphone

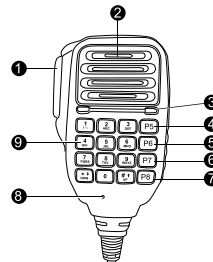

1. **PTT button (Push-to-Talk)**

Press and hold to transmit. Release it to receive.

2. **Speaker**

For listening to the voice from others

3. **LED indicator**

Used to indicate the RX/TX status, etc.

4. **P5**

Using the MIC-P5 to modify the set

5. **P6**

Using the MIC-P6 to modify the set

6. **P7**

Using the MIC-P7 to modify the set

7. **P8**

Using the MIC-P8 to modify the set


8. **Microphone(MIC)**

When you press the (PTT) button to transmit, you should speak into the microphone; (3-5cm away)







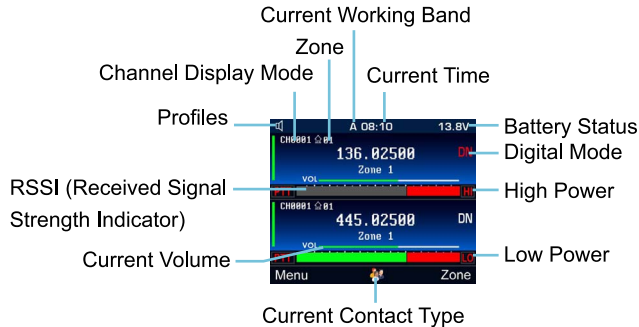




9. **DTMF keypad**

Used for generating DTMF-codes (with PTT pressed), or you can input frequency or character strings with them.

TFT Statu Icons












Icon	Icon description	Applications and function description
	High Power	Occurs when the intercom is in high power mode
	Low Power	Occurs when the intercom is in low power mode
	Standby	White bars indicates the radio being in standby mode
	RSSI	In RX mode, the more green bars, the stronger signal
	Keylock	Appears when the keypad is locked
	Monitor	Appears when monitor is on
	VOX	Appears when VOX is on
	GPS	Appears when GPS is on
	Scan	Appears when SCAN is on
	Emergency Mode	Appears when the radio is in emergency mode.
	Encryption	Appears when Encryption is on
QT	CTCSS	In analog mode, appears when CTCSS is on
DQT	CDCSS	In analog mode, appears when DCS is on

Icon	Icon description	Applications and function description
	Prompt Tone on	Appears when profile is in standard mode
	Prompt Tone Off	Appears when profile is in silent mode
	Talk Around	Appears when the radio is in Talk Around Mode
	Roaming	Appears when Roaming is on
	Roaming Lock	For locking current channel in Roaming
	Offset Frequency Negative direction	Appears when RX frequency is higher than TX frequency
	Offset Frequency Positive direction	Appears when TX frequency is higher than RX frequency
DN	Digital Mode	Indicates the current band working in digital mode
FM	Analog Mode	Indicates the current band working in analog mode
DN	Digital/Analog Mode	The current band is in digital/analog auto RX mode. Digital Mode is for main TX
DN	Analog/Digital Mode	The current band is in analog/digital auto RX mode. Analog Mode is for main TX
PTT	Band Transmitting	Indicates to transmit on the current band
	Time Slot 1	Indicates the working slot of current frequency or channel
	Time Slot 2	Indicates the working slot of current frequency or channel
	Zone	Indicates the working zone of current frequency or channel
VFO	Frequency Mode	Indicates working in frequency mode, can input frequency directly via numeric keypad
	SMS	Appears when received a new message.
A	Operating Band A	Appears when CTRL stays on A band
B	Operating Band B	Appears when CTRL stays on B band
A/R → B/T	AB Band Repeat Mode	Band A for receiving, and Band B for transmitting
A/TR ↔ B/TR	AB Band Repeat Mode	Band A or B for receiving and transferring thru Band A or B.
B/R → A/T	AB Band Repeat Mode	Band B for receiving and Band A for transferring.

Programmable Function keys

If desired, the following terminal features can be preset for programmable keys:

Type	Features	Description
	Radio Revive	Revive a target radio that has been remotely disabled
	Radio Detection	Determine if targeted radio is active
	Radio Kill	Disable targeted radio remotely
	Remote Monitor	Covert activation of targeted radios transmitter without local indicators.
	Encryption On/Off	Turn on/off encryption
	Emergency On/Off	Initiate an emergency alarm mode or call based on programmed preset.
	Record On/Off	Turn on/Off audio Record
	Contacts	Direct access to the contact list
	Permanent Monitor	Always monitor the selected channel until disabled.
	Scan On/Off	Turn scanning on/off
	Zone Switch	Changes from selected Zone to new Zone
	VOX On/Off	Switch between VOX On and Off.
	Backlight On/Off	Turn backlight On/Off
	Keypad Lock	Switch between keypad lock and unlock.
	High /Low Power	Switch transmit power between high and low power
	Scan Mode	Select the desired scan mode (switch between SE, TO, CO mode)
	Repeat / Talk Around Selection	Switch between the Repeat and Talk Around Mode
	SMS	Direct access to SMS list

Type	Features	Description
	Monitor	Turn On/Off the radio RX squelch circuit. Receive weak analog signals
	DTMF On/Off	Turn On/Off DTMF
	1750Hz	The 1750Hz single-tone signaling is sent to activate the trunk
	GPS ON/OFF	Turn on or Turn off GPS
	MENU	Enter the menu list
	Upper key	Used as a move up key
	Down key	Used as a down key
	Back	Back to the previous menu
	Subaudio switching	Go to Subaudio Settings
	A/B	Exchanging in A or B bands
	VFO	Directly to VFO mode
	Digital forced to monitor	When group and contact or wrong color code, press this key to enforce monitoring signal
	700Hz	For sending signaling at 700Hz
	1000Hz	For sending signaling at 1000Hz
	1200Hz	For sending signaling at 1200Hz
	1400Hz	For sending signaling at 1400Hz
	1450Hz	For sending signaling at 1450Hz
	2100Hz	For sending signaling at 2100Hz



Note:

© Short Press: press and release quickly (programmable range is from 50ms-750ms).

© Long Press: press and hold for programmed time length (programmable range is from 500ms-5000ms).

Keys & ENC (Channel Selector) operation

The following keys can be used to quickly achieve the desired function.

Keypad	Status	Operation	Description
MENU	Standby	Short Press	Access to the Menu
		Long Press (3S)	Input the channel number and call up the desired channel.
	Access to the Menu Mode	Short Press	【Confirm】 or 【Select】
BACK	Standby	Short Press	Access to Zone list
	Standby	Long Press (3S)	Operations for Channel / VFO User-defined mode mode and storage and other parameters
	Menu Mode	Short Press	Back to the previous level
	In Any Status	Short Press	Preset function based on customization
	Standby	Long Press (3S)	Preset function based on customization
	In Any Status	Short Press	Preset function based on customization
	Standby	Long Press (3S)	Preset function based on customization
PF1	Standby	Short Press	Preset function based on customization
		Long Press (3S)	Preset function based on customization

Keypad	Status	Operation	Description
PF2	Standby	Short Press	Preset function based on customization
		Long Press (3S)	Preset function based on customization
PF2	Standby	Short Press	Preset function based on customization
		Long Press (3S)	Preset function based on customization
PF3	Standby	Short Press	Preset function based on customization
		Long Press (3S)	Preset function based on customization
PF4	Standby	Short Press	Preset function based on customization
		Long Press (3S)	Preset function based on customization
ENC	Standby	Access to the Menu Mode	Select channel, frequency and other parameters
			Select Menu and other setting parameters
	Enter User -defined mode	Rotate	Select programming items or other parameters;
			Move the editing position of the blink cursor to the left or right
	Standby	Short Press	Preset function based on customization
			Long Press (3S)

Main functions description

Classification	Function	Description
Public Functions	Zone	A zone is a group of channels. Support end users to build and expand zones by themselves.
	VFO Mode	In VFO mode, the user can directly input the required frequency through the numeric keyboard
	Channel	Support end users to build and expand channels by themselves, up to 4000 channels, 16 zones.
	A/B repeater	The radio can receive by either band A or B and then transmitter by either band A or B
	A/B Repeat Interruption	In A/B Repeater Mode, the user can press PTT to insert a call
	A/B Monitor	In A/B Repeat mode, the user can preset Monitor On/Off in advance
	Power	The power level is for the transmission power level of the current channel, which can be set to high or low power.
	Emergent alarm	Emergency alarm has the highest priority.

Classification	Function	Description
Public Functions	Scan	When the terminal scans a signal on a channel, it will stay on the channel to listen, so as to understand the current activity status of the relevant team members.
	VOX	If VOX is on, when the voice is detected to reach the transmission condition by the microphone, it will be transmitted automatically. The user can Initiate a call without pressing the [PTT] key.
	Busy channel lockout	Busy channel lockout prohibits transmission and prevents interference to other users when the radio is receiving traffic.
	TOT	When a transmission times out, the terminal will automatically terminate the transmission and issue a warning sound. The user can Initiate a call without pressing the [PTT] key.
	Keyboard lock	Keyboard lock is used to lock keys to prevent inadvertent key operation. The radio may be set to automatic or manual lock mode.
	Power saving	Power saving is a preprogrammed function based on time that places radio into a sleep-wake mode to conserve the battery.

Classification	Function	Description
Digital functions	Private call	Private call is a one-to-one call.
	Group call	Group call is a one-to-many call.
	All call	All call is a call to all contacts on the current digital channel.
	Talk around	When the repeater fails to work or the radio exceeds the coverage of the repeater, it can communicate off-line (RX & TX at the same frequency) to communicate
	Roaming Setting	Roam Mode, RSSI Set, Connect Check Timer, Connect Re Check Timer, Connect Timer
	Roaming	When the radio moves from one site to another, it will automatically find the next available site through roaming.
	Recording	Can record any receive or transmit audio, or receive + transmit audio of the radio
	TDMA direct mode	TDMA direct mode is used to divide a direct channel (simplex) into two time slots to allow efficient channel usage. Multiple parties may share the channel without interference depending on slot setting.
DMR DTMF RX / TX reminder	Used as the TX PTT prompt tone and RX prompt tone before receiving the voice.	
Analog functions	Analog channel call	An analog call is a call on an analog channel.

Classification	Function	Description
Analog functions	Narrow / Wide Band	Working bandwidth for the radio (Narrow band: 12.5KHz, Wide band: 25KHz)
	Squelch Level	It is the signal strength required to adjust the received signal. Normally the higher squelch level, the higher received signal strength is required. Settable squelch level is from 0 ~ 9. Level 0 is normally open, and there is background sound from the speaker once the radio is on. Level 9 is the highest and the required received signal strength is the strongest.
	Busy Channel Lockout	If it is ON, when received the carrier signal, it is prohibited to transmitting when pressing the PTT button.
	Monitor	Monitor allows the user to open the receiver squelch manually to listen to on-channel signals.
	CTCSS	CTCSS code for RX radio must be same as TX radio, so that the audio can be received successfully
	DCS	DCS code for RX radio must be same as TX radio, so that the audio can be received successfully

Operations for Speaker microphone keypad

The numeric keypad of the speaker microphone can be used to access the radio functions. It can be used to input frequency/channel number, user alias or ID or SMS. Many characters require pressing a key for several times

Keystrokes

Keypad	1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20	21	22	23	24	25	26	27	28	29	30	Note
	,	o	?	!	:	;	;	"	"	"	'	'	'	'	()	«	»													"PY" input mode
	.	,	'	?	!	-	()	@	/	:	_	;	+	&	%	*	=	<	>	\$	[]	{	}	~	^	#		"AB"/"ab" input mode	
	A B C																														
	D E F																														
	G H I																														
	J K L																														
	M N O																														
	P Q R S																														
	T U V																														
	W X Y Z																														
	Note: in the digital editing mode, a short press of this key enters the value of "0", while long press enters the symbol "+" in the digital, English and Chinese editing mode.																														
	Note: in the digital, English and Chinese editing mode, a short press of this key enters the "" symbol, and a long press enters a "space".																														
	Note: in the editing mode of Numbers, English and Chinese, a short press of this key inputs the symbol "#", while a long press switches between the editing input mode of English, Numbers, Chinese (pinyin) ("AB" in upper case, "ab" in lower case, "12" in figure, "PY" in Chinese pinyin)																														

Transmit / Receiving Icons

The following icon appears on the radio screen to indicate the radio status.

Mode	Type	ICON	Terminal product status
	Private call		Sending a private call
			Receiving a private call
	Group Call		Sending a group call
			Receiving an group call
	All Call		Sending an All Call
			Receiving an All Call
	—		Sending an analog transmission
			Receiving an analog transmission

Note:

In the contact list, user aliases, names, ID numbers, codes, etc can be used.

Basic operation

Power On/Off the radio

ON: Make sure the power supply is connected correctly, long press the key to power on the radio till a 'Beep sound' is heard (if turned on). After power on, the brand logo and 'is powering' character is shown on the display screen. And the LCD enters the standby interface.

OFF: long press the key to power off the radio, then the brand logo and 'is powering' character is shown on the display screen.

Operating Frequency Band Selection

In standby mode, short press the corresponding knob to select either Band A or Band B. The selected Band will display the 'PTT' on the lower left, and its 'mode' indicating character color on the lower right changes from 'white' to 'red'.

Volume Adjustment

When 'PTT' is displayed at the lower left of Band A or B, turn the corresponding [Power / Volume] knob clockwise (increase) or counterclockwise (decrease) to adjust the volume of Band A or B. The green 'VOL'ume scroll bar below the current Band will change according to the volume level selected.

 **Note:** Volume of Band A and B is set separately.

Squelch

When 'PTT' is displayed at the lower left of Band A or B, set the squelch level of the Band A or B separately by accessing the radio menu. In general, the higher the squelch level, the stronger is the required signal strength. Settable squelch levels range is from '0, 1 ~ 9'. Level 0 is normally open, and there is background sound from the speaker once the radio is on. Level 9 is the highest and the required received signal strength is the strongest.

Busy Channel Lockout

When 'PTT' is displayed at the lower left of Band A or B, set the 'Busy Channel Lock On/Off' of the Band A or B

separately by accessing the radio menu. If it is set to ON, it is prohibited to transmit by pressing the PTT button if the carrier signal is received,

Wide/ Narrow Bandwidth

When 'PTT' is displayed at the lower left of Band A or B, set the operating bandwidth of Band A or B separately by accessing the radio menu.

CTCSS / DCS

When 'PTT' is displayed at the lower left of Band A or B, set the CTCSS and DCS signaling of Band A or B by accessing the radio menu or user-defined.

Channel Selection

The desired working channel can be selected by following two ways.

1. When 'PTT' is displayed at the lower left of Band A or B, Rotate the [ENC] knob to select the channel of Band A or B. When the 'PTT' character is displayed in the lower left of the current Band A or B, the intercom is in the standby state. Press the digital keyboard in channel mode, and a dialog box and the total number of current channels will appear on the screen. You can enter the required channel number through the keyboard.

Switch between VFO and Channel Mode

In standby mode, with 'PTT' displayed at the lower left of

Band A or B, press and hold the [VFO] key of the current Band A or B for 3 seconds to switch between VFO and channel mode.

VFO Frequency Set

In standby mode, with 'PTT' displayed at the lower left of Band A or B, and the current Band is in VFO mode, the desired frequency can be entered using the numerical keypad of the Speaker Microphone. For example: 446.050000MHZ; directly input [4][4][6][0][5][0][0][0][0][0] at the numerical keypad.

Note:

- ◇ The current frequency can be increased / decreased by rotating the [ENC] knob.
 - ◇ For detail user-defined operation steps, parameters set and storage, please refer to "VFO / Channel" on page 19.
-

Zone / Channel Selection

When 'PTT' is displayed at the lower left of the current VFO A or B, the following two methods can be used to select the desired zone, channels switching and zone name modification or editing.

1. By presetting the prset [Zone Switch] key.
 2. Select the [Zone] submenu by accessing the radio menu
-

Note:

- ◇ For detail operation and steps, please refer to 'Zone/Channel' on page 37.
-

Monitor

In standby mode or before pressing the [PTT] key to transmit, press and hold the preset [Monitor] key to monitor channel activity, or receive weak signals, or confirm whether the current channel is free.

Permanent monitoring

In standby mode, press the preset [Permanent Monitor] key to continuously monitor the current channel activity.

Repeater / Talk Around

When the targeted repeater fails to work, or the radio exceeds the coverage of the repeater but within the call range of other radio users, press the preset [Repeater / Talk Around] key or set sub-menu "Timeslot / Repeater" thru Parameter in Menu to talk around actively and press [PTT] key to continue the communication. This is the so-called Talk Around.

Note:

- ◇ This function is supported in digital mode only;
 - ◇ For detailed operation and steps, please refer to "Timeslot / repeater" on page 42.
-

Emergency Alarm

The emergency alarm function is mainly used in an emergency situation. In any mode, press the preset [Emergency Alarm] key to initiate an Emergency Call.


- ◎ There are 3 Emergency Alarm modes supported:

- Emergency Alarm
- Emergency Alarm & Call
- Emergency Alarm & Voice

An alarm is a type of non-voice signaling that can trigger a prompt to another radio. This function refers to the alarm behavior of the radio after it is activated.

⊙ The alarm has the following types:

- Disable - The radio can't send the alarm signal.
- Standard - The radio can send the alarm signal with voice & visual prompts.
- Mute - The radio sends alarm signaling without audio or visual prompts, and will not alert to any received audio.
- Mute with voice - The radio sends alarm signaling without audio or visual prompts, but can send signal to the eligible channels.

 **Note:** This feature is available in digital mode only but not supported by HAM radio networks..

Scan On/Off

When "PTT" is displayed at the lower left of the current Band A or B, turn on / off scan by the following three ways.

1. Turn on / off scan by programming [Scan On / Off] key.
2. Select the [Scan] item by accessing the menu to turn on/off it.

Roaming On / Off

If necessary, turn on / off roaming by the following two ways.

1. Turn on / off roaming by preset [Roaming on / off] key.
2. Select the [Scan]ubmenu by accessing the radio menu to

enable / disable roaming Select the submenu [Scan] item by accessing the radio menu to enable / disable roaming.

Note:

◇ Make sure the 'Scan List' is pre-selected before turning on 'Scan' or 'Roaming' feature , otherwise, none of the scan types will be enabled.

◇ The radio will work in Band A as default when 'Roaming' is enabled.

◇ When 'Roaming' is enabled, the radio will start to scan all repeater channels in the 'scan list' (TX/RX with inter-frequency), and the non-repeater channels in the 'scan list' (RX/TX with same frequency) will not be scanned. If there is no repeater channel in the scan list, the radio will exit the roaming after scanning the current 'scan list';











◇ When 'Scan' is enabled, the radio will open all the receivable channels in the 'scan list'.


◇ For detailed setting and operation of the 'Scan', please refer to page 33.

Main menu contains item index

Set various functions and parameters by accessing the main menu and submenu of the radio. The menu function options supported by this radio are shown in the table below.

The user-defined and preset [PF] keys are function shortcut keys, for specific functions, please pre-program those by using our CPS or consult the system administrator or local dealer.






No.	Icon	Main Menu Item	Available setting items
1		Contacts	Contact List, New contact, Manual Dial, Contacts on ham contacts list, contacts on ham contacts list
2		Message	Create Msg, Comm Msg, Inbox, Outbox, Draft box.
3		Call log	Dialed Numbs, Received Calls, Missed Calls.
4		Scan	Scan (On/Off), Scan List, Scan Mode, Roam Scan
5		Zone&Channel	Zone List, Modify Name
6		Local Set	Language, Keypad lock, Back Light, Display Mode, VOX, Channel Sw, Factory Reset, A/B Repeater, SFR
7		Parameters	TOT, Power, Repeat, Sleep Mode, SQ Level, Bandwidth, BCLO, Signaling, Enc Level, Roger tone
8		Tone Set	Profiles, Key Tone, Power Tone, Msg Tone, P Call Tone, G Call Tone, Alert Tone, Power On Tone.
9		Appendix	GPS(Optional), FM Radio, Time, DTMF (Optional), Speaker / Earpiece (Optional)
10		Record	Record Set, Record List, Clear Record, Space Info.
11		Device Info	Radio ID, RX Group List, CH contact, Version, Talker Alice

No.	Icon	Main Menu Item	Available setting items
12		User_defined Mode	Edit the channel parameters of currently selected Band. Including: Mode selection, frequency, power, etc

Menu accessing and operations

Access the main radio menu and submenu options to set or browse various parameters (like message checking, editing and sending, etc) by means of the following operations and steps. If there are access right limitation set by administrator or dealer, please contact them firstly.

Below icons may appear during menu accessing:

-  /  indicate On / Off selection;
-  /  indicate selected and executed items;
-  indicates to enter the next submenu option;

Processes:

1. In Standby Mode, press the [MENU] key to access the radio menu.
 2. Rotate the [ENC] knob to select the desired "Main Menu" item, and press the [MENU] key to enter.
 3. Rotate the [ENC] knob to select the desired "Level 2 Menu" item, then press the [MENU] key to enter.
- If necessary, rotate the [ENC] knob to select the desired item and press the [MENU] key to enter.

OR

Rotate the [ENC] knob to select and set the current parameter value and press the [MENU] key to confirm and return to the previous level.

OR

Press the [MENU] key to select "On or Off".

4. Press the [BACK] key to return to the previous level.

5. If needed, continue to browse other menus by repeat steps 2 ~ 4 or return to the "Main Menu" interface for other operation.

 **Note:**

◇ No matter the "PTT" is displayed at Band A or B, the selecting and set for some menu parameters (public functions) work for both bands.

◇ For details please refer to "Main Functions Description" on page 16.

PTT Call

To ensure an optimal transmission, hold the radio in a vertical position at one to two inches (2.5 to 5.0 centimeters) away from the mouth.

High / low power

when 'PTT' characters shows on the lower left of the A or B

Band need to set Screen You can changing radio out put wattage lever by following ways

1. Press the preset [High / Low Power] key to switch between high and low power. The 'HI/LO' indicator at the bottom of the screen of the current Band will change according to the set power level.

2. Access 'Power' through the menu to set the output power level of the radio. After setting, the 'HI/LO' indicator at the bottom of the screen of the current Band will change according to the set power level.

 **Note:**

◇ High power gets further communicate distance.

◇ Low power gets closer communication distance.

◇ Please refer to the operation of menu "Power" on page 41.







Select the transmitting band

In standby mode, Press the A/B exchanging Key for desired transmission, and the current transmitting band will have red "PTT" character displaying at the bottom left of the display screen.

Receive and Answer to a radio call

Private calls, Group calls, and All calls can be made to the preset contacts on the current digital channel (All call rights needs to be allowed by the dealer), and the methods for initiating and receiving all types of calls are the same. Each digital channel can be preset by the dealer with a "transmission

contact" for Private call, group call or call contact.

Call type	Operation method	
	Making call	Receiving call
Private call	In standby mode, press [PTT] key to initiate the call. When a call is initiated, the screen displays:  ;	When a private call received, the screen displays:  ;
Group call	When initiated a group call, the screen displays:  ;	When a group call received, the screen displays:  ;
All call	When Initiated an all call, the screen displays:  ;	When an all call received, the screen displays:  ;

Notes:

◇ If the "Tx Begin Tone" and "TX End Tone" for private and group calls are activated, when press [PTT] key to make a call, a short prompt tone will be heard indicating that the call is in progress. You can speak clearly into the MIC. And when release the [PTT] key, a short beep sound will be heard indicating that it is ready for receiving.

◇ If "Rx Begin Tone" and "Rx End Tone" for private and group calls are activated, when the other part press the [PTT] key to transmit, you will hear a short prompt tone indicating that the current channel is in receiving. And when the transmitter releases the [PTT] key, you will hear a short beep, indicating that the channel is idle and waiting for your answer.

◇ Please refer to the operation and steps of "Tone Set" on page 42.

Initiate a call



If necessary, a call can be initiated by any of the following ways.

1. Rotate the channel knob to select any preset channel, and then press the [PTT] key to call.
2. Access the "Contact" list through the menu, or press the pre-set "Contact" key to access the list. Select the desired contact by Rotate the [ENC] knob, and then press the [PTT] key to make the call.
3. Access "Contacts" through the menu to select "Manual Dial" to input the user ID with the numeric keypad to the popping up dialog box on the screen. It is used for private calls only.

Note:

- ◇ Encryption must be enabled on the current channel of your radio before sending encrypted transmission. Only when the target radio has the same key value and key ID with your radio, can the transmitted voice be decrypted.
- ◇ Please refer to the operation of "Encryption" on page 44.
- ◇ Please refer to the initiating call steps of "Contact" on page 26.

Initiate and receive calls in analog mode

When on the currently preset analog channel, press and hold the [PTT] key to initiate a call to all users, the TFT display screen shows  . When receive a call indicated by other users on the current analog channel or monitor is activated, the TFT display screen shows  .

**Note:**

- ◇ If the transmitter or receiver is with "CTCSS / DCS" code, the other party radio can decode the audio successfully with same "CTCSS / DCS" code only.
- ◇ Please refer to details of "Signaling" on page 43.

Advanced functions for DMR



Use the dedicated CPS software to enable/disable and preset DMR advanced functions (application) on / off and parameters set.

Remote monitor

Pre-set to prohibit the radio from being remotely monitored by others; or allow other users to remote monitor and set time for continuing to keep the MIC and transmitter on (Time range is from 10s ~ 120s).

Remote Kill

Pre-set to prohibit the radio from receiving "Remote Kill" command sent by other users; or allow the other users to receive and process the "Remote Kill" command to disable the radio. This function can be used to disable the radio when it is stolen or lost.

Radio Revive

Pre-set to restrict the radio from receiving "Radio Revive"

command sent by other users; or allow the radio to receive and process the "Radio Revive" command to activate it remotely. This function can be used to enable the radio when it is lost and found.

Radio Detection

Pre-set to prohibit or allow the radio from being remotely detected whether the radio is in communication range or active state without any prompt.

Call Alert

Pre-set to prohibit or allow the radio from receiving alert tone to ask for calling back when you are free.

GPS (optional)

Turn on/off GPS and position report feature to report the position information to the preset designated channel at the preset intervals.

Record

Pre-set to prohibit or allow the recording for any of receive, transmit, receive + transmit voice.

DTMF

Pre-set to prohibit sending DTMF tones; or allow to send a DTMF prompt tone when press the [PTT] key to transmit. It can remind the receiver that there is a call need to listen in time.

Encryption

Preset to encrypt the voice transmission of the digital channels. But the encryption is a software-based scrambling solution for preventing eavesdropping. The receiver radio must have same encryption method, level, alias and value as the transmitter radio to decrypt the encrypted voices from each other.

Notes:

- ◇ DMR Advanced functions (application) apply to digital mode only.
- ◇ For DMR advanced functions (application), please refer to "Menu" operation on page 25.
- ◇ Transmission of remote monitor, Remote kill, Radio Revive, Radio Detection, Call Alert, etc. Please refer to "Application" operation of the "Contacts" on page 26.

Menu function operation

The various functions, applications and parameter configuration of the radio can be check and set by menus, if they are allowed by the dealer or system administrator.

Contacts

The contacts provide the "address book" for the radio. Each entry corresponds to an alias or ID used to initiate a call, as well as operations and applications for DMR advanced functions (Application).

Contact list

Processes:

1. Press the preset [Contact] key to access the menu.

OR

1. Access the menu and rotate the [ENC] knob to select **Contacts**, and press [Select] key to enter.
2. Rotate the [ENC] knob to select the **Contact list**, press [Select] key to enter and select the desired contact.

○ Press [PTT] key to initiate a call;

○ Press [Select] key to make following options:

Group Call ID:

SendMsg → press [Select] key → Edit SMS → press [OK] key to choose operation of **SendMsg** (Send Message),

InsertComMsg (Insert Common Message), **Save, Exit Editor** rotate the [ENC] knob → press [Select] key to confirm → return back to the previous level;

Private Call ID:

① **Application(Advanced)** → press [Select] key → choose operation of **Radio Detection, Call Alert, Remote Mon (Monitor), Radio Kill, Radio Revive** rotate the [ENC] knob → press [Select] key to send → "success" or "Fail" character pops up on the screen → Return to the previous level;

② **Edit (contact)** → Press [Select] key to choose operation of **Number, Name and Save** rotate the [ENC] knob → press [Select] key to input number and name or Save → press [OK] key to confirm the operation → return to previous level;

③ **Delete** → press [Select] key → "Are you sure?" pops up on the screen → press [OK] key to confirm deletion, or press [Back] key to cancel deletion → return back to previous level;

④ **SendMsg** → press [Select] key to Edit SMS → press [OK] key to choose operation of **SendMsg** (Send Message), **InsertComMsg** (Insert Common Message), **Save, Exit Editor** rotate the [ENC] knob → press [Select] key to confirm the operation → return to the previous level.

New Contact

Processes:

1. Press the preset [Contact] key to access the contact.

OR

1. Access the menu and rotate the [ENC] knob to select **Contacts**, and press [Select] key to enter.

2. Rotate the [ENC] knob to choose the **New Contact**, press [Select] key to enter.

3. Rotate the [ENC] knob to choose the desired option.

① **Number** → press [Select] key → edit interface → input the numbers with the numeric keyboard → press [OK] key to confirm return back to the previous level;

② **Name** → press [Select] key → edit interface → input the numbers with the numeric keyboard → press [OK] key to confirm → return back to the previous level;

③ **Save** → press [Select] key to confirm → Return back to the previous level

Manual Dial

Processes:

1. Press the preset [Contact] key to access the contact.

OR

1. Access the menu and rotate the [ENC] knob to select **Contacts**, and press [Select] key to enter.

2. Rotate the [ENC] knob to select the **Manual Dial**, press [Select] key to enter the interface for inputting the ID.

3. Input the ID with numeric keyboard.

○ Press [PTT] key to initiate a call;

○ Press [OK] key to make following options:

① **Application** → press [Select] key to choose operation of

Radio Detection, Call Alert, Remote Mon(Monitor), Radio Kill, Radio Revive rotate the [ENC] knob → press [Select] key to confirm the operation → "success" or "fail" character pops up on the screen Return to the previous level;

② **SendMsg** → press [Select] key to Edit SMS → press [Ok] key to choose operation of **SendMsg** (Send Message), **InsertComMsg** (Insert Common Message), **Save, Exit Editor** rotate the [ENC] knob → press [Select] key to confirm the operation → return to the previous level.

Ham Contacts

Processes:

1. Access the menu and rotate the [ENC] knob to select **Contacts**, and press [Select] key to enter.

2. Rotate the [ENC] knob to select the **Ham Private Contacts**, press [Select] key to enter the **Ham Private Call Contacts List**. Up to 200,000 private contacts can be added.

3. Choose the desired private contact rotate the [ENC] knob, then the selected contact ID number will display at the top left of the screen and the serial No of the contact displays at the upper right.

OR

◇ Long press and hold the [MENU] key for 3 seconds, a dialogue window pops up on the interface.

◇ Input the first few digits of the private contact ID to search with the numeric keypad, after that press the [MENU] key to confirm, and then the screen jumps to the search results. rotate the [ENC] knob to choose the desired ID.

4. Press the [PTT] key to initiate a private call;

OR

◇ Press the [MENU] key → rotate the [ENC] knob to make

the following options:

- ① **Application** → press [Select] key to choose operation of **Radio Detection, Call Alert, Remote Mon(Monitor), Radio Kill, Radio Revive** rotate the [ENC] knob → press [Select] key to confirm the operation → "success" or "fail" character pops up on the screen → Return to the previous level;
- ② **SendMsg** → press [Select] key to Edit SMS → press [Ok] key to choose operation of **SendMsg** (Send Message), **InsertComMsg** (Insert Common Message), Save, Exit Editor rotate the [ENC] knob → press [Select] key to confirm the operation → return to the previous level.
- ③ **Details** → press [Select] key → the display shows ID, nick name, name, city, province, country etc information → press [Select] key to confirm → Return to the previous level.

 **Notes:**

- ◇ "128Bytes" mode must be selected firstly before writing Ham Private Contacts list, so that details like name, city, province, country, etc information can be checked. But this mode requires a long writing time. Make sure the radio keeps normal power supply during the writing process.
 - ◇ If "16Bytes" mode is selected before writing More Private Contacts list, only contact ID and Nick name can be checked. This mode has a shorter writing time which takes about 10 minutes. Make sure the radio keeps normal power supply during the writing process.
-

Ham Group Contacts

Processes:

1. Access the menu and rotate the [ENC] knob to select **Contacts**, and press [Select] key to enter.

2. Rotate the [ENC] knob to select the **Ham Group Contacts**, press [Select] key to enter the Ham Group Call Contacts List. Up to 20,000 group contacts can be added.

3. Choose the desired group contact rotate the [ENC] knob, then the selected contact ID number will display at the top left of the screen and the serial No of the contact displays at the upper right.

OR

- ◇ Long press and hold the [MENU] key for 3 seconds, a dialogue window pops up on the interface.

- ◇ Input the first few digits of the group contact ID to search with the numeric keypad, after that press the [MENU] key to confirm, and then the screen jumps to the search results, rotate the [ENC] knob to choose the desired ID.

4. Press the [PTT] key to initiate a group call;

5. Press [Back] key to return to the previous level.

Ham RX Group List

If allowed in software, Ham RX Group List can be set On or Off in menu to allow/disable the radio to receive any group call from the receiving group call list when it has same working channel/frequency.

Processes:

1. Access the menu and rotate the [ENC] knob to select **Contacts**, and press [Select] key to enter.
2. Rotate the [ENC] knob to select the Ham RX Group List, press [Select] key to enter the Ham RX Group Call Contacts List. Up to 20,000 group contacts can be added.
3. rotate the [ENC] knob to Ham RX Group List ON/OFF selection.
4. Press [MENU] key to turn it On or OFF.
5. Press [Back] key to return to the previous level.

Message

The radio can receive and send text messages from / to the other radios. The below ways can be used to send messages.

CreateMsg

Processes:

1. Press the preset [Message] key to access the menu.

OR

1. Access the menu and rotate the [ENC] knob to select **Message**, and press [Select] key to enter.

2. Rotate the [ENC] knob to **CreateMsg** and press [Select] key to enter message editing interface.

3. After editing, press [OK] key to make following options:

① **SearchLinkman** → press [Select] key to enter and choose the contact rotate the [ENC] knob → press the [PTT] key to initiate a call or press [Select] key to send the message → the message sending status pops up on the screen;

② **WriteNumber** → input the contact number with the numeric keyboard → press the [OK] key to send the message → the message sending status pops up on the screen;

③ **InsertComMsg** (Insert Common Message) → press [Select] key to choose the desired message rotate the [ENC] knob → press [Select] key → edit or press [OK] key to choose contact to send.

④ **Save** → press [Select] key to save the message → return to the previous level;

⑤ **ExitEditor** → press [Select] key to return to the previous level;

CommonMsg

Processes:

1. Press the preset [Message] key to access the menu.

OR

1. Access the menu and rotate the [ENC] knob to select **Message**, and press [Select] key to enter.

2. Rotate the [ENC] knob to select **CommMsg** and press [Select] to enter the common message list or "Empty" Do you want Add?" character pops up on the screen.

① In common message list → rotate the [ENC] knob to select the desired message → press [OK] key to make following options:

◇ **Display** → Press [Select] key to display the full message → Press [Back] key to return to the previous level;

◇ **AddCommMsg** → press [Select] key → input the message with the numeric keyboard → press [OK] key → Save or ExitEditor press [Select] key → return to the previous level;

◇ **Edit** → press [Select] key → edit the message with the numeric keyboard → press [Ok] key → Save or ExitEditor → press [Select] key to save the message or exit the edition → return to the previous level;

◇ **Delete** → press [Select] key → "Are you sure?" pops up on the screen → press [OK] key to confirm deletion or press [Back] key to cancel deletion → return back to previous level;

◇ **Send** → Press [Select] key → edit SMS and press [Select] key to search a contact or write a receiver ID → press [OK] key to send a message → return to the previous level

② **Add message** → press [Select] key to add new common message / press [Back] key to cancel → press [Ok] key → Save or ExitEditor → press [select] key to save the message or exit the edition → return to the previous level.

Inbox

Processes:

1. Access the menu and rotate the [ENC] knob to select Message, and press [Select] key to enter.

2. Rotate the [ENC] knob to Inbox, and press [Select] key to make the following options:

① **Inbox List** → press [Select] key to enter and choose the received message rotate the [ENC] knob → press [Select] key to display full message → press [Select] key to perform the following options and processes:

◇ **Reply** → press [Select] key → edit SMS → press [OK] key to choose operation of **SendMsg, InsertComMsg, ExitEditor** rotate the [ENC] knob → press [Select] key to confirm the operation;

◇ **Forward** → Press [Select] key → search or Write the contacts by Search or WriteNumber → Press [Select] key to choose contact rotate the [ENC] knob or input ID number → Press [OK] key to send SMS;

◇ **Edit** → press [Select] key to write the message → press [OK] key to choose operations of **SearchLinkman, WriteNumber, InsertComMsg, Save or ExitEditor** rotate the [ENC] knob → press [Select] key to send message or save or exit edition and return to the previous level;

◇ **Delete** → "Are you sure?" pops up on the screen → press [OK] key to confirm deletion or press [Back] key to cancel deletion → return back to previous level;

② **Delete All** → "Are you sure?" pops up on the screen → press [OK] key to confirm deletion or press [Back] key to cancel deletion → return back to previous level;

Outbox Processes:

1. Access the menu and rotate the [ENC] knob to select **Message**, and press [Select] key to enter.

2. Rotate the [ENC] knob to **Outbox**, and press [Select] key to make the following options:

① **Outbox List** → press [Select] key to enter and choose the message rotate the [ENC] knob → press [Select] key to display full message → press [OK] key to perform the following options and processes:

◇ **Search** → press [Select] key to search the contact → press the [PTT] key to initiate a call or press [Select] key to send the message → the message sending status pops up on the screen;

◇ **WriteNumber** → Press [Select] key to input the contact ID → Press [OK] key to send the message → the message sending status pops up on the screen;

◇ **InsertComMsg (Insert Common Message)** → press [Select] key to choose the desired message rotate the [ENC] knob → press [Select] key → edit or press [OK] key to choose the contact to send.

◇ **Save** → press [Select] key to save the message → return to the previous level;

◇ **Delete** → "Are you sure?" pops up on the screen → press [OK] key to confirm deletion or press [Back] key to cancel deletion → return back to previous level;

◇ **Exit Editor** → press [Select] key to return to the previous level;

② **Delete All** → "Are you sure?" pops up on the screen →

press [OK] key to confirm deletion or press [Back] key to cancel deletion → return back to previous level;

Draftbox

1. Access the menu and rotate the [ENC] knob to select

Message, and press [Select] key to enter.

2. Rotate the [ENC] knob to **Draftbox**, and press [Select] key to make the following options:

① **Draft List** → press [Select] key to enter and choose the message rotate the [ENC] knob → press [Select] key to display full message → press [OK] key to perform the following options and processes:

◇ **Search** → press [Select] key to search the contact → press the [PTT] key to initiate a call or press [Select] key to send the message → the message sending status pops up on the screen;

◇ **WriteNumber** → Press [Select] key to input the contact ID → Press [OK] key to send the message → the message sending status pops up on the screen;

◇ **InsertComMsg** (Insert Common Message) → press [Select] key to choose the desired message → press [Select] key → edit or press [OK] key to choose the contact to send.

◇ **Save** → press [Select] key to save the message → return to the previous level;

◇ **Delete** → "Are you sure?" pops up on the screen → press [OK] key to confirm deletion or press [Back] key to cancel

deletion → return back to previous level;

◇ **ExitEditor** → press [Select] key to return to the previous level;

② **Delete All** → "Are you sure?" pops up on the screen → press [OK] key to confirm deletion or press [Back] key to cancel deletion → return back to previous level;

Notes:

◇ If Common Message list is empty, you should pre-program the common messages by CPS software or enter into "CommMsg " menu to add messages firstly;

◇ Hold and long press the [#] key for 3 seconds to change the Input modes in writing and editing messages and other processes. The input modes are AB / uppercase, ab / lowercase, 12 / digits, and PY / Chinese.

◇ In the process of searching contacts or inputting ID numbers to send SMS, when press the [PTT] key, the radio initiates a call.

Call Log

Information for recent dialed calls, received calls and missed calls can be checked by users thru Call Log menu. Call logs help to manage the recent call activities.

Dialed Numbers

Processes:

1. Access the menu and rotate the [ENC] knob to select **CallLog**,

and press [Select] key to enter.

2. Rotate the [ENC] knob to **DailedNumbs**, and press [Select] key to make the following options:

①. **DialedNumbs List** → press [Select] key to enter and choose the number rotate the [ENC] knob → press [Select] key to make the following options and processes:

◇ **View** → Press [Select] key to check the dialed number → Press [Back] key to return to the previous level;

◇ **TimeOfCall** → press [Select] key to display the call time and duration information → press [back] key to return to previous level;

◇ **SendMsg** → Press [Select] key to edit the message → Press [OK] key to choose operation of **SendMsg**,

InsertComMsg, ExitEditer rotate the [ENC] knob → Press [Select] key to confirm the operation → Return to the previous level;

◇ **Delete** → "Are you sure?" characters pops up on the screen → press [OK] key to confirm deletion or press [Back] key to cancel deletion → return back to previous level;

②. **Delete All** → "Are you sure?" characters pops up on the screen → press [OK] key to confirm deletion or press [Back] key to cancel deletion → return back to previous level;

Received Calls

Processes:

1. Access the menu and rotate the [ENC] knob to select **CallLog**, and press [Select] key to enter.

2. Rotate the [ENC] knob to **ReceiveCalls**, and press [Select]

key to make the following options:

①. **ReceiveCalls List** → press [Select] key to enter and choose the number rotate the [ENC] knob → press [Select] key to make the following options and processes:

◇ **View** → Press [Select] key to check the received call number → Press [Back] key to return to the previous level;

◇ **TimeOfCall** → press [Select] key to display the call time and duration information → press [back] key to return to previous level;

◇ **SendMsg** → Press [Select] key to edit the message → Press [OK] key to choose operation of **SendMsg**, **InsertComMsg, ExitEditer** rotate the [ENC] knob → Press [Select] key to confirm the operation → Return to the previous level;

◇ **Delete** → "Are you sure?" characters pops up on the screen → press [OK] key to confirm deletion or press [Back] key to cancel deletion → return back to previous level;

②. **Delete All** → "Are you sure?" characters pops up on the screen → press [OK] key to confirm deletion or press [Back] key to cancel deletion → return back to previous level;

Missed Calls

Processes:

1. Access the menu and rotate the [ENC] knob to select **CallLog**, and press [Select] key to enter.

2. Rotate the [ENC] knob to **MissedCalls**, and press [Select] key to make the following options:

①. **MiissedCalls List** → press [Select] key to enter and choose

the number rotate the [ENC] knob → press [Select] key to make the following options and processes:

- ◇ **View** → Press [Select] key to check the missed call number → Press [Back] key to return to the previous level;
- ◇ **TimeOfCall** → press [Select] key to display the call time and duration information → press [back] key to return to previous level;
- ◇ **SendMsg** → Press [Select] key to edit the message → Press [OK] key to choose operation of **SendMsg**, **InsertComMsg**, **ExitEditor** rotate the [ENC] knob → Press [Select] key to confirm the operation → Return to the previous level;
- ◇ **Delete** → "Are you sure?" characters pops up on the screen → press [OK] key to confirm deletion or press [Back] key to cancel deletion → return back to previous level;
- ②. **Delete All** → "Are you sure?" characters pops up on the screen →press [OK] key to confirm deletion or press [Back] key to cancel deletion →return back to previous level;

Scan

Scan, Scan list, Scan Mode and Roaming of the radio can be enabled or disabled by following ways.

Scan (On/Off)

Processes:

- 1.Press the preset [Scan On/Off] key to turn on/off the scan
- 2.Hold and long rotate the [ENC] knob to turn on scan, and press any key to turn if off.

OR

1. Access the menu and rotate the [ENC] knob to select Scan, and press [Select] key to enter.
2. Rotate the [ENC] knob to Scan and press [Select] key to enter.
 - ①. **Select List** →press [Select] key to enter and choose the list rotate the [ENC] knob →press [Select] key to confirm the selection and return to the previous level.
 - ②. **Scan On/Off** →press [Select] key to turn it on or off.
 - ③. **RoamScan On/Off** →press [Select] key to turn it on or off.

Scan List

Processes:

1. Access the menu and rotate the [ENC] knob to select **Scan** and press [Select] key to enter.
2. Rotate the [ENC] knob to **Scan list** and press [Select] key to enter.
3. Rotate the [ENC] knob to the desired scan list and press [Select] key to enter the list.
4. Choose the channel rotate the [ENC] knob to make following options:
 - ①. **Set Prior** →press [Select] key to set the channel to be priority → "Prior is set" pops up on the screen →Return to the channel list, where the current channel displays "P" letter;
 - ◇ **Cancel Prior** →press [Select] key to cancel the priority channel →"Cancelled" pops up on the screen →Return to the channel list, where the "P" letter disappears on current channel;
 - ◇ **Channel Del** →press [Select] key to delete the channel from the scan list →Return to the channel list;

②. **Channel Add** → press [Select] key to make below options:
Zone list → press [Select] key to choose the Zone rotate the [ENC] knob → press [Select] key to choose the desired channel rotate the [ENC] knob → press [Select] key to add the selected channel and return to the scan list.

Scan Mode

Processes:

1. Press the preset [Scan Mode] key to choose the scan mode.

OR

1. Access the menu and rotate the [ENC] knob to select **Scan** and press [Select] key to enter.

2. Rotate the [ENC] knob to **Scan Mode** and press [Select] key to enter.

①. **Carrier** → when the radio receives an air carrier signal in scanning, it will stay at the current channel for a short time until the carrier signal disappears and continue to scanning.

②. **Time** → when the radio receives an air carrier signal in scanning, it will stay at the current channel for a preset short period (time range is 5S-20S) and continue to scanning once the preset period is up.

③. **Search** → when the radio receives an air carrier signal in scanning, it will stay at the current channel and exit the scanning. Unless you restart it.

Notes:

- ◇ Before any scan mode is selected, please make sure the "Scan List" preset in advance, otherwise the scan feature is unable to activate.
 - ◇ When the scan is ON, the radio will start to scan all the receivable channels in the list.
-

Roaming

Roaming and Roam Mode can be enabled or disabled by following two ways:

Processes:

1. Press the preset [Roaming On/Off] key to turn on/off the roaming.

OR

1. Access the menu and rotate the [ENC] knob to select **Scan**, and press [Select] key to enter.

2. Rotate the [ENC] knob to **Scan** and press [Select] key to enter.

①. **Select List** → press [Select] key → rotate the [ENC] knob to choose the list → press [Select] key to confirm the selection and return to the previous level.

②. **Scan On/Off** → press [Select] key to turn it on or off.

③. **RoamScan On/Off** → press [Select] key to turn it on or off.

Roam Setting

Processes:

1. Access the menu and rotate the [ENC] knob to select Scan and press [Select] key to enter.

2. Rotate the [ENC] knob to **RoamSetting** and press [Select] key to make following options:

①. **Roam Mode** → press [Select] key to choose the modes of **Auto, Manual and RSSI** rotate the [ENC] knob → press [Select] key to confirm the selection and return to the previous level.

Annexed table 1: Roam Mode description

Roaming Mode	Description
Auto	Once searching an available repeater from the scan list, the radio will lock to the current available repeater and pause auto roaming. Then, it will connect with the available repeater according to the preset Connect Check Timer. If the connection fails after the preset Connect Time is used up, it will restart the strong signal Auto roaming search.
Manual	Users can manually roam to the next available repeater. Once it is on, all repeater channels in the scan list will be waken up to search the nearest available repeaters until finds an available one. Every time the nearest available repeater is found, a Connect Re-check Timer (Repeater Check Timer) will be enabled. Users can also lock the repeater by short pressing the [OK/Select] key. The next available repeater is not necessarily the one with the largest RSSI value in the channels of the scan list.

Roaming Mode	Description
RSSI (Strong Signal Roaming)	Once a repeater in the channels of the scan list with RSSI more than preset RSSI threshold value is searched by RSSI mode, the radio will lock to the current channel and pause the strong signal auto roaming. Then it will connect with the current repeater according to the preset Connect Check Timer. If the connection fails after the preset Connect Time is used up, it will restart the strong signal Auto roaming search.

②. **RSSI Set** → press [Select] key to display the current RSSI threshold value → Rotate the [ENC] knob to adjust the desired value → press [OK] key to confirm the modification → "Set Ok!" pops up on the screen and return to the previous level.

Annexed table 2: RSSI threshold value set

Range (Unit: dBm)	
Maximum	-90dBm
Minimum	-125dBm
Increment	-1dBm

 **Notes:**

◇ The received signal strength (RSSI threshold value) is settable. If the RSSI mode is enabled and the searched repeater RSSI value is more than the preset threshold, the repeater's

transmitting signal coverage will be automatically recognized as good, and then the radio will suspend RSSI roaming.

◇ The stopped repeater is not necessarily the one with the largest RSSI value in the channels of the scan list.

③. **Connect Check Timer** → press [Select] key to display the current time value(second) → Rotate the [ENC] knob to adjust the desired connect check time → press [OK] key to confirm the modification → "Set Ok!" pops up on the screen and return to the previous level.

Annexed table 3: Connect Check Time set

Range (Unit: second)	
Maximum	255
Minimum	0
Increment	1

 **Notes:**

◇ When the nearest available repeater is searched by Manual Roaming, the radio will immediately start timing according to the preset dwell time value. If the available repeater is not confirmed by pressing the [OK] key within the preset time, once the timer reaches the preset time, the radio will stop roaming; or restart roaming to find the next available repeater.

④. **Connect ReCheck Timer** → press [Select] key to display the current time value(second) → Rotate the [ENC] knob to adjust the desired recheck time → press [OK] key to confirm the modification → "Set Ok!" pops up on the screen and return to the previous level.

Annexed table 4: Connect ReCheck Timer set

Range (Unit: second)	
Maximum	255
Minimum	0
Increment	1

 **Notes:**

◇ When the available repeaters are searched by Auto roaming or RSSI roaming, the radio is confirmed to lock at the currently available repeater and the roaming is paused. Then, the radio will transmit signals at regular intervals based on the preset Connect ReCheck Timer to connect with the current repeater. If fails to connect with the currently available repeater in preset Connect Timer of transmission (set on the Connect Timer table), the radio will restart Auto Roaming or RSSI Roaming to search any nearest available repeater.

⑤. **Connect Times** → press [Select] key to display the current connect time → Rotate the [ENC] knob to adjust the desired connect times → press [OK] key to confirm the modification → "Set Ok!" pops up on the screen and return to the previous level.

Annexed table 5: Connect Times Set

Range (Unit: time)	
Maximum	10
Minimum	1
Increment	1

Notes:

◇ No matter which roaming mode is selected, in searching, each repeater channel in the scan list will try to connect with nearby available repeaters based on the preset Connect Times. If the pause channel fails to find the available repeaters within the preset Connect Times, it will continue to scan the next repeater channel from the list till find an available one.

Precautions for roaming

1. Before any scan mode is selected, please make sure the "Scan List" preset in advance, otherwise the scan feature is unable to activate.
2. When the roaming is activated, the radio will scan all repeater channels (TX/RX inter-frequency) only; will not scan channels with same TX/RX frequency.
3. When the roaming is activated, if there is no TX/RX inter-frequency channel (repeater channels) in the scan list, after scanning the current selected scan list, it will exit the roaming function.
4. In roaming searching, if PTT button is pressed, the radio

will stop roaming and return back to preset Scan reply/transmit Mode to initiate a call. It will continue to roam after PTT is released.

5. When roaming is on, the radio is default to scan in the main band (Band A). When the main band (Band A) is in roaming, channel selection is prohibited. However, menu accessing and setting of main band (Band A) still can be made by selecting the "CTRL" icon, or initiate a call by selecting the "PTT" icon display.

6. When the main band (Band A) is in roaming, channel and VFO operation and menu accessing & setting of Band B still can be made by selecting the "CTRL" icon display. And band B can remain in standby or normal receiving mode, and can initiate a call by selecting the "PTT" icon display.

Zones & Channel

The following two ways can be used to select and switch in Zones and channels.

Processes:

1. Press the preset [Zone & Channel] key to switch in zones and channels.

OR

1. Access the menu and rotate the [ENC] knob to select **Zone & Channel** and then press [Select] key to enter.

2. Rotate the [ENC] knob to desired zone and press [Select] key to enter.

3. Rotate the [ENC] knob to desired channel and press [Select]

key to make following options:

- ①. **Select** → press [Select] key → change the zone and channel → return to the standby interface;
- ②. **Modify Name** → press [Select] key → modify the channel name → press the [OK] key to confirm and return to the previous level.

Local Set

If the basic operation and functions of the menu are allowed by software to set and check, below functions are operational thru accessing **Local Set** menu.

Language

Processes:

1. Access the menu and rotate the [ENC] knob to choose **Local Set**, and then press [Select] key to enter.
2. Rotate the [ENC] knob to choose the **Language** and press [Select] key to enter.
3. Rotate the [ENC] knob to choose the desired Language and press [Select] key to change.
4. "Lang is set" pops up on the screen and return back to the previous level.

KeypadLock

Processes:

1. Access the menu and rotate the [ENC] knob to choose Local Set, and then press [Select] key to enter.

2. Rotate the [ENC] knob to choose **KeypadLock** and press [Select] key to enter.
3. Choose operation of **AutoLock SW and ManualLock SW** rotate the [ENC] knob and press [Select] key to switch it on / off.
4. Press [Back] key to return to the previous level.

BackLight

Processes:

1. Press the preset [BackLight on / off] key.

OR

1. Access the menu, rotate the [ENC] knob to choose **Local Set**, and then press [Select] key to enter.
2. Rotate the [ENC] knob to choose **BackLight** and press [Select] key to make the following options and procedures:
 - ①. **BL switch** → press [Select] key → choose operation of **BL on, BL off, Auto** rotate the [ENC] knob → press [Select] key to confirm → return to the previous level.
 - ②. **Brightness** → press [Select] key → Rotate the [ENC] knob to select desired brightness → press [OK] key to confirm → return to the previous level;
 - ③. **DelayTime** → press [Select] key → Rotate the [ENC] knob to select → press [OK] key to confirm → return to the previous level;

Display Mode

Processes:

1. Access the menu, rotate the [ENC] knob to choose **Local Set**, and then press [Select] key to enter.
2. Rotate the [ENC] knob to choose **DisplayMode** and press

[Select] key to enter.

3. Rotate the [ENC] knob to choose operation of **CHN+Name**, **CHN+FREQ**, **CHN**, and press [Select] key to confirm.

4. "DispMode is Set" pops up on the screen and return to the previous level.

VOX

Processes:

1. Press the preset [VOX] key to turn it on / off.

OR

1. Access the menu, rotate the [ENC] knob to choose **Local Set**, and then press [Select] key to enter.

2. Rotate the [ENC] knob to choose **VOX** and press [Select] key to make the following options and processes:

①. **Vox Switch** → press [Select] key to turn it On or Off;

②. **Vox Level** → press [Select] key → rotate the [ENC] knob to choose desired level → press [Select] key to confirm → return to the previous level;

③. **Vox delay** → press [Select] key → choose operation of **OFF**, **Tran_Rx**, **Tran_Tx**, **Tran_RxTx** rotate the [ENC] knob → press [Select] key to confirm → return to the previous level;

Notes:

◇ If VOX is on, when the audio amplitude is detected to reach the preset level, the radio will automatically initiate a call without pressing the [PTT] key

◇ The higher sensitivity level, the smaller audio amplitude is required. The smaller sensitivity level, the greater audio amplitude is required.

Channel Switch (Channel Sw)

Processes:

1. Access the menu, rotate the [ENC] knob to choose **Local Set**, and then press [Select] key to enter.

2. Rotate the [ENC] knob to choose **Channel Sw** and press [Select] key to enter.

3. Press [Select] key to turn it on / off.

4. Press [Back] key to return to the previous level.

Notes:

◇ If the channel switch is OFF, the radio can't rotate the channel selector to choose the frequency or channel.

Factory Reset

Processes:

1. Access the menu, rotate the [ENC] knob to choose **Local Set**, and then press [Select] key to enter.

2. Rotate the [ENC] knob to choose **Factory Reset** and the display shows "Are you sure restore factory settings" by pressing [Select] key.

3. Press [OK] key to confirm factory reset, or press [Back] key to cancel.

Notes:

◇ If confirm to restore the factory set, the radio will be restored to the factory initial state. All data like frequencies, channels and etc set by CPS will be completely cleared and can't be recovered.

AB Repeat

The radio comes with two totally independent Bands. This allows the radio to also operate as a repeater. Crossband-, cross mode- as well as hybrid- and even digital-repeating are all possible. In general, there are two channel definitions required to use the repeating functionality.

1. Press the preset [Relay On /Off]-key to turn the repeater-functionality of the DB40-D On or Off.

or

1. Access the menu, press the [Menu]-key and rotate the [ENC] knob to choose Local Set and then press the [Select]-key to enter.

2. Rotate the [ENC] knob to choose ABRepeat and press the [Select]-key to choose from the following options:

· **A/B RepeatSw** Press the [Select]-key to switch repeater-mode On or Off for the currently selected channel press the [Back]-key to return to the previous level

◇ **A/B ListenSw** Press the [Select]-key to turn monitoring of the currently selected channel On or Off press the [Back]-key to return to the previous level. The parameter is only evaluated by the radio firmware if A/B RepeatSw is turned On.

◇ **A or B Repeat Mode** Press the [Select]-key to choose for VFO-A from

◇ **OFF** The currently selected channel is not in repeater-mode.

◇ **Tran_Rx** The currently selected channel is supposed to be part of a repeater-setup and RX is only enabled if the channel is in repeater-mode.

◇ **Tran_Tx** The currently selected channel is supposed to be part of a repeater-setup and TX is only enabled if the channel is in repeater-mode.

◇ **TranRxTx** The currently selected channel is supposed to be part of a repeater-setup and RX and TX are both enabled if the channel is in repeater-mode.

SemiRepeater Mode

Processes:

1. Access the menu, press the [Menu]-key and rotate the [ENC] knob to choose *Local Set* and then press the [Select]-key to enter.

2. Rotate the [ENC] knob key to select the SemiRepeaterMode, and press [MENU] key to enter.

3. Rotate the [ENC] knob to select the desired item, and press [MENU] key to enter the following options and procedures:

①. **Channel SemiRepeaterMode ON OFF set** → Press (Menu)key, On or off the SemiRepeaterMode .

②. **Voice Sw** → Press (Menu)key, On or off the SemiRepeaterMode Voice monitor.

◇ **On:** When the Voice Monitor switch is on and the intercom transmit function is enabled, the speaker of the Speaker Microphone output the voice of the received signal to be repeated.

◇ **Off:** When the Voice monitor switch is off and the voice of the received signal to be repeated is enabled with the transmit function, the local device only signals the TX taking place, and the Speaker Microphone will not sound the voice of the repeated signal that's been transmitted.

③.**Band Select to select Band A or Band B** → press (Menu) key, rotate (ENC) knob to select, close, Band A, Band B, →

Press (MENU) key to confirm → screen prompt setting complete
→ return to menu.

- ◇ **Close:** Turn off any SemiRepeaterMode transmit functions.
- ◇ **Band A:** The relay function is enabled for the channel in the current Band A.
- ◇ **Band B:** The relay function is enabled for the channel in the current Band B.

④.**Rx RSSI Threshold** → Press (MENU) key → Rotate (ENC) knob to set desired Receiving RSSI threshold:-125dBm,-123dBm,-121dBm,-119dBm.....-90dBm. → Press (Menu) → follows the remind from screen to complete the setting → Back to previous menu.

⑤.**Freq U Transmit Power** → Press (MENU) key → Rotate (ENC) knob to set desired transmit power: 1.0W,2.0W,3.0W,4.0W..... 20.0W → Press (menu) key → screen shows the setting is complete → Return to the previous menu

⑥.**Freq V Transmit Power** → Press (MENU) key → Rotate (ENC) knob to set desired transmit power: 1.0W,2.0W,3.0W,4.0W..... 20.0W → Press (menu) key → screen shows the setting is complete → Return to the previous menu.

Note: The greater the transmit power setting, the longer the transmission distance.

Parameters

If it is allowed by software, set and check TOT, High / Low Power, Time Slot / Repeat setting, Power Saving mode, Encryption Level and etc. can be made thru **Parameters** menu.

TOT

Processes:

1. Access the menu, rotate the [ENC] knob to choose Parameters, and then press [Select] key to enter.
2. Rotate the [ENC] knob to choose TOT and press [Select] key to enter.
3. Rotate the [ENC] knob to choose the Call Time(S) and press the [OK] key to confirm.
- 4."Calltime is set" pops up on the screen and the radio returns to the previous level.



Notes:

- ◇ Range of Call Time: Off, 20S, 30S, 40S, 50S ~ 500S;
- ◇ The Call Time is for limiting the time of each call, which can be used to avoid affecting the normal communication of other users due to the long-term transmission of the radio.

Power

Processes:

1. Press the preset [Power] key to switch the power between high and low.

OR

1. Access the menu, rotate the [ENC] knob to choose **Parameters**, and then press [Select] key to enter.
2. Rotate the [ENC] knob to choose **Power** and press [Select] key to choose High or Low Power and press [Select] to confirm.
3. "Power is set" pops up on the screen and the radio returns to the previous level.

Slot / Repeat Setting

Processes:

1. Access the menu, rotate the [ENC] knob to choose **Parameters**, and then press [Select] key to enter.
2. Rotate the [ENC] knob to choose **Slot/Repeat Setting**, and then press [Select] key make following options and processes:

- ①. **RX DirectSlot** → press [Select] key → choose operation of **OFF, Slot 1, Slot 2** rotate the [ENC] knob → press [Select] key to confirm → "Set OK!" pops up on the screen → return to the previous level;
- ②. **TX DirectSlot** → press [Select] key → choose operation of **OFF, Slot 1, Slot 2** rotate the [ENC] knob → press [Select] key to confirm → "Set OK!" pops up on the screen → return to the previous level;

Notes:

- ◇ Slot / Repeat setting is set according to the channel type that currently accesses the menu (Repeat with different TX/RX frequency or RX/TX with same frequency).

Sleep Mode

Processes:

1. Access the menu, rotate the [ENC] knob to choose **Parameters**, and then press [Select] key to enter.
2. Rotate the [ENC] knob to choose **SleepMode** and press [Select] key to make the following options and procedures:
 - ①. **SlpMode SW** → press [Select] key to turn Sleep mode on/off;

- ②. **Delay Time** → press [Select] key → rotate the [ENC] knob to select the time → press [OK] key to confirm → "Set OK!" pops up on the screen → return to the previous level;
- ③. **Duty cycle** → press [Select] key → choose operation of **1: 1, 1: 2, 1: 4** rotate the [ENC] knob → press [Select] key to confirm → "Set OK!" pops up on the screen → return to the previous level;

Notes:

- ◇ If it is allowed by the CPS software, set a reasonable sleep ratio according to the actual use requirements. The larger ratio, the more power is saved, but it may cause slower access.

Squelch Level (SQ level)

Processes:

1. Access the menu, rotate the [ENC] knob to choose **Parameters**, and then press [Select] key to enter.
2. Rotate the [ENC] knob to choose **SQ Level** and press [Select] key to enter.
3. Rotate the [ENC] knob to select the desired level or normally open(Level 0), and press [Select] key to confirm.
4. "Sq level is set" pops up on the screen and the radio returns to the previous level.

Bandwidth (narrow/wide)

Processes:

1. Access the menu, rotate the [ENC] knob to choose **Parameters Setting**, and then press [Select] key to enter.

2. Rotate the [ENC] knob to choose **Bandwidth** and press [Select] key to enter.
3. Rotate the [ENC] knob to select the desired narrow /wide bandwidth and press [Select] key to confirm.
4. "Set Ok" pops up on the screen and the radio returns to the previous level.

Busy Channel Lockout (BCLO)

Processes:

1. Access the menu, rotate the [ENC] knob to choose **Parameters Setting**, and then press [Select] key to enter.
2. Rotate the [ENC] knob to choose **BCLO** and press [Select] key to turn Busy On or OFF
3. Press [Back] key to return to the previous level.

Signalling

Processes:

1. Access the menu, rotate the [ENC] knob to choose **Parameters**, and then press [Select] key to enter.
2. Rotate the [ENC] knob to choose **Signalling** and press [Select] key to enter.
3. Rotate the [ENC] knob to select the desired item and press [Select] key to make the following options and procedures:
 - ①. **RX Subaudio** → press [Select] key to make the following options and processes:
 - ◇ **Signaling off** → press [Select] key to turn off the CTCSS/DCS code → "Set Ok" pops up on the screen and returns to the previous level;

- ◇ **CTCSS** → press [Select] key → choose the CTCSS code rotate the [ENC] knob → press [Select] key to confirm → "Set Ok" pops up on the screen and returns to the previous level;
 - ◇ **DCS** → press [Select] key → choose the DCS code rotate the [ENC] knob → press [Select] key to confirm → "Set Ok" pops up on the screen and returns to the previous level;
 - ◇ **DCS Reverse** → press [Select] key → choose the DCS Reverse code rotate the [ENC] knob → press [Select] key to confirm → "Set Ok" pops up on the screen and returns to the previous level;
- ②. **TX Subaudio** → Press [Select] key to make the following options and procedures:
 - ◇ **Signaling off** → press [Select] key to turn off the CTCSS/DCS code → "Set is ok" pops up on the screen and returns to the previous level;
 - ◇ **CTCSS** → press [Select] key → choose the CTCSS code rotate the [ENC] knob → press [Select] key to confirm → "Set Ok" pops up on the screen and returns to the previous level;
 - ◇ **DCS** → press [Select] key → choose the DCS code rotate the [ENC] knob → press [Select] key to confirm → "Set Ok" pops up on the screen and returns to the previous level;
 - ◇ **DCS Reverse** → press [Select] key → choose the DCS Reverse code rotate the [ENC] knob → press [Select] key to confirm → "Set Ok" pops up on the screen and returns to the previous level;

ENC Level (Encryption)

Processes:

1. Access the menu, rotate the [ENC] knob to choose **Parameters**, and then press [Select] key to enter.
2. Rotate the [ENC] knob to choose **EncLevel** and press [Select] key to enter.
3. Rotate the [ENC] knob to choose the desired encryption level or turn it off and press [Select] key to confirm.
4. "Set Ok!" pops up on the screen and returns to the previous level;

Notes:

- ◇ If it is allowed by CPS software, enable this function will help to prevent other users from eavesdropping without authorization.
- ◇ Although encryption is not a necessary requirement for receiving and transmitting. But the receiver radio must have same encryption method, level, alias and value as the transmitter radio to decrypt the encrypted voices from each other.

CTCSS Phase Reverse (CtcssTail)

Processes:

1. Access the menu, rotate the [ENC] knob to choose **Parameters**, and then press [Select] key to enter.
2. Rotate the [ENC] knob to choose **CTCSSTail** and press [Select] key to enter.
3. Choose operation of **55HZ, 120, 180, 240** rotate the [ENC] knob and press [Select] key to confirm.
4. "Set Ok" pops up on the screen and returns to the previous level;

Tone Set

If it is allowed by CPS software, set and check the prompt tones by accessing the Tone Set menu.

Profiles

Processes:

1. Access the menu, rotate the [ENC] knob to choose **Tone Set**, and then press [Select] key to enter.
2. Rotate the [ENC] knob to choose **Profiles** and press [Select] key to enter.
3. Rotate the [ENC] knob to choose **General** or **Silent**, and press [Select] key to confirm the selection.
4. "Profile is set" pops up on the screen and returns to the previous level.

Key Tone

Processes:

1. Access the menu, rotate the [ENC] knob to choose **Tone Set**, and then press [Select] key to enter.
2. Rotate the [ENC] knob to choose **KeyTone** and press [Select] key to make following options and procedures:
 - ①. **KeyRingSW** → press [Select] key to turn it on / off;
 - ②. **KeyRingStat** → press [Select] key → rotate the [ENC] knob to choose the keytone level → press [Ok key to confirm → "Keytone is set" pops up on the screen and returns to the previous level.

Power On Tone

Processes:

1. Access the menu, rotate the [ENC] knob to choose **Tone Set**, and then press [Select] key to enter.
2. Rotate the [ENC] knob to choose **Power tone** and press [Select] key to make following options and procedures:
 - ①. **CouloToneSW** → press [Select] key to turn the power tone on / off;
 - ②. **CouloToneStat** → press [Select] key → rotate the [ENC] knob to select desired volume → press [Ok] key to confirm → "Tone is set" pops up on the screen and returns to the previous level.

Message Tone (Msg Tone)

Processes:

1. Access the menu, rotate the [ENC] knob to choose **Tone Set**, and then press [Select] key to enter.
2. Rotate the [ENC] knob to choose **Msg tone** and press [Select] key to enter.
3. Rotate the [ENC] knob to choose the desired ringtone type or turn it off and press [Select] key to confirm.
4. "RingTone is set" pops up on the screen and returns to the previous level.

Private Call Tone (PCallTone)

Processes:

1. Access the menu, rotate the [ENC] knob to choose **Tone Set**, and then press [Select] key to enter.

2. Rotate the [ENC] knob to choose **PCallTone** and press [Select] key to make following options and procedures:

- ①. **PCallSW** → press [Select] key → choose operation of **Rx Begin Tone, Rx End Tone, Tx Begin Tone, Tx End Tone** rotate the [ENC] knob → press [Select] key to tick or cancel it → press [Back] key to return to the previous level;
- ②. **PCallTone** → press [Select] key → choose the desired ringtone type or turn it Off rotate the [ENC] knob → press [Select] key to confirm → "Tone is set" pops up on the screen and returns to the previous level.

Group Call Tone(GCallTone)

Processes:

1. Access the menu, Rotate the [ENC] knob to choose **Tone Set**, and then press [Select] key to enter.
2. Rotate the [ENC] knob to choose **GCallTone** and press [Select] key to make following options and procedures:
 - ①. **GCallSW** → Press [Select] key → choose operation of **Rx Begin Tone, Rx End Tone, Tx Begin Tone, Tx End Tone** rotate the [ENC] knob → press [Select] key to tick or cancel it → press [Back] key to return to the previous level;
 - ②. **GCallTone** → press [Select] key → choose the desired ringtone type or turn it Off rotate the [ENC] knob → press [Select] key to confirm → "Tone is set" pops up on the screen and returns to the previous level.

Alert Tone

Processes:

1. Access the menu, rotate the [ENC] knob to choose **Tone Set**, and then press [Select] key to enter.
2. Rotate the [ENC] knob to choose **Call Alert tone** and press [Select] key to enter.
3. Rotate the [ENC] knob to select the desired ringtone type or turn it off and press [Select] key to confirm.
4. "Tone is set" pops up on the screen and returns to the previous level.

Power On Tone

Processes:

1. Access the menu, rotate the [ENC] knob to choose **Tone Set**, and then press [Select] key to enter.
2. Rotate the [ENC] knob to choose **Power on tone SW** and press [Select] key turn it on or off.
3. Press [Back] key to return to the previous level.

Appendix

If it is allowed by CPS software, set and check GPS, FM radio, time, DTMF, HeadSet+Speaker etc. by accessing the **Appendix** menu.

GPS

Processes:

1. Access the menu, rotate the [ENC] knob to choose **Appendix**, and then press [Select] key to enter.

2. Rotate the [ENC] knob to choose **GPS** and press [Select] key to make following options and procedures:

- ①. **GPS switch** → press [Select] key to turn GPS On or Off;
- ②. **Upload SW** → press [Select] key → choose operation of **GPGGA, GPGSA, GPGSV, GPRMC** rotate the [ENC] knob → press [Select] key to tick or cancel → press [Back] key to return to the previous level;
- ③. **Group Info** → press [Select] key to enter the following options and procedures:
 - ◇ **GPS map** → press [Select] key to display the rough distance between the radio and other members → Rotate the [ENC] knob to choose the calculation unit → press [Back] key to return to the previous level;
 - ◇ **GPS RXMsgs** → press [Select] key to display the received message list from others → Rotate the [ENC] knob to check the location information of others → press [Back] key to exit → press [Back] key to return to the previous level;
 - ◇ **GPS location** → press [Select] key to display the location information of the radio → Rotate the [ENC] knob to check GPS / GL received satellites information and signal strength (white: empty signal, red: weak signal, light blue: available signal) → Press [Select] key to return to the previous level;
 - ◇ **Clear RXMsgs** → press [Select] key to delete the received messages and return to the previous level;
- ④. **GPS Report Chn** → press [Select] key to check **Zone, Chn, Send interval on / off** information → press [Back] key to return to the previous level;

⑤. **Calibrator** → press [Select] key to make following options and processes:

- ◇ **Auto** → press [Select] key to confirm;
- ◇ **Manual** → Press [Select] key → Display Time zone and difference list → rotate the [ENC] knob to choose the desired time zone → Press [Select] key to confirm → return to the previous level;

 **Note:**

- ◇ GPS is allowed by software;
- ◇ Some GPS functions must be pre-set by software before use;
- ◇ Some GPS functions must be positioned successfully before use normally;
- ◇ Some GPS functions require other users to have GPS function and successfully positioned also before use normally;
- ◇ The GPS Distance Calculation or the use of some functions is for reference only, which may cause errors due to some unexpected or environmental reasons;
- ◇ GPS function is optional.

 **FM Radio**

Processes:

1. Access the menu, rotate the [ENC] knob to choose **Appendix**, and then press [Select] key to enter.
2. Rotate the [ENC] knob to choose **FM radio** and press [Select] key to display the FM radio frequency information.
3. Rotate the [ENC] knob to manually select the FM radio frequency

or seek the FM radio frequency automatically.

4. Press the [Back] key to exit the FM radio mode and return to the previous level. Or press [OK] key to make the following options and procedures:

- ①. **Save** → press [Select] key to save the current FM radio channel;
- ②. **FM List** → press [Select] key to display the list of saved FM radio frequencies → choose the desired frequency rotate the [ENC] knob → press [Select] key to Delete or Play the frequency
- ③. **TuneMode** → press [Select] key → choose operation of **Manual, Auto** rotate the [ENC] knob → press [Select] key to confirm and return to the previous level.

 **Time**

Processes:

1. Access the menu, rotate the [ENC] knob to choose **Appendix**, and then press [Select] key to enter.
2. Rotate the [ENC] knob to choose **Time** and press [Select] key to make following options and procedures:
 - ①. **Date** → Press [Select] key to display the date and year → rotate the [ENC] knob or input the desired date and year via numeric keyboard → press [OK] key to confirm → "Date is set" pops up on the screen and returns to the previous level;
 - ②. **Time** → Press [Select] key to display the time → rotate the [ENC] knob or input the desired time via numeric keyboard → press [OK] key to confirm → "Time is set" pops up on the screen and returns to the previous level;

or seek the FM radio frequency automatically.

4. Press the [Back] key to exit the FM radio mode and return to the previous level. Or press [OK] key to make the following options and procedures:

- ①. **Save** → press [Select] key to save the current FM radio channel;
- ②. **FM List** → press [Select] key to display the list of saved FM radio frequencies → choose the desired frequency rotate the [ENC] knob → press [Select] key to Delete or Play the frequency
- ③. **TuneMode** → press [Select] key → choose operation of **Manual, Auto** rotate the [ENC] knob → press [Select] key to confirm and return to the previous level.

Time

Processes:

1. Access the menu, rotate the [ENC] knob to choose **Appendix**, and then press [Select] key to enter.
2. Rotate the [ENC] knob to choose **Time** and press [Select] key to make following options and procedures:
 - ①. **Date** → Press [Select] key to display the date and year → rotate the [ENC] knob or input the desired date and year via numeric keyboard → press [Ok] key to confirm → "Date is set" pops up on the screen and returns to the previous level;
 - ②. **Time** → Press [Select] key to display the time → rotate the [ENC] knob or input the desired time via numeric keyboard → press [Ok] key to confirm → "Time is set" pops up on the screen and returns to the previous level;

- ③. **DateForm** → press [Select] key → choose the desired date form rotate the [ENC] knob → press [Select] key to confirm → "Date is set" pops up on the screen and returns to the previous level; → Use GPS Datetime → press [Select] key to turn it on or off;

Note:

- ◇ **Use GPS Datetime** is effective only when GPS function is on and successfully positioned.
-

DMR DTMF

Processes:

1. Access the menu, rotate the [ENC] knob to choose **Appendix**, and then press [Select] key to enter.
2. Rotate the [ENC] knob to choose **DTMF** and press [Select] key to make following options and procedures:
 - ①. **DTMF Switch** → press [Select] key to turn it on or off;
 - ②. **DTMF LocVolume** → press [Select] key to display current local volume → rotate the [ENC] knob to adjust the volume → press [OK] key to confirm → "Save Ok" pops up screen and returns to the previous level;

Note:

- ◇ DTMF code Tone is only used as a alert tone to the local radio and remind the recipient user to receive the call;
 - ◇ DTMF code must be preset by CPS software.
-

HandMic + Speaker

The process:

1. Access the MENU, rotate the (ENC) knob, select to , and press the Menu key to enter
2. Rotate (ENC) knob, select to Speaker or Hand-microphone and press MENU
3. A message is displayed indicating that the Settings are complete, Return to the previous menu

Remarks:

Hand microphone is one of the audio output mode of the intercom. When you select Hand microphone Mode, there is no audio output from the speaker of the radio. when the hand microphone plug in radio, there is audio output. When you select "horn" mode, the speaker of the radio has audio output, but there is no audio output when you plug in the hand microphone.

APRS

Access the menu, press the [Menu]-key and rotate the [ENC] knob to choose Appendix → press the [Select]-key to enter. Rotate the [ENC] knob to choose APRS and press the [Select]-key to choose from the following options:

- **APRS Type** → press the [Select]-key to change the modes for APRS signaling * rotate the [ENC] knob to choose the desired APRS Type from either None, Analog APRS, DMR

APRS or DMR+Analog APRS → press the [OK]-key to confirm your selection → 'Set OK!' pops up on the screen and returns to the previous level.

- **Analog APRS** → press the [Select]-key to change the parameters for analog APRS → rotate the [ENC] knob to choose the desired parameter → press the [Select]-key to select one of the following options :

- **PTT Upload** → press the [Select]-key to change the behavior on PTT-press → rotate the [ENC] knob to choose the desired Upload mechanism from either Close, TX Start or TX End → press the [Select]-key to confirm → 'Set OK!' pops up on the screen and returns to the previous level.

- **Upload Power** → press the [Select]-key to change the output power for APRS upload → rotate the [ENC] knob to choose between Low Power and High Power → press the [Select]-key to confirm → 'Set OK!' pops up on the screen and returns to the previous level.

- **Upload Frequency** → press the [Select]-key to display the current transmit frequency → rotate the [ENC] knob to position the cursor within the input field → input the frequency using the numeric keypad → press the [OK]-key to confirm → 'Set OK!' pops up on the screen and returns to the previous level.

- **Upload Path** → press the [Select]-key to display the current Upload Path → rotate the [ENC] knob to position the cursor within the input field → input the desired Upload Path using the numeric keypad of the Speaker-Microphone →

press the [OK]-key to confirm → 'Set OK!' pops up on the screen and returns to the previous level.

- **Upload Text** → press the [Select]-key to display the current Upload Text → rotate the [ENC] knob to position the cursor within the input field → input the desired Upload Text using the numerical keypad of the Speaker Microphone → press the [OK]-key to confirm → 'Set OK!' pops up on the screen and returns to the previous level.

- **DMR APRS** → press the [Select]-key to change the parameters for digital APRS → rotate the [ENC] knob to choose the desired parameter → press the [Select]-key to select one of the following options :

- **PTT Upload** → press the [Select]-key to change the behavior on PTT-press → rotate the [ENC] knob to choose the desired Upload mechanism from either Close, TX Start or TX End → press the [Select]-key to confirm → 'Set OK!' pops up on the screen and returns to the previous level.

- **Time Slot** → select Current TimeSlot, TimeSlot1 or TimeSlot2 → press the [Select]-key → 'Set OK!' pops up on the screen and returns to the previous level.

- **Call Type** → select Individual or Group → press the [Select]-key → 'Set OK!' pops up on the screen and returns to the previous level.

- **Target ID** → using the Speaker Microphon numerical keypad enter the Talkgroup to use for digital APRS messages → press the [Select]-key → 'Set OK!' pops up on the screen and returns to the previous level.

- **APRS Message** → press the [Select]-key to display the list of received APRS messages → rotate the [ENC] knob to choose the received message → press the [Select]-key to display the full APRS data (date, time, longitude, latitude, altitude, speed) that had been received → press the [Back]-key to return to the previous level.

- **Delete APRS Msg** → 'Are you sure?' pops up on the screen → press the [OK]-key to confirm deletion or press the [Back]-key to cancel deletion → return back to previous level.

- **Timer** → press the [Select]-key to select the interval for regular APRS beacon transmissions → Rotate the [ENC] to choose in 30s intervals between OFF, 30s and up to 7650s and press the [OK]-key to confirm → 'Set OK!' pops up on the screen and the radio returns to the previous level.

- **Beacon** → press the [Select]-key to change the location source to be used for the beacon transmission → rotate the [ENC] knob to choose the desired source between Preset Beacon and GPS Beacon → press the [OK]-key to confirm your selection → 'Set OK!' pops up on the screen and returns to the previous level.

Blue Tooth

Access the menu, press the [Menu]-key and rotate the [ENC] knob to choose Appendix → press the [Select]-key to enter. Rotate the [ENC] knob to choose *BlueTooth* and press the [Select]-key to choose from the following options:

BlueTooth Sw → Press the preset [Record On/Off] key to turn it on / off. If Bluetooth is turned on further parameters may be selected:

BT Earset → press the [Select]-key → Select *Earset Scan* to scan for available and supported earsets → next select one of the found earset → you will hear a confirmation sound depending on the earset. Now all further audio output is routed to the BT earset.

BT PTT → press the [Select]-key → Select *PTT Scan* to scan for available and supported BT buttons → next select one of the found BT buttons. Now PTT can be activated by pressing the BT button

Mic Gain → press the [Select]-key → choose the desired Microphone Gain by rotating the [ENC] knob → press [Select] key → 'Set OK!' pops up on the screen and the radio returns to the previous level.

Volume Gain → press the [Select]-key → choose the desired Volume Gain by rotating the [ENC] knob → press [Select] key → 'Set OK!' pops up on the screen and the radio returns to the previous level.

Record

If it is allowed by CPS software, set and check record set, recording list, clear record, space info about recording by accessing Record menu.

Processes:

1. Press the preset [Record On/Off] key to turn it on / off.

OR

1. Access the menu, Rotate the [ENC] knob to choose **Record**, and then press [Select] key to enter.

2. Rotate the [ENC] knob to make following options and processes:

①. **Record Set** → press [Select] key → **RX record SW, TX**

record SW → Rotate the [ENC] knob to select desired operation

→ press [Select] key to turn it on or off → press [Back] key to return to the previous level;

②. **Record List** → press [Select] key to display the recording

list → Rotate the [ENC] knob to choose the desired record and press [Select] key to make following options and processes:

◇ **Play** → press [Select] to play the selected recording *return to the previous level after finishing playing;

◇ **Delete** → press [Select] key → "Are you sure?" pops up on the screen → press [Ok] key to confirm deletion or press [Back] key to cancel deletion and return to the previous level;

◇ **Information** → press [Select] key to display the detailed information of the recording.

③. **Clear record** → press [Select] key → "Are you sure?" pops up on the screen → press [Ok] key to confirm deletion or press [Back] key to cancel deletion and return to the previous level;

④. **Space Info** → press [Select] key to display the recorded time and total recordable time information → press [Back] key to return to the previous level

Notes

◇ The total recording time supported is more than 50 hours. It is supported to purchase additional recording time according to the actual requirement.

Device Info

If it is allowed by CPS software, set and check Radio ID, Rx Group List, CH Contact (channel contact), Version and other information by accessing **Device Info** menu.

Processes:

1. Access the menu, rotate the [ENC] knob to choose **Record**, and then press [Select] key to enter.

2. Rotate the [ENC] knob to make following options and processes:

①. **Radio ID** → press [Select] key to display the Radio ID → press [Back] key or any number key to modify the desired number → press [OK] key to save → "Set ok" pops up on the screen and returns to the previous level.

②. **RXGroupList** → press [Select] key to display the receiving group list → rotate the [ENC] knob to check details → press [back] key to return to the previous level;

③. **CH contact** → press [Select] key to display the default channel contact information → press [Back] key to return to the previous level;

④. **Version** → press [Select] key to display the local version information → press [Back] key to return to the previous level;

User_defined Mode

If it is allowed by CPS software, it is supported to check and modify the parameters of Channel or VFO mode by accessing User_defined Mode menu.

Processes:

1. In standby mode, press and hold the [A/ B] key for 3 seconds to enter the User-defined mode.

OR

1. Access the menu, rotate the [ENC] knob to choose **Record**, and then press [Select] key to enter.

2. Rotate the [ENC] knob to select the following options (refer to **User_defined table**).

3. Press [Select] key to light up the cursor and enter to the editing mode.

4. Rotate the [ENC] knob to choose the desired value and press [Select] to confirm and save.

5. Press [Back] key to return to the previous level.

User-defined table

In order	Operation	Options	Confirm	Remarks
Channel Attribution (Working Mode)	Press [Select] key	Digital/Analog/RX:D/A-TX:A/TX:D/A-RX:D	Press [Select] key	For both Analog and Digital mode
Steps		5/6.25/10/12.5/25/50/100kHz		
RX Frequency		In the available range of the radio		
TX Frequency		In the available range of the radio		
Power		High/Low		For Digital Mode
RX TS (Slot)		Off / Slot 1/Slot 2		
TX TS (Slot)		Off / Slot 1/Slot 2		
RX Color Code		0~15		
TX Color Code		0~15		Not available for digital VFO mode
Alarm		On/Off		
Call Alert		On/Off		
Private Call Type		PATCS /OACSU		
Meg Type		PATCS /OACSU		For Digital Mode
Permission (TX Policy)		Impolite/ Polite to CC/ Polite to All		
RX Group		Off / Self-defined		
Encryption		Off / Defined by software		
Contacts		Off / Contact List		Not available for digital VFO mode
Emergency		Off / self-defined		
Scan List		Off / self-defined		
Save2SelChn (Save to current channel)				
Save2SelChn (Save to selected channel)		All available channels		For Digital Mode
Save VFO				For Digital VFO Mode
Bandwidth		Narrow/Wide		For Analog Mode only
TX Subtone Type		Signaling Off/CTCSS/DCS/ DCS Reverse		
TX Subtone(TX Sub Item)		The signal codes of DCS/CTCSS		
RX Subtone Type		Signaling Off/CTCSS/DCS/ DCS Reverse		
RX Subtone (TX Sub Item)		The signal codes of DCS/CTCSS		Not available for analog VFO mode
Scan List				

User-defined table

In order	Operation	Options	Confirm	Remarks
Save VFO				For Analog Mode only
Save to specified channel		All available channels		

Notes

- ◇ When accessing any sub menu, press the [Back] key to return to the previous level.
-

Function Applications

Modes of TX and RX in scanning

Set TX and RX call modes in scan list by CPS software.

Scan TX Mode

In scanning, when there is detected active channel or talk group, the radio will stay at the channel for a period of time, which is called "idle time".

① The scan TX modes of the scan list can be set as below:

● Talkback

①. If it is "On", when a carrier signal of any channel in the scan list is received in scanning, press the [PTT] key to transmit to the channel within 3S after the received signal disappears.

②. If it is "OFF", the reply is based on the "Scan TX Mode" preset by the programming software.

Notes:

Scan TX Mode:

◇ **Current Channel** — reply on the channel that starts the scanning.

◇ **Last Operated Channel** — reply on the channel where the radio stays at last time.

◇ **Appointed Channel** — specify the only channel to reply.

Appointed Channel:

After selecting the channel for replying, if there is carrier signal of any channel in the scan list received in scanning, after the received signal disappears, press the [PTT] key, it will reply on the preset appointed channel.

A/B Repeat

Preset by CPS software or access the "A/B Repeat" menu to set the A/B band repeat function and application.

1. A/B Band Repeat Modes:

①. In digital mode, the same frequency band (VHF + VHF / UHF + UHF) to same frequency or cross band (VHF / UHF) can be transmitted.

②. In analog mode, cross bands (VHF / UHF) can be transferred.

③. In cross band (VHF / UHF), "digital to analog" or "analog to digital" can be transmitted.

2. A/B Monitor:


Press the preset [AB Monitor] key or access "AB repeat" menu to turn on/off the A/B band monitor function.

3.A/B Repeat Interruption:

①. If the A/B Repeat function is ON, this radio will be used to extend the communication coverage of other radios.

②. When your radio is working in repeat mode, you can press the [PTT] key and speak clearly into the microphone (MIC) to interrupt and make a three-party call.

Digital to Digital Mode with same frequency:

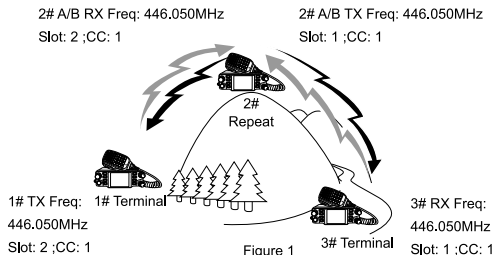

Cross Band Digital to Analog / Analog to Digital Mode:

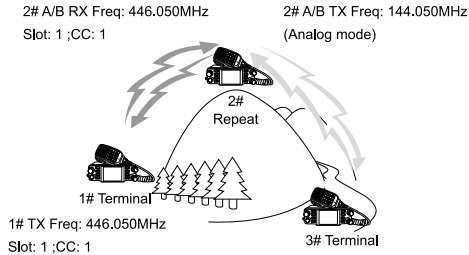


Figure 2

Cross Band Analog to Analog Mode:

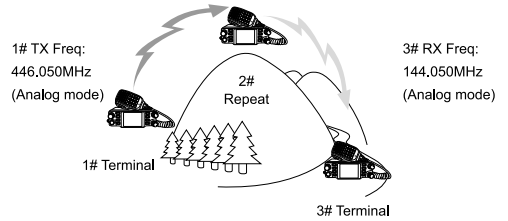


Figure 4

Digital to Analog / Analog to Digital at same frequency & Extending the Communication Coverage:

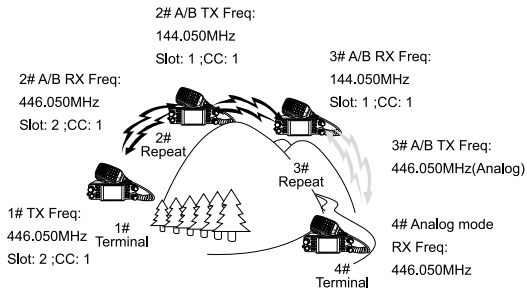


Figure 3

Repeat Modes Samples

Repeat Mode	Radio No.	End user	2# DB40-D as a Repeater	Band (Repeat)	Remarks
Digital to Digital with same frequency	1#	TX Freq: 446.050MHZ Slot: 2; CC: 1	RX Freq: 446.050MHZ Slot: 2; CC: 1	A/B	1.Time slots for RX/TX are settable based on needed; But can't set same slot for RX/TX in Repeat Mode with same frequency.
	3#	RX Freq: 446.050MHZ Slot: 1; CC: 1	TX Freq: 446.050MHZ Slot: 1; CC: 1	A/B	
Cross Band Digital to Analog Mode	1#	TX Freq: 446.050MHZ Slot: 2; CC: 1	RX Freq: 446.050MHZ Slot: 2; CC: 1	A/B	2. CC for RX/TX are settable based on needed, and can set same CC for RX/TX.
		RX Freq: 446.050MHZ Slot: 1; CC: 1	TX Freq: 446.050MHZ Slot: 1; CC: 1		
	3#	Analog TX/RX Freq: 144.050MHZ	TX Freq: 144.050MHZ (Analog Mode)	A/B	Analog Mode can set with CTCSS/ DCS code
Cross Band Analog to Analog	1#	Analog TX/RX Freq: 446.050MHZ	RX/TX Freq: 446.050MHZ	A/B	
	3#	Analog TX/RX Freq: 144.050MHZ	RX/TX Freq: 144.050MHZ	A/B	

Digital to Analog Mode with same frequency:

Raido No.	End user	2# DB40-D as a Repeater	3# DB40-D as a Repeater	Band (Repeat)	Remarks
1#	RX Freq: 446.050MHZ Slot: 1; CC: 1	RX Freq: 446.050MHZ Slot: 1; CC: 1	RX Freq: 144.050MHZ Slot: 2; CC: 1	A/B	
	TX Freq: 446.050MHZ Slot: 2; CC: 1	TX Freq: 446.050MHZ Slot: 2; CC: 1	TX Freq: 144.050MHZ Slot: 1; CC: 1	A/B	
4#	Analog TX/RX Freq: 446.050MHZ	RX Freq: 144.050MHZ Slot: 1; CC: 1 TX Freq: 144.050MHZ Slot: 2; CC: 1	Analog TX/RX Freq: 446.050MHZ	A/B	Analog Mode can set with CTCSS/ DCS code

Notes:

- ◇ The above Repeat Modes examples are for reference only;
- ◇ If necessary, multi-mode, multi-band, multi-frequency and other ways can be combined and applied together to extend the communication coverage in end users. Such combination application of different Repeat modes can be used in scene field needed.

General guide for fault handling

Malfunction	Analysis of causes	Handling method
Radio fails to power on	Battery is installed incorrectly	Re-install battery
	Battery power lower than preset value	Please change or charge battery.
	Bad battery contacts or contacts in dirty.	Check and clear the battery contacts.
Receive signal decreases, is unclear or is interrupted.	Battery power gets lower.	Please change or charge battery.
	Volume control at low value.	Adjust the volume to be higher.
	Antenna gets loose or antenna frequency is incorrect.	Power off radio, and re-install antenna, or change antenna with right frequency.
	Speaker is blocked or damaged.	Try to clear the outer speaker or contact your dealer.
	Using the radio under poor working environment or electromagnetic interference	Change working environment or shift antenna direction.
Unable to communicate with group members	The current working channel frequency or signaling value is different.	Change channel or reset signaling and frequency to be same as the group members
	The setting of Digital or Analog channel is incorrect.	Reprogram the current digital or analog channel.
	Out of range of group members	Move back within range
Noise or unrelated communications on current channel	Co-channel user interference	Change frequency or channel.
	Channel not programmed with correct signaling	Reprogram radio to correct signaling or change signaling to prevent interference.
Weak voice traffic with noise during communications	The communication distance is too great	Reduce range between users.
	Signals are blocked during to environment such as buildings and terrain.	Reduce range between users or move to unimpeded line of sight.

Malfunction	Analysis of causes	Handling method
Weak voice traffic with noise during communications	Strong local environmental interference.	Move away from interference source.
Failure to obtain GPS position (Optional)	Radio lacks optional GPS feature or satellite view blocked by environment.	Add GPS feature; move to open site with clear view of sky.

 **Note:**

If the above methods fail to solve your problem, or you confront different malfunctions, please contact your local dealer or appointed maintenance station.

Maintenance and Clean

To ensure the best performance and prolong working life, please acquaint yourself with the following for maintenance and cleaning.


Maintenance

- Ⓞ Please do not scratch or puncture the device with hard or sharp object.
- Ⓞ Please do not place the device in an environment which can corrode electronic circuits or under direct solar radiation.
- Ⓞ Please do not carry the device by its antenna or headset.
- Ⓞ Please make sure the SP-MIC plug is covered when not in use.


Clean

- Ⓞ Please clean your device regularly by using a dry clean cloth or soft brush to wipe the dust on the surface and on the charger contacts;
- Ⓞ The keypads, control knob and housing of the device may be dirty from use. Please use nonwoven wipes to clean them. Do not use chemicals to clean it such as detergent, alcohol, spray or petroleum products, on the device surface or printed labels. Chemicals can damage the housing, display and remove the printing on the labels. Before power on the radio, please make sure the device is dry completely.

Optional accessories

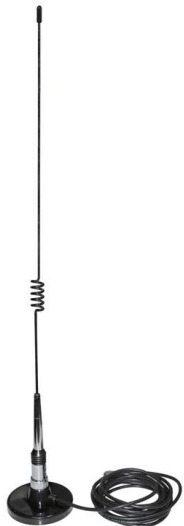

Magenetic vehicle antenna

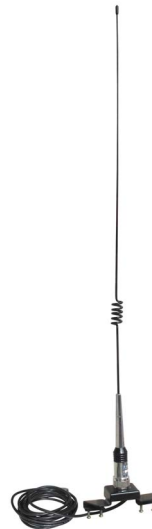

Clip-on vehicle antenna

Radiod^dity